

T.O. GR1F-16CJ-1

FLIGHT MANUAL

HAF SERIES AIRCRAFT

F-16C/D

BLOCK 50

LOCKHEED MARTIN CORPORATION

F33657-90-C-2002
F42620-97-D-0010



Commanders are responsible for bringing this publication to the attention of all Air Force personnel cleared for operation of subject aircraft.

2 DECEMBER 1996
CHANGE 8 15 MARCH 2001

DISCLOSURE STATEMENT

This information is furnished on the conditions that it will not be released to another nation without the specific authorization of the Department of the Air Force of the United States; it will be used for military purposes only; the recipient will report promptly to the United States any known or suspected compromise; and the information will be provided substantially the same degree of security afforded it by the Department of Defense of the United States. Also, regardless of any other markings on the document, it will not be downgraded or declassified without the written approval of the originating US agency. Any request for this document should be referred to OO-ALC/YPXG, 6089 Wardleigh Road, Hill AFB, UT 84056-5838.

SUPPLEMENTAL NOTICE

This manual is incomplete without T.O. GR1F-16CJ-1-1 and T.O. GR1F-16CJ-1-2.

SUPERSEDURE NOTICE

See Technical Order Index, T.O. GR0-1-71, for current status of Flight Manuals, Safety Supplements, Operational Supplements, and Flight Crew Checklists.

This manual supersedes Interim Safety Supplement T.O. GR1F-16CJ-1SS-17.

INSERT LATEST CHANGED PAGES. DESTROY SUPERSEDED PAGES.

LIST OF EFFECTIVE PAGES

NOTE: Changes to the current issue are indicated by a vertical line in the outer margins of the page.

Dates of issue for original and changed pages are:

Original ... 0 ... 2 Dec 96
 Change ... 1 ... 7 Jul 97
 Change ... 2 ... 13 Oct 97

Change ... 3 ... 6 Apr 98
 Change ... 4 ... 15 Mar 99
 Change ... 5 ... 15 Jun 99

Change ... 6 ... 15 May 00
 Change ... 7 ... 15 Jun 00
 Change ... 8 ... 15 Mar 01

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 398, CONSISTING OF THE FOLLOWING:

Page No.	* Change No.	Page No.	* Change No.	Page No.	* Change No.
Title	8	1-26	0	1-65	0
T-2	8	1-27	0	1-66	0
A	8	1-28	1	1-67	0
B	8	1-29	6	1-68	0
C	8	1-30	0	1-69	0
D Blank	0	1-31	1	1-70	6
a	8	1-32	0	1-71	6
b Blank	0	1-33	0	1-72	6
i	0	1-34	0	1-73	0
ii	0	1-35	0	1-74	0
iii	0	1-36	0	1-75	0
iv	4	1-37	0	1-76	0
v	4	1-38	0	1-77	0
vi	0	1-39	0	1-78	0
vii	0	1-40	7	1-79	0
viii Blank	0	1-41	1	1-80	0
1-1	0	1-42	0	1-81	0
1-2	0	1-43	0	1-82	0
1-3	0	1-44	0	1-83	0
1-4	3	1-45	2	1-84	0
1-5	0	1-46	0	1-85	0
1-6	0	1-47	2	1-86	0
1-7	0	1-48	0	1-87	1
1-8	0	1-49	0	1-88	0
1-9	0	1-50	0	1-89	0
1-10	0	1-51	0	1-90	0
1-11	0	1-52	1	1-91	0
1-12	0	1-53	1	1-92	1
1-13	0	1-54	0	1-93	0
1-14	0	1-55	0	1-94	0
1-15	0	1-56	0	1-95	0
1-16	0	1-57	0	1-96	0
1-17	0	1-58	0	1-97	0
1-18	0	1-59 Blank	1	1-98	0
1-19	0	1-60	1	1-99	0
1-20	0	1-60.1	1	1-100	0
1-21	4	1-60.2	1	1-101	4
1-22	0	1-61	1	1-102	0
1-23	1	1-62	0	1-103	0
1-24	0	1-63	0	1-104	0
1-25	0	1-64	0	1-105	3

* Zero in this column indicates an original page.

A-8
HAF

Change 8

A

INSERT LATEST CHANGED PAGES. DESTROY SUPERSEDED PAGES.

LIST OF EFFECTIVE PAGES (Cont)

Page No.	*Change No.	Page No.	*Change No.	Page No.	*Change No.
1-106	0	1-159	0	3-6	0
1-107	0	1-160	0	3-7	0
1-108	0	1-161	0	3-8	2
1-109	3	1-162	0	3-9	0
1-110	3	1-163	0	3-10	0
1-111	0	1-164	6	3-11	8
1-112	0	1-165	0	3-12	8
1-113	0	1-166	6	3-13	0
1-114	0	1-167	6	3-14	2
1-115	0	1-168	3	3-15	0
1-116	0	1-169	0	3-16	0
1-117	0	1-170	0	3-17	0
1-118	0	1-171	0	3-18	2
1-119	0	1-172 Blank	0	3-19	4
1-120	0	2-1	4	3-20	0
1-121	0	2-2	4	3-21	2
1-122	0	2-3	3	3-22	6
1-123	6	2-4	3	3-23	6
1-124	0	2-5	4	3-24	0
1-125	0	2-6	1	3-25	7
1-126	0	2-7	6	3-26	0
1-127	0	2-8	8	3-27	0
1-128	0	2-9	8	3-28	8
1-129	0	2-10	8	3-29	6
1-130	0	2-11	2	3-30	6
1-131	0	2-12	7	3-31	5
1-132	0	2-13	1	3-32	0
1-133	0	2-14	8	3-33	0
1-134	0	2-15	8	3-34	0
1-135	0	2-16	8	3-35	8
1-136	0	2-17	1	3-36	8
1-137	0	2-18	2	3-37	0
1-138	0	2-19	7	3-38	1
1-139	0	2-20	1	3-39	1
1-140	3	2-21	0	3-40	0
1-141	0	2-22	1	3-41	2
1-142	0	2-23	0	3-42	0
1-143	0	2-24	0	3-43	4
1-144	0	2-25	4	3-44	8
1-145	0	2-26	4	3-45	6
1-146	0	2-27	2	3-46	5
1-147	0	2-28	0	3-47	0
1-148	0	2-29	8	3-48	0
1-148.1	3	2-30	4	3-49	0
1-148.2 Blank	3	2-31	0	3-50	0
1-149	3	2-32	0	3-51	6
1-150	0	2-33	0	3-52	6
1-151	0	2-34	0	3-52.1	6
1-152	0	2-35	0	3-52.2 Blank	6
1-153	8	2-36 Blank	0	3-53	8
1-154	0	3-1	8	3-54	0
1-155	0	3-2	8	3-55	8
1-156	0	3-3	0	3-56	1
1-157	0	3-4	0	3-57	5
1-158	0	3-5	0	3-58	8

* Zero in this column indicates an original page.

INSERT LATEST CHANGED PAGES. DESTROY SUPERSEDED PAGES.

LIST OF EFFECTIVE PAGES (Cont)

Page No.	*Change No.	Page No.	*Change No.
3-59	5	3-106	2
3-60	8	3-106.1	2
3-61	8	3-106.2 Blank	2
3-62	8	3-107	6
3-63	0	3-108	8
3-64	3	3-109	0
3-65	3	3-110	0
3-66	0	4-1	0
3-67	8	4-2 Blank	0
3-68	4	5-1	8
3-69	8	5-2	0
3-70	8	5-3	8
3-70.1 Added	8	5-4	8
3-70.2 Blank Added	8	5-4.1 Added	8
3-71	0	5-4.2 Blank Added	8
3-72	0	5-5	0
3-73	0	5-6	3
3-74	0	5-7	0
3-75	0	5-8	8
3-76	4	5-8.1 Added	8
3-76.1	4	5-8.2 Added	8
3-76.2 Blank	4	5-9	0
3-77	1	5-10 Blank	0
3-78	1	6-1	8
3-79	7	6-2	1
3-80	6	6-3	0
3-81	0	6-4	7
3-82	6	6-4.1	7
3-83	4	6-4.2 Blank	7
3-84	1	6-5	2
3-85	1	6-6	0
3-86	1	6-7	0
3-87	0	6-8	3
3-88	0	6-9	3
3-89	0	6-10	3
3-90	1	6-11	3
3-91	7	6-12	3
3-92	7	6-13	6
3-93	6	6-14	8
3-94	0	6-15	8
3-95	1	6-16	8
3-96	4	7-1	8
3-97	3	7-2	0
3-98	3	7-3	0
3-98.1	3	7-4	0
3-98.2 Blank	3	7-5	0
3-99	1	7-6	6
3-100	3	7-7	0
3-101	1	7-8	0
3-102	8	Glossary 1	0
3-102.1	8	Glossary 2	3
3-102.2 Blank	1	Glossary 3	6
3-103	8	Glossary 4	0
3-104	8	Glossary 5	0
3-105	8	Glossary 6 Blank	0

* Zero in this column indicates an original page.

)

)

)

)

)

)

)

)

)

)

)

FLIGHT MANUALS, SAFETY SUPPLEMENT, AND OPERATIONAL SUPPLEMENT STATUS

This supplement status page is based on information available as of 15 March 2001. It is not an official status page.

Flight Manual	Basic Date	Change No. and Date
T.O. GR1F-16CJ-1	2 Dec 1996	8 15 Mar 2001
Supplemental Flight Manuals	Basic Date	Change No. and Date
T.O. GR1F-16CJ-1-1	9 Jun 1997	4 15 Jun 2000
T.O. GR1F-16CJ-1-2	15 Feb 2000	2 15 Jan 2001
Flight Crew Checklist	Basic Date	Change No. and Date
T.O. GR1F-16CJ-1CL-1	2 Dec 1996	9 15 Mar 2001

INCORPORATED SAFETY AND OPERATIONAL SUPPLEMENTS

T.O. Number	Date	Short Title	Flight Manual Sections Affected
GR1F-16CJ-1SS-17	18 Jan 01	Injury Risks Associated with ACES II Ejection	III

OUTSTANDING SAFETY AND OPERATIONAL SUPPLEMENTS


T.O. Number	Date	Short Title	Flight Manual Sections Affected
None			



TABLE OF CONTENTS

SECTION I	Description and Operation	1-1
SECTION II	Normal Procedures	2-1
SECTION III	Emergency Procedures	3-1
SECTION IV	Crew Duties	4-1
SECTION V	Operating Limitations	5-1
SECTION V	Operating Limitations (Stores)	T.O. GR1F-16CJ-1-2
SECTION VI	Flight Characteristics	6-1
SECTION VII	Adverse Weather Operation	7-1
GLOSSARY	Standard and Nonstandard Abbreviations	Glossary 1
APPENDIX A	(Not Applicable)	T.O. GR1F-16CJ-1-1
APPENDIX B	Performance Data – F110-GE-129	T.O. GR1F-16CJ-1-1

**BEFORE
YOU
TAKE OFF,
READ THIS!**

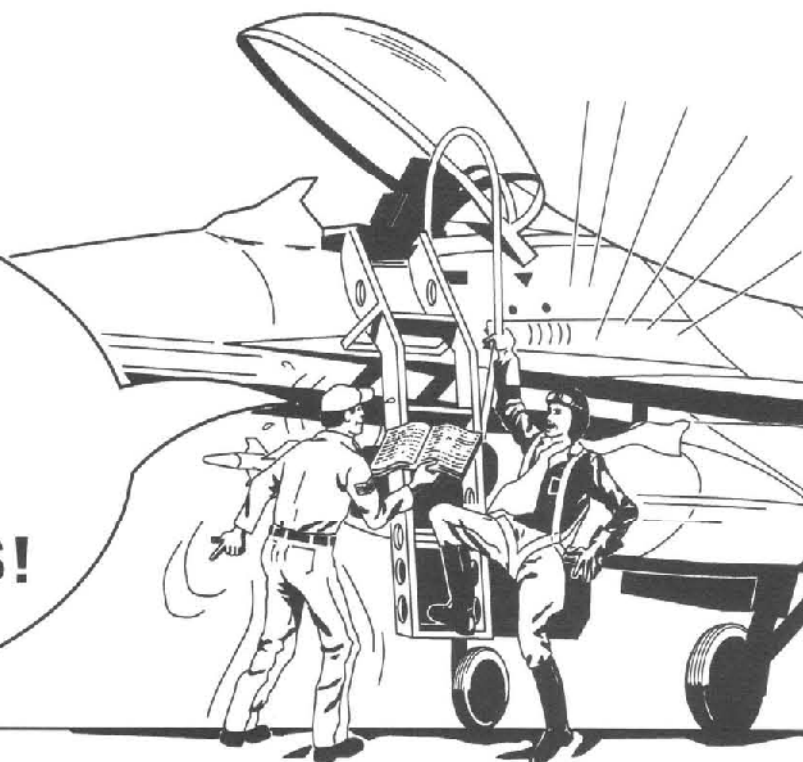

1F-16X-1-0002X ©

SCOPE

This manual contains the necessary information for safe and efficient operation of the aircraft. These instructions provide a general knowledge of the aircraft and its characteristics and specific normal and emergency operating procedures. Pilot experience is recognized; therefore, basic flight principles are avoided. Instructions in this manual are prepared to be understandable to the least experienced pilot who can be expected to operate the aircraft. This manual provides the best possible operating instructions under most conditions. Multiple emergencies, adverse weather, terrain, etc., may require modification of the procedures. This manual must be used with one or more of the following manuals to obtain information necessary for safe and efficient operation:

T.O. GR1F-16CJ-1-1	Supplemental Flight Manual, F-16C/D Aircraft
T.O. GR1F-16CJ-1-2	Supplemental Flight Manual, F-16C/D Aircraft
T.O. GR1F-16CJ-5-2	Loading Data

T.O. GR1F-16CJ-6CF-1

Acceptance and Functional Check Flight Procedures Manual, F-16C/D Aircraft

T.O. GR1F-16CJ-34-1-1

Avionics and Nonnuclear Weapons Delivery Flight Manual

T.O. GR1F-16CJ-34-1-2

Nonnuclear Weapons Ballistics

T.O. 1-1C-1

Basic Flight Crew Air Refueling Procedures

T.O. 1-1C-1-30

F-16 Flight Crew Air Refueling Procedures

PERMISSIBLE OPERATIONS

The flight manual takes a positive approach and normally states only what can be done. Unusual operations or configurations are prohibited unless specifically covered herein. Clearance must be obtained before any questionable operation which is not specifically permitted in this manual is attempted.

HOW TO BE ASSURED OF HAVING LATEST DATA

Refer to T.O. GR0-1-71 for a listing of all current flight manuals, safety supplements, operational supplements, and checklists. Also, check the flight manual title page, the title block of each safety and operational supplement, and all status pages contained in the flight manual or attached to formal safety and operational supplements. Clear all discrepancies before flight.

ARRANGEMENT

The manual is divided into seven sections and two supplemental appendices.

ILLUSTRATIONS

Cockpit arrangement, cockpit console, and cockpit instrument panel illustrations display the delivered configuration plus the approved equipment modifications. For details of equipment modification, see the individual equipment illustration.

SUPPLEMENT INFORMATION AND GUIDELINES

Supplements are safety or operational and are indicated -ISS or -IS, respectively. Supplements are issued as interim electronic messages or formal printed copies. All interim supplements are assigned odd numbers, such as -ISS-195. When an interim supplement is formalized, it is assigned the next following even number, such as -ISS-196. Formal supplements not preceded by an interim supplement are also assigned even numbers. If an interim supplement is not to be formalized, a statement cancelling the next assigned even supplement number is included in the REMARKS section of the interim supplement. If a formal supplement is not preceded by an interim supplement, a statement cancelling the previous odd supplement number is included on the status page of the formal supplement. Occasionally, a supplement has dual references in the instructions; this is because the supplement applies to the present and subsequent manual. Minor text/illustration changes or deletions are given as instructions in the supplement. When lengthy additions are required, the formal supplement provides one-sided insert page(s) to the flight manual and checklist. This supplement page(s) is attached to the original page(s). The original page(s) remains in the manual or checklist in case the supplement is rescinded and the page(s) is needed. Added page(s) (e.g., 3-48.1) are inserted in proper numerical sequence and may be printed on both sides.

SAFETY SUPPLEMENTS

Information involving safety is promptly forwarded in a safety supplement. Urgent information is published in interim safety supplements and transmitted by electronic message. Formal supplements are mailed. The supplement title block and status page (published with formal supplements only) should be checked to determine the effect of the supplement on this manual and other outstanding supplements.

OPERATIONAL SUPPLEMENTS

Information involving changes to operating procedures is forwarded by operational supplements. The procedure for handling operational supplements is the same as for safety supplements.

CHECKLIST

The checklist contains itemized procedures without all of the amplification. Primary line items in the flight manual and checklist are identical.

HOW TO GET PERSONAL COPIES

Each pilot is entitled to a personal copy of the flight manual, safety supplements, operational supplements, and a checklist. The required quantities should be ordered before needed to assure their timely receipt. Check with the publication distribution officer whose job is to fulfill T.O. requests. Country manuals and difference data are assigned a Country Standard T.O. (CSTO) number and indexed in the Security Assistance Program T.O. Index, T.O. GR0-1-71. Updates, stock, store, and issue of CSTO's are a contractor supported function. Insure a system is established at each base to deliver the publications to the pilots immediately upon receipt.

FLIGHT MANUAL BINDERS

Looseleaf binders and sectionalized tabs are available for use with the manual. They are obtained through local purchase procedures and are listed in the USAF supply channels and may be ordered on the supply case through AFLC. Check with supply personnel for assistance in procuring these items.

CHANGE SYMBOL

The change symbol, as illustrated by the black line in the margin of this paragraph, indicates changes made to the current issue.

WARNINGS, CAUTIONS, AND NOTES

The following definitions apply to Warnings, Cautions, and Notes found throughout the manual:

WARNING

Operating procedures, techniques, etc., which could result in personal injury or loss of life if not carefully followed.

CAUTION

Operating procedures, techniques, etc., which could result in damage to equipment if not carefully followed.

NOTE

An operating procedure, technique, etc., which is considered essential to emphasize.

USE OF WORDS SHALL, WILL, SHOULD, AND MAY

The word shall or will is used to indicate a mandatory requirement. The word should is used to indicate a nonmandatory desired or preferred method of accomplishment. The word may is used to indicate an acceptable or suggested means of accomplishment.

USE OF WORDS AS DESIRED AND AS REQUIRED

As desired allows pilot preference in switch/control positioning.

As required indicates those actions which vary based on mission requirements.

AIRSPPEED REFERENCES

All references to airspeed quoted in knots refer to indicated airspeed.

PILOT'S RESPONSIBILITY – TO LET US KNOW

Every effort is made to keep the flight manual current. Review conferences with operating personnel and a constant review of safety investigation and flight test reports assure inclusion of the latest data in the manual. Comments, corrections, and questions regarding this manual or any phase of the flight manual program are welcomed. These should be forwarded on AF Form 847 in accordance with AFI 11-215 through command headquarters to OO-ALC/YPVT, 6080 Gum Lane, Hill AFB, UT 84056-5825.

PUBLICATION DATE

The date appearing on the title page represents the currency of material contained herein.

AIRCRAFT AND COCKPIT DESIGNATION CODES

System and/or component effectivity for a particular aircraft version/cockpit is denoted by a letter code enclosed in a box located in the text or on an illustration. The symbols and designations are as follows:

No code – F-16C and F-16D aircraft

C F-16C aircraft

D F-16D aircraft

DF F-16D aircraft, forward cockpit

DR F-16D aircraft, rear cockpit

BLOCK DESIGNATION CODES/SERIAL NUMBER/TAIL NUMBER CROSS-REFERENCE

Because of differences in configuration between aircraft and to avoid repetitious use of aircraft serial numbers, a block effectivity system is used. The block effectivities reflect the aircraft block, the aircraft serial number, and the tail number. Attrited aircraft are removed from the listing. This system is used throughout the manual, both in text and illustrations.

AIRCRAFT MODIFICATION/RETROFIT INFORMATION

This list includes the applicable T.O./ECP effectivities. It is not an official status page. Refer to T.O. 0-1-4 for the complete listing of TCTO's. Throughout this manual, black TV screen symbols containing white numerals (2) are used to distinguish information related to aircraft which are modified by a specific

T.O./ECP. Information pertaining to modified aircraft is identified by an appropriate effectivity symbol. Information which is not identified by an effectivity symbol is considered common to all aircraft. Information pertaining only to unmodified aircraft has the appropriate effectivity symbol preceded by **LESS**. For example, **LESS 4** indicates that the information is only applicable to aircraft not modified by a specific T.O./ECP.

TV CODE/ T.O. NO.	SHORT TITLE	EFFECTIVITY	
		PRODUCTION	RETROFIT
116 1F-16-2121	Flight Control Computer Software Update (ECP 2269)	F-16C 93-1055, and on F-16D NA	F-16C 93-1045 thru 93-1054 F-16D All

Summary:

- Retrofit authorized
- Start date – Nov 97
- Rescission date – Nov 99
- Modification incorporates FLCS improvements, including improved reset capability for FLCC power up failures and elimination of lateral accelerometer failures during gun firing.

125 1F-16-2170	Modification of the Ejection Mode Selector Valve Console (ECP 2362)	N/A	F-16D All
-----------------------	---	-----	-----------

Summary:

- Retrofit authorized
- Start date – Feb 99
- Rescission date – Feb 01
- Modification enlarges the hole in the console to allow the EJECTION MODE SEL handle to seat properly in the NORM position.

Block Designation Codes/Serial Number/Tail Number Cross-Reference


BLOCK 50 Serial Numbers/ Tail Numbers C 93-1045/045 93-1046/046 93-1047/047 93-1048/048 93-1049/049 93-1050/050 93-1051/051 93-1052/052 93-1053/053 93-1054/054 93-1055/055 93-1056/056 93-1057/057 93-1058/058 93-1059/059 93-1060/060 93-1061/061 93-1062/062 93-1063/063 93-1064/064 93-1065/065 93-1066/066 93-1067/067 93-1068/068 93-1069/069 93-1070/070 93-1071/071 93-1072/072 93-1073/073 93-1074/074 93-1075/075 93-1076/076 D 93-1077/077 93-1078/078 93-1079/079 93-1080/080 93-1081/081	93-1082/082 93-1083/083 93-1084/084			
---	--	--	--	--

F-16





Fighting Falcon



C

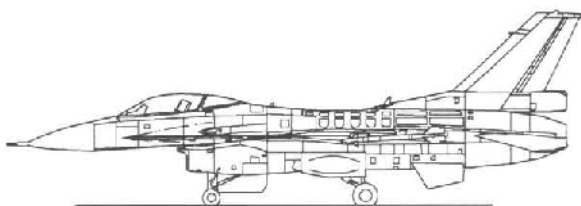

D

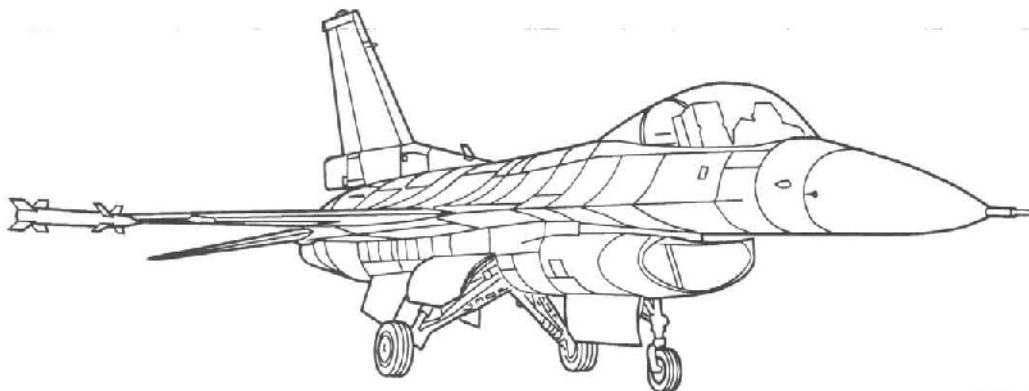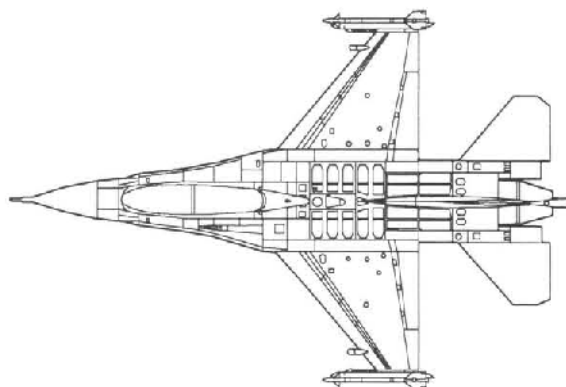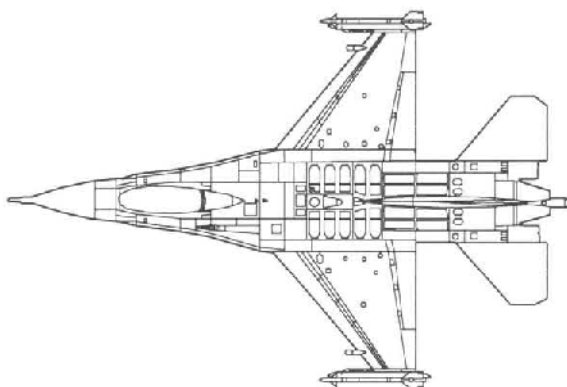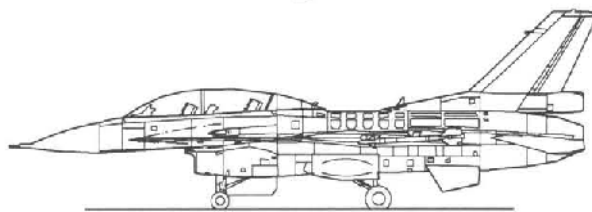

GR1F-16CJ-1-0003X37 ©

1. *What is the main purpose of this document?*
 2. *What are the key findings of the study?*
 3. *What are the limitations of the study?*
 4. *What are the implications of the study?*
 5. *What are the conclusions of the study?*
 6. *What are the recommendations of the study?*
 7. *What are the future research directions?*
 8. *What are the acknowledgments?*
 9. *What are the references?*
 10. *What are the appendices?*
 11. *What are the footnotes?*
 12. *What are the tables?*
 13. *What are the figures?*
 14. *What are the captions?*
 15. *What are the legends?*
 16. *What are the abbreviations?*
 17. *What are the symbols?*
 18. *What are the units?*
 19. *What are the dates?*
 20. *What are the times?*
 21. *What are the locations?*
 22. *What are the names?*
 23. *What are the titles?*
 24. *What are the subtitles?*
 25. *What are the subtitles?*
 26. *What are the subtitles?*
 27. *What are the subtitles?*
 28. *What are the subtitles?*
 29. *What are the subtitles?*
 30. *What are the subtitles?*
 31. *What are the subtitles?*
 32. *What are the subtitles?*
 33. *What are the subtitles?*
 34. *What are the subtitles?*
 35. *What are the subtitles?*
 36. *What are the subtitles?*
 37. *What are the subtitles?*
 38. *What are the subtitles?*
 39. *What are the subtitles?*
 40. *What are the subtitles?*
 41. *What are the subtitles?*
 42. *What are the subtitles?*
 43. *What are the subtitles?*
 44. *What are the subtitles?*
 45. *What are the subtitles?*
 46. *What are the subtitles?*
 47. *What are the subtitles?*
 48. *What are the subtitles?*
 49. *What are the subtitles?*
 50. *What are the subtitles?*
 51. *What are the subtitles?*
 52. *What are the subtitles?*
 53. *What are the subtitles?*
 54. *What are the subtitles?*
 55. *What are the subtitles?*
 56. *What are the subtitles?*
 57. *What are the subtitles?*
 58. *What are the subtitles?*
 59. *What are the subtitles?*
 60. *What are the subtitles?*
 61. *What are the subtitles?*
 62. *What are the subtitles?*
 63. *What are the subtitles?*
 64. *What are the subtitles?*
 65. *What are the subtitles?*
 66. *What are the subtitles?*
 67. *What are the subtitles?*
 68. *What are the subtitles?*
 69. *What are the subtitles?*
 70. *What are the subtitles?*
 71. *What are the subtitles?*
 72. *What are the subtitles?*
 73. *What are the subtitles?*
 74. *What are the subtitles?*
 75. *What are the subtitles?*
 76. *What are the subtitles?*
 77. *What are the subtitles?*
 78. *What are the subtitles?*
 79. *What are the subtitles?*
 80. *What are the subtitles?*
 81. *What are the subtitles?*
 82. *What are the subtitles?*
 83. *What are the subtitles?*
 84. *What are the subtitles?*
 85. *What are the subtitles?*
 86. *What are the subtitles?*
 87. *What are the subtitles?*
 88. *What are the subtitles?*
 89. *What are the subtitles?*
 90. *What are the subtitles?*
 91. *What are the subtitles?*
 92. *What are the subtitles?*
 93. *What are the subtitles?*
 94. *What are the subtitles?*
 95. *What are the subtitles?*
 96. *What are the subtitles?*
 97. *What are the subtitles?*
 98. *What are the subtitles?*
 99. *What are the subtitles?*
 100. *What are the subtitles?*

SECTION I

DESCRIPTION AND OPERATION

TABLE OF CONTENTS

The Aircraft	1-5	MAX POWER Switch C DF	1-28
Aircraft General Data	1-5	AB RESET Switch C DF	1-28
Aircraft General Arrangement	1-5	ENGINE FAULT Caution Light	1-28
Aircraft Gross Weight (A/C GW)	1-5	Pilot Fault List Display (PFLD)	1-28
Cockpit Arrangement	1-5	RPM Indicator	1-28
Engine	1-19	NOZ POS Indicator	1-28
General Description	1-19	FTIT Indicator	1-28
Engine Fuel/Control System	1-19	FUEL FLOW Indicator	1-28
Digital Electronic Control (DEC)	1-19	OIL Pressure Indicator	1-28
Afterburner Fuel Control (AFC)	1-19	HYD/OIL PRESS Warning Light	1-28
Main Engine Control (MEC)	1-19	ENGINE Warning Light	1-29
Primary (PRI) Engine Operation	1-19	Throttle	1-29
Hybrid (HYB) Engine Operation	1-21	Engine Operating Characteristics	1-29
Secondary Engine Control (SEC)		Ground Operations	1-29
Operation	1-22	Non-AB Operation in Flight	1-29
Engine Fuel Boost Pump	1-22	AB Operation	1-31
Main Fuel Pump	1-22	Inlet Thump	1-31
Afterburner (AB) Fuel Pump	1-22	SEC Operation	1-31
Inlet Guide Vanes (IGV's)	1-22	Fire and Overheat Detection System	1-33
Variable Stator Vanes (VSV's)	1-22	FIRE & OHEAT DETECT Test	
Compressor Bleed Air	1-22	Button C DF	1-33
Exhaust Nozzle	1-23	Fuel System	1-33
AB Flame Detector	1-23	Fuel Tank System	1-33
Engine Monitoring System (EMS)	1-23	Fuel Transfer System	1-33
Engine Oil System	1-23	Fuel Tank Vent and Pressurization	
FUEL/OIL HOT Caution Light	1-23	System	1-35
Engine Anti-Ice System	1-23	Engine Fuel Supply System	1-35
Engine ANTI ICE Switch	1-24	Fuel Quantity Indicating System	1-43
INLET ICING Caution Light	1-24	Reservoir Fuel Level Sensing System	1-43
Engine and Accessory Drive Gearboxes ..	1-24	Fuel Low Caution Lights	1-45
Engine Alternator	1-24	HUD FUEL Low/Bingo Indication	1-45
Engine Ignition System	1-24	HUD TRP FUEL Warning	1-45
Jet Fuel Starter (JFS)	1-25	FUEL/OIL HOT Caution Light	1-45
ENG & JET START Control Panel	1-25	Fuel Tank Explosion Suppression	
JFS Switch C DF	1-25	System	1-45
JFS RUN Light C DF	1-26	Refueling System	1-46
JFS Operation	1-26	Ground Refueling	1-46
Engine Controls and Indicators	1-26	Air Refueling (AR) System	1-46
ENG CONT Switch	1-26	NWS A/R DISC MSL STEP	
SEC Caution Light	1-28	Button	1-46
EEC Caution Light	1-28	Air Refueling (AR) Status	
BUC Caution Light	1-28	Indicator	1-46
		Environmental Control System (ECS)	1-47
		Electrical Failures	1-47
		Air-Conditioning	1-47

Pressurization	1-47	Landing Gear Weight-on-Wheels (WOW)	
AIR SOURCE Knob C DF	1-47	Switches	1-70
TEMP Knob C DF	1-49	Landing Gear Operation	1-74
DEFOG Lever C DF	1-50	Nosewheel Steering (NWS) System	1-74
EQUIP HOT Caution Light	1-50	NWS Controls and Indicators	1-74
Cockpit Pressure Altimeter C DF	1-50	NWS A/R DISC MSL STEP Button	1-74
CABIN PRESS Caution Light	1-50	NWS Light	1-74
Anti-G System	1-51	NWS FAIL Caution Light	1-74
Electrical System	1-51	Nosewheel Steering (NWS) System D	1-74
Main AC Power System	1-51	Wheel Brake System	1-75
Overcurrent Sensing Contactors	1-51	Toe Brake System	1-75
Standby AC Power System	1-51	Spin Down Braking System	1-78
Emergency AC Power System	1-51	Brakes Channel Switch C DF	1-78
DC Power System	1-51	Parking Brake C DF	1-78
FLCS Power Supply	1-54	Antiskid System	1-78
External Power Provisions	1-54	ANTI-SKID Switch C DF	1-79
Electrical System Controls and		ANTI SKID Caution Light	1-79
Indicators	1-54	Speedbrake System	1-79
Electrical Power Distribution	1-54	SPD BRK Switch	1-79
Electrical System Normal Operation	1-54	SPEED BRAKE Position Indicator	1-79
Hydraulic System	1-62	Drag Chute System	1-79
HYD PRESS Indicators and Warning		DRAG CHUTE Switch	1-80
Light	1-62	Arrestment System	1-80
HYD PRESS Indicators	1-62	HOOK Switch	1-80
HYD/OIL PRESS Warning Light	1-62	HOOK Caution Light	1-80
Emergency Power Unit (EPU)	1-62	Wing Flap System	1-80
EPU Controls and Indicators	1-63	Leading Edge Flaps (LEF's)	1-80
EPU Ground Safety Switch	1-63	LE FLAPS Switch	1-80
EPU Switch	1-63	FLCS LEF LOCK PFL	1-80
EPU Run Light	1-63	Trailing Edge Flaps (TEF's)	
HYDRAZN Light	1-63	(Flaperons)	1-82
AIR Light	1-63	ALT FLAPS Switch	1-82
EPU/GEN Test Switch	1-63	Flight Control System (FLCS)	1-82
EPU FUEL Quantity Indicator		Digital Backup (DBU)	1-82
C DF	1-66	FLCS Limiters	1-87
Hydrazine Leak Detector	1-66	AOA/G Limiter	1-87
EPU Fired Indicator	1-66	Roll Rate Limiter	1-87
EPU Operation	1-66	Rudder Authority Limiter	1-87
Landing Gear (LG) System	1-68	Yaw Rate Limiter	1-87
Main Landing Gear (MLG)	1-68	FLCS Gains	1-87
Nose Landing Gear (NLG)	1-68	Cruise Gains	1-87
Landing Gear Controls and Indicators ...	1-68	Takeoff and Landing Gains	1-90
Landing Gear Handle	1-68	Standby Gains	1-90
Landing Gear Handle Down Permission		FLCS Data Recorder C DF	1-90
Button	1-68	Angle-of-Sideslip (AOS) Feedback	
DN LOCK REL Button	1-70	Function	1-90
ALT GEAR Handle	1-70	Gun Compensation	1-90
LG Warning Horn	1-70	Flight Control System (FLCS)	
HORN SILENCER Button	1-70	Controls	1-90
TO/LDG CONFIG Warning Light	1-70	Stick	1-90
WHEELS Down Lights	1-70	Rudder Pedals	1-93
		MANUAL TRIM Panel	1-93

MANUAL PITCH Override (MPO)		FLOOD INST PNL Knob	1-114
Switch	1-93	FLOOD CONSOLES Knob	1-114
STORES CONFIG Switch C DF	1-93	Utility Light	1-115
Low Speed Warning Tone	1-93	Cockpit Spotlights	1-115
FLT CONTROL Panel (FLCP) C DF	1-93	Escape System	1-115
FLCS Warning, Caution, and Indicator		Canopy	1-115
Lights	1-93	Canopy Controls and Indicators	1-116
FLCS Warning Light	1-93	MANUAL CANOPY CONTROL	
DBU ON Warning Light	1-95	Handcrank	1-116
TO/LDG CONFIG Warning Light	1-95	Canopy Handle C DF	1-116
FLCS FAULT Caution Light	1-95	Canopy Jettison	1-116
Built-In Test (BIT)	1-98	Ejection Seat	1-116
Pilot Fault List Display (PFLD)	1-98	Ejection Handle	1-116
Trim	1-98	SHOULDER HARNESS Knob	1-116
Autopilot	1-98	EMERGENCY MANUAL CHUTE	
Autopilot Operation	1-99	Handle	1-116
ADV MODE Switch	1-99	Ejection Safety Lever	1-121
Stick Steering	1-99	SEAT NOT ARMED Caution Light	1-121
AOA System	1-100	SEAT ADJ Switch	1-121
AOA Indicator	1-100	Shoulder Harness Straps/Parachute	
AOA Indexer	1-101	Risers	1-121
HUD AOA Display	1-101	Inertia Reel Straps	1-121
Air Data System	1-101	Lapbelt	1-121
Air Data Probes	1-101	Survival Kit	1-121
AOA Transmitters	1-101	RADIO BEACON Switch	1-121
Total Temperature Probe	1-101	Emergency Oxygen	1-121
Static Pressure Ports	1-101	Ejection Seat Operation	1-121
Probe Heat Monitor	1-103	Ejection Mode Envelopes	1-122
PROBE HEAT Switch	1-103	Ejection Sequence Times	1-122
Pneumatic Sensor Assembly (PSA)	1-103	Canopy Jettison/Seat Ejection	1-122
Central Air Data Computer (CADC)	1-103	Ejection Seat Performance	1-122
CADC Caution Light	1-103	Oxygen System	1-131
Warning, Caution, and Indicator Lights	1-105	Liquid Oxygen System	1-131
Voice Message System (VMS)	1-105	Pressure Breathing for G (PBG)	1-131
VOICE MESSAGE Switch C DF	1-109	Oxygen System Controls and	
MASTER CAUTION Light	1-109	Indicators	1-131
Pilot Fault List Display (PFLD)	1-109	Oxygen Duration	1-131
Caution Light Panel	1-111	Emergency Oxygen System	1-131
MAL & IND LTS Test Button	1-111	Oxygen System Schematic	1-131
Lighting System	1-111	Communications, Navigation, and IFF	
Exterior Lighting	1-111	(CNI) Equipment	1-136
Anticollision Strobe Light	1-111	Upfront Controls	1-136
Position/Formation Lights	1-111	DED/CNI Readouts	1-136
Air Refueling Lights	1-111	CNI Readout/DED Page Summary	1-138
Vertical Tail-Mounted Floodlight	1-113	AUX COMM Panel C DF	1-139
Landing and Taxi Lights	1-113	CNI (Communications, Navigation,	
Interior Lighting	1-113	and IFF) Knob	1-139
PRIMARY CONSOLES Knob	1-113	IFF MASTER Knob	1-139
PRIMARY INST PNL Knob	1-113	M-4 CODE Switch	1-139
DATA ENTRY DISPLAY Knob	1-113	IFF MODE 4 REPLY Switch	1-140
MAL & IND LTS Switch	1-114	IFF MODE 4 MONITOR Switch	1-140

TACAN Function Switch	1-140	Tactical Air Navigation (TACAN)	
TACAN CHANNEL Selector Levers ...	1-140	System	1-149
AUDIO 1 Control Panel	1-140	Operation of the TACAN on Upfront	
COMM 1 (UHF) Power Knob	1-140	Controls	1-149
COMM 1 (UHF) Mode Knob	1-140	Terrain Following Radar (TFR) System	1-150
COMM 2 (VHF) Power Knob	1-141	AIFF System	1-150
COMM 2 (VHF) Mode Knob	1-141	AIFF Transponder	1-150
SECURE VOICE Knob	1-141	Operation of the Transponder on	
MSL Tone Knob	1-141	Upfront Controls	1-150
TF Tone Knob	1-141	AIFF Interrogator	1-151
THREAT Tone Knob	1-141	Operation of the Interrogator on	
AUDIO 2 Control Panel	1-142	Upfront Controls	1-152
ILS Power Knob	1-142	AIFF Controls and Indicators	1-152
TACAN Power Knob	1-142	IFF IDENT Button	1-152
INTERCOM Knob	1-142	IFF (Mode 4) Caution Light	1-152
HOT MIC CIPHER Switch	1-142	UHF VHF IFF Transmit Switch	1-152
ANT SEL Panel C DF	1-142	Instrument Landing System (ILS)	1-153
IFF ANT SEL Switch C DF	1-142	ILS Controls	1-153
UHF ANT SEL Switch C DF	1-143	Operation of the ILS on Upfront	
Communications System	1-143	Controls	1-153
Antenna Locations	1-143	MRK BCN Light	1-154
Have Quick (HQ) System	1-143	INSTR MODE Select Panel	1-154
Single Word of Day (WOD)	1-143	INSTR HDG Knob C DF	1-154
Single WOD Transfer	1-143	INSTR MODE Knob	1-154
Multiple Word of Day (MWOD)	1-143	Navigation Aids and Display	1-154
Time-of-Day (TOD) Transmission	1-145	Instrument Modes	1-154
Time-of-Day (TOD) Reception	1-145	Flight Instruments	1-161
Net Number	1-145	Altimeter	1-161
Antijamming (AJ) Mode Operation	1-145	Airspeed/Mach Indicator	1-162
Have Quick (HQ) UHF Radio	1-145	Standby Attitude Indicator (SAI)	1-162
Operation of the UHF Radio on		Vertical Velocity Indicator (VVI)	1-162
Upfront Controls	1-145	Magnetic Compass	1-162
UHF Radio Backup Control Panel	1-146	Attitude Director Indicator (ADI)	1-162
Function Knob	1-146	Horizontal Situation Indicator (HSI)	1-163
Mode Knob	1-147	Clock	1-163
CHAN Knob	1-147	Crash Survivable Flight Data	
Manual Frequency Knobs	1-148	Recorder (CSFDR)	1-163
A-3-2-T Knob	1-148	F-16D Aircraft	1-165
VOL Knob	1-148	Engine Controls DR	1-165
SQUELCH Switch	1-148	Throttle DR	1-165
TONE Button	1-148	ENG CONT Switch DR	1-165
VHF Radio	1-148	Fuel System	1-165
Operation of the VHF Radio on		Fuel Control Panel DR	1-165
Upfront Controls	1-148	Speedbrake System	1-165
Zeroize Switch	1-149	SPD BRK Switch DR	1-165
Navigation Systems	1-149	Drag Chute System	1-165
Global Positioning System (GPS)	1-149	DRAG CHUTE Switch DR	1-165
Inertial Navigation Set (INS)	1-149	Landing Gear (LG) System	1-165
		DN LOCK REL Button DR	1-165
		Flight Control System	1-165

Stick Control Operation	1-166
STICK CONTROL Switch DF	1-166
Stick Indicator DR	1-166
Stick OVRD Lights D	1-166
Escape System D	1-166
EJECTION MODE SEL Handle DR ...	1-168
Communications System	1-167
INSTR Mode Select Panel D	1-167
Flight Instruments DR	1-167
Accelerometer DR	1-167
Multifunction Display (MFD) DR	1-167
Throttle and Stick Switches/Controls DR	1-167
ARMT CONSENT Switch DR	1-167
Aft Seat HUD Monitor (ASHM) DR	1-168
Servicing Diagram	1-168

THE AIRCRAFT

The F-16C is a single-engine, single-seat, multirole tactical fighter with full air-to-air and air-to-surface combat capabilities. The F-16D is a two-seat (tandem) version and performs the secondary role of a trainer. The fuselage is characterized by a large bubble canopy, forebody strakes, and an underfuselage engine air inlet. The wing and tail surfaces are thin and feature moderate aft sweep. The wing has automatic leading edge flaps which enhance performance over a wide speed range. Flaperons are mounted on the trailing edge of the wing and combine the functions of flaps and ailerons. The horizontal tails have a small negative dihedral and provide pitch and roll control through symmetrical/differential deflection. The vertical tail, augmented by twin ventral fins, provides directional stability. All flight control surfaces are actuated hydraulically by two independent hydraulic systems and are directed by signals through a fly-by-wire system.

The fire control system includes a fire control radar with search and tracking capability; two multifunction displays (MFD's) for presentation of navigation, radar, weapons, and other information; and a head-up display (HUD). Upfront controls provide a central control point for fire control, communications, navigation, and IFF functions. A stores management system (SMS) presents a visual display on a selected MFD for inventory, control, and release of all stores. Basic armament includes a fuselage-mounted multi-barrel 20 mm gun and an air-to-air missile on each wingtip. Additional stores of various types can be carried on pylons mounted under the wings and on the fuselage.

AIRCRAFT GENERAL DATA

Refer to figure 1-1. The aircraft approximate dimensions are:

- Span – including missile fins = 32 feet 10 inches
- Length – including nose probe = 49 feet 5.2 inches
- Height – top of vertical tail = 16 feet 10 inches
- Height – top of canopy = 9 feet 4 inches
- Tread = 7 feet 9 inches
- Wheelbase = 13 feet 2 inches

Refer to TURNING RADIUS AND GROUND CLEARANCE, Section II.

AIRCRAFT GENERAL ARRANGEMENT

Refer to figure 1-2 for general arrangement and overall view of the aircraft.

AIRCRAFT GROSS WEIGHT (A/C GW)


- C** The GW of the aircraft including pilot, oil, two tip AIM-120 missiles, and a full load of 20 mm ammunition is approximately 21,000 pounds and with full internal JP-8 fuel 28,200 pounds.
- D** The GW of the aircraft including pilot, oil, two tip AIM-120 missiles, and a full load of 20 mm ammunition is approximately 21,600 pounds and with full internal JP-8 fuel 27,500 pounds.

These GW's are approximate and shall not be used for computing aircraft performance. For maximum GW limitations, refer to Section V, OPERATING LIMITATIONS. For detailed information, refer to T.O. GR1F-16CJ-1-1, Part I.

COCKPIT ARRANGEMENT

Refer to figure 1-3. The cockpit is conventional except for the seat, which is reclined 30 degrees, and the stick, which is mounted on the right console. The cockpit contains no circuit breakers.

General Data

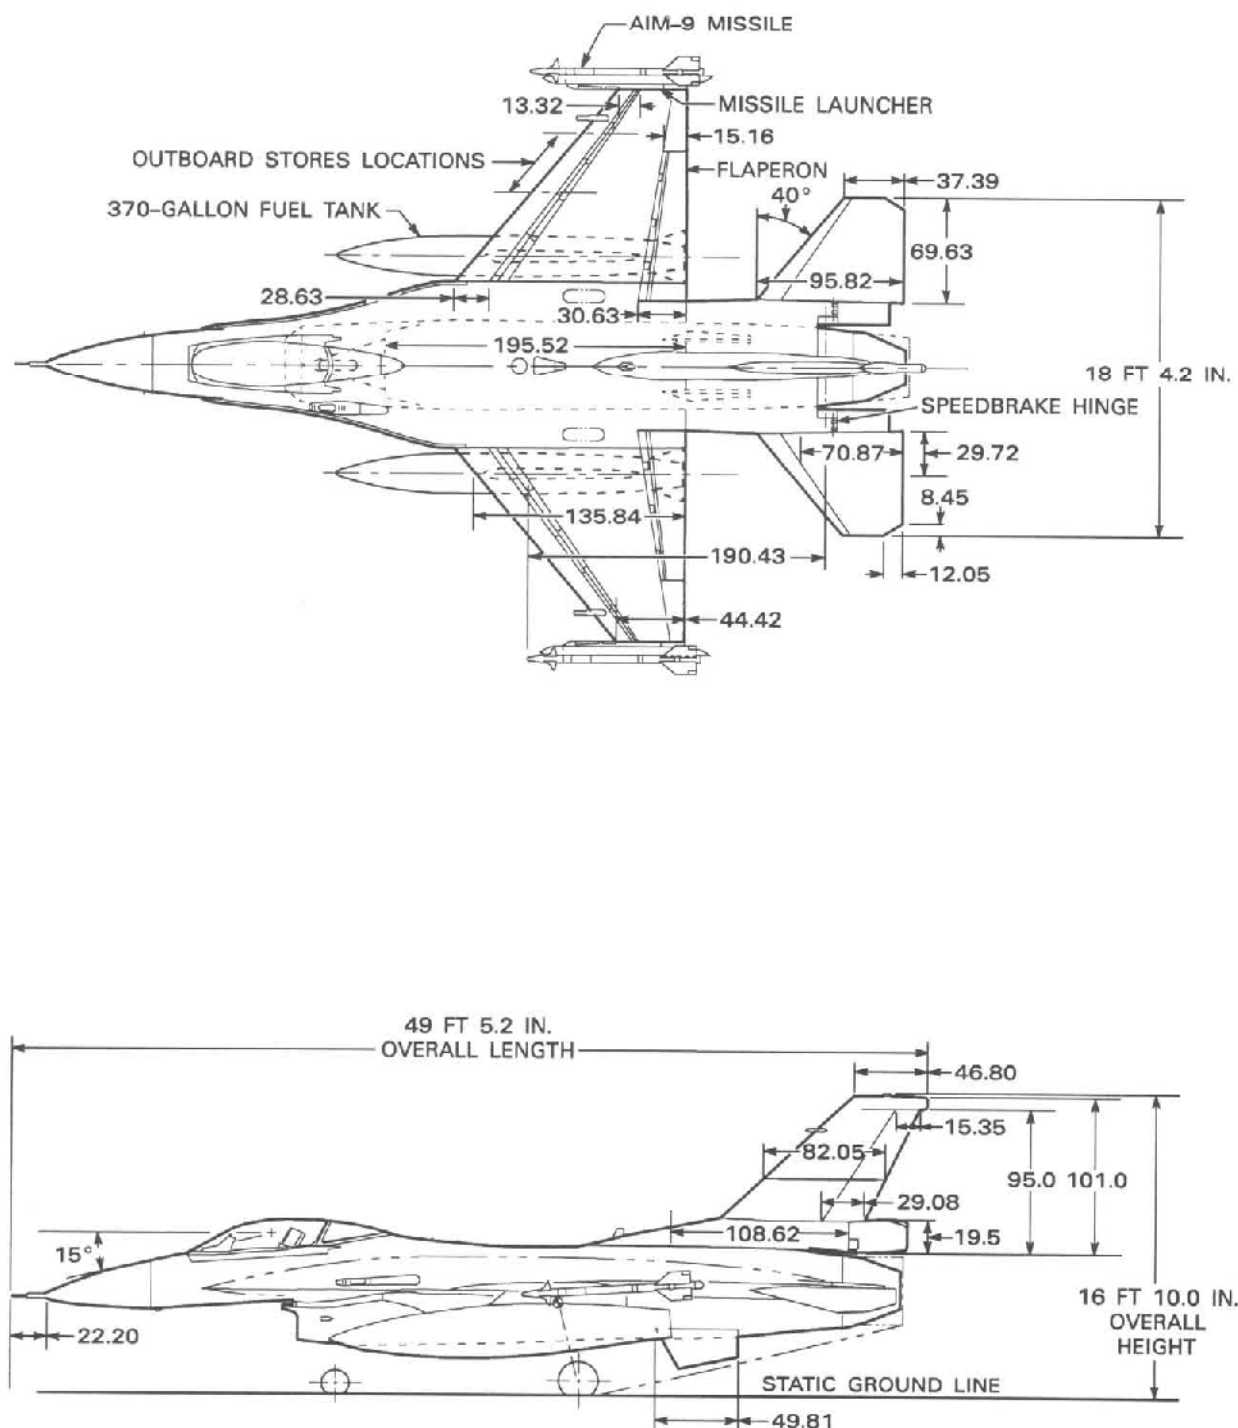

NOTE: Dimensions are in inches unless specified otherwise.

GR1F-16CJ-1-0004-1X37 ©

Figure 1-1. (Sheet 1)

WINGS

Area 300 Sq Ft
 Span 30 Ft
 Aspect Ratio 3.0
 Taper Ratio 0.2275
 Sweep (LE) 40°
 Dihedral 0°
 Airfoil NACA 64A204
 Incidence 0°
 Twist
 At BL 54.0 0°
 At BL 180.0 3°
 Flaperon Area 31.32 Sq Ft
 LEF Area 36.71 Sq Ft

HORIZONTAL TAILS

Area 63.70 Sq Ft
 Aspect Ratio 2.114
 Taper Ratio 0.390 (Theo)
 Sweep (LE) 40°
 Dihedral -10°
 Airfoil
 At Root 6% Biconvex
 At Tip 3.5% Biconvex

VERTICAL TAIL

Area 54.75 Sq Ft
 Aspect Ratio 1.294
 Taper Ratio 0.437
 Sweep (LE) 47.5°
 Airfoil
 At Root 5.3% Biconvex
 At Tip 3.0% Biconvex
 Rudder Area 11.65 Sq Ft

VENTRAL FIN (EACH)

Area 8.03 Sq Ft
 Span 23.356 In. Theo (27.5 In. Actual)
 Aspect Ratio 0.472 (Theo)
 Taper Ratio 0.760 (Theo)
 Sweep (LE) 30°
 Dihedral (Cant) 15° Outboard
 Airfoil
 At Root 3.886% Modified Wedge
 At Tip Constant 0.03R

SPEEDBRAKES


Area (4 Element Clamshell) .. 14.26 Sq Ft (3.565 Sq Ft Ea)

LANDING GEAR (LG)

Main Gear (MLG)
 Tire Size 27.75 x 8.75-14.5 24 Ply
 Stroke 10.5 In.
 Static Rolling Radius 11.9 In.
Nose Gear (NLG)
 Tire Size 18 x 5.7-8 18 Ply
 Stroke 10.0 In.
 Static Rolling Radius 7.5 In.

ENGINE

F110-GE-129
 Thrust 29,500 Lb Class
 Engine Compressor
 Face Diameter 35.8 In.
 Engine Length 183.76 In.

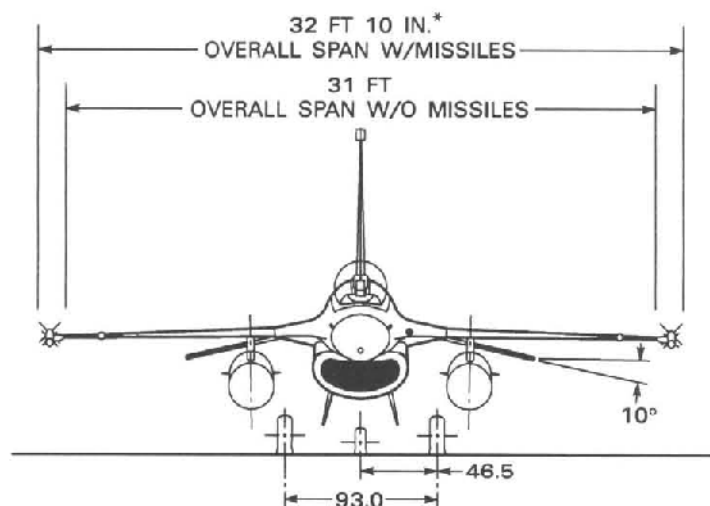


* Add 3 inches for AIM-120 missiles

GR1F-16CJ-1-0004-2X37 ©

Figure 1-1. (Sheet 2)

General Arrangement (Typical)

T.O. GR1F-16CJ-1

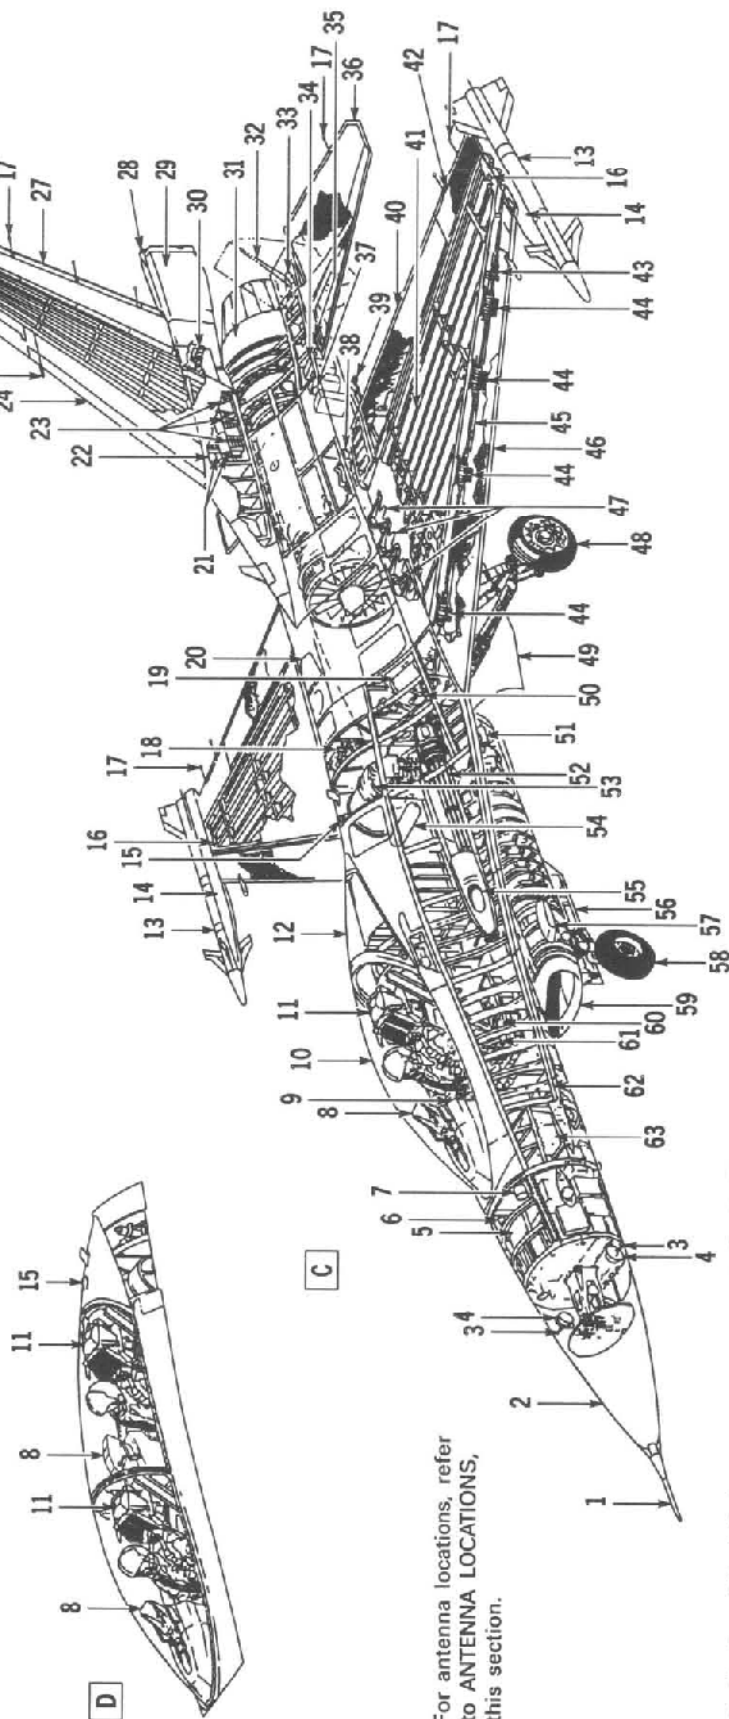

1. Air Data (Pitot) Probe
2. Nose Radome
3. AOA Probe
4. AOA Transmitter
5. Forward Electronic Equipment Bay
6. Cockpit Pressure Regulator
7. Cockpit Pressure Safety Valve
8. HUD/ASHM
9. Instrument Panel
10. Canopy (Movable)
11. Ejection Seat
12. Canopy (Fixed)
13. AIM-9 Missile
14. Missile Launcher
15. AR and Formation Light
16. Position/Formation Light

17. Static Discharger
18. LEF Drive Unit
19. Hydraulic Reservoir
20. AR Slipway
21. FLCS Accumulators
22. Anticollision Strobe Light Power Supply
23. Vertical Tail Attachment Fittings
24. Vertical Tail
25. Vertical Tail-Mounted Floodlight
26. Anticollision Strobe Light
27. Rudder
28. Position Light
29. Drag Chute Fairing
30. Rudder ISA
31. Turbofan Engine
32. Speedbrake


33. Speedbrake Actuator
34. Chaff/Flare Dispenser
35. Horizontal Tail ISA
36. Horizontal Tail
37. Formation Light
38. Flaperon ISA
39. Hook
40. Flaperon
41. Wing Structural Box
42. Fixed Trailing Edge Panel
43. Asymmetry Brake
44. LEF Rotary Actuator
45. LEF Torque Shaft
46. LEF
47. Wing Attachment Fittings
48. MLG

49. MLG Door
50. LEF Angle Drive Gearbox
51. Air-Conditioning Package
52. M61A1 20MM Gun
53. Ammunition Drum
54. EPU Nitrogen Bottle
55. Gun Port
56. NLG Door
57. Position Light
58. NLG
59. Engine Air Inlet
60. Left Console
61. Throttle
62. Strake
63. Lower Equipment Compartment

GR1F-16CJ-1-0005X37

Figure 1-2.

Cockpit Arrangement **C** **DF** (Typical)

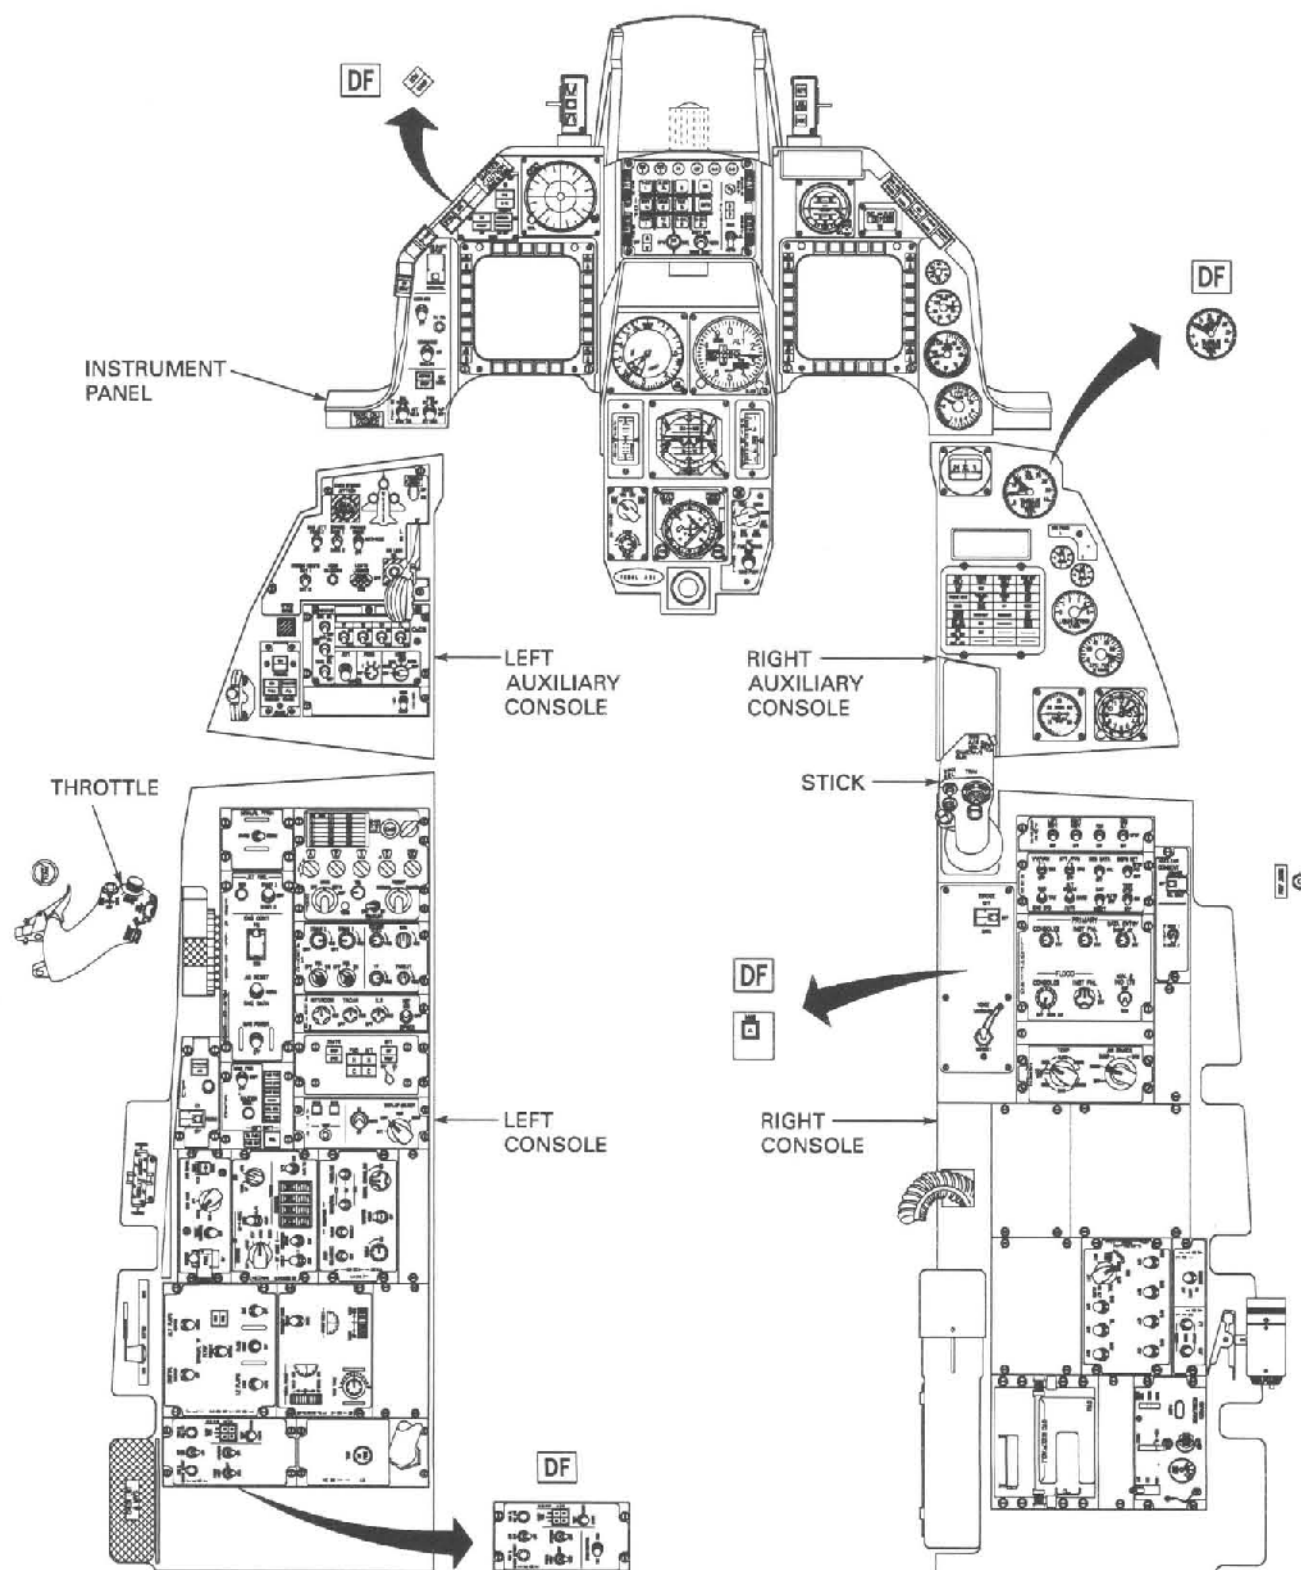


GR1F-16CJ-1-0006X37 ©



Figure 1-3. (Sheet 1)

Cockpit Arrangement **C** **DF** (Typical)

LEFT CONSOLE

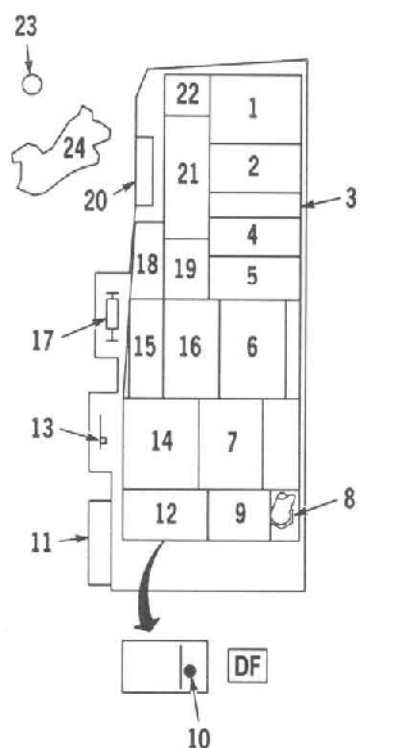

1. UHF Backup Control Panel
2. AUDIO 1 Control Panel
3. AUDIO 2 Control Panel
4. ECM Control Panel
5. AVTR Control Panel
6. EXT LIGHTING Control Panel
7. MANUAL TRIM Panel
8. G-Suit Hose Connection
9. ANTI G TEST Button
10. **DF** STICK CONTROL Switch
11. Stowage
12. TEST Switch Panel
13. DEFOG Lever
14. FLT CONTROL Panel
15. Fuel Control Panel
16. AUX COMM Panel
17. CANOPY JETTISON T-Handle
18. EPU Control Panel
19. ELEC Control Panel
20. Throttle FRICTION Control
21. ENG & JET START Control Panel
22. MANUAL PITCH Override Switch
23. CHAFF/FLARE Dispense Button
24. Throttle

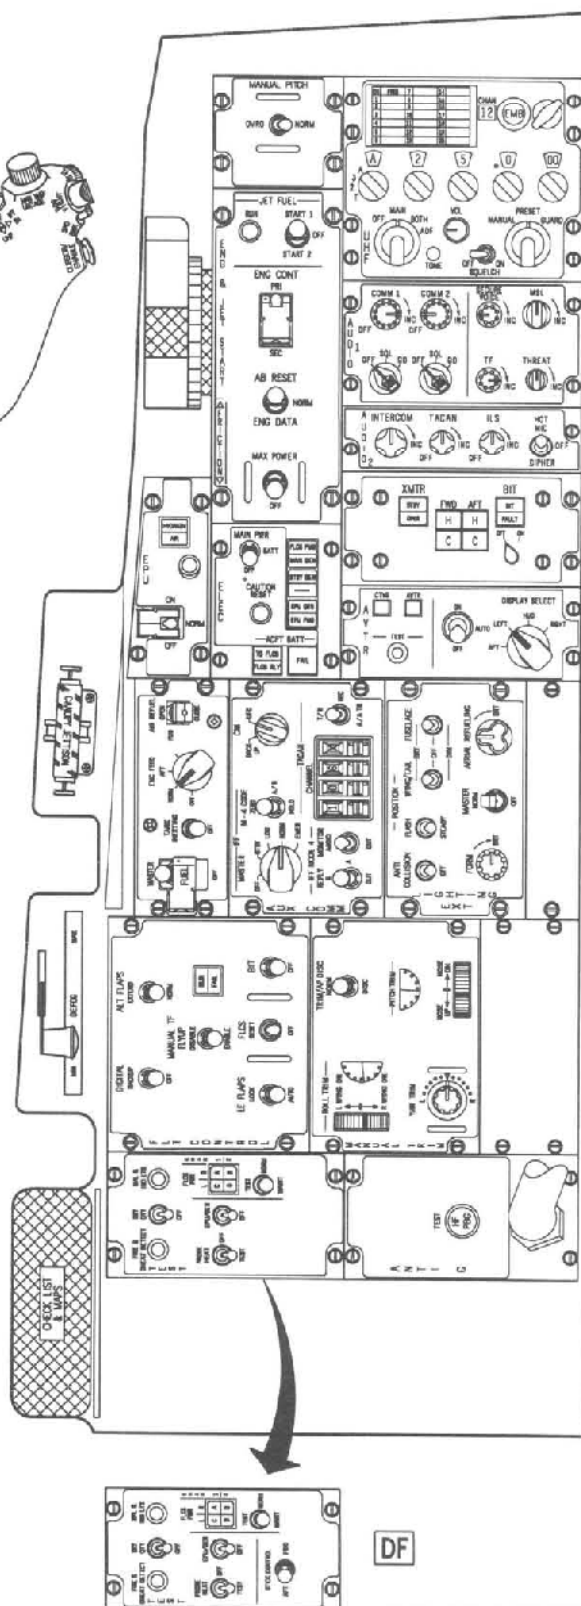
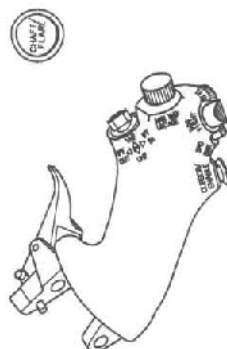


GR1F-16CJ-1-0007X37 ©

Figure 1-3. (Sheet 2)



Cockpit Arrangement C DF (Typical)

LEFT AUXILIARY CONSOLE

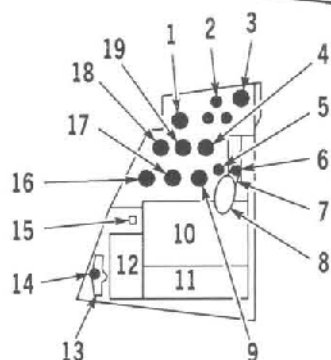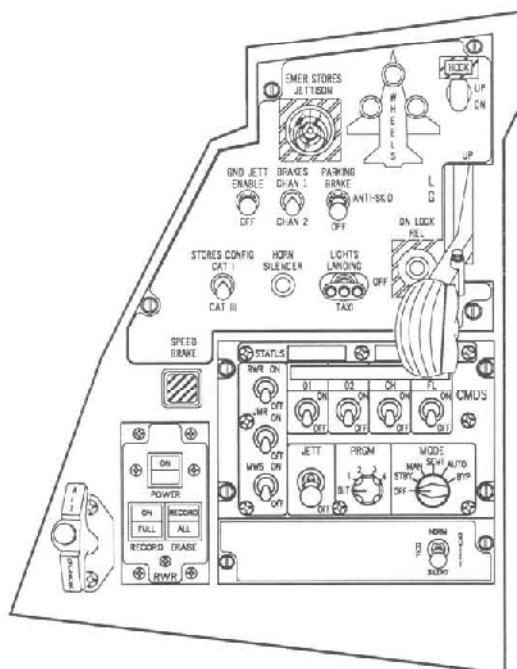

1. EMER STORES JETTISON Button (Covered)
2. WHEELS Down Lights (Green)
3. HOOK Switch (Lever Lock)
4. ANTI-SKID Switch
5. DN LOCK REL Button
6. LG Handle Down Permission Button
7. LG Handle
8. LG Handle Warning Light (Red)
9. LANDING TAXI LIGHTS Switch
10. CMDS Control Panel
11. RF Transmit Panel
12. RWR Aux Control Panel
13. ALT GEAR Handle
14. ALT GEAR Reset Button
15. SPEED BRAKE Position Indicator
16. STORES CONFIG Switch
17. HORN SILENCER Button
18. GND JETT ENABLE Switch (Lever Lock)
19. BRAKES Channel Switch

RIGHT AUXILIARY CONSOLE

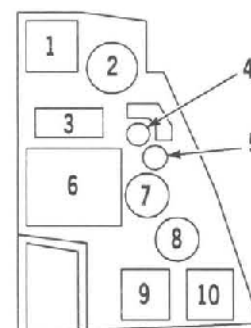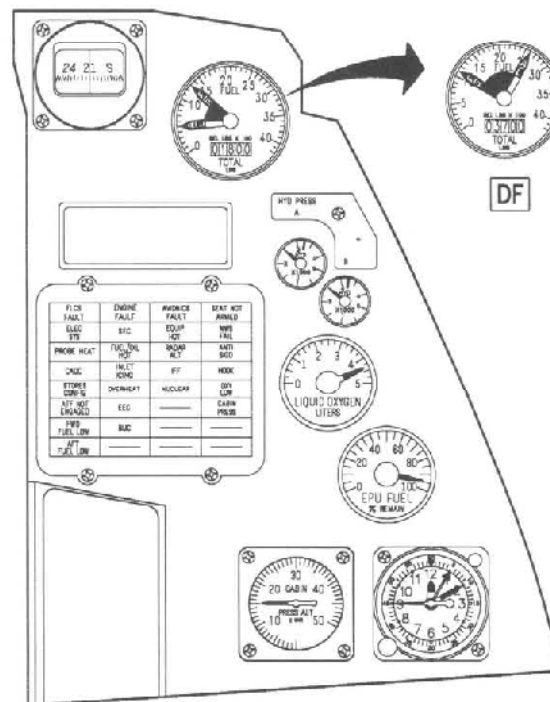


1. Magnetic Compass
2. FUEL Quantity Indicator
3. Pilot Fault List Display
4. System A HYD PRESS Indicator
5. System B HYD PRESS Indicator
6. Caution Light Panel
7. LIQUID OXYGEN Quantity Indicator
8. EPU FUEL Quantity Indicator
9. Cockpit Pressure Altimeter
10. Clock

GR1F-16CJ-1-0008X37 ©

Figure 1-3. (Sheet 3)

Cockpit Arrangement **C** **DF** (Typical)

INSTRUMENT PANEL

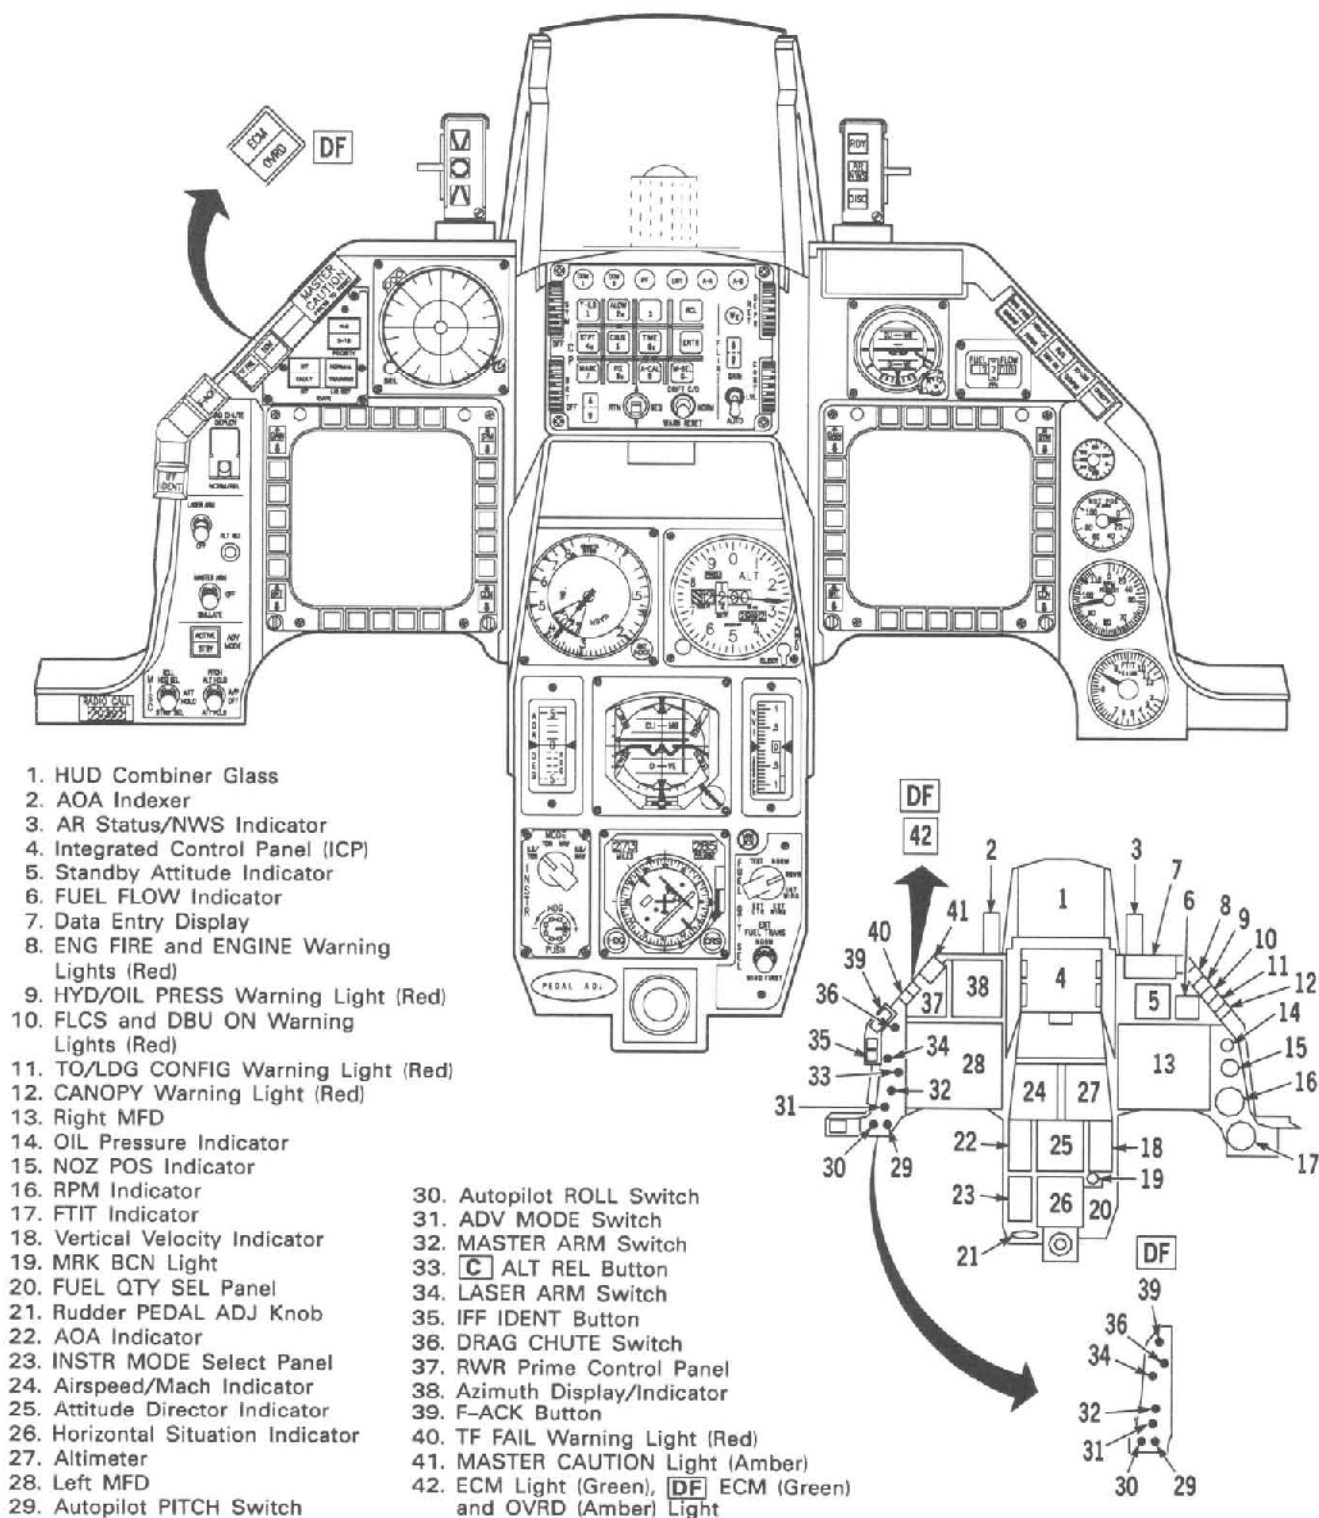

GR1F-16CJ-1-0009X37 ©

Figure 1-3. (Sheet 4)

Cockpit Arrangement **C** **DF** (Typical)

RIGHT CONSOLE


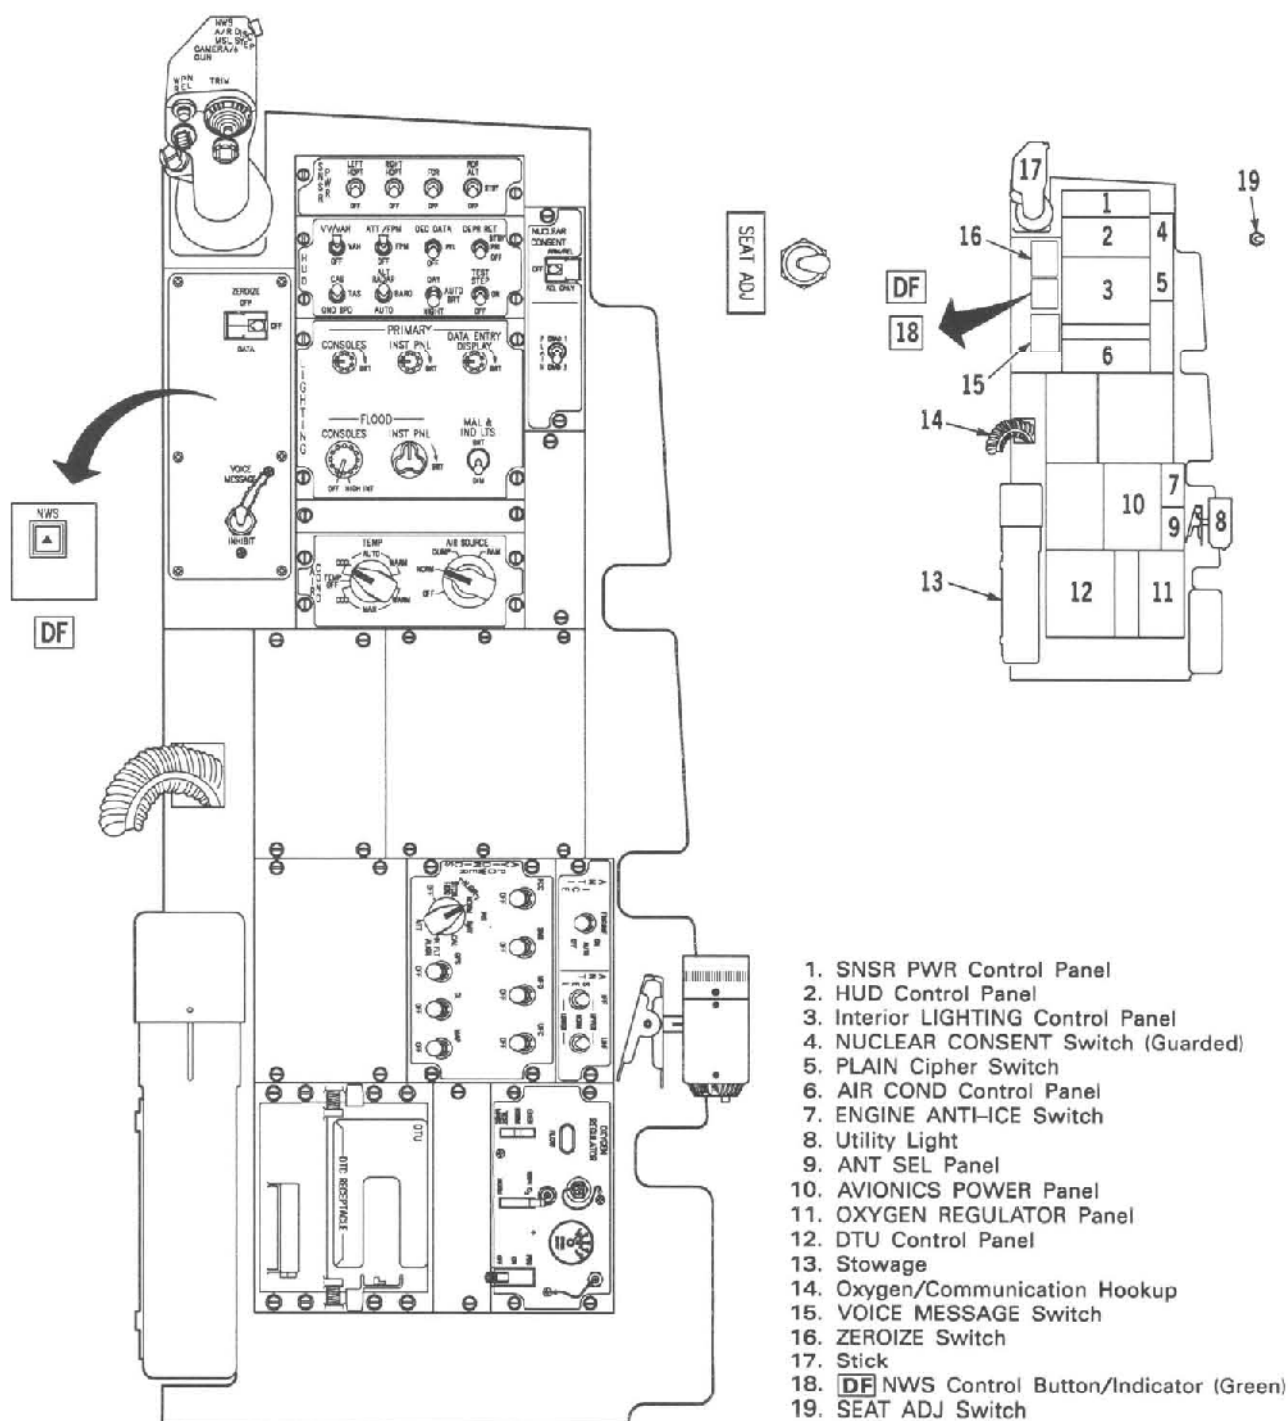


Figure 1-3. (Sheet 5)

GR1F-16CJ-1-0010X37

Cockpit Arrangement **DR** (Typical)

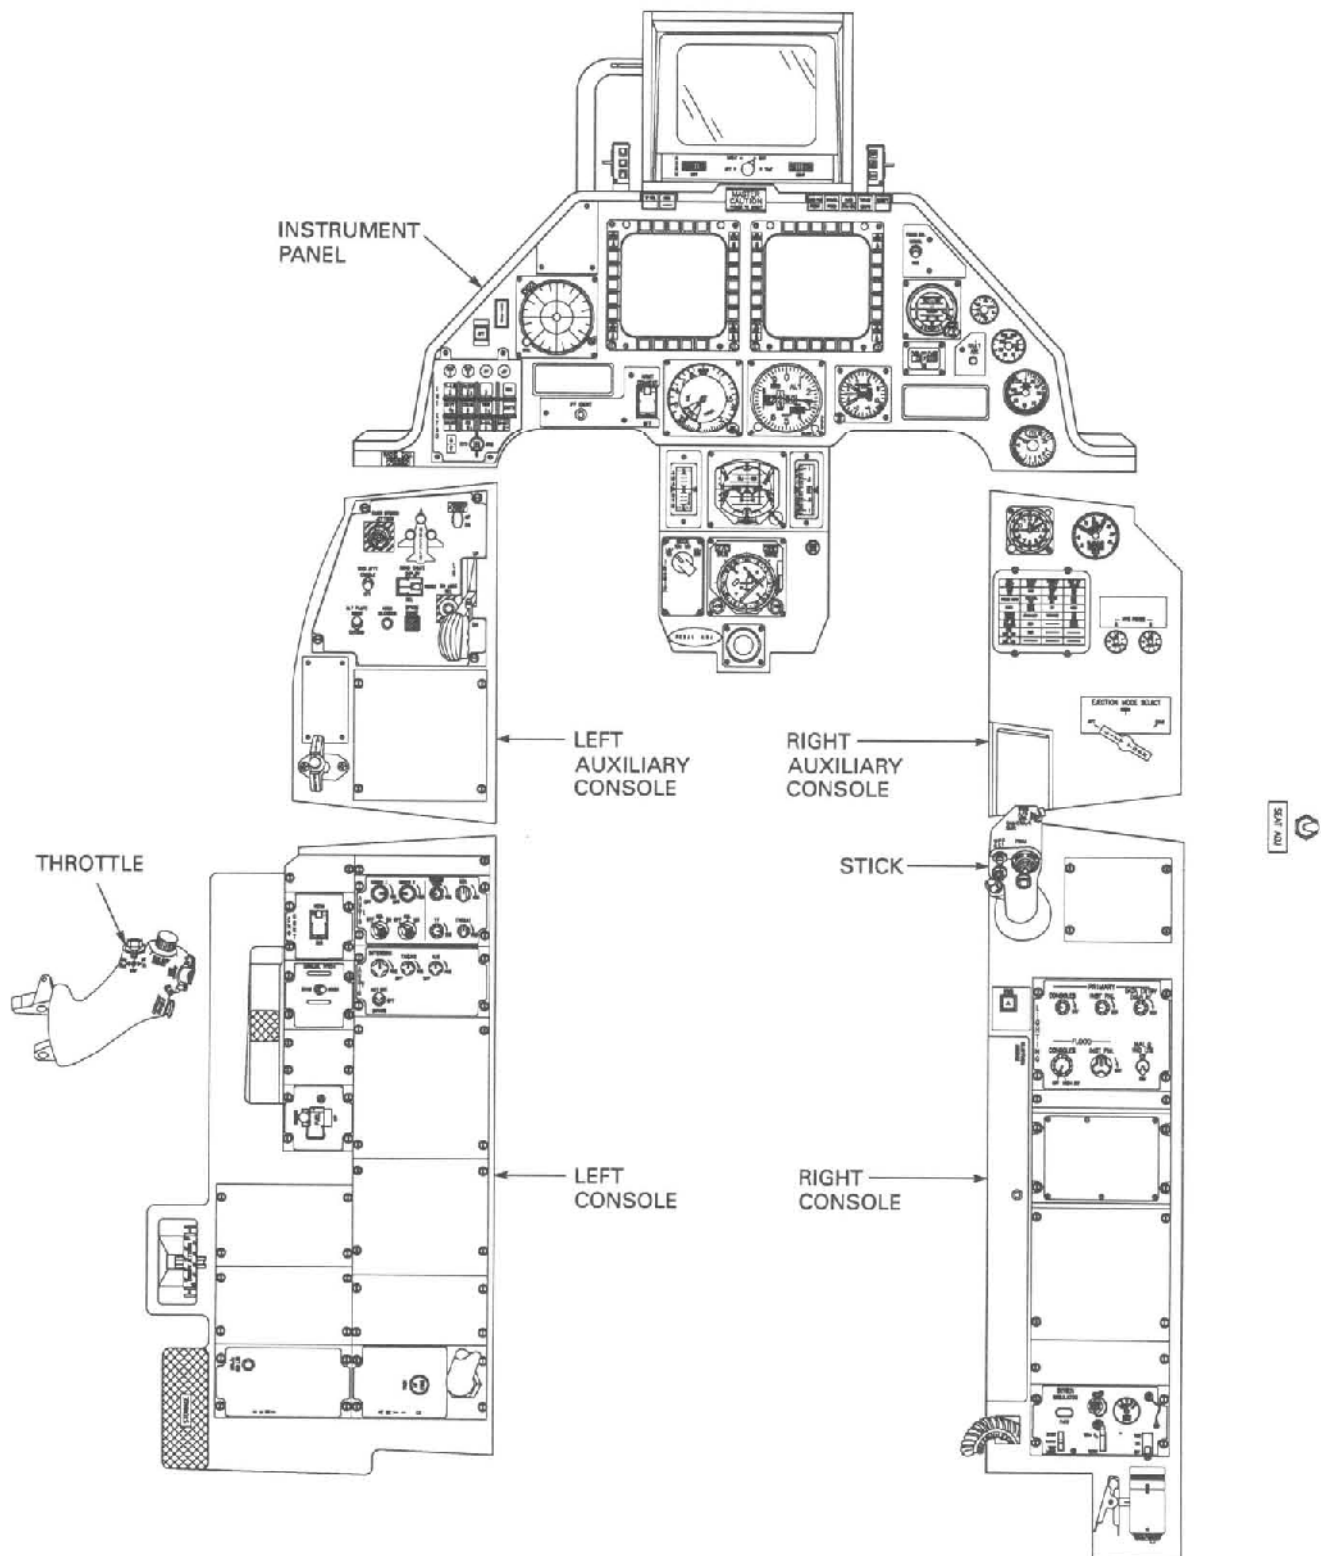


GR1F-16CJ-1-0011X37 ©

Figure 1-3, (Sheet 6)

Cockpit Arrangement **DR** (Typical)

LEFT CONSOLE


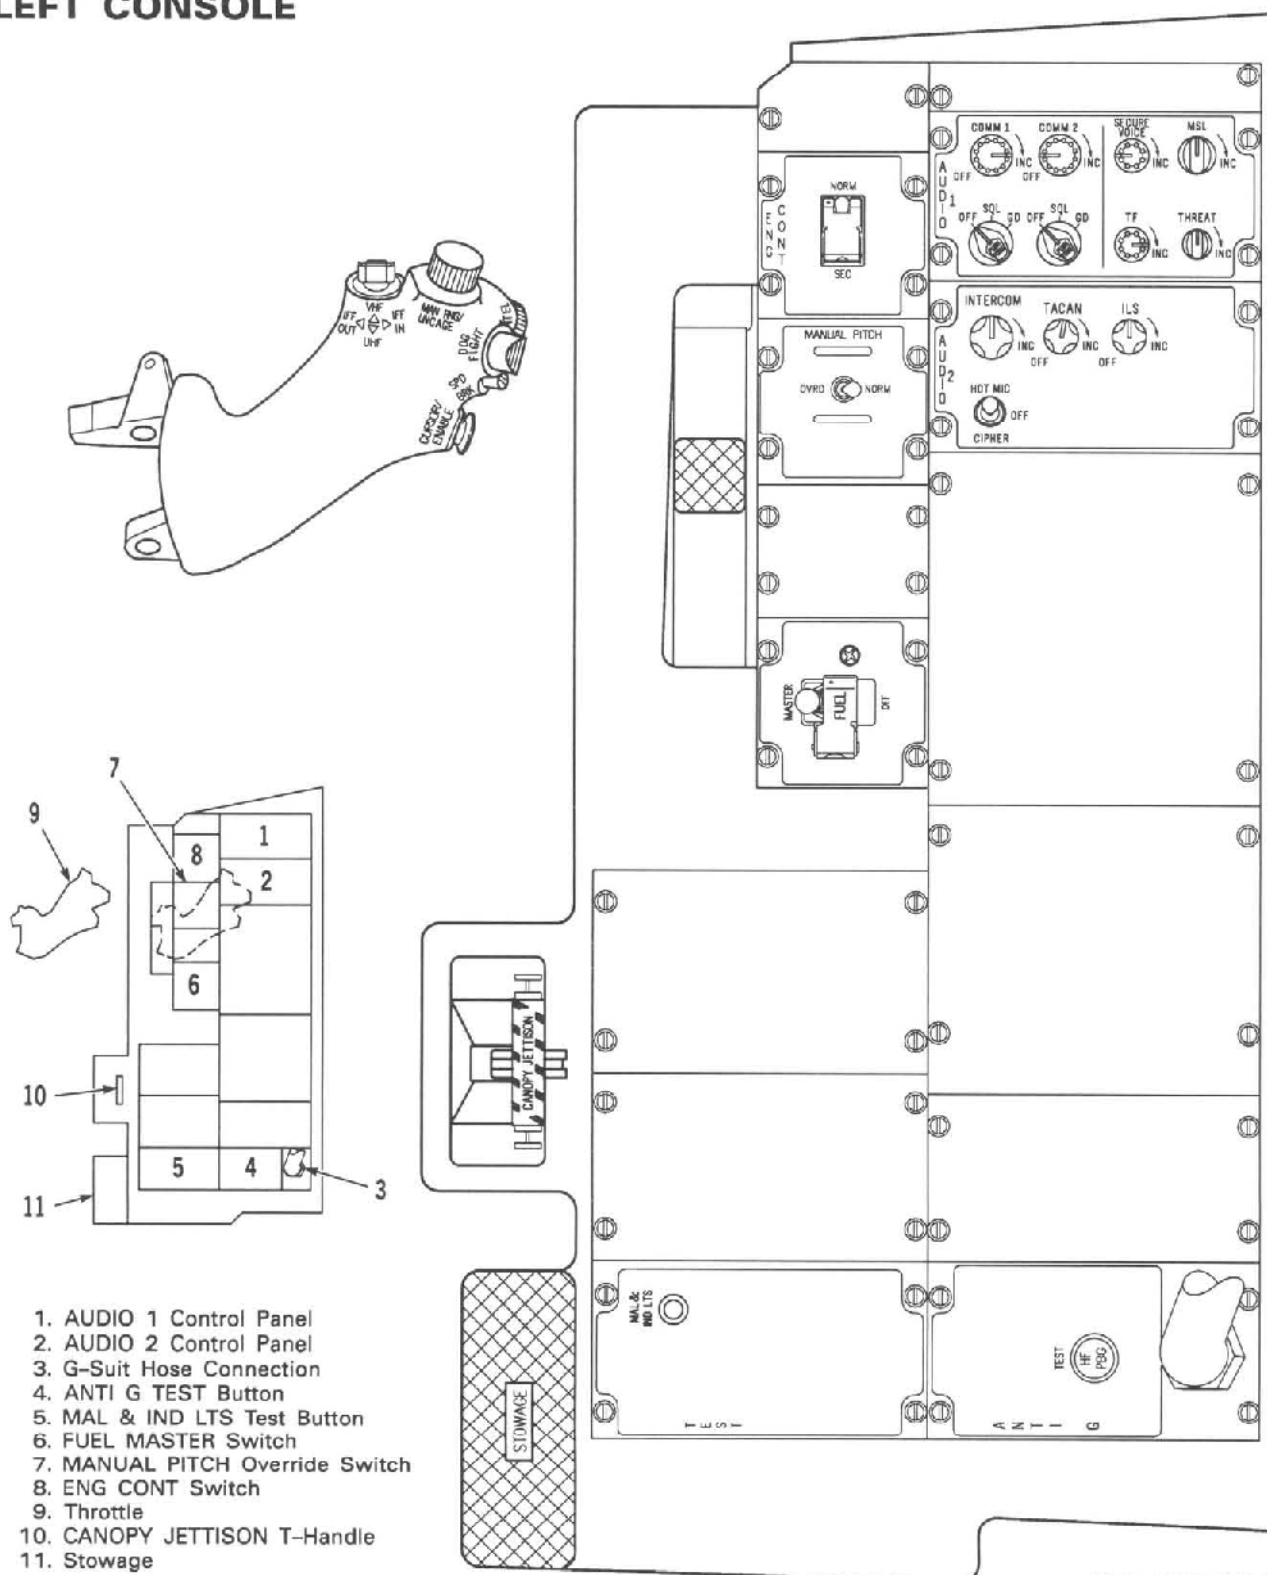


GR1F-16CJ-1-0012X37

Figure 1-3. (Sheet 7)



Cockpit Arrangement **DR** (Typical)

LEFT AUXILIARY CONSOLE

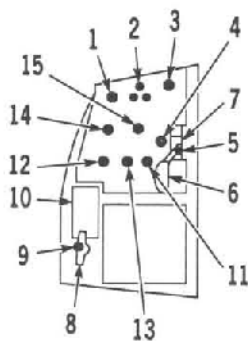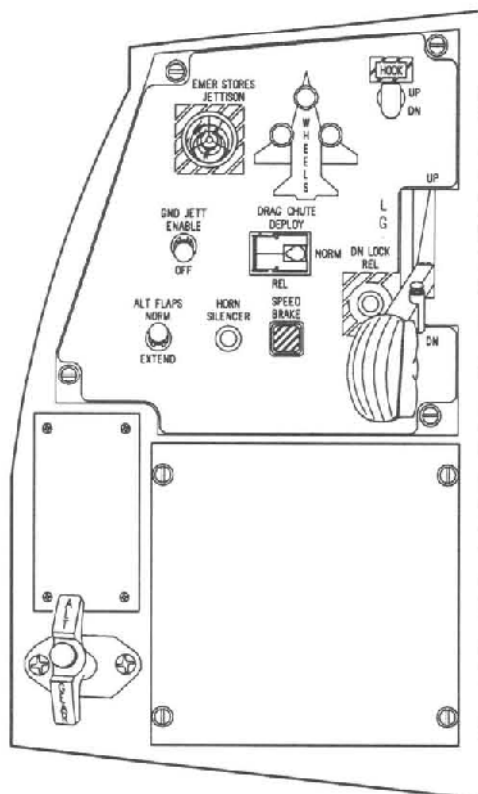

1. EMER STORES JETTISON Button (Covered)
2. WHEELS Down Lights (Green)
3. HOOK Switch (Lever Lock)
4. DN LOCK REL Button
5. LG Handle Down Permission Button
6. LG Handle Warning Light (Red)
7. LG Handle
8. ALT GEAR Handle
9. ALT GEAR Reset Button
10. Blank Panel
11. SPEED BRAKE Position Indicator
12. ALT FLAPS Switch (Lever Lock)
13. HORN SILENCER Button
14. GND JETT ENABLE Switch (Lever Lock)
15. DRAG CHUTE Switch

RIGHT AUXILIARY CONSOLE

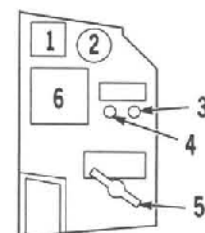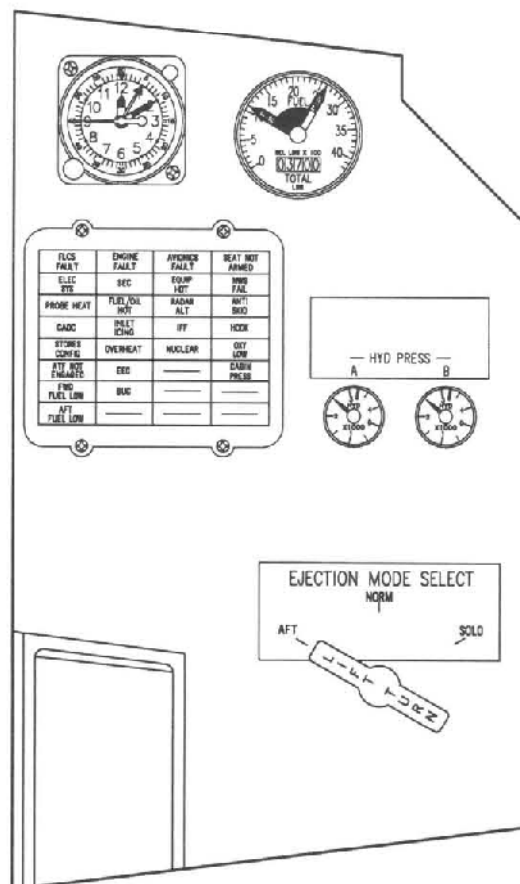


1. Clock
2. FUEL Quantity Indicator
3. System B HYD PRESS Indicator
4. System A HYD PRESS Indicator
5. EJECTION MODE SELECT Handle
6. Caution Light Panel

GR1F-16CJ-1-0013X37 ©

Figure 1-3. (Sheet 8)


Cockpit Arrangement DR (Typical)

INSTRUMENT PANEL

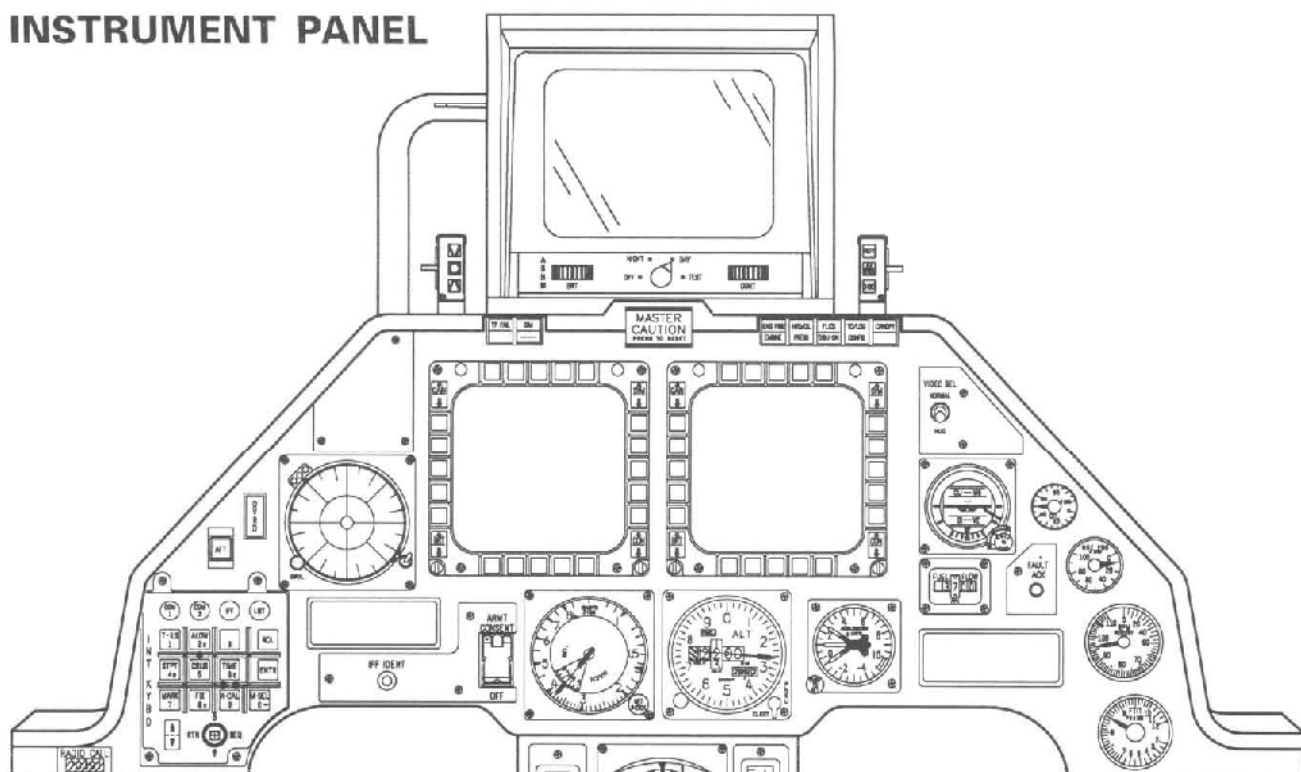

1. MASTER CAUTION Light (Amber)
2. ENG FIRE and ENGINE Warning Lights (Red)
3. HYD/OIL PRESS Warning Light (Red)
4. FLCS and DBU ON Warning Lights (Red)
5. AR Status/NWS Indicator
6. TO/LDG CONFIG Warning Light (Red)
7. CANOPY Warning Light (Red)
8. Right MFD
9. VIDEO SEL Switch
10. Standby Attitude Indicator
11. FUEL FLOW Indicator
12. OIL Pressure Indicator
13. FAULT ACK Button
14. NOZ POS Indicator
15. RPM Indicator
16. FTIT Indicator
17. Pilot Fault List Display
18. Accelerometer
19. Altimeter
20. Vertical Velocity Indicator
21. Attitude Director Indicator
22. Horizontal Situation Indicator
23. MRK BCN Light
24. Rudder PEDAL ADJ Knob
25. INSTR MODE Select Panel
26. AOA Indicator
27. Airspeed/Mach Indicator
28. ARMT CONSENT Switch (Guarded)

29. IFF IDENT Button
30. Data Entry Display
31. Integrated Keyboard Panel (IKP)
32. Stick Indicator
33. OVRD Light (Amber)
34. Blank
35. Azimuth Display/Indicator
36. Left MFD
37. AOA Indexer
38. TF FAIL Warning Light (Red)
39. Handgrip
40. ECM Light (Green)
41. Aft Seat HUD Monitor

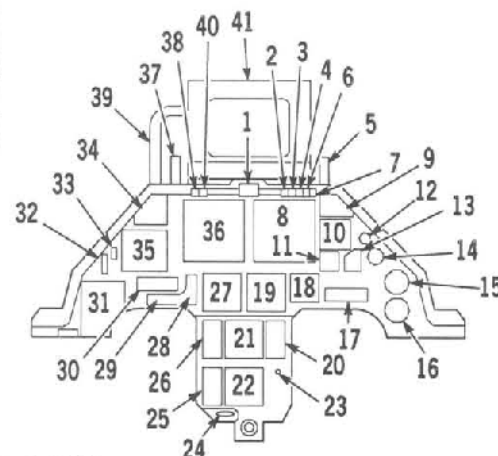


GR1F-16CJ-1-0014X37 ©


Figure 1-3. (Sheet 9)

Cockpit Arrangement **DR** (Typical)

RIGHT CONSOLE

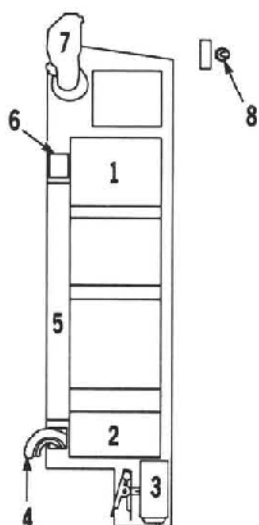

1. Interior LIGHTING Control Panel
2. OXYGEN REGULATOR Panel
3. Utility Light
4. Oxygen/Communications Hookup
5. Stowage
6. NWS Control Button/Indicator (Green)
7. Stick
8. SEAT ADJ Switch

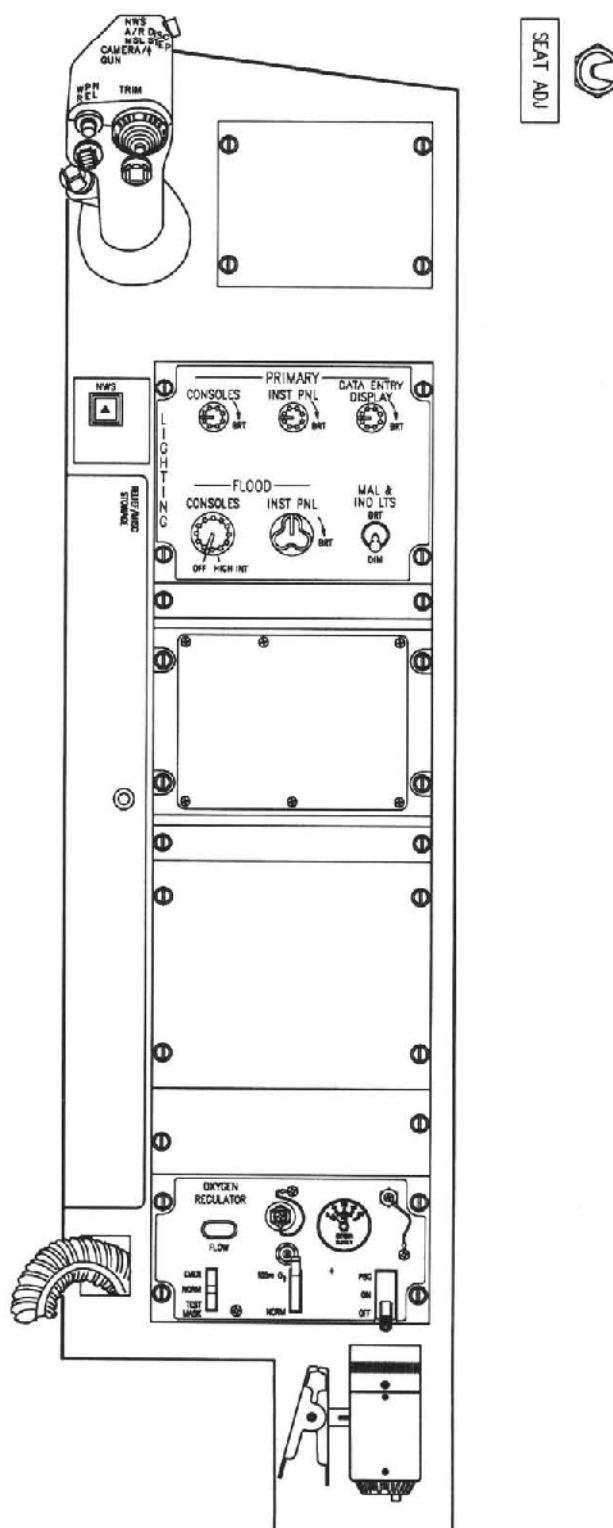

GR1F-16CJ-1-0015X37

Figure 1-3. (Sheet 10)

ENGINE

GENERAL DESCRIPTION

Refer to figure 1-4. The aircraft is powered by a single F110-GE-129 afterburning turbofan engine. Maximum thrust is approximately 29,500 pounds.

ENGINE FUEL/CONTROL SYSTEM

Refer to figure 1-5. The engine fuel/control system delivers the required fuel to the engine for combustion and for use by the control system for scheduling the engine variable geometry. The control system is primarily composed of three major components: the digital electronic control (DEC), the afterburner fuel control (AFC), and the main engine control (MEC). The engine has two pilot selectable modes of operation: primary (PRI) and secondary (SEC). In addition, there are two modes of operation between PRI and SEC which are not selectable by the pilot: hybrid VSV (HYB VSV) and hybrid (HYB).

Digital Electronic Control (DEC)

The DEC is the critical component of the primary (PRI) engine control. The DEC is an engine-mounted, fuel-cooled solid-state digital computer which controls both the main engine and the AB.

Afterburner Fuel Control (AFC)

The AFC is a fuel-operated electrohydraulic control which regulates fuel flow to the AB in conjunction with the DEC.


Main Engine Control (MEC)

The MEC is a fuel-operated hydromechanical control which provides various control functions in all control modes.

Primary (PRI) Engine Operation

PRI provides unrestricted engine operation throughout the entire flight envelope.

F110-GE-129 Engine

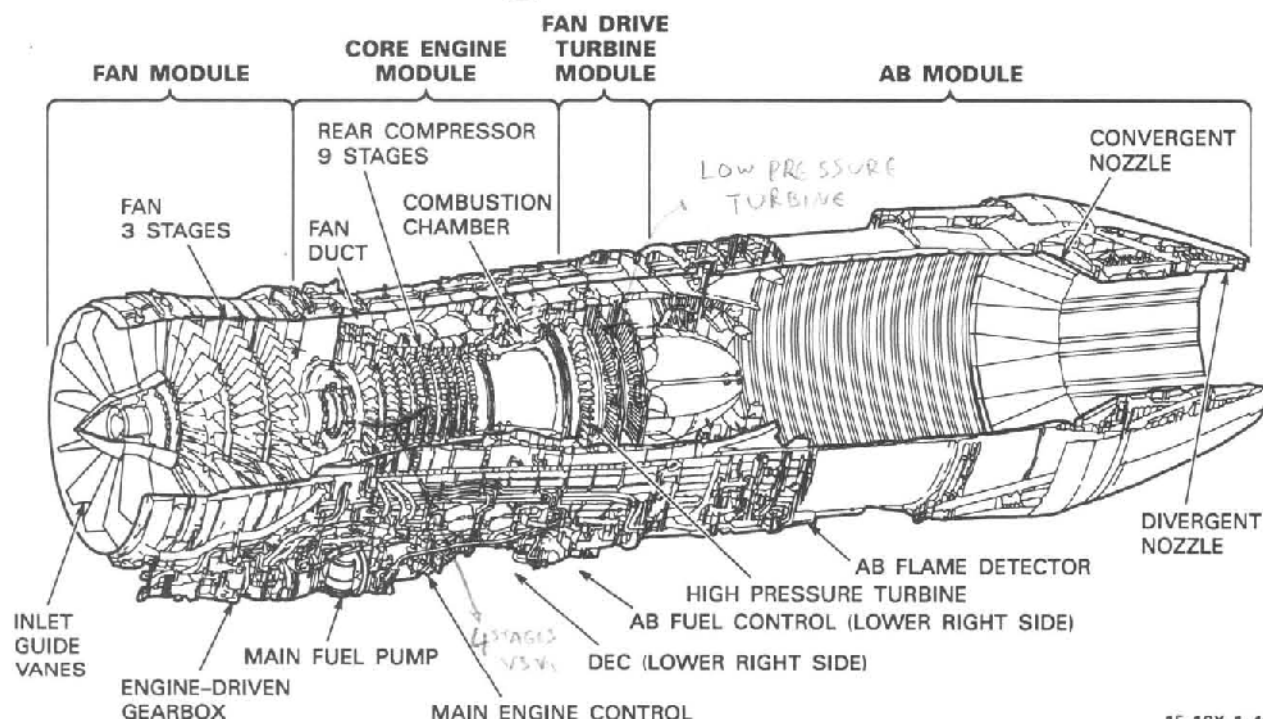

1F-16X-1-4005X©

Figure 1-4.

LEGEND:



1-20

Control functions provided by the DEC during PRI operation are:

- Fan speed control.
- Core speed limiting.
- Acceleration and deceleration fuel flow scheduling.
- Turbine blade temperature limiting.
- AB fuel flow scheduling.
- Nozzle control to provide fan stall margin.
- Minimum and maximum compressor discharge pressure limiting.
- Scheduling of inlet guide vane (IGV) position.
- Resetting of the compressor variable stator vanes (VSV) for increased stall protection.
- Ignition logic for starting and automatic relight sequencing in both the engine and AB.
- Logic to automatically select HYB or HYB VSV or transfer to SEC for certain PRI failures.
- Compressor variable stator vane scheduling.

Control functions provided by the MEC during PRI operation are:

- Main engine fuel flow scheduling and metering.
- Engine overspeed protection (113 percent rpm overspeed fuel shutoff valve).
- Positive fuel cutoff.
- Compressor VSV scheduling (HYB VSV) for certain PRI failures.

When operating in PRI, main engine fuel flow is controlled by the DEC. The MEC fuel flow control feature is in standby mode.

The nozzle is controlled by signals from the DEC to the engine hydraulic pump which positions four nozzle actuators in order to maintain fan stall margin while providing the requested level of thrust.

Fan inlet guide vane (IGV) positioning is controlled by the DEC in accordance with the IGV schedule.

High energy and AB ignition are controlled by the DEC.

During transonic and supersonic flight, with the throttle retarded below MIL, the DEC limits minimum engine operation as a function of mach number from the central air data computer (CADC) to prevent inlet buzz and possible engine stall. When retarding the throttle to IDLE above 1.4 mach, rpm may decrease up to 15 percent from MIL rpm. RPM then decreases with mach number until approximately 1.1 mach, at which time the engine decelerates to normal flight idle rpm.

Hybrid (HYB) Engine Operation

HYB is activated when the DEC detects certain failures. In HYB, the MEC provides main engine fuel flow scheduling and VSV control.

Control functions by the DEC during HYB operation are:

- AB fuel flow scheduling.
- Nozzle control to provide fan stall margin.
- Scheduling of inlet guide vane (IGV) position.
- Logic to automatically transfer to SEC if HYB fails.

Control functions provided by the MEC during HYB operation are:

- Main engine fuel flow scheduling and metering.
- Compressor variable stator vane (VSV) scheduling.
- Engine overspeed protection (113 percent rpm overspeed fuel shutoff valve).
- Positive fuel cutoff.

During HYB operation:

- ENG HYB MODE PFL is displayed.
- Turbine blade temperature limiting is not provided.

T48

- VSV reset is not active.
- Maximum fan speed is automatically limited.
- MIL thrust is 90-100 percent of that provided in PRI.
- Supersonic idle – Lockup is not active.

Secondary Engine Control (SEC) Operation

SEC is activated by either manually placing the ENG CONT switch to SEC or as a result of automatic transfer when the DEC detects certain failures. In SEC, the MEC provides fuel flow scheduling in addition to the functions it provides in PRI operation.

During SEC operation:

- The nozzle is closed.
- AB operation is inhibited (fuel and ignition).
- Turbine blade temperature limiting is not provided.
- High energy ignition is continuously energized.
- IGV's are in a fixed, fully closed position.
- VSV reset is not active.
- Maximum fan speed is automatically limited.
- SEC caution light is illuminated.
- In flight, MIL thrust is 70-95 percent of that provided at PRI MIL.
- Supersonic idle – Lockup is not active.
- Idle thrust is higher than that in PRI because the nozzle is closed.

Engine Fuel Boost Pump

The gearbox-mounted engine fuel boost pump provides pressurized fuel to the main fuel pump and AB fuel pump.

Main Fuel Pump

The gear-type main fuel pump receives pressurized fuel from the engine fuel boost pump. It provides

additional pressure and supplies the fuel to the MEC.

Afterburner (AB) Fuel Pump

The gearbox-mounted AB fuel pump receives fuel from the engine fuel boost pump. It provides additional pressure and supplies fuel to the AB fuel control.

Inlet Guide Vanes (IGV's)

Each IGV is an airfoil which is divided into two sections. The forward portion of the inlet guide vane is fixed which provides structural support. The aft portion of the inlet guide vane is a variable angle flap which controls the angle at which air enters the fan. This both improves fan efficiency and increases the stall margin.

Variable Stator Vanes (VSV's)

The compressor VSV system controls the angle of the core inlet guide vanes and the first three stages of core variable stator vanes. Positioning is a function of engine rpm. By varying the vane position, the system automatically changes the effective angle at which the airflow enters the compressor rotor blades, thereby maintaining satisfactory airflow and optimum compressor performance throughout the entire flight envelope. For increased stall protection, the VSV's are reset slightly closed from their normal position after a throttle snap to IDLE. The reset position is maintained for 2 minutes after which the VSV's return to their normal schedule, resulting in an rpm drop of approximately 2 percent.

Compressor Bleed Air

Bleed air is extracted from two separate stages in the compressor for engine and airframe use. Low-pressure (fifth stage) air is used for turbine cooling and the engine anti-ice system. Air for airframe use is taken from both the low-and high-pressure (ninth stage) compressor sections. Low-pressure bleed air is used for the ECS unless the pressure is insufficient, in which case high-pressure bleed air is used. High-pressure bleed air is used for the nacelle ejectors and is also used to power the EPU.

EXHAUST NOZZLE

The exhaust nozzle is a variable area convergent/divergent, semifloating type with mechanically linked primary and secondary flaps and seals. Nozzle area modulation is accomplished by four hydraulic actuators which provide synchronous actuation. The nozzle actuators are operated by the engine hydraulic pump using engine oil as hydraulic fluid, and respond to electrical inputs from the DEC.

The primary functions of the nozzle system are to maintain fan stall margin by varying the nozzle area and to control the engine thrust for optimum performance through the entire flight envelope.

AB FLAME DETECTOR

The AB flame detector provides AB light/no-light information to the DEC for use in AB sequencing and autorelight functions during PRI operation.

ENGINE MONITORING SYSTEM (EMS)

The EMS is operative in all engine control modes (PRI, SEC, HYB VSV, and HYB).

The EMS is designed to perform engine diagnostics and store engine fault data for postflight analysis. The EMS consists of two primary components: the digital electronic control (DEC) which is mounted on the engine and an engine monitoring system computer (EMSC) which is located in the leading edge flap drive bay in the forward fuselage section.

In all engine control modes the EMSC receives data from both the aircraft and the DEC to perform engine diagnostics and fault detection. Upon detection of a fault, the EMSC automatically stores approximately 8 seconds of engine data (6 seconds before and 2 seconds after the fault). If the fault is an engine pilot fault list (PFL) item, the ENGINE FAULT caution light illuminates.

Event data can also be manually stored at anytime by momentarily placing the AB RESET switch to ENG DATA. This function may be especially useful in event of unusual engine operation where EMS data was not automatically recorded. This action has no effect on data that was automatically recorded.

Data recorded by the EMS are parts life tracking data, engine performance trending data, and event

data, including PFL's and MFL's. This data can be extracted from the EMS by maintenance personnel after flight.

During HYB VSV, HYB, and SEC modes, the EMSC continues the monitoring and reporting function for faults associated with the particular mode of operation.

ENGINE OIL SYSTEM

The engine is equipped with a self-contained, dry sump, full pressure lubrication system which provides filtered oil for lubricating and cooling the engine main shaft bearings, oil seals, gearboxes, and accessories. It also provides oil to the engine hydraulic pump for nozzle actuation. Engine oil level decreasing below approximately 40 percent of normal capacity for 15 seconds results in activation of an ENG LUBE LOW PFL. Refer to SERVICING DIAGRAM, this section for servicing/specifications information.

FUEL/OIL HOT Caution Light

The FUEL/OIL HOT caution light, located on the caution light panel, illuminates when the temperature of the oil becomes excessive (exceeds 300°F). The caution light also illuminates as a function of excessive fuel temperature. Refer to FUEL SYSTEM, this section.

ENGINE ANTI-ICE SYSTEM

The engine anti-ice system prevents the formation and accumulation of ice on the front frame struts, the forward centerbody, and the IGV flaps. Low-pressure bleed air is directed to a pressure regulating anti-icing valve. Valve actuation is accomplished either automatically (with the ANTI ICE switch in AUTO position) by an ice detector in the engine inlet or manually by the ANTI ICE switch. When the anti-icing valve is open, low-pressure bleed air enters the front frame at two separate locations. Bleed air is then distributed radially to each of the front frame struts, the IGV flaps, and the forward centerbody. Automatic activation also occurs if emergency dc bus No. 2 power is lost.

If engine anti-icing is either manually or automatically demanded while operating at idle rpm, engine rpm may increase as much as 3 percent when ambient temperature is below 30°F.

The inlet strut is electrically heated to prevent ice buildup. The heater is also controlled by the ANTI ICE switch for manual or automatic operation.

Engine ANTI ICE Switch

The engine ANTI ICE switch is located on the right console.

Functions are:

- ON – The inlet strut electrical heater turns on and the engine anti-ice system is activated. If ice accumulation is detected, the INLET ICING caution light illuminates. The caution light remains on for approximately 70 seconds (assuming that no additional ice accumulation occurs). If ice reaccumulates before the 70-second cycle expires, the caution light remains on and the cycle repeats until icing conditions no longer exist.
- AUTO – When an ice accumulation is detected, the INLET ICING caution light illuminates, the inlet strut electrical heater turns on, and the engine anti-ice system activates. The caution light, inlet strut electrical heater, and engine anti-icing system remain on for approximately 70 seconds (assuming that no additional ice accumulation occurs). If ice reaccumulates before the 70-second cycle expires, the caution light, inlet strut electrical heater, and engine anti-icing system remain on and the cycle repeats until icing conditions no longer exist.
- OFF – Ice detector, engine anti-ice system, and inlet strut heater are off.

INLET ICING Caution Light

The INLET ICING caution light, located on the caution light panel, illuminates when an ice accumulation is detected by the inlet ice detector or if a detection system failure occurs. The caution light remains on for approximately 70 seconds (assuming no additional ice accumulation). If more ice accumulates, the caution light may remain on for a longer period of time, or it may cycle off and then on again.

ENGINE AND ACCESSORY DRIVE GEARBOXES

Refer to figure 1-6. The engine gearbox drives the main fuel pump, the engine fuel boost pump, the AB fuel pump, the engine/scavenge pump, the engine alternator, the engine hydraulic pump, the MEC, and the PTO shaft, which powers the accessory drive gearbox (ADG).

The ADG powers the main generator through the constant-speed drive (CSD), system A and B hydraulic pumps, standby generator, and FLCS PMG. The JFS is also mounted on the ADG.

ENGINE ALTERNATOR

The engine alternator is driven by the engine gearbox and provides the rpm signal to the RPM indicator and power for high energy and AB ignition and the DEC.

ENGINE IGNITION SYSTEM

The ignition system contains three igniter plugs (two for the engine and one for the AB). The engine igniters are controlled by engine rpm and operate completely independent of throttle position or throttle movement.



During engine start, high energy ignition, which is powered by the engine alternator, is automatically turned on at approximately 10 percent rpm and is automatically turned off at 59 percent rpm. The ignition system also provides an automatic relight feature which selects high energy ignition when the engine rpm deceleration rate exceeds 5 percent per second, or when the engine rpm goes below 59 percent.

A low energy ignition system is used as a backup to the high energy system. The low energy system is energized if the engine decelerates through approximately 55 percent rpm while airborne. The ignition system is powered by emergency ac bus No. 1.

AB ignition is powered by the engine alternator and provides energy to the AB spark igniter. AB ignition is automatically controlled by the DEC.

Engine and Accessory Drive Gearboxes

ENGINE F110-GE-129

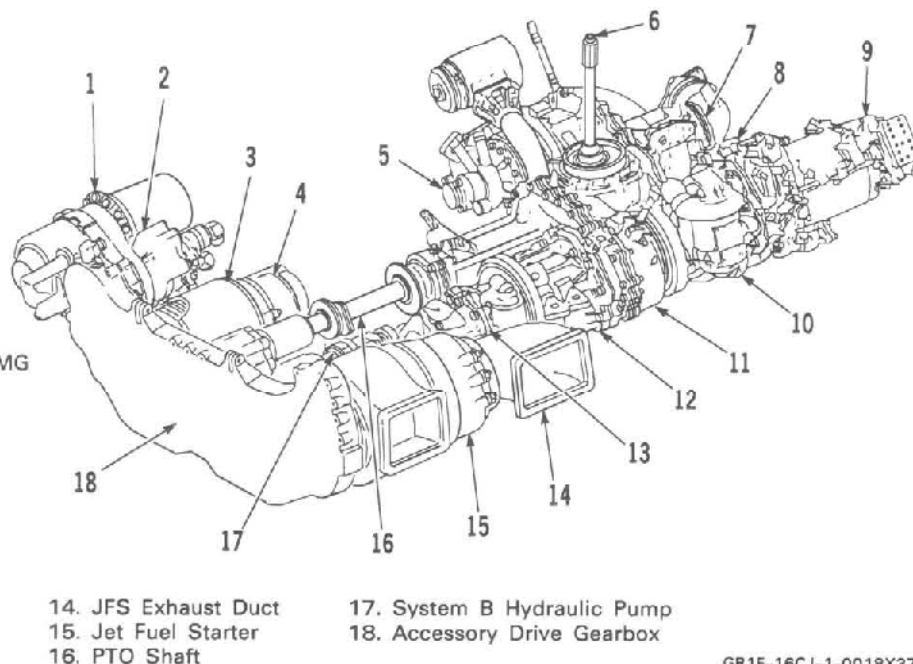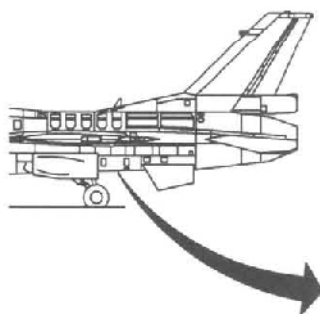

1. Standby Generator and FLCS PMG
2. System A Hydraulic Pump
3. Constant-Speed Drive
4. Main Generator
5. AB Fuel Pump
6. Tower Shaft (From Engine)
7. Fuel Boost Pump
8. Engine Alternator
9. Main Engine Control
10. Main Fuel Pump
11. Engine Gearbox
12. Engine Lube/Scavenge Pump
13. Engine Hydraulic Pump

14. JFS Exhaust Duct
15. Jet Fuel Starter
16. PTO Shaft

17. System B Hydraulic Pump
18. Accessory Drive Gearbox

GR1F-16CJ-1-0018X37 ©

Figure 1-6.

JET FUEL STARTER (JFS)

The JFS is a gas turbine which operates on aircraft fuel and drives the engine through the ADG. The JFS is connected by a clutch to the ADG and only provides torque when required to maintain engine rpm. If the ADG is not able to rotate (i.e., seized engine), the JFS runs, but the clutch prevents it from rotating the ADG. The JFS receives fuel at all times regardless of the FUEL MASTER switch position. The JFS is started by power from two brake/JFS accumulators used either singly or together. The brake/JFS accumulators are charged automatically by hydraulic system B or manually by a hydraulic hand pump located in the left wheel well. Automatic recharging takes between 40 seconds (hot ambient conditions) and 60 seconds (cold ambient conditions). The JFS is used to start the engine on the ground and to assist in engine airstart. Refer to JET FUEL STARTER LIMITS, Section V.

ENG & JET START CONTROL PANEL

Refer to figure 1-7. The ENG & JET START control panel is located on the left console.


JFS Switch ☐ ☐

Functions are:

- OFF – Normal switch position. The JFS can be shut down at anytime by selecting OFF. The switch returns to OFF automatically during a normal ground start at approximately 55 percent rpm.
- START 1 – Vents one of the brake/JFS accumulators to the hydraulic start motor.
- START 2 – Vents both brake/JFS accumulators to the hydraulic start motor.

ENG & JET START Control Panel (Typical)

ENGINE F110-GE-129

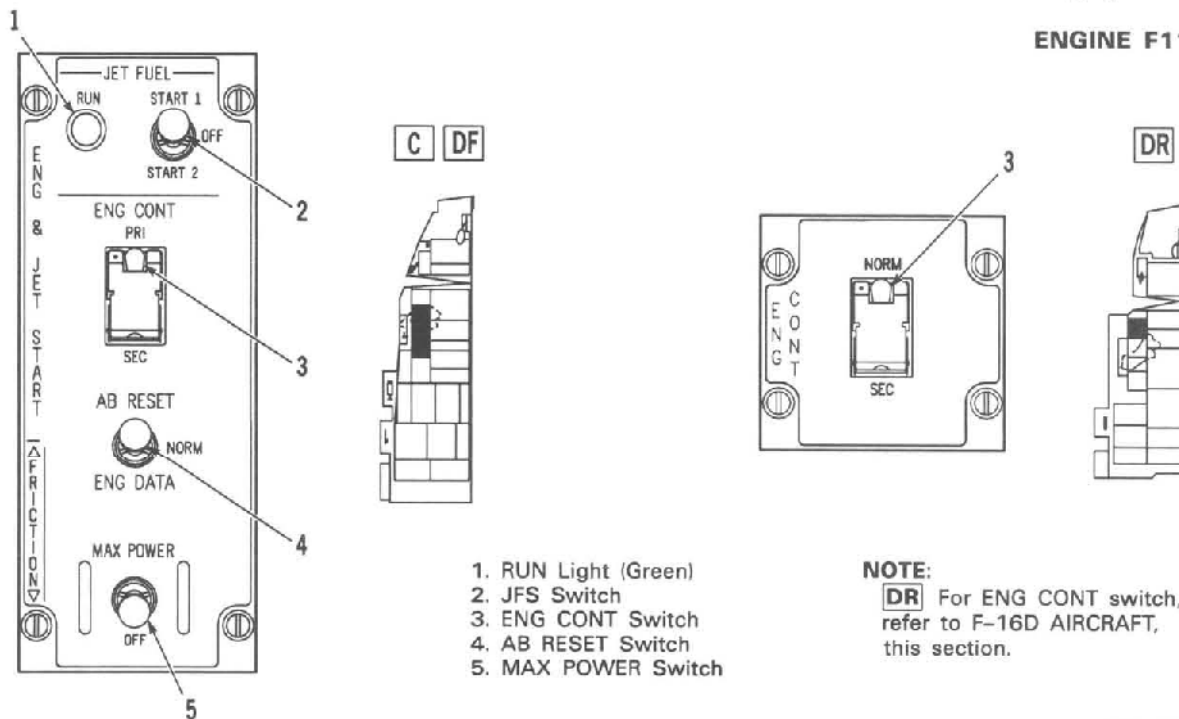

GR1F-16CJ-1-0019X37 ©

Figure 1-7.

JFS RUN Light **C** **DF**

The green JFS RUN light illuminates within 30 seconds after initiating JFS start to indicate that the JFS has attained governed speed.

JFS Operation

During a ground engine start, the brake/JFS accumulators begin to recharge after the engine accelerates through 12 percent rpm. As the engine accelerates through approximately 55 percent rpm, a sensor causes the JFS to shut down automatically and the JFS RUN light goes off.

During in-flight operation, the brake/JFS accumulators begin to recharge (provided system B hydraulic pressure is available) when the JFS reaches 70 percent of governed speed (3-4 seconds before the JFS RUN light illuminates). If the JFS RUN light does not illuminate within 30 seconds or the JFS RUN light goes off once illuminated, the JFS START switch will not reengage and the JFS cannot be restarted until

the JFS has spooled down. JFS spooldown takes approximately 17 seconds from full governed speed. Once running, the JFS does not shut down until the JFS switch is manually positioned to OFF.

ENGINE CONTROLS AND INDICATORS

 
Refer to figure 1-8. The engine instruments are located on the right side of the instrument panel. Refer to ENGINE LIMITATIONS, Section V.

ENG CONT Switch

The ENG CONT switch (guarded out of SEC) is located on the left console. **DR** For ENG CONT switch differences, refer to F-16D AIRCRAFT, this section.

Functions are:

- **C** **DF** PRI – PRI operation (normal position).
- SEC – SEC operation. Transfer occurs when the switch is moved to the SEC position.



1-27

SEC Caution Light

The SEC caution light, located on the caution light panel, indicates that the engine is operating in SEC.

EEC Caution Light

The EEC caution light, located on the caution light panel, is deactivated.

BUC Caution Light

The BUC caution light, located on the caution light panel, is deactivated.

MAX POWER Switch

The MAX POWER switch, located on the left console, is inoperative.

AB RESET Switch

The AB RESET switch, located on the left console, is a three-position toggle switch, spring-loaded to center (NORM) position.

Functions are:

- AB RESET – Inoperative position.
- NORM – Normal (deenergized) position.
- ENG DATA – This position is used to record engine data in the EMSC. When ENG DATA is momentarily selected, ENG 066 MFL is generated and engine data is recorded for an 8-second period. Recorded data begins 6 seconds prior to selecting ENG DATA.

ENGINE FAULT Caution Light

The ENGINE FAULT caution light, located on the caution light panel, indicates that an engine PFL item was detected. The caution light goes off when the fault is acknowledged.

Pilot Fault List Display (PFLD)

The PFLD, located on the   right auxiliary console,  instrument panel, displays engine PFL's. Refer to WARNING, CAUTION, AND INDICATOR LIGHTS, this section, for a description of the PFLD. Refer to PILOT FAULT LIST – ENGINE, Section III, for a description of engine PFL's.

RPM Indicator

The RPM indicator has a pointer display expressed in percent rpm from 0-110. The rpm signal is supplied by the engine alternator. The indicator is powered by battery bus No. 1.

NOZ POS Indicator

The NOZ POS indicator is a direct display of actual nozzle position ranging from 0 percent (closed) to 100 percent (full open). The indicator is powered by emergency ac bus No. 2.

FTIT Indicator

The FTIT indicator displays exhaust gas temperature (EGT) in degrees C. The indicator has a range of 200°-1200°C in major increments of 100°C and is powered by battery bus No. 1.

FUEL FLOW Indicator

The FUEL FLOW indicator is a digital indicator which displays the total fuel flow to the engine, including AB, in pph. The indicator has a range of 0-80,000 pph and is powered by emergency ac bus No. 1.

OIL Pressure Indicator

The OIL pressure indicator displays engine oil pressure from 0-100 psi and is powered by emergency ac bus No. 2.

HYD/OIL PRESS Warning Light

The HYD/OIL PRESS warning light, located on the edge of the right glareshield, serves as a monitor of engine oil pressure and hydraulic system pressure. For engine oil pressure, the warning light illuminates when oil pressure has been below approximately 10 psi for 30 seconds (time delay minimizes warning light illuminating during maneuvering). The light goes out when oil pressure exceeds approximately 20 psi. For hydraulic pressure, the warning light illuminates when either A or B system pressure decreases below 1000 psi. The light goes out when both system A and B pressures are above 1000 psi. During engine start, the warning light usually goes off before reaching idle rpm; however, acceptable operation is indicated if the warning light goes off before exceeding 70 percent rpm and remains off when the throttle is retarded to IDLE. The warning light is powered by battery bus No. 1.

ENGINE Warning Light

The ENGINE warning light, located on the edge of the right glareshield, illuminates when RPM and FTIT indicator signals indicate that an engine overtemperature or flameout has occurred. Illumination also occurs for an engine alternator failure and may occur as a result of an RPM or FTIT indicator failure. The warning light illuminates when the rpm decreases to subidle (below 60 percent) or approximately 2 seconds after FTIT indication exceeds 1100°C. The warning light goes off when the condition that turned it on is eliminated. The warning light is powered by battery bus No. 1.

Throttle

Refer to figure 1-9. The engine is controlled by a throttle mounted above the left console with detents at OFF, IDLE, MIL, and MAX AB. The OFF position inhibits fuel flow. The IDLE position commands minimum thrust and is used for all ground starts. From IDLE to MIL, the throttle controls the output of the engine. Forward of the MIL position, the throttle modulates the operation of the AB while maintaining constant basic engine operation.

Ⓒ Ⓓ The throttle must be rotated outboard to allow advancement from OFF to IDLE and from MIL to AB. Retarding the throttle from AB to MIL automatically rotates the throttle. At IDLE, a cutoff release at the base of the throttle must be actuated to allow the throttle to be rotated outboard and retarded to OFF. Ⓓ For throttle differences, refer to F-16D AIRCRAFT, this section.

Both electrical and mechanical throttle positions are transmitted to the engine. The electrical input is used by the DEC as the primary throttle position signal to compute various engine operating values. The throttle is also mechanically connected to the engine via a cable to the MEC. This mechanical throttle position input is used for main fuel cutoff and during SEC and HYB operation. It also provides a backup electrical signal to the DEC during PRI operation.

A single white reflective stripe Ⓒ Ⓓ is located on both the upper surface of the throttle foot and on the sidewall fairing, Ⓓ on both the lower throttle radius next to the console and on the panel outboard of the throttle radius. Alignment of the two stripes aids in identifying the IDLE position.

Six switches are located on the throttle. Ⓒ Ⓓ A throttle friction control is located inboard at the base of the throttle. Ⓓ The throttles are mechanically linked together.

ENGINE OPERATING CHARACTERISTICS

Ground Operations

During engine start, the SEC caution light remains on until approximately 20 percent rpm. Since the DEC maintains constant idle thrust and minimum bleed air pressure, rpm varies with temperature and pressure altitude (higher temperature or pressure altitude results in higher rpm). While VSV reset is active, idle rpm is 2-3 percent higher than normal.

During cold weather operations below 30°F, the DEC logic, when either commanded manually or automatically, increases anti-ice bleed air pressure to improve system performance at idle rpm. Engine rpm may increase as much as 3 percent during anti-ice operations.

Engine vibration/rumble may be sensed in flight or on the ground while accelerating or decelerating the engine, when transferring to SEC, or when stabilized below MIL power in either PRI or SEC. The vibration/rumble at a stabilized rpm has no adverse effect on the engine or aircraft structure. The vibration/rumble should disappear when the throttle is advanced slightly. Vibration that persists or becomes appreciably more intense when the throttle is advanced may indicate a potential engine malfunction.

Non-AB Operation in Flight


Regardless of temperature, stabilized NOZ POS indicator indications should not exceed 15 percent open in MIL.

Engine operation is continually optimized as flight conditions change. This is evident by slight changes in the NOZ POS, RPM, and FTIT indicator indications.

As altitude increases, idle rpm increases in order to maintain the required bleed air pressure for satisfactory ECS operation and stall margin for the engine. As a result, rpm and FTIT response during throttle movement between low throttle settings is significantly reduced.

Throttle (Typical)

ENGINE F110-GE-129

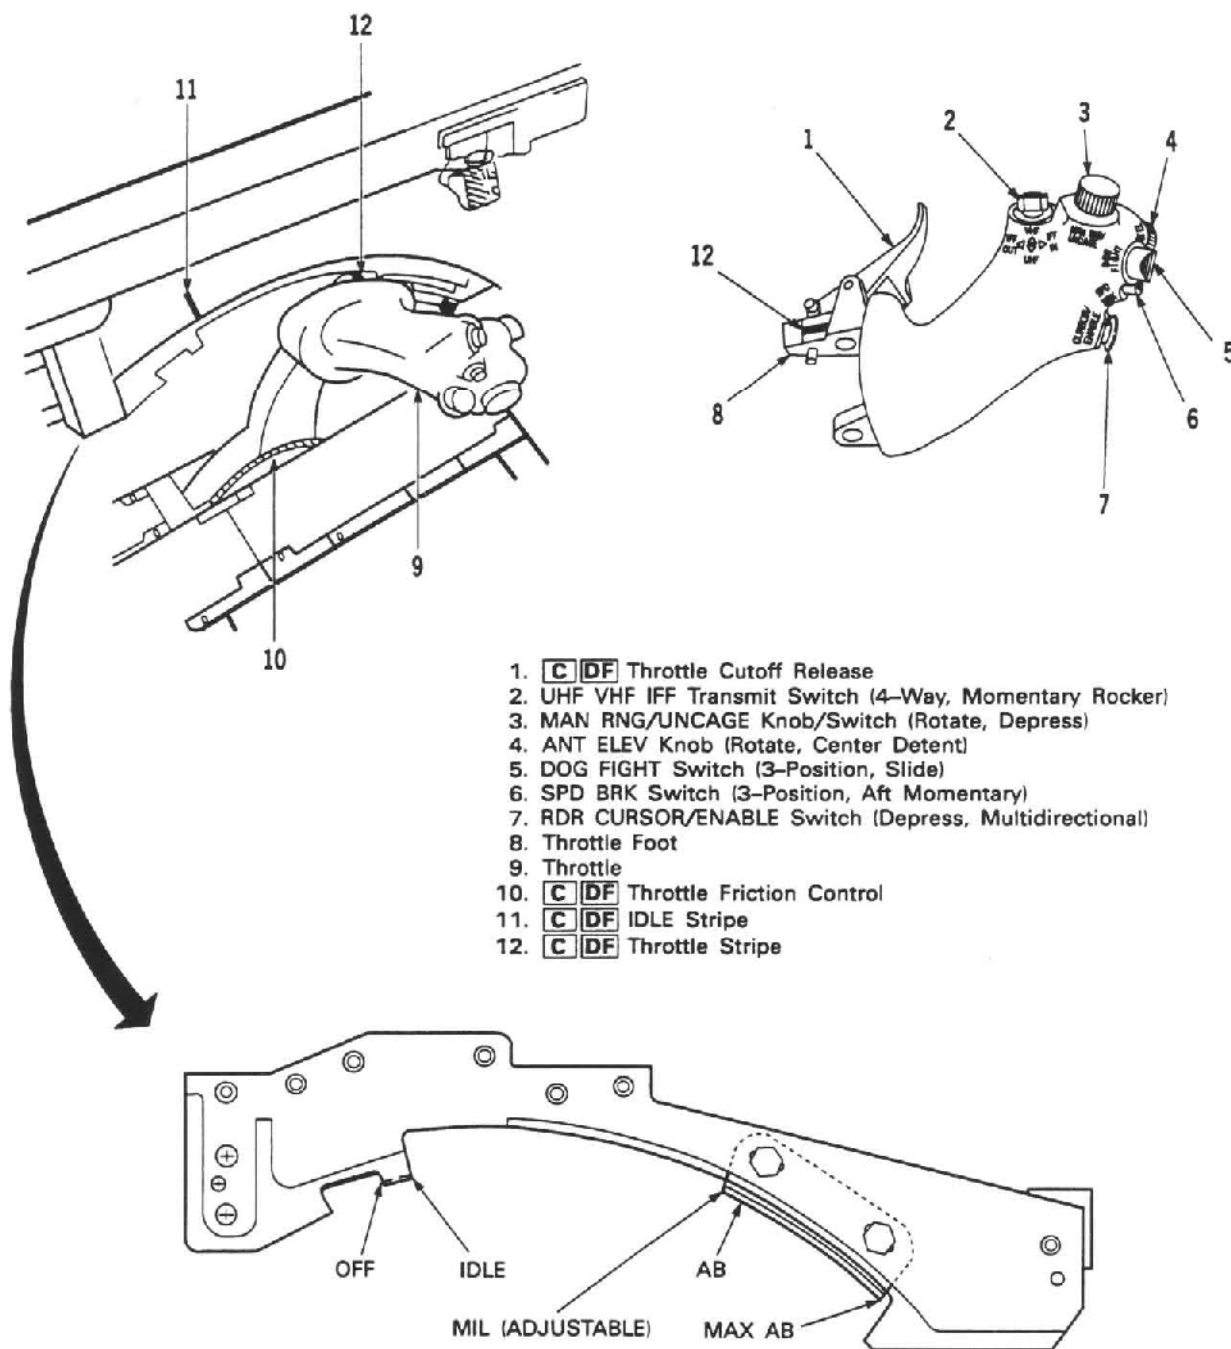

NOTE:

DR For throttle differences, refer to THROTTLE and F-16D AIRCRAFT, this section.

GR1F-16CJ-1-0021X37®

Figure 1-9.

At 1.4 mach and greater, the minimum thrust level is near MIL even though the throttle may be retarded below MIL. Typically, the minimum thrust level decreases with mach number between 1.4-1.1 mach. At IDLE and while decelerating through 1.1 mach, the engine decelerates to normal in-flight idle thrust.

Reduced speed excursion (RSE) logic is activated during engine deceleration to idle speed above 0.6 mach. RSE results in a higher in-flight idle rpm offset by a greater nozzle opening than normal in-flight idle.

Idle thrust changes from in-flight idle to approach idle between 0.5-0.6 mach, resulting in an engine rpm change of approximately 10 percent. Slightly more time is required to accelerate the engine from approach idle thrust when airspeed is below 0.5 mach.

Idle thrust changes from approach idle to ground idle between 80-90 knots and results in reduced engine rpm of approximately 2 percent. This change occurs during the landing roll to achieve desired ground idle thrust levels for taxi.

While VSV reset is active, idle rpm is 2-3 percent higher than normal.

A high frequency vibration may be felt through the cockpit floor, ejection seat, and/or rudder pedals as a result of aircraft structural response to normal engine operation. The vibration is most noticeable with the aircraft in a clean configuration with reduced fuel loads at lower airspeeds when the engine is operating near MIL thrust or above. This vibration has no adverse effect on the engine or aircraft.

AB Operation

Refer to figure 1-10 for AB operational characteristics. During AB operation, FTIT, rpm, and oil pressure vary with altitude and airspeed. NOZ POS indications during minimum AB operation should be between 7-17 percent open and for MAX AB operation, between 40-70 percent open. The engine has a reduced AB region of operation (at high altitudes and low airspeeds) and commands a decrease in AB fuel flow to prevent AB instabilities. The NOZ POS indicator indicates approximately 30-50 percent open during this reduced AB operation.

When AB operation is first initiated, the exhaust nozzle preopens up to 10 percent more than MIL

exhaust nozzle position to increase stall margin during AB light-off. Fuel flow and exhaust nozzle area are held at minimum AB levels until the flame detector determines that light-off (within 5 seconds (greater than 40°F) or 10 seconds (40°F or less) of AB selection) has occurred. Once AB light-off occurs, fuel flow and exhaust nozzle area increase to the requested AB level with a corresponding increase in thrust. If AB blowout occurs, the autorelight feature attempts to reinitiate AB without throttle movement. During AB operation at or above 45,000 feet, a mild AB rumble may be felt through the pilot seat. The rumble does not impact engine operation and should not be considered abnormal.

Inlet Thump

An inlet thump is an airflow-related phenomenon which may occur occasionally during PRI operation below 25,000 feet and below 500 knots when the throttle is retarded from MIL. The thump is the result of airflow changes within the aircraft inlet.

A thump can be heard or can be felt through the cockpit floor, ejection seat, and/or rudder pedals. The intensity can vary greatly, ranging from a barely perceptible sound or impulse to a louder and/or harder occurrence which may be quite noticeable. Thumps do not affect engine or aircraft operation.

SEC Operation

The engine can automatically transfer to SEC when a DEC failure occurs. It can manually be transferred to SEC by placing the ENG CONT switch to SEC. Transfer is indicated by the illumination of the SEC caution light; rpm may also initially decrease (up to 10 percent rpm) and then recover to a level slightly below that for PRI. When operating in SEC, the nozzle is closed.


Refer to ENGINE LIMITATIONS, Section V for throttle restrictions while operating in SEC. Movement of the throttle to MAX AB is permitted; however, since the AB is inhibited, maximum available thrust in SEC is attained at MIL. The thrust level at MIL during SEC operation is 70-95 percent of that available during PRI operation at the same throttle position. Idle thrust in SEC is higher than idle thrust in PRI because the exhaust nozzle is closed. VSV reset is not active in SEC.

AB — Light-Off Characteristics

ENGINE F110-GE-129

NOTES:

- Regions 1 and 2 — Unrestricted throttle movement. AB blowouts should not occur.
- Region 1 — Normal AB light-offs are expected.
- Region 2 — No lights or delayed lights accompanied by nozzle fluctuations indicating recycling of AB initiation are possible.

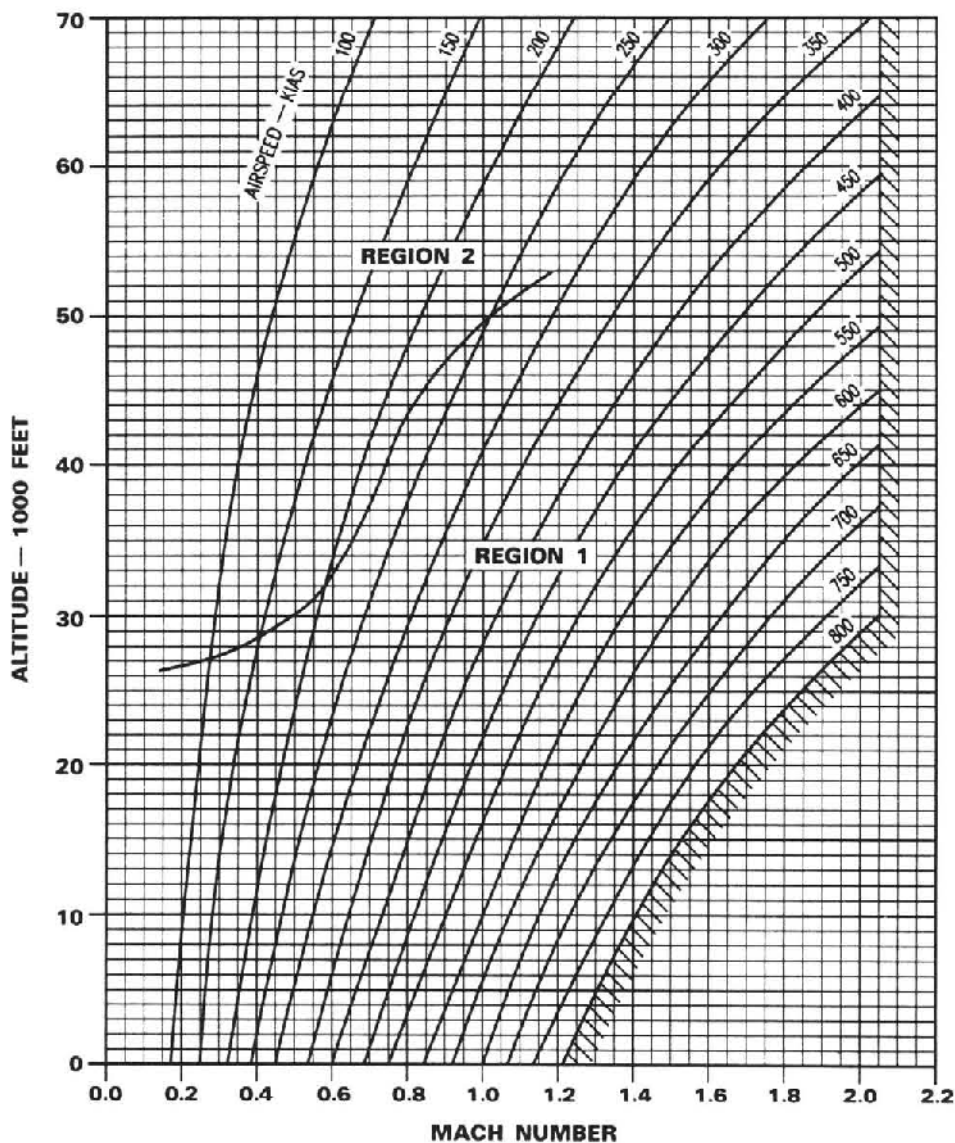

1F-16X-1-4007X®

Figure 1-10.

FIRE AND OVERHEAT DETECTION SYSTEM

The fire and overheat detection system consists of two separate parallel loop sensing systems, one for fire and the other for overheat. The fire detection loops are routed through the engine compartment. The overheat detection loops are routed through the engine compartment, MLG wheel wells, ECS bay, and EPU bay. Activation of the overheat detection loops occurs approximately 100°C below the activation temperature of the fire detection loops. The fire warning signal causes the ENG FIRE warning light to illuminate. The overheat signal causes the OVERHEAT caution light to illuminate. When the temperature of the element drops below the critical temperatures, the signal ceases, allowing the ENG FIRE warning or the OVERHEAT caution light to go off. The detection circuit is powered by emergency ac bus No. 2 and battery bus No. 2.

FIRE & OHEAT DETECT TEST BUTTON ☐ ☐ ☐ (Typical)

Refer to figure 1-11. The FIRE & OHEAT DETECT test button, located on the TEST switch panel, checks continuity of both systems and illuminates the ENG FIRE warning light and the OVERHEAT caution light and provides a CSFDR special event data save if depressed in flight.

FUEL SYSTEM


Refer to figure 1-12 for a simplified system diagram and figures 1-13 and 1-14 for system schematics. The fuel system is divided into seven functional categories. These are the fuel tank system, fuel transfer system, fuel tank vent and pressurization system, engine fuel supply system, fuel quantity/fuel level sensing system, fuel tank explosion suppression system, and refueling/defueling system.

FUEL TANK SYSTEM

Refer to figure 1-15 for tank locations and capacities. The aircraft has seven internal fuel tanks located in the fuselage and wings that are integral to the structure. There are provisions for carrying three external tanks on the wings and the centerline station. Five of the internal tanks are storage tanks:

TEST Switch Panel

☐ ☐ ☐ (Typical)

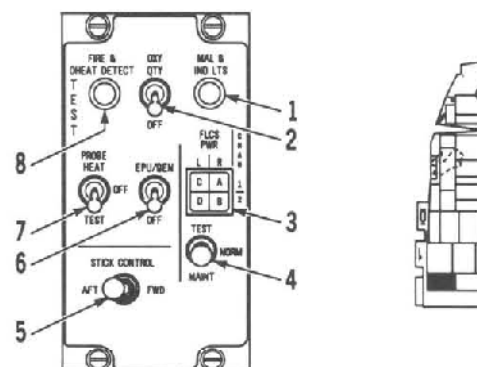

1. MAL & IND LTS Test Button
 2. OXY QTY Indicator Test Switch
 3. FLCS PWR Lights (Green)
 4. FLCS PWR TEST Switch
 5. ☐ ☐ ☐ STICK CONTROL Switch
 6. EPU/GEN Test Switch
 7. PROBE HEAT Switch
 8. FIRE & OHEAT DETECT Test Button
- GR1F-16CJ-1-0023X37 ©

Figure 1-11.

the left and right wing tanks, two forward fuselage tanks (F-1 and F-2), and the aft fuselage tank (A-1). The two internal reservoir tanks (forward and aft) supply fuel directly to the engine. ☐ The F-1 fuel tank is reduced in size to allow room for the rear cockpit.

FUEL TRANSFER SYSTEM

Fuel is transferred by two independent methods. The primary method provides a siphoning action through standpipes connecting the fuel tanks. Siphoning action depends on the absence of air in the bays receiving fuel. Air ejectors in each reservoir tank automatically expel air. In case of failure of the siphoning system, powered fuel pumps work continually to pump fuel from the internal tanks to the reservoirs. The powered transfer system also scavenges tanks to minimize unusable fuel by using electrically driven pumps and pumps powered by bleed fuel pressure from the engine manifold. Both methods operate simultaneously and independently to transfer fuel through the system.

Fuel Tank System (Typical)

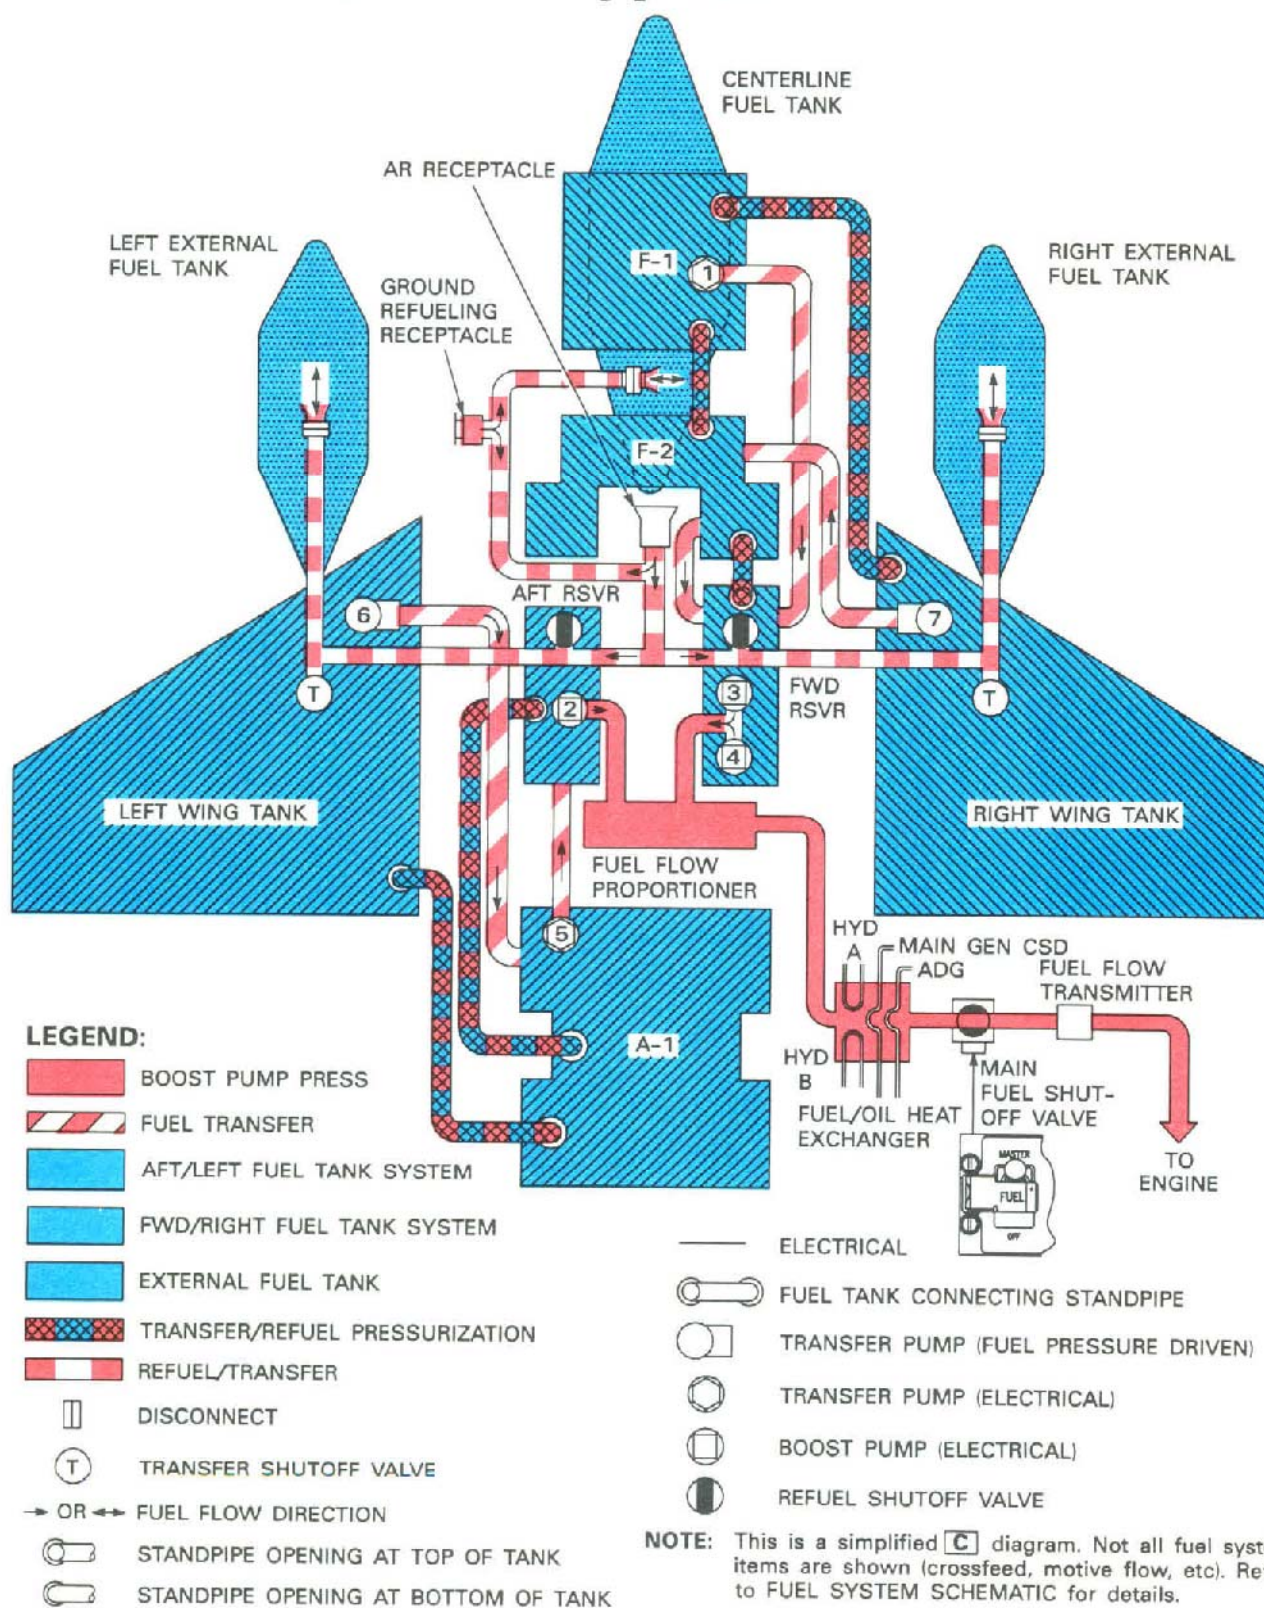


Figure 1-12.

The transfer system is divided into two separate tank systems, the forward and the aft. The forward system consists of the right external tank (if installed), right internal wing tank, F-1, F-2, and the forward reservoir. The aft system consists of the left external tank (if installed), left internal wing tank, A-1, and the aft reservoir. If a centerline tank is installed, it is considered to be part of both forward and aft systems. The wing external tanks empty into the respective internal wing tanks.

Fuel flows from the internal wing tanks to the fuselage tanks and then to the forward and aft reservoirs. Fuel is pumped to the engine from the reservoirs. To automatically maintain the CG, fuel is transferred through the forward and aft systems simultaneously.

If external tanks are installed, air pressure transfers fuel to the internal wing tanks. If the EXT FUEL TRANS switch is in NORM, the sequence of fuel flow is from the centerline tank to the internal wing tanks. After the centerline tank empties, each external wing tank flows to its respective internal wing tank. The external tank fuel transfer valve in each internal wing tank shuts off fuel to prevent overfilling the internal tanks. If one of these valves fails, a float switch senses fuel and shuts off all external tank fuel transfer before fuel flows overboard. By placing the EXT FUEL TRANS switch to WING FIRST, the external wing tanks empty before the centerline tank, and the float switch does not prevent fuel from spilling overboard if a transfer valve fails.

The automatic forward fuel transfer system supplements the function of the FFP by preventing undesirable aft CG. The system operates only when the FUEL QTY SEL knob is in NORM and the total forward fuselage fuel quantity indication is less than 2800 (□ 1500) pounds. In the □, forward fuel transfer starts when the forward heavy fuel differential drops below 300 pounds and stops when the forward heavy fuel differential reaches 450 pounds. In the □, forward fuel transfer starts when the aft heavy differential exceeds 900 pounds and stops when the aft heavy fuel differential reaches 750 pounds. This system does not correct a forward fuel imbalance since it only transfers fuel from aft to forward.

For proper operation, the automatic forward fuel transfer system depends on a properly functioning fuel quantity indicating system. Fuel is transferred through a solenoid-operated trim valve powered from

emergency dc bus No. 2. The automatic system is deactivated if electrical power is lost through failure, by moving the FUEL QTY SEL knob out of NORM, or during gravity feed conditions.

FUEL TANK VENT AND PRESSURIZATION SYSTEM

The fuel tank vent and pressurization system supplies cooled pressurized air from the ECS to force fuel from the external tanks to the internal wing tanks and to power the air ejector pumps whenever the AIR SOURCE knob is in NORM or DUMP. It also prevents fuel in internal tanks from vaporizing at high altitude. An external tank vent and pressurization valve regulates pressure supplied to the external tanks.

If the combat schedule (reduced pressure) is activated by the TANK INERTING switch, Halon, if available, is mixed with air and the internal tank vent and pressurization valve controls the pressure.


If the AIR SOURCE knob is placed in OFF or RAM or if the ECS is inoperative, tank pressurization is not available and external fuel cannot be transferred.

With multiple generator failures, fuel tank pressurization continues and external fuel still transfers.

ENGINE FUEL SUPPLY SYSTEM


Refer to figure 1-16 for fuel system controls and operation. When the ENG FEED knob is in NORM, boost pumps in the forward and aft reservoirs pump the fuel through the engine feedline to the fuel flow proportioner (FFP). In the FFP, twin constant-displacement pumps, powered by hydraulic system A, supply equal amounts of fuel from each reservoir to maintain CG. Two fuel lines with check valves can bypass the FFP in case it fails so that fuel flow will not be interrupted. After fuel flows through the FFP, a small amount of cooling fuel is routed to the DEC and then returned to the reservoirs. The remainder of the fuel passes through a fuel/oil heat exchanger to cool hydraulic systems A and B, the main generator CSD, and the ADG. Then fuel flows through an electric main fuel shutoff valve which has a full travel time of 2-4 seconds and is controlled by the FUEL MASTER switch. (The JFS receives fuel at all times regardless of the FUEL MASTER switch position.) After passing through the main fuel shutoff valve, fuel passes through the fuel flow transmitter (which operates the FUEL FLOW indicator) to the engine.

Fuel System **C** (Typical)

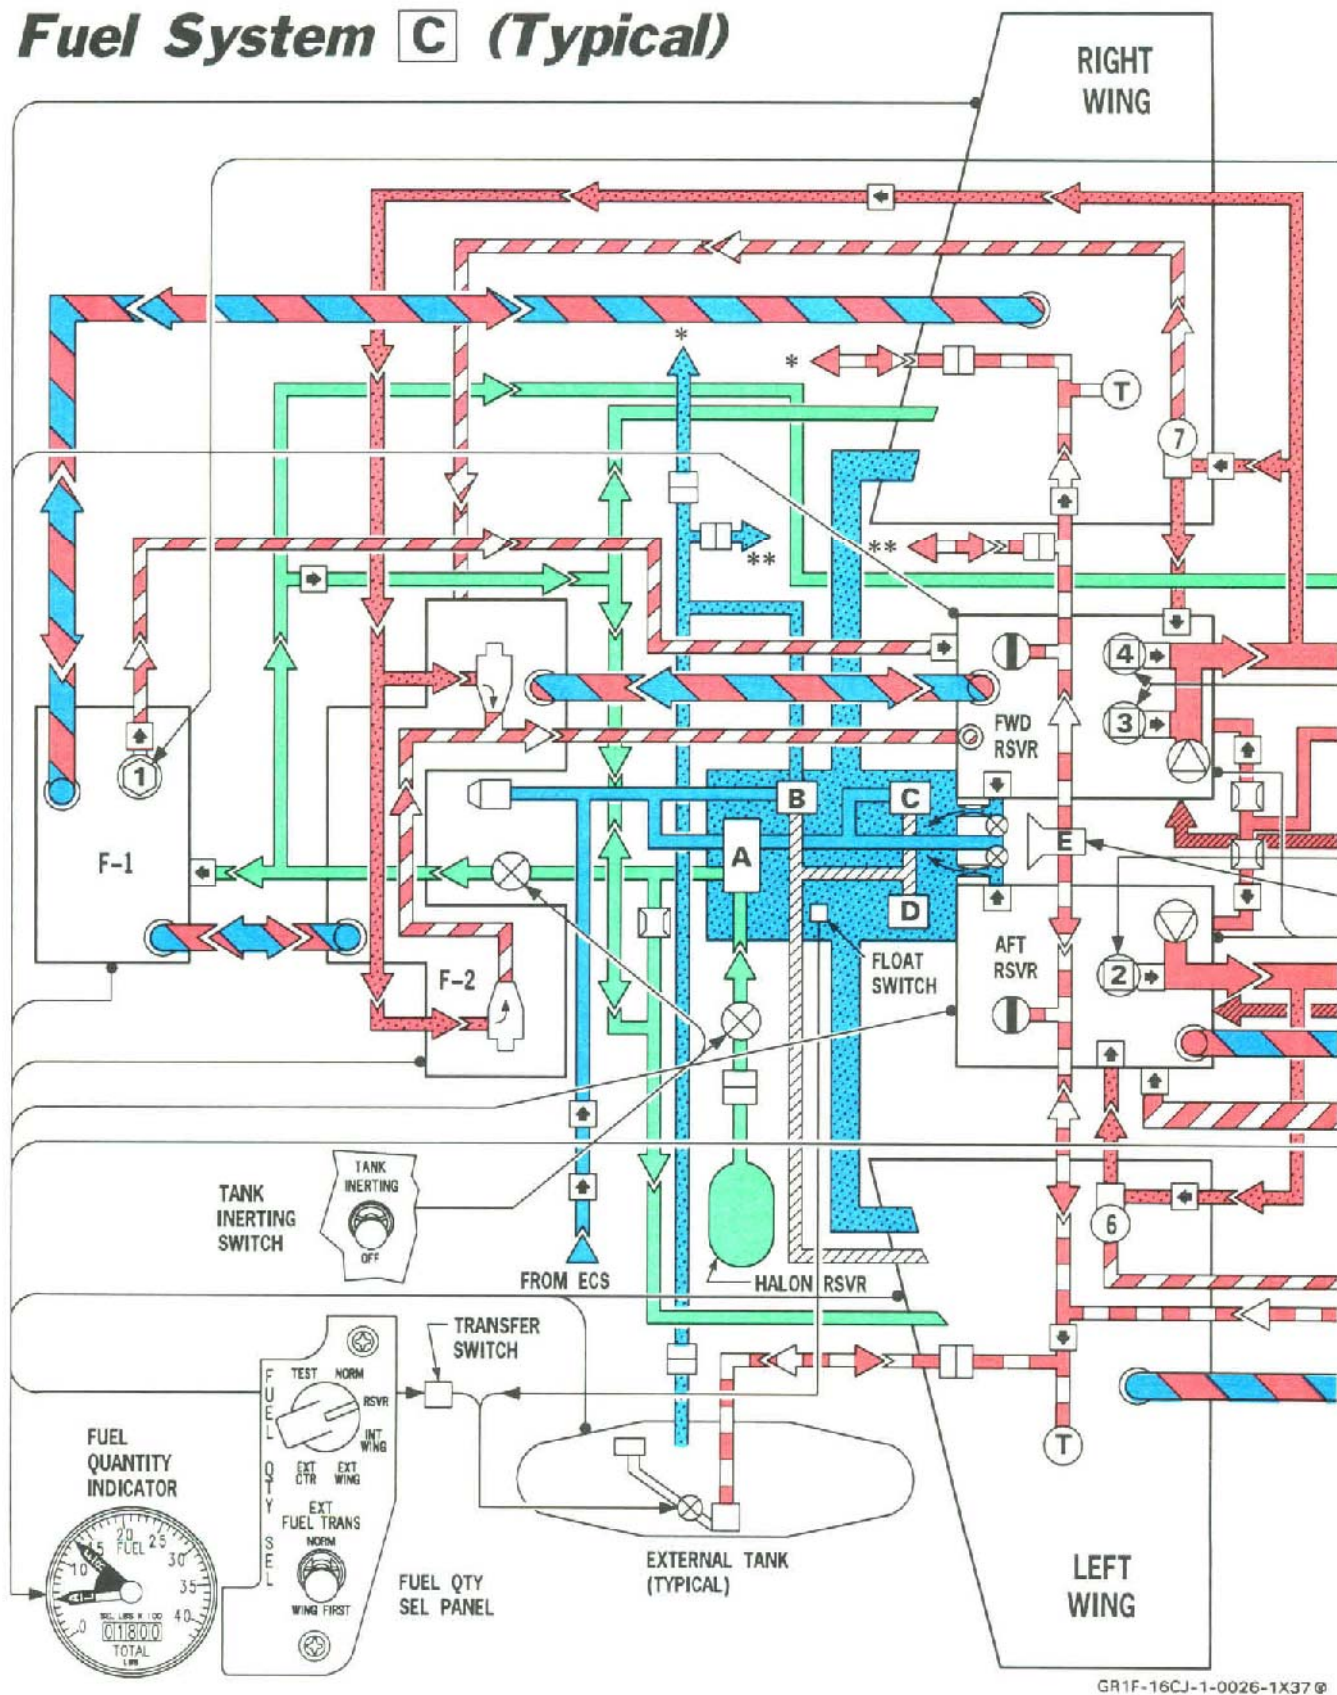

GR1F-16CJ-1-0026-1X37 ©

Figure 1-13. (Sheet 1)

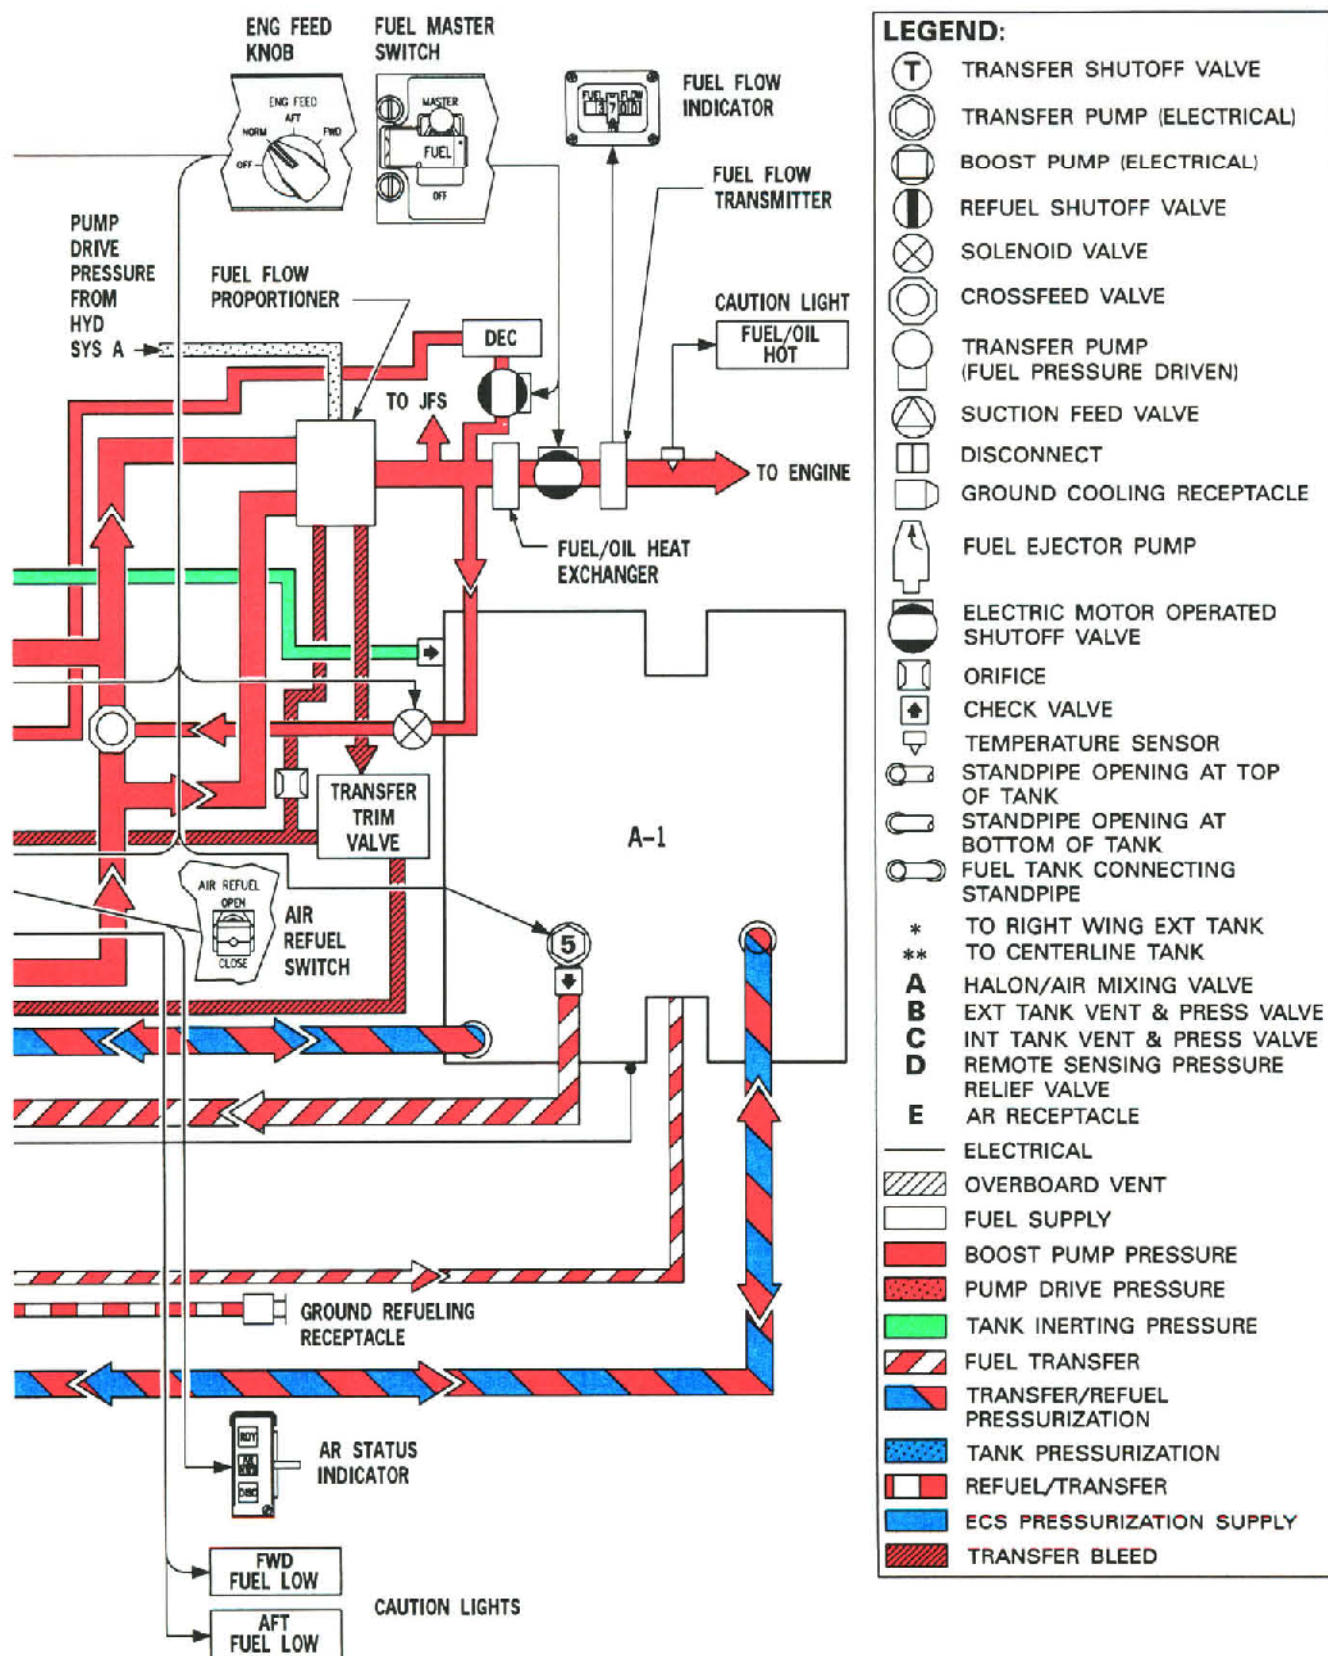

GR1F-16CJ-1-0026-2X37 9

Figure 1-13. (Sheet 2)

Fuel System **D** (Typical)


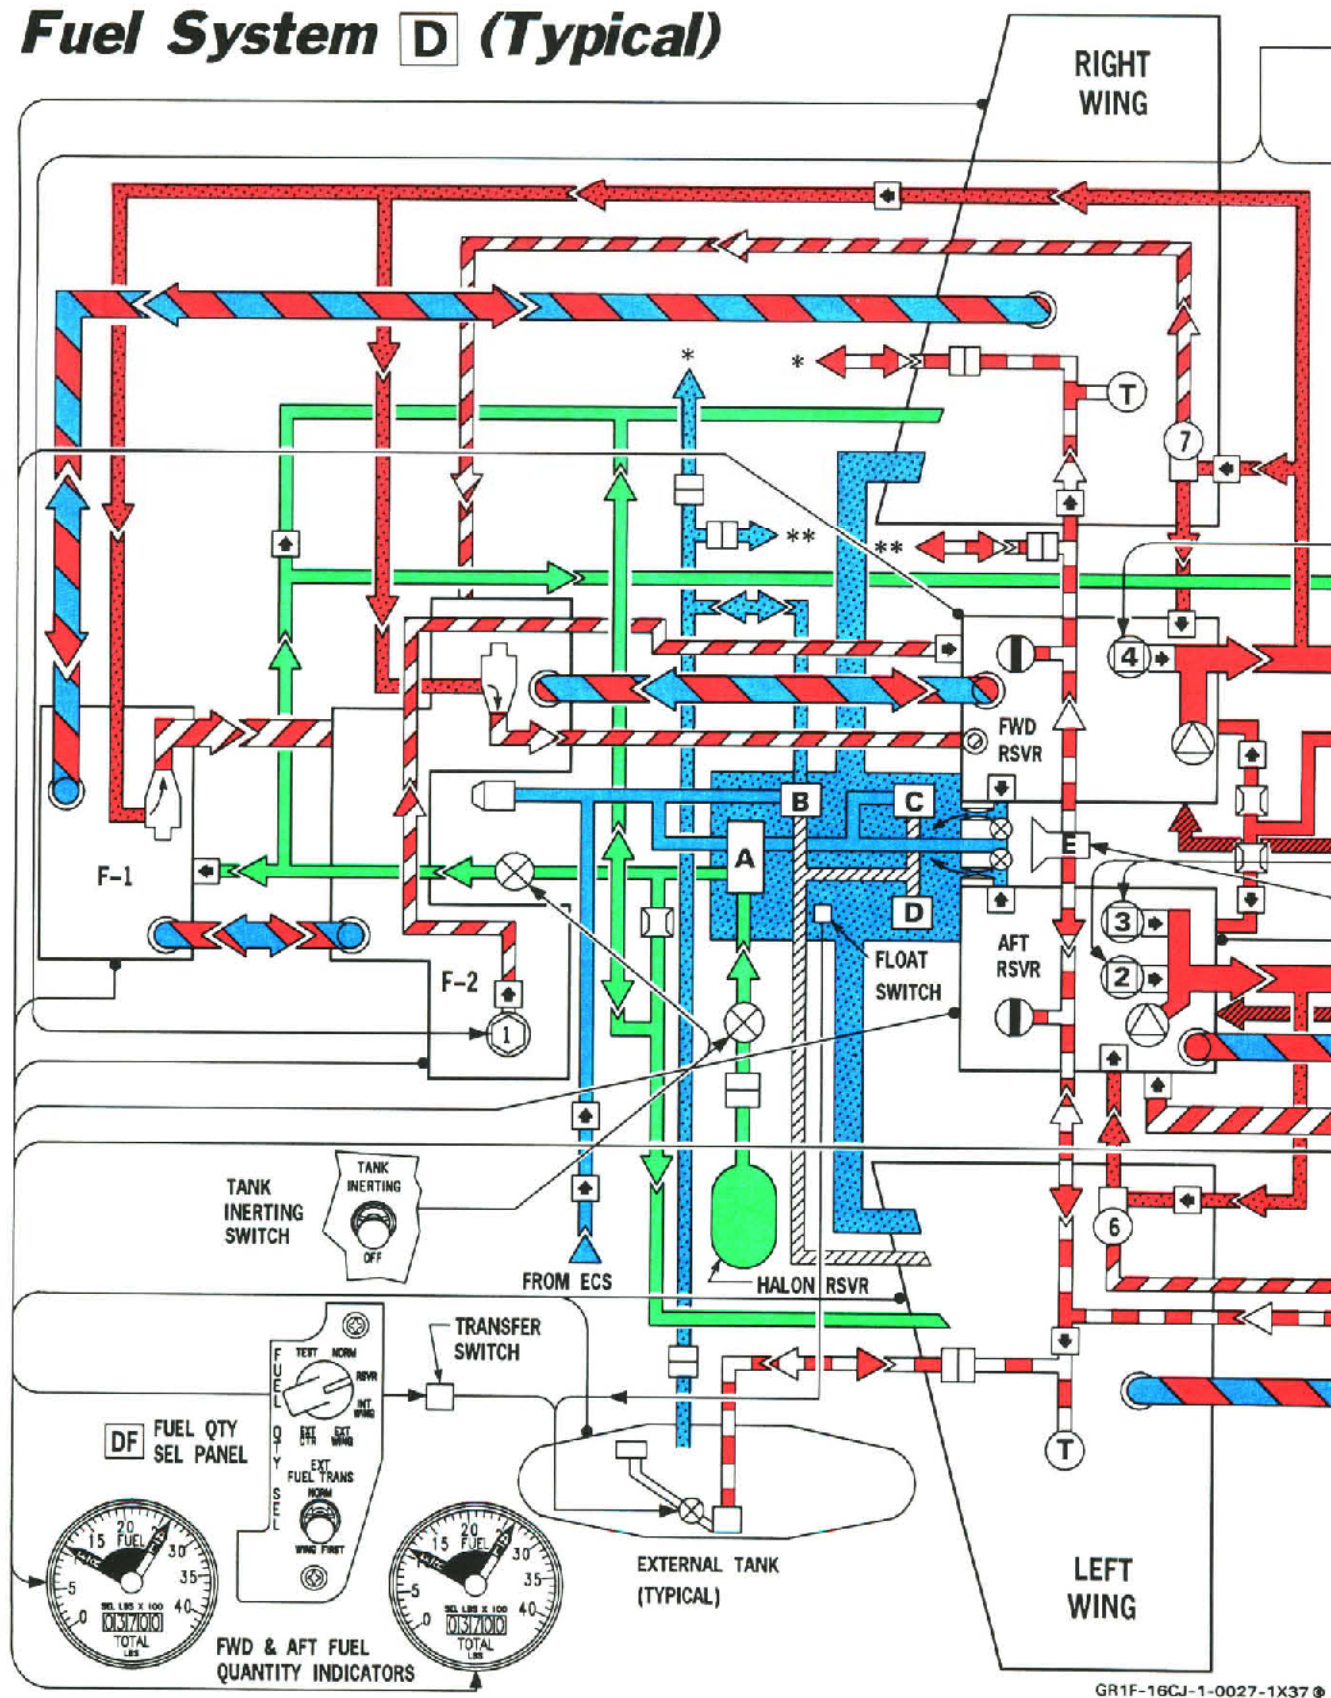



Figure 1-14. (Sheet 1)

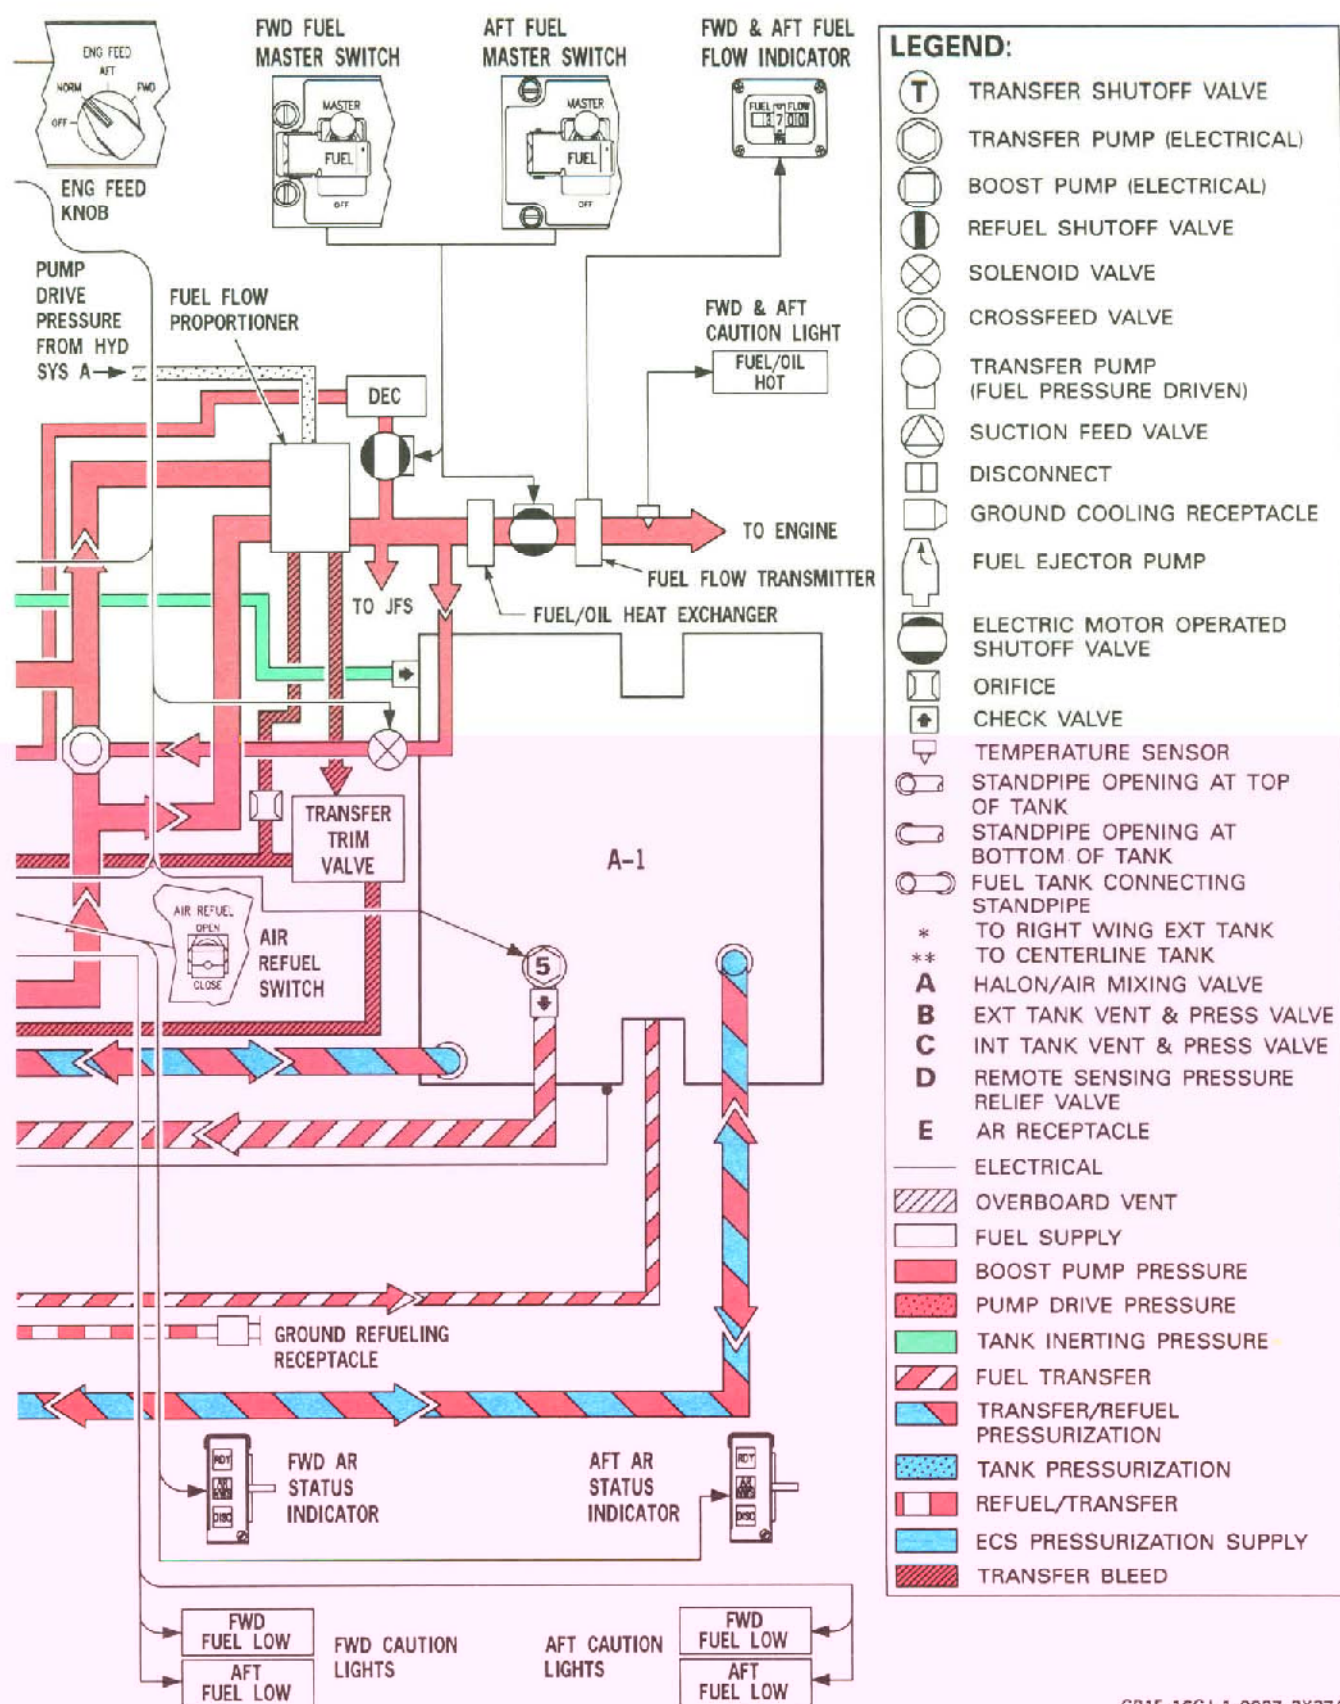


GR1F-16CJ-1-0027-2X37

Figure 1-14. (Sheet 2)

Fuel Quantity Indication and Tank Arrangement (Typical)

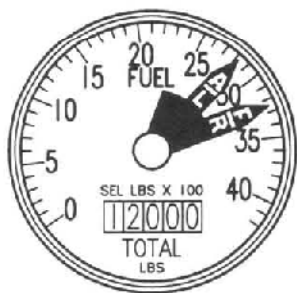


C

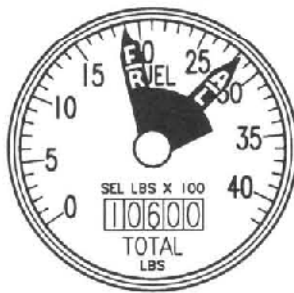

D

FUEL QUANTITY INDICATIONS (JP-8) WITH NORM SELECTED AND FULL INTERNAL TANKS WITH TWO FULL 370-GALLON EXTERNAL WING TANKS.

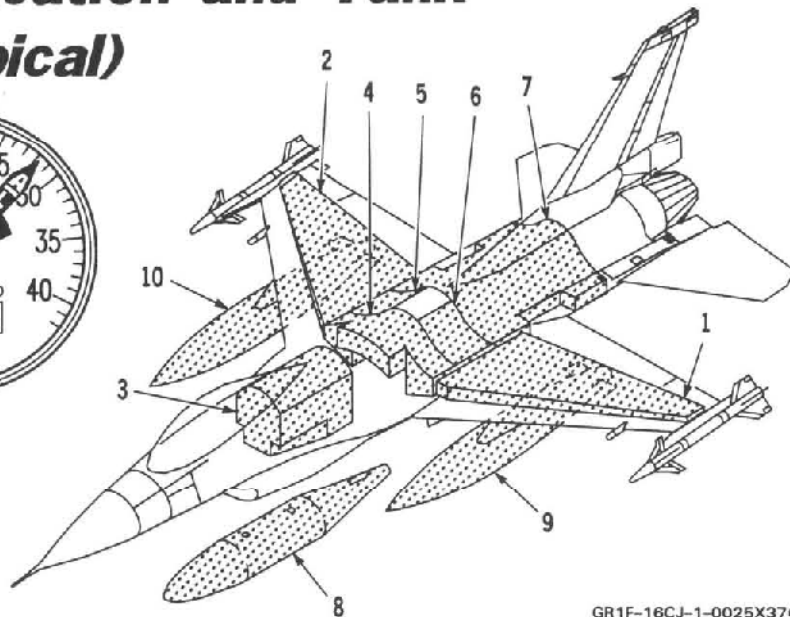

GR1F-16CJ-1-0025X37@


TANK LOCATION	FUEL QTY SEL KNOB SET-TINGS	POINTER	C		D	
			FUEL QTY (LB) JP-4	FUEL QTY (LB) JP-5/8	FUEL QTY (LB) JP-4	FUEL QTY (LB) JP-5/8
1. LEFT INTERNAL WING	INT WING	AL	525 ± 100	550 ± 100	525 ± 100	550 ± 100
2. RIGHT INTERNAL WING		FR	525 ± 100	550 ± 100	525 ± 100	550 ± 100
3. F-1 FUSELAGE	NORM	FR	3100 ± 100	3250 ± 100	1800 ± 100	1890 ± 100
4. F-2 FUSELAGE						
5. FWD RESERVOIR	NORM	AL	2675 ± 100	2810 ± 100	2675 ± 100	2810 ± 100
6. AFT RESERVOIR						
7. A-1 FUSELAGE	RSVR	FR	460 ± 30	480 ± 30	460 ± 30	480 ± 30
5. FWD RESERVOIR		AL	460 ± 30	480 ± 30	460 ± 30	480 ± 30
8. CENTERLINE	EXT CTR	FR	1800 ± 100	1890 ± 100	1800 ± 100	1890 ± 100
9. LEFT EXTERNAL WING 370/600	EXT WING	AL	2300/3750 ± 100	2420/3925 ± 100	2300/3750 ± 100	2420/3925 ± 100
10. RIGHT EXTERNAL WING 370/600	EXT WING	FR	2300/3750 ± 100	2420/3925 ± 100	2300/3750 ± 100	2420/3925 ± 100
TOTAL INTERNAL FUEL			6625 ± 300	6950 ± 300	5650 ± 300	5930 ± 300
TOTAL EXTERNAL FUEL (370/600)			6400/9300 ± 300	6730/9740 ± 300	6400/9300 ± 300	6730/9740 ± 300

NOTES:

1. Tolerances are due to indication errors with the variations in density resulting from temperatures, additives, etc.
2. The quantity of wing fuel varies depending upon aircraft attitude during refueling.
3. Usable fuel and indicated fuel quantities are approximately equal.
4. Indications are approximate and shall not be used for computing weight and balance data. Refer to T.O. GR1F-16CJ-1-1 for detailed information.

Figure 1-15.

Fuel Control Panel (Typical)

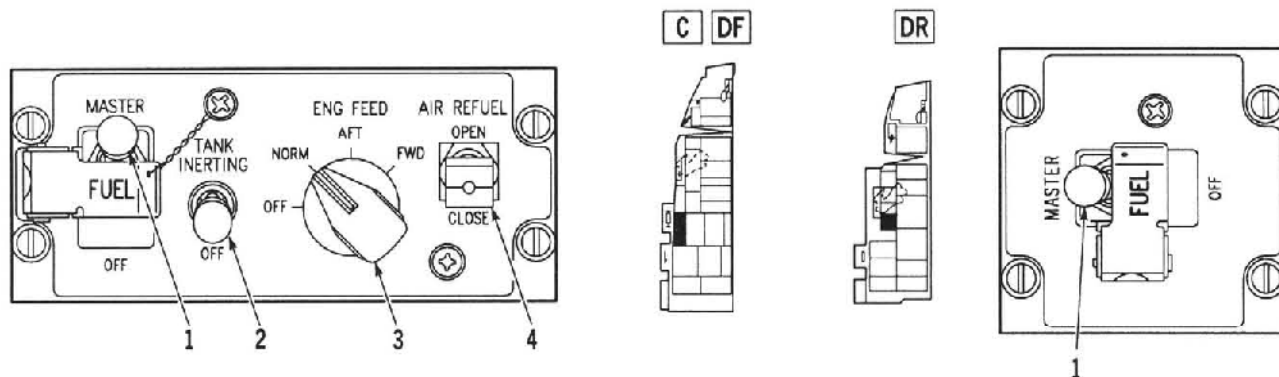

1. FUEL MASTER Switch
2. TANK INERTING Switch
3. ENG FEED Knob
4. AIR REFUEL Switch

GR1F-16CJ-1-0028X37®

CONTROL	POSITION	FUNCTION
1. FUEL MASTER Switch (lever lock)	MASTER (guarded)	Opens main fuel shutoff valve which then opens the engine electronic control cooling fuel shutoff valve
	OFF	Closes main fuel shutoff valve which then closes the engine electronic control cooling fuel shutoff valve
2. TANK INERTING Switch (lever lock to OFF)	TANK INERTING	Reduces internal tank pressurization. If Halon is available, allows 20 seconds of initial Halon flow; thereafter, allows a small metered flow of Halon to the F-1, A-1, and internal wing tanks
	OFF	Stops Halon flow. Returns internal tank pressurization to normal schedule

Figure 1-16. (Sheet 1)

Fuel Control Panel (Typical)

CONTROL	POSITION	FUNCTION
3. ENG FEED Knob	OFF	Deenergizes all electric-driven pumps. Engine supplied by FFP
	NORM	Energizes all pumps. CG maintained automatically
	AFT	Energizes pumps in aft tanks and opens cross-feed valve. Fuel is transferred from aft tanks to the engine and forward tanks. CG moves forward
	FWD	Energizes pumps in forward tanks and opens crossfeed valve. Fuel is transferred from forward tanks to the engine and aft tanks. CG moves aft
4. AIR REFUEL Switch	OPEN	Opens slipway door. Places FLCS in takeoff and landing gains when airspeed is below 400 knots
		Enables slipway light. Turns on AR floodlight and vertical tail-mounted fuselage floodlight
		Reduces internal tank pressurization, depressurizes external tanks, and allows the refuel valve in each reservoir to open when a centerline tank is installed and refuel pressure is applied
	CLOSE	Reverses the OPEN actions

Figure 1-16. (Sheet 2)

FUEL QUANTITY INDICATING SYSTEM

Refer to figure 1-17. The fuel quantity indicating system displays the amount and location of fuel remaining. The totalizer shows all fuel in the internal and external tanks in pounds. The AL and FR pointers show the fuel quantity in the tanks as selected by the FUEL QTY SEL knob. Erroneous fuel indications may occur during or immediately after maneuvering flight. The selected tanks should normally be the fuselage tanks (FUEL QTY SEL knob in NORM). The difference between the forward and aft tanks should remain essentially constant since the FFP maintains an equal flow of fuel.


☐ Normally, the forward tank fuel quantity is 0-600 pounds greater than the aft tank quantity. ☐

Normally, the aft tank fuel quantity is 700-1350 pounds greater than the forward fuel quantity. If these values are exceeded in either direction, a red portion of the AL pointer becomes visible. Fuel distribution can be changed by rotating the ENG FEED knob to the FWD or AFT position until the imbalance is corrected.

RESERVOIR FUEL LEVEL SENSING SYSTEM

Fuel level sensors in the reservoir tanks are used to turn on/off the air ejectors and the fuel low caution lights. When a reservoir tank is not full, the air ejector in that tank is operating. The reservoir tank sensors, associated sensor circuitry, and fuel level sensing unit operate independently of the fuel quantity indicating system.

Fuel Quantity Indicator and Select Panel (Typical)

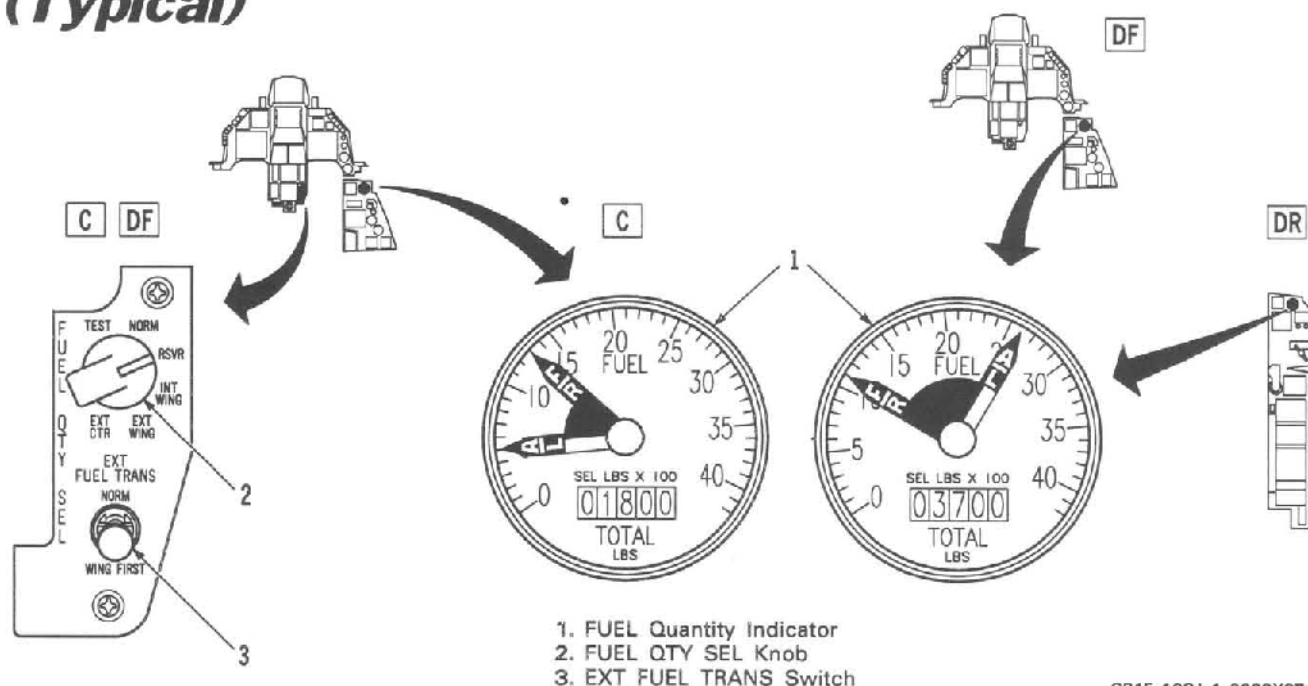

GR1F-16CJ-1-0029X37 ©

Figure 1-17. (Sheet 1)

Fuel Quantity Indicator and Select Panel (Typical)

CONTROL/INDICATOR	POSITION	FUNCTION
1. FUEL Quantity Indicator	AL and FR pointers	Display fuel quantities as determined by the FUEL QTY SEL knob
	Totalizer	Displays total fuel in all fuel tanks (fuselage + wing + external). The totalizer and the fuel value displayed on the DED BINGO page should agree within 100 pounds of each other
	Red portion of AL pointer showing	Indicates fuel imbalance between forward and aft fuselage tanks
2. FUEL QTY SEL Knob	TEST	AL/FR pointers drive to 2000 (± 100) pounds
		Totalizer drives to 6000 (± 100) pounds
		Both fuel low caution lights illuminate
	NORM	AL pointer displays sum of fuel in the aft (left) reservoir and A-1 fuselage tanks
		FR pointer displays sum of fuel in the forward (right) reservoir and F-1, F-2 fuselage tanks
		Enables automatic forward fuel transfer system, trapped fuel warning, and bingo fuel computation based on fuselage fuel
	RSVR	AL/FR pointers display fuel in aft/forward reservoir tanks
	INT WING	AL/FR pointers display fuel in left/right internal wing tanks
	EXT WING	AL/FR pointers display fuel in left/right external wing tanks
	EXT CTR	AL pointer drops to zero
		FR pointer displays fuel in centerline tank
3. EXT FUEL TRANS Switch	NORM	Centerline tank transfers first and then external wing tanks
	WING FIRST	External wing tanks transfer first and then centerline tank

Figure 1-17. (Sheet 2)

Fuel Low Caution Lights

The fuel low caution lights, located on the caution light panel, indicate either a low fuel quantity in the reservoir tanks or a reservoir fuel level sensing system malfunction. The caution lights function independently of the fuel quantity indicating system. The FWD FUEL LOW caution light illuminates when fuel quantity in the forward reservoir drops below 400 (☐ 250) pounds. The AFT FUEL LOW caution light illuminates when aft reservoir fuel quantity drops below 250 (☐ 400) pounds. The caution lights are powered by emergency dc bus No. 1.

HUD FUEL LOW/BINGO INDICATION

In addition to the fuel low caution lights, a fuel low condition may be indicated by the word FUEL in the HUD in conjunction with the home mode of the FCC or the previously entered bingo fuel value.

Bingo fuel warning is based either on fuselage fuel with the FUEL QTY SEL knob in NORM or on total fuel with the FUEL QTY SEL knob out of NORM.

The VMS provides a BINGO-BINGO message in the headset when the bingo fuel warning is activated with weight off wheels.

For a more detailed description of the home mode and the bingo fuel option, refer to T.O. GR1F-16CJ-34-1-1.

HUD TRP FUEL WARNING

A trapped external fuel condition is indicated by flashing TRP FUEL and FUEL in the HUD. Five conditions must be met for a TRP FUEL warning to occur.

Conditions are:

- FUEL QTY SEL knob is in NORM.
- Aerial refueling has not occurred within previous 30-90 seconds.
- Fuselage fuel has been at least 500 pounds less than fuselage capacity for 30 seconds.
- Total fuel has been at least 500 pounds greater than fuselage fuel for 30 seconds.
- Fuel flow has been less than 18,000 pph for 30 seconds.

A false TRP FUEL warning may occur after the following:

- Prolonged AB use if fuel flow to the engine exceeds the transfer rate from the external tank(s).
- Receiving a partial fuel load during air refueling with an external tank(s).

The TRP FUEL warning clears automatically after the condition is corrected; the FUEL mnemonic may be manually reset by placing the WARN RESET switch to WARN RESET.

FUEL/OIL HOT CAUTION LIGHT

The FUEL/OIL HOT caution light, located on the caution light panel, illuminates when the temperature of fuel to the engine becomes excessive. The caution light also comes on as a function of hot oil. Refer to ENGINE, this section.

FUEL TANK EXPLOSION SUPPRESSION SYSTEM

The fuel tank explosion suppression system places the fuel tank vent and pressurization system on a reduced pressure schedule and inerts the fuel vapors inside the tanks (if serviced with Halon). The system, intended for use only in combat or during emergencies, is controlled by the TANK INERTING switch on the fuel control panel. The system uses Halon as an inerting agent which prevents combustion when mixed with air. For the agent specification and reservoir location, refer to SERVICING DIAGRAM, this section. The Halon reservoir has a heater, controlled by a thermostatic switch, which assures sufficient operating pressure. The RMLG WOW switch prevents operation of the heater while the aircraft is on the ground.

When the TANK INERTING switch is placed to TANK INERTING, the fuselage and internal wing tanks are placed on a reduced pressure schedule and a valve at the Halon reservoir is opened. At each activation of the TANK INERTING switch, Halon (if available) is released into the F-1, A-1, and internal wing tanks for 20 seconds for initial inerting. Thereafter, a continuous metered flow of Halon is mixed with the pressurization air to maintain the inert condition. The metered flow continues until the system is turned off or until the MAIN PWR switch is positioned to OFF.

Because of limited Halon supply, the system should be activated after the external tanks have emptied, but before half of the internal fuel is depleted. Since the 20 seconds of initial inerting occurs each time the TANK INERTING switch is placed to TANK INERTING, do not cycle the switch. The fuel tank explosion suppression system does not protect the external fuel tanks.

REFUELING SYSTEM

Ground Refueling

All external and internal fuel tanks can be pressure filled from a single-point ground refueling receptacle located on the lower left side of the fuselage just forward of the wing trailing edge. Electrical power is not required to refuel the aircraft unless fuel quantity is to be monitored. Terminating refueling with partially filled tanks could result in fuel imbalance. When a partial fuel load is required, fuel distribution should be corrected prior to flight by selective operation of the fuel transfer pumps controlled by the ENG FEED knob.

Air Refueling (AR) System

The AR system consists of a hydraulically actuated receptacle and slipway door, a signal amplifier, and the associated controls and indicators. Hydraulic system B provides pressure for operation of the door and latch mechanism. The receptacle is located on the top fuselage centerline aft of the canopy. When the slipway door is opened, a mechanical linkage retracts the aft end of the slipway door into the fuselage, forming a slipway into the receptacle.

When the AIR REFUEL switch is placed to OPEN, the external tanks are depressurized, external fuel does not transfer, and the FLCS is placed in takeoff and landing gains if airspeed is below 400 knots.

When closed, the slipway door is flush with the fuselage skin. The AR receptacle is equipped with four lights, two located on each side. An AR floodlight is located on the top fuselage centerline immediately aft of the canopy. A light on the upper leading edge of the vertical tail floods the AR receptacle area and the upper fuselage.

During AR operations, the AR boom enters the receptacle and is automatically latched in place by a hydraulic actuating mechanism. The HOT MIC switch allows intercom communications with compatible tankers through the AR boom. When the last refuel shutoff valve closes, a pressure switch automatically provides a signal to unlatch the boom from the receptacle. A disconnect signal can be manually initiated at anytime during AR by the receiver or by the tanker boom operator.

Fuel venting from under the left wing can occur during AR, particularly when the aircraft is configured with external fuel tank(s). Terminating the AR operation in a partially filled condition could result in fuel imbalance. When a partial fuel load is required, fuel distribution should be monitored and corrected as required by use of the ENG FEED knob.

NWS A/R DISC MSL STEP BUTTON

The NWS A/R DISC MSL STEP button (figure 1-32) is located on the outboard side of the stick. The A/R DISC function of the switch is activated when the aircraft is airborne and the AIR REFUEL switch is positioned to OPEN. The button provides a means of manually disconnecting the AR boom. Depressing the switch causes the boom latching mechanism to unlatch and release the boom.

AIR REFUELING (AR) STATUS INDICATOR

The AR status indicator, located to the right of the HUD, contains three lights.

Functions are:

- RDY – Illuminates blue when the AR slipway door is open and the system is ready.
- AR/NWS – Illuminates green when the boom is latched in place.
- DISC – Illuminates amber when a disconnect occurs. After the disconnect, the system automatically recycles to ready, and the RDY light illuminates after a 3-second delay.

A lever for dimming the three lights is located on the right side of the unit.

ENVIRONMENTAL CONTROL SYSTEM (ECS)

Refer to figure 1-18. The ECS combines air-conditioning and pressurization functions to provide temperature-controlled, pressure-regulated air for heating, cooling, ventilating, canopy defogging, cockpit pressurization, canopy sealing, g-suit pressurization, fuel tank pressurization, electronic equipment cooling, and pressure breathing for g (PBG). Most of these functions are lost when the AIR SOURCE knob is placed to OFF or RAM. Refer to AIR SOURCE KNOB, this section.

Above 35,000 feet MSL, automatic changes in operation of the ECS may appear as short duration (approximately 15 seconds) losses of cockpit airflow alternating with normal cockpit airflow levels. These airflow changes are normal and are designed to prevent total ECS shutdowns.

ELECTRICAL FAILURES

When the ECS loses electrical power, cabin temperature control and water separator anti-icing become inoperative. The cockpit receives cold air only. The water separator coalescer sock freezes at altitudes where there is enough moisture in the air (below 30,000 feet) and the built-in bypass valve opens allowing air to flow to the cockpit and avionics.

There is no interruption of bleed air flow due to a loss of electrical power. All pressurization functions (servo air, canopy seal, anti-g, PBG, and fuel tank pressurization) operate normally since the bleed air function continues to operate.

AIR-CONDITIONING

Engine bleed air is directed through a turbine compressor and air-to-air heat exchangers where it is cooled by ram air. The conditioned air is then used for the functions shown in figure 1-18.

A cockpit temperature controller receives signals from temperature sensors and from a manually operated control panel to automatically control the cockpit temperature. Conditioned air enters the cockpit on both sides, the top rear of the seat, through the angle vent on the instrument panel, and through

the canopy defogger. In the event of an ECS malfunction, emergency ram air operation can be selected for ventilation and cooling.

A ground cooling cart can be connected to the ground cooling receptacle on the lower left side of the fuselage just above the nosewheel area to provide cooling air to the cockpit and avionic equipment.

PRESSURIZATION

Air pressure is provided by the pressurization system for control/operation of some of the ECS, canopy seal, g-suit, PBG, fuel tanks, and radar. Pressure in the cockpit is controlled automatically according to the schedule shown in figure 1-19. A cockpit pressure safety valve relieves pressure anytime the cockpit pressure exceeds ambient pressure by 5.4 psi.

The canopy seal is inflated/deflated with the mechanical locking/unlocking of the canopy.


AIR SOURCE Knob

Refer to figure 1-20. The AIR SOURCE knob is located on the ECS panel.

Functions are:

- OFF – Engine bleed air valves close. All air-conditioning, cooling, and pressurizing functions shut off, including g-suit, PBG, canopy seal, and fuel tank pressurization.
- NORM – Air-conditioning system set for automatic temperature and pressure regulation.
- DUMP – Cockpit pressure dump valve opens to atmospheric pressure. Cockpit pressure altitude increases if DUMP is selected above approximately 8000 feet MSL. Conditioned air ventilates cockpit and performs all other system functions.
- RAM – Engine bleed air valves close and the cockpit pressure dump valve opens to atmospheric pressure. Cockpit pressure altitude increases if RAM is selected above approximately 8000 feet MSL. All air-conditioning, cooling, and pressurizing functions shut off, including g-suit, PBG, canopy seal, and fuel tank pressurization. The ram air valve opens to admit ram air to ventilate the cockpit and avionic equipment.

Environmental Control System (Typical)

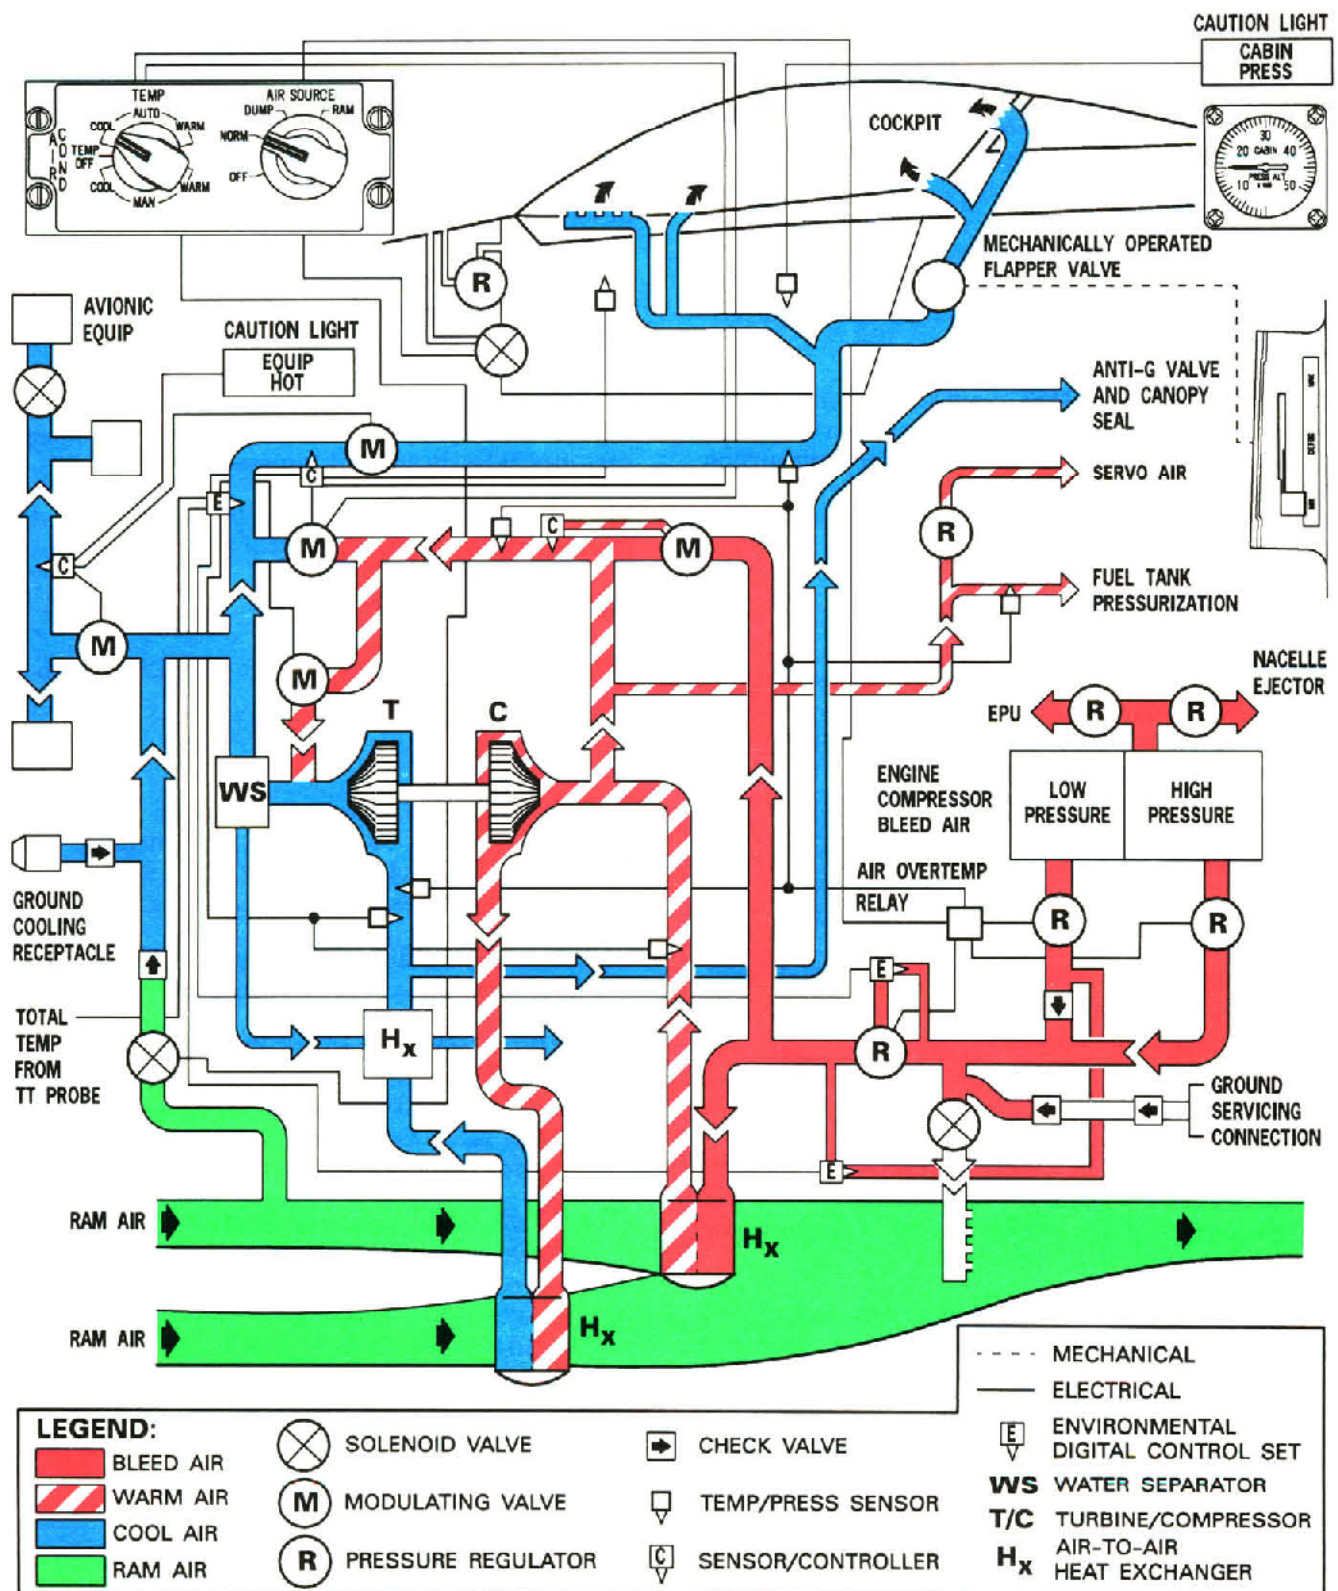

GR1F-16CJ-1-0030X37

Figure 1-18.

Cockpit Pressure Schedule

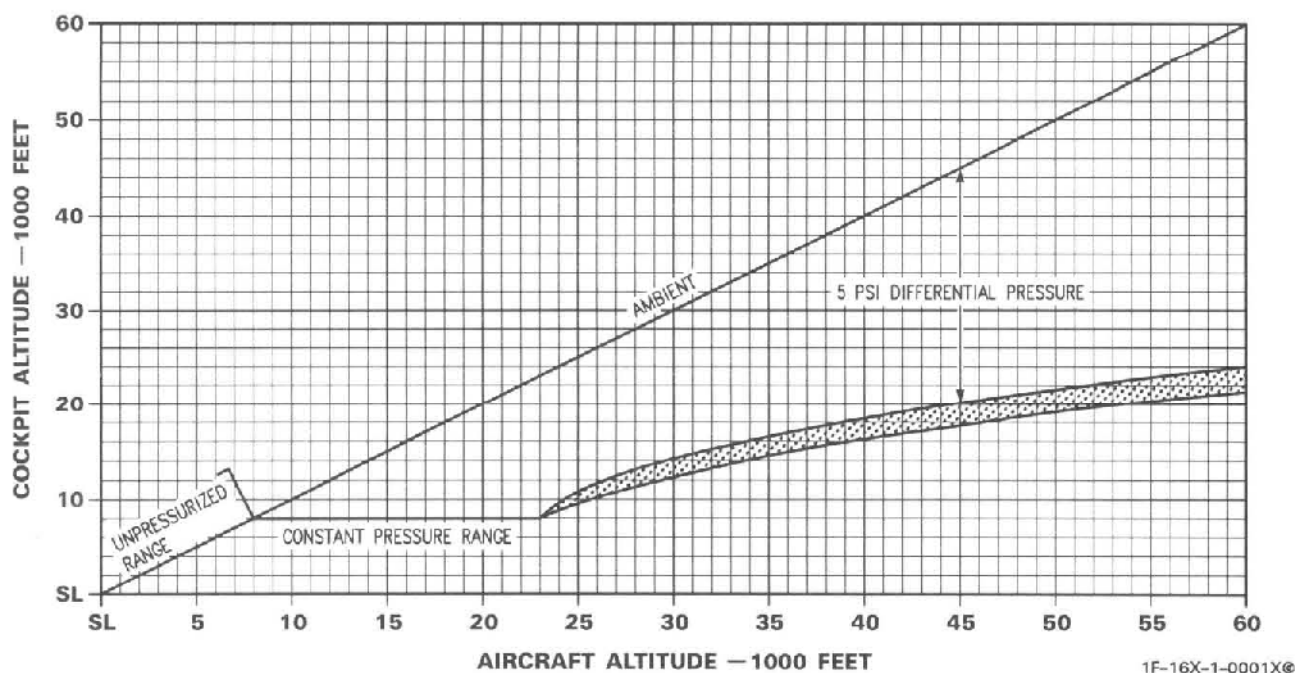


Figure 1-19.


Environmental Control System Control Panel **C** **DF** (Typical)

TEMP Knob **C** **DF**

Refer to figure 1-20. The TEMP knob is located on the ECS panel, only controls cockpit temperature.

Functions are:

- **AUTO** – Cockpit temperature is automatically maintained (50°-80°F) relative to the setting of the knob.
- **MAN** – The temperature control drives the air modulating valve to a set position. Cockpit temperature varies according to throttle setting, OAT, and cockpit heat load. If **WARM** is selected, the cockpit supply air temperature may exceed the maximum allowable limit of approximately 177°F. This causes the warm air valve to cycle on and off. This is a normal occurrence and can be stopped by selecting a cooler setting.
- **TEMP OFF** – Hot air mixing is shut off. Only air at approximately 35°F is delivered to cockpit.

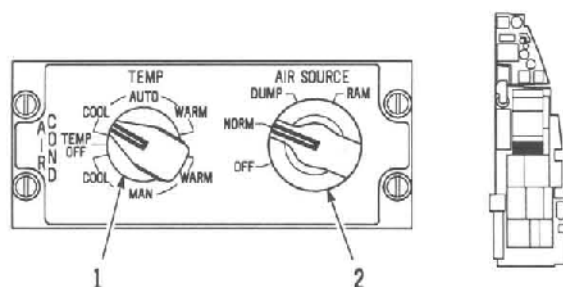

1. TEMP Knob
2. AIR SOURCE Knob

GR1F-16CJ-1-0032X37 ©

Figure 1-20.

Under extreme temperature conditions, system performance on the ground can be improved by advancing the throttle 1-3 percent above idle rpm.

Ground operation with the radar in OFF improves cockpit cooling and ground operation with the radar in STBY improves cockpit heating.

DEFOG Lever **C** **DF**

Refer to figure 1-21. The DEFOG lever, located on the far aft portion of the left console, mechanically controls a flapper valve in the cockpit air supply line.

Functions are:

- **MIN** – Minimum airflow toward the canopy forward area and air vent in center pedestal; maximum airflow to outlets behind seat.
- **MAX** – Most of the cockpit air supply is diverted to the canopy forward area for defogging and to the air vent in the center pedestal. A partial opening of the center pedestal air outlet allows a more balanced defogging of the right and left sides of the canopy. When placed in the full forward (MAX) defog position and with the TEMP knob in AUTO, the lever activates a switch which shifts the cockpit air supply control to full warm. The full warm air supply automatically terminates 3 minutes after activation. The lever may be cycled to restart the full warm, 3-minute period.

Under extremely humid conditions or after initial engine start, fog may form at the cockpit air outlets as the cold air mixes with the moist cockpit atmosphere. This condition can be eliminated by selecting MAN and moving the TEMP knob toward WARM until the fog stops forming. In flight, while operating in AUTO, the most rapid method of eliminating air outlet fogging is by selecting the MAX position with the DEFOG lever. Fog may form on the interior surface of the canopy as a result of moisture in the cockpit air condensing on the cold surface. To warm the canopy surface above the dewpoint and permit the cockpit air to retain more moisture during cold weather operation, the DEFOG lever should be placed in a forward position and the TEMP knob positioned to MAN WARM.

EQUIP HOT Caution Light

The EQUIP HOT caution light, located on the caution light panel, illuminates when the avionic equipment cooling air temperature/pressure is insufficient.

Defog Control Panel

C **DF** (Typical)

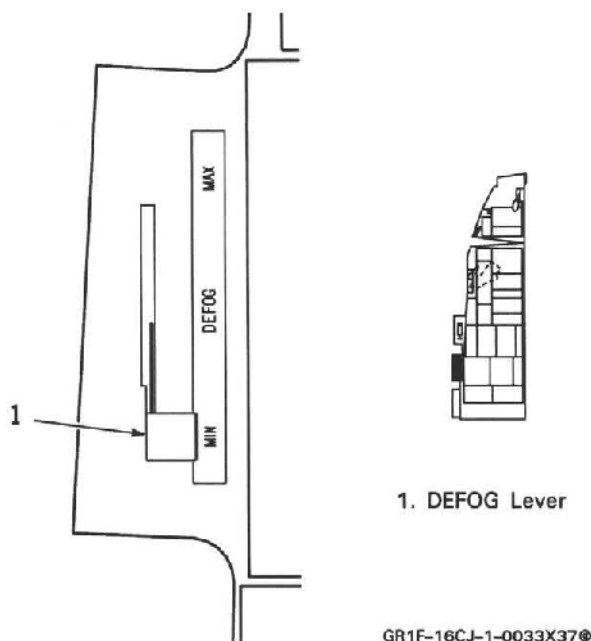


Figure 1-21.

Degraded equipment performance and/or damage can result from overheating. Therefore, when the EQUIP HOT caution light illuminates, the electronic equipment should be turned off unless it is essential for flight. Illumination of the EQUIP HOT caution light automatically interrupts electrical power to the radar. Turning the radar to OFF in flight does not close the radar cooling air shutoff valve.

A short duration or intermittent EQUIP HOT caution light may occur when ground cooling air is disconnected.

Cockpit Pressure Altimeter **C** **DF**

The cockpit pressure altimeter, located on the right auxiliary console outboard of the stick, is labeled CABIN PRESS ALT.

CABIN PRESS Caution Light

The CABIN PRESS caution light, located on the caution light panel, illuminates when the cockpit pressure altitude is above 27,000 feet.

ANTI-G SYSTEM

The anti-g system includes the ANTI-G panel/valve, the g-suit, and PBG equipment.

The g-suit connector and TEST button are located on the ANTI-G panel at the aft end of the left console. The ECS delivers cooled bleed air to the g-suit and to the oxygen regulator as a control pressure for PBG. Airflow is proportional to the positive g forces sensed. If an ECS shutdown occurs, g-suit and PBG protection are not available.

The system can be manually tested by depressing the anti-g TEST button to inflate the g-suit and to check the PBG function. The system incorporates an automatic pressure relief valve.

ELECTRICAL SYSTEM

Refer to figure 1-22. The electrical system consists of a main ac power system, a standby ac power system, an emergency ac power system, a dc power system, an FLCS power supply, and provisions for external ac power.

MAIN AC POWER SYSTEM

AC power is normally supplied by a 60 kva main generator located on and driven by the ADG. The main generator supplies power to the overcurrent sensing contactors and nonessential, essential, and emergency ac buses.

Overcurrent Sensing Contactors

The eight overcurrent sensing contactors protect certain ac buses; stations 3, 5, and 7; and inlet stations from overcurrent. The ELEC CAUTION RESET button on the ELEC control panel is used to reset a tripped overcurrent sensing contactor on nonessential ac bus No. 1 and the nacelle nonessential ac bus. The overcurrent sensing contactor may not remain reset if the fault persists.

The items with a nonresettable overcurrent sensing contactor are the radar ac bus; stations 3, 5, and 7; and left and right inlet stations.

STANDBY AC POWER SYSTEM

The standby ac power system consists of the essential and emergency ac buses and is powered (if the main generator is inoperative) by a 10 kva standby generator which is located on and driven by the ADG. The standby generator has power available whenever the ADG is rotating and comes on line when the main generator is not supplying power, as long as the MAIN PWR switch is in MAIN PWR. The standby generator has an integral FLCS PMG which supplies power to the four FLCS branches. Refer to FLCS POWER SUPPLY, this section, for further discussion of the FLCS PMG.


EMERGENCY AC POWER SYSTEM

If the main and standby generators fail, emergency ac power is supplied automatically by a 5 kva EPU generator driven by the EPU. The system supplies power to the emergency ac buses. The EPU generator has a PMG which supplies dc power through an ac to dc converter to the four FLCS branches. Refer to EMERGENCY POWER UNIT, this section, for further discussion of the EPU.

DC POWER SYSTEM


DC power is supplied by ac to dc converters or by the aircraft battery. With the main generator operating, the ac to dc converters power emergency dc bus No. 1, battery bus No. 1, nonessential dc bus, nacelle dc bus, emergency dc bus No. 2, essential dc bus, and battery bus No. 2. With the standby generator operating, the ac to dc converters power emergency dc bus No. 1, battery bus No. 1, emergency dc bus No. 2, essential dc bus, and battery bus No. 2. With the EPU generator operating, the ac to dc converters power emergency dc bus No. 1, battery bus No. 1, emergency dc bus No. 2, and battery bus No. 2. With the main, standby, or EPU generator operating, the aircraft battery is disconnected and charged by the battery charger/control assembly. If all generators fail, the aircraft battery is connected and powers battery bus No. 1 and battery bus No. 2. The battery buses are powered in all cases to provide a source of power to the FLCS power supply (if needed) and start power to the EPU.

Electrical Power Distribution Diagram

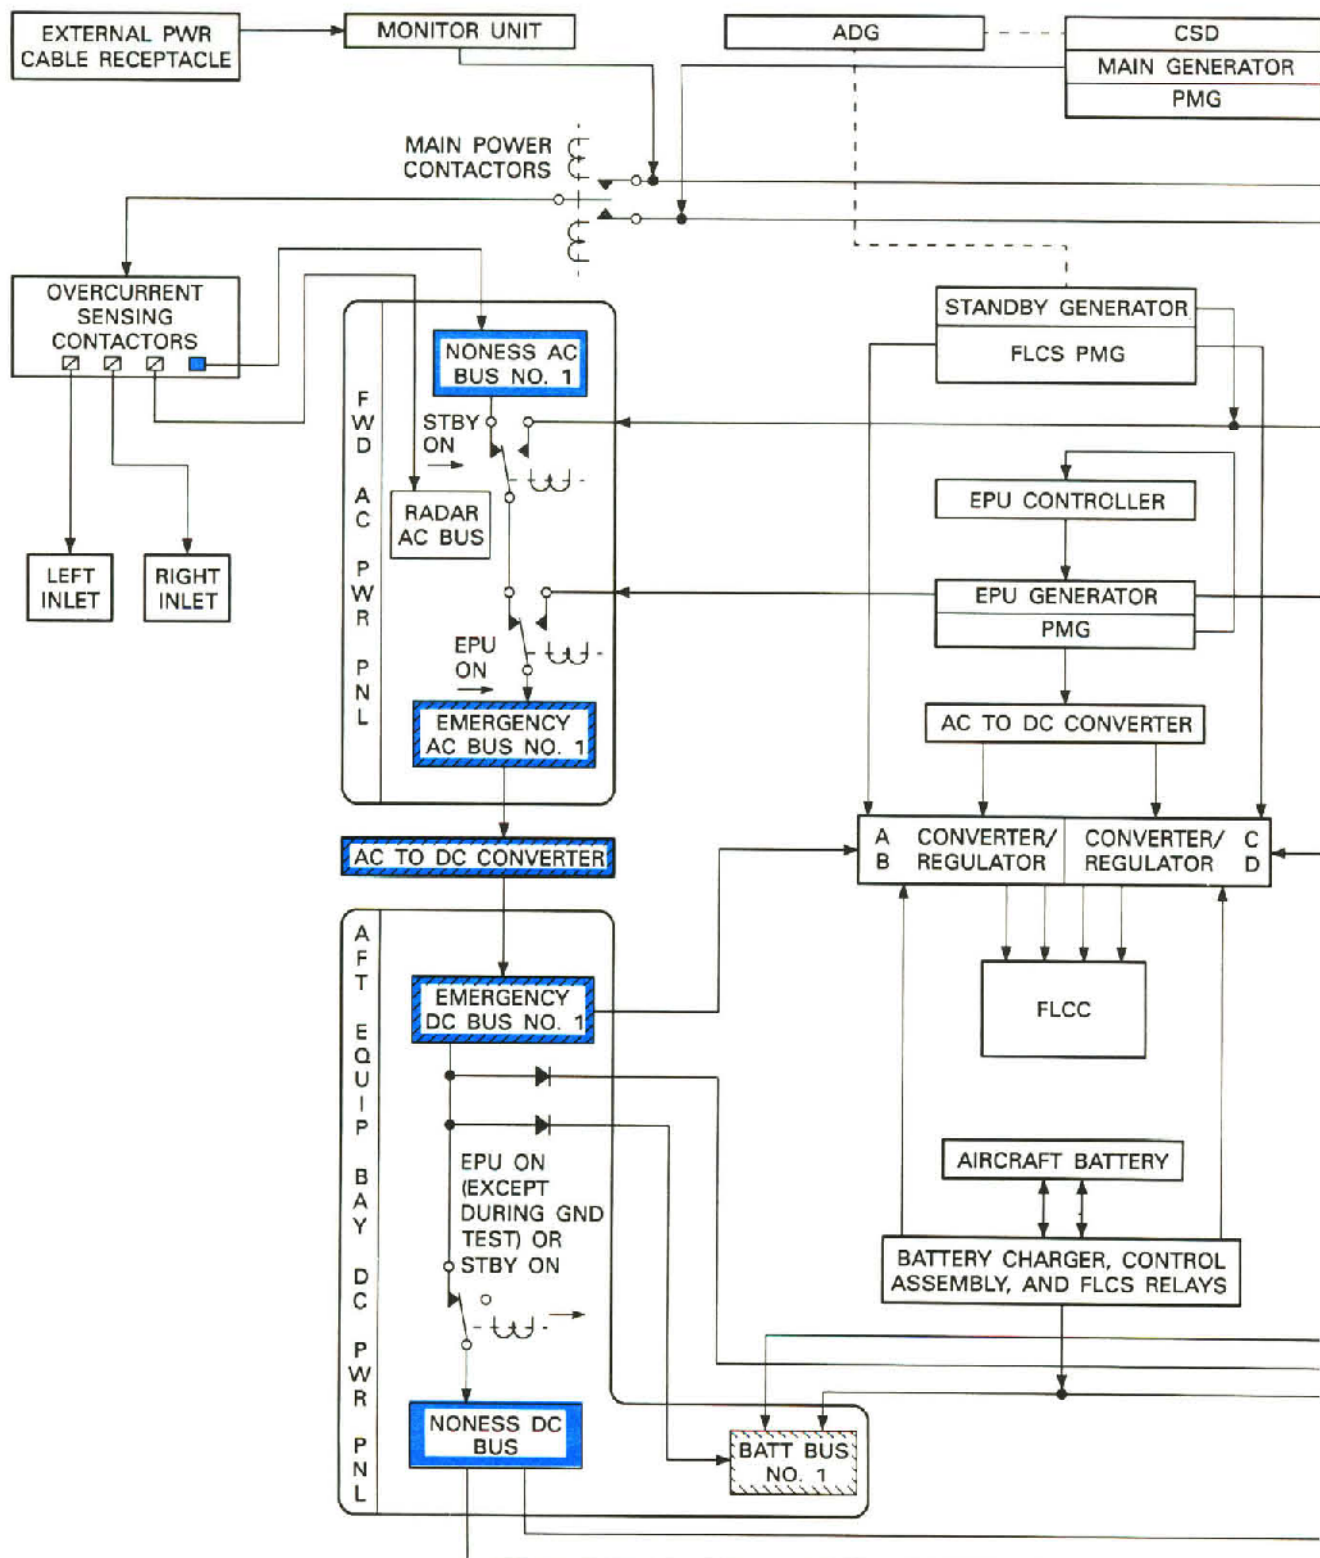

GR1F-16CJ-1-0034-1A37 ©

Figure 1-22. (Sheet 1)

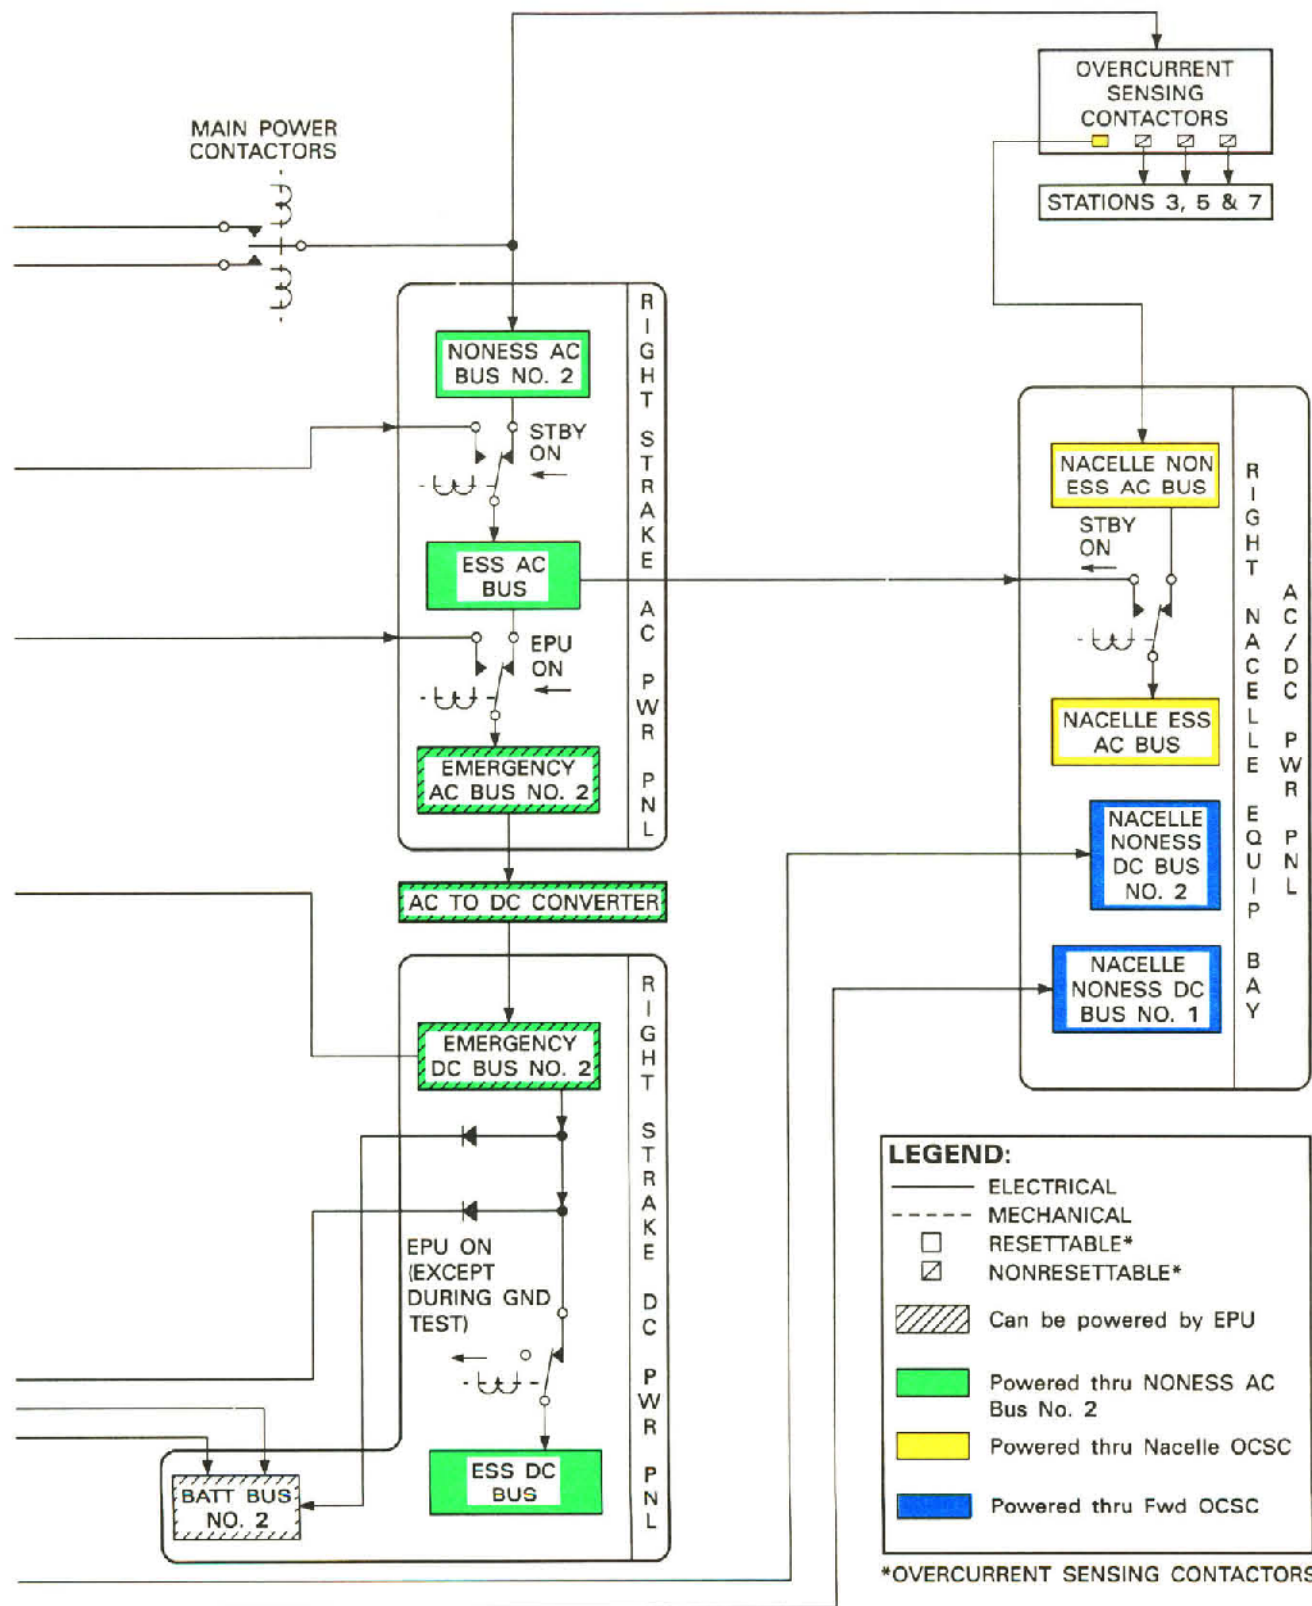

GR1F-16CJ-1-0034-2A37

Figure 1-22. (Sheet 2)

FLCS POWER SUPPLY

The primary FLCS power supply includes a dedicated FLCS PMG and two dual-channel converter regulators and four branch power supplies within the FLCC.

The FLCS PMG is the primary power source for the FLCS during normal operations. The FLCS PMG is integral with the standby generator and generates power whenever the ADG is rotating. The PMG has four outputs, one for each branch of the FLCS, and generates sufficient power to operate the FLCS at 40 percent rpm or greater.

Other FLCS power sources are the main generator, the standby generator, the EPU generator, the EPU PMG, and the aircraft battery.

Two converter/regulators, having two channels each, provide a separate channel for each branch of the FLCS. Both converter/regulators receive power from the FLCS PMG, the aircraft battery, and if the EPU is running, the EPU PMG. The branch A and B converter/regulator also receives power from emergency dc bus No. 1, and the branch C and D converter/regulator also receives power from emergency dc bus No. 2. Each converter/regulator channel converts ac power from the FLCS PMG to dc, selects the power source with the highest voltage (within limits), and provides dc power to the respective FLCC branch. Converter/regulator output voltages are regulated to prevent overvoltage to the FLCS. The converter/regulators also provide fault indications for display on the ELEC control panel and provide test indications to the TEST switch panel.

The aircraft battery can provide temporary emergency power to the FLCS. The length of time that the aircraft battery is able to power the FLCS is a function of the state of charge. The FLCS incorporates four latching relays which function to prevent depletion of the aircraft battery during ground maintenance. The relays prevent the FLCC from being connected to the aircraft battery until a JFS start is initiated.

EXTERNAL POWER PROVISIONS

The external power provisions include a standard external power cable receptacle and a monitor unit

which is part of the airframe. The monitor unit allows external power to be connected to the aircraft buses if the phasing, voltage, and frequency of the external power are correct. When connected, the external power provides the same power as the main generator.

ELECTRICAL SYSTEM CONTROLS AND INDICATORS

Refer to figure 1-23.

ELECTRICAL POWER DISTRIBUTION

Refer to figures 1-24 and 1-25.

ELECTRICAL SYSTEM NORMAL OPERATION

Prior to engine start, the MAIN PWR switch is placed to BATT to permit a check of the aircraft battery. The ELEC SYS, MAIN GEN, STBY GEN, and FLCS RLY lights come on. The FLCS RLY light illuminates because the four FLCS relays are open and the FLCC is not connected to the aircraft battery. The FLCS PMG light is not illuminated since it requires FLCS power. The ACFT BATT TO FLCS light does not illuminate since the FLCS relays are open. With the FLCS PWR TEST switch held in TEST, the FLCS relays close but do not latch. The FLCS PMG and the ACFT BATT TO FLCS lights illuminate and the FLCS RLY light goes off. The FLCS PWR lights on the TEST switch panel illuminate, indicating that the power output of the FLCC is good.

With the FLCS PWR TEST switch in NORM and the MAIN PWR switch positioned from BATT to MAIN PWR, the lights do not change. If external power is connected, the MAIN GEN light goes off.

If the FLCS PWR TEST switch is placed to TEST with the MAIN PWR switch in MAIN PWR, the FLCS relays are latched closed. The FLCS RLY light remains off when the FLCS PWR TEST switch is returned to NORM. The aircraft battery is now powering the FLCC and depletes more rapidly. To eliminate the increased battery load, cycle the MAIN PWR switch to BATT and back to MAIN PWR to open the FLCS relays (FLCS RLY light illuminates).

When the JFS switch is moved to either start position, the FLCS PMG light (and ACFT BATT TO FLCS light if engine is started on battery power) illuminates and the FLCS RLY light goes off, indicating that the FLCS relays have closed.

During engine start, the FLCS PMG light (and ACFT BATT TO FLCS light if engine is started on battery power) goes off at approximately 44 percent engine rpm. The STBY GEN light goes off at approximately 60 percent engine rpm; the MAIN GEN light goes off approximately 10 seconds later if both generators are operating normally. External

power, if used, is disconnected from the aircraft buses when the main generator comes on line.


Anytime after selecting MAIN PWR, including in flight, the FLCS PWR TEST switch may be held momentarily in TEST to check FLCC power output. During the EPU test, the FLCS PWR lights come on to indicate that EPU PMG power is available to the FLCS.

During engine shutdown, the ELEC SYS caution light and FLCS PMG, MAIN GEN, and STBY GEN lights come on as the engine spools down. The ACFT BATT TO FLCS light also illuminates.

Electrical System Controls and Indicators

C DF (Typical)

1. MAIN PWR Switch
2. FLCS PMG Indicator Light
3. MAIN GEN Indicator Light
4. STBY GEN Indicator Light
5. EPU GEN Indicator Light
6. EPU PMG Indicator Light
7. ACFT BATT Indicator Lights
8. ELEC SYS Caution Light
9. ELEC CAUTION RESET Button
10. FLCS PWR TEST Switch
11. FLCS PWR Indicator Lights

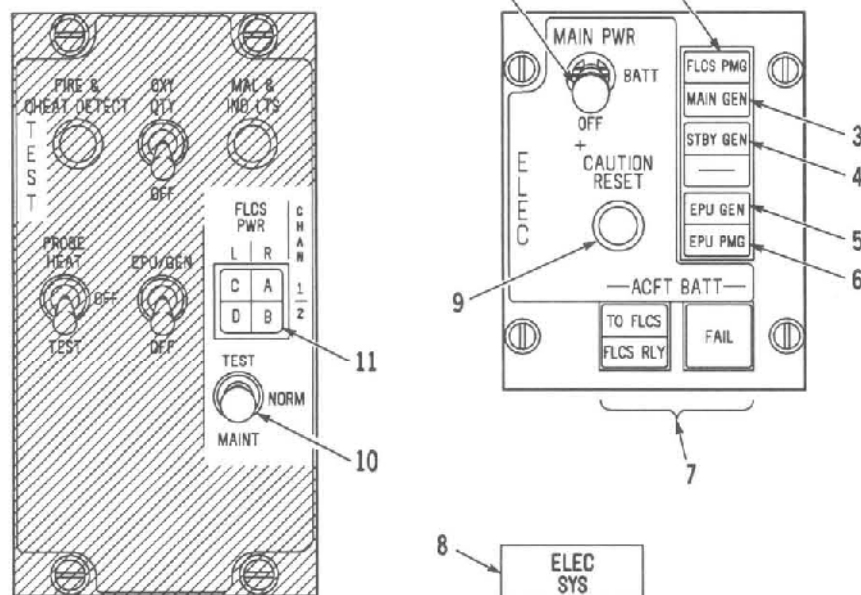

GR1F-16CJ-1-0035X37©

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION
1. MAIN PWR Switch NOTE: During ground operation, if the MAIN PWR switch is moved from MAIN PWR to OFF without a delay of 1 second in BATT, the EPU does not activate and electrical power for braking, NWS, hook, and radios is lost.	MAIN PWR	Connects external power or the main generator to the electrical system and enables standby generator. Determines function of FLCS PWR TEST switch. If ac power is not available, connects aircraft battery to the battery buses
	BATT	Connects aircraft battery to the battery buses, disconnects main generator or external power, resets main generator, disables standby generator, and determines function of FLCS PWR TEST switch
	OFF	In flight – disconnects main generator from electrical system and disables standby generator. Activates EPU On ground – disconnects main generator or external power from aircraft electrical system and disables standby generator. Disconnects the aircraft battery from the battery buses. Canopy operation is available after engine shutdown

Figure 1-23. (Sheet 1)

Electrical System Controls and Indicators

C DF (Typical)

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION
2. FLCS PMG Indicator Light	FLCS PMG (amber)	In flight – None of the FLCS branches are receiving power from the FLCS PMG
		On ground – FLCS PMG power is not available at one or more FLCS branches. Light is delayed 60 seconds after initial NLG WOW
3. MAIN GEN Indicator Light	MAIN GEN (amber)	Indicates external power or main generator not connected to one or both nonessential ac buses
4. STBY GEN Indicator Light	STBY GEN (amber)	Indicates standby generator power is not available
5. EPU GEN Indicator Light	EPU GEN (amber)	Indicates the EPU has been commanded on but the EPU generator is not providing power to both emergency ac buses. The light does not function with the EPU switch in OFF (WOW) and the engine running
6. EPU PMG Indicator Light	EPU PMG (amber)	Indicates the EPU has been commanded on but EPU PMG power is not available to all branches of the FLCS
7. ACFT BATT Indicator Lights	FAIL (amber)	In flight – indicates aircraft battery failure (20V or less)
		On ground – indicates aircraft battery or battery charger failure. Light is delayed 60 seconds after MLG WOW
	TO FLCS (amber)	In flight – indicates battery bus power is going to one or more FLCS branches and voltage is 25V or less
		On ground – indicates battery bus power is going to one or more FLCS branches
	FLCS RLY (amber)	Indicates that voltage on one or more of the four FLCC branches connected to the aircraft battery is inadequate (below 20V) or that one or more FLCC branches are not connected to the battery

Figure 1-23. (Sheet 2)


Electrical System Controls and Indicators

C **DF** (Typical)

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION	
8. ELEC SYS Caution Light	ELEC SYS (amber)	Illuminates in conjunction with any of the above lights	
9. ELEC CAUTION RESET Button	Push	Resets resettable overcurrent protection units and ELEC SYS caution light and clears MASTER CAUTION light for future indications. Resets main and standby generators	
10. FLCS PWR TEST Switch	TEST	When MAIN PWR switch is in:	
		MAIN PWR	BATT
		Tests FLCC power output	Tests FLCC power output on aircraft battery
	NORM	Normal position. Tests EPU PMG power availability during EPU/GEN test on ground	NA
	MAINT	For maintenance use on the ground. Inoperative in flight	
11. FLCS PWR Indicator Lights	A, B, C, and D (green)	Illuminate to indicate proper power output of FLCC during FLCS power tests	


Figure 1-23. (Sheet 3)

AC Power Distribution Diagram

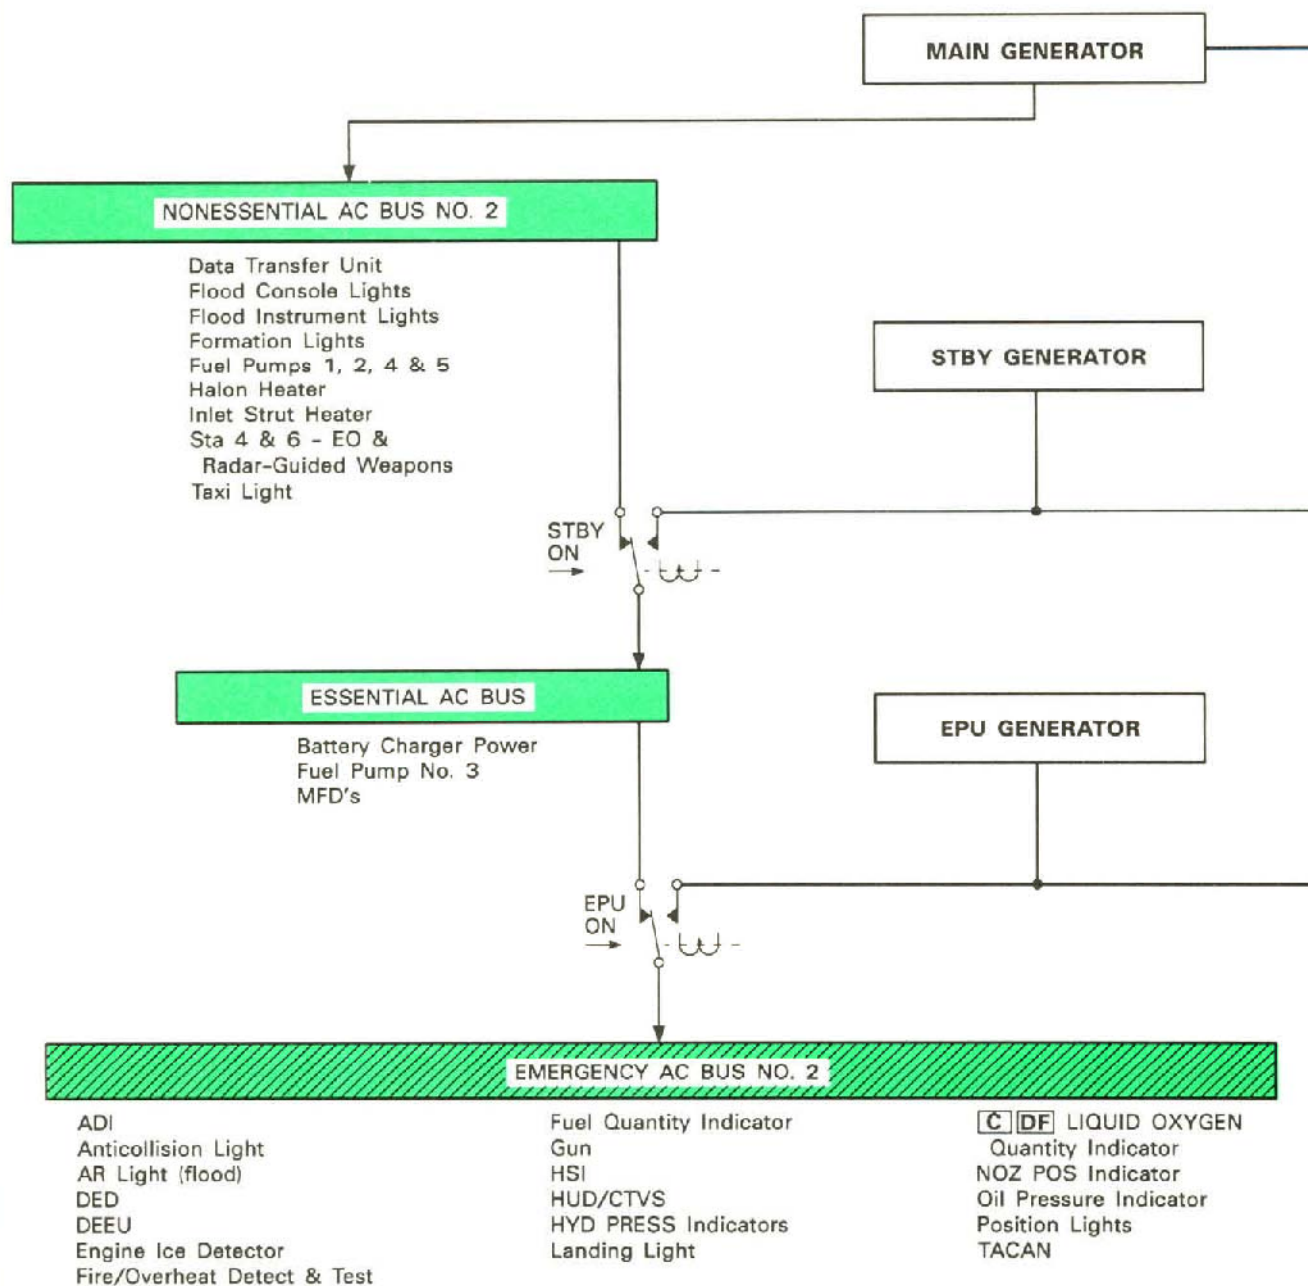

GR1F-16CJ-1-1154-1X37 ©


Figure 1-24. (Sheet 1)

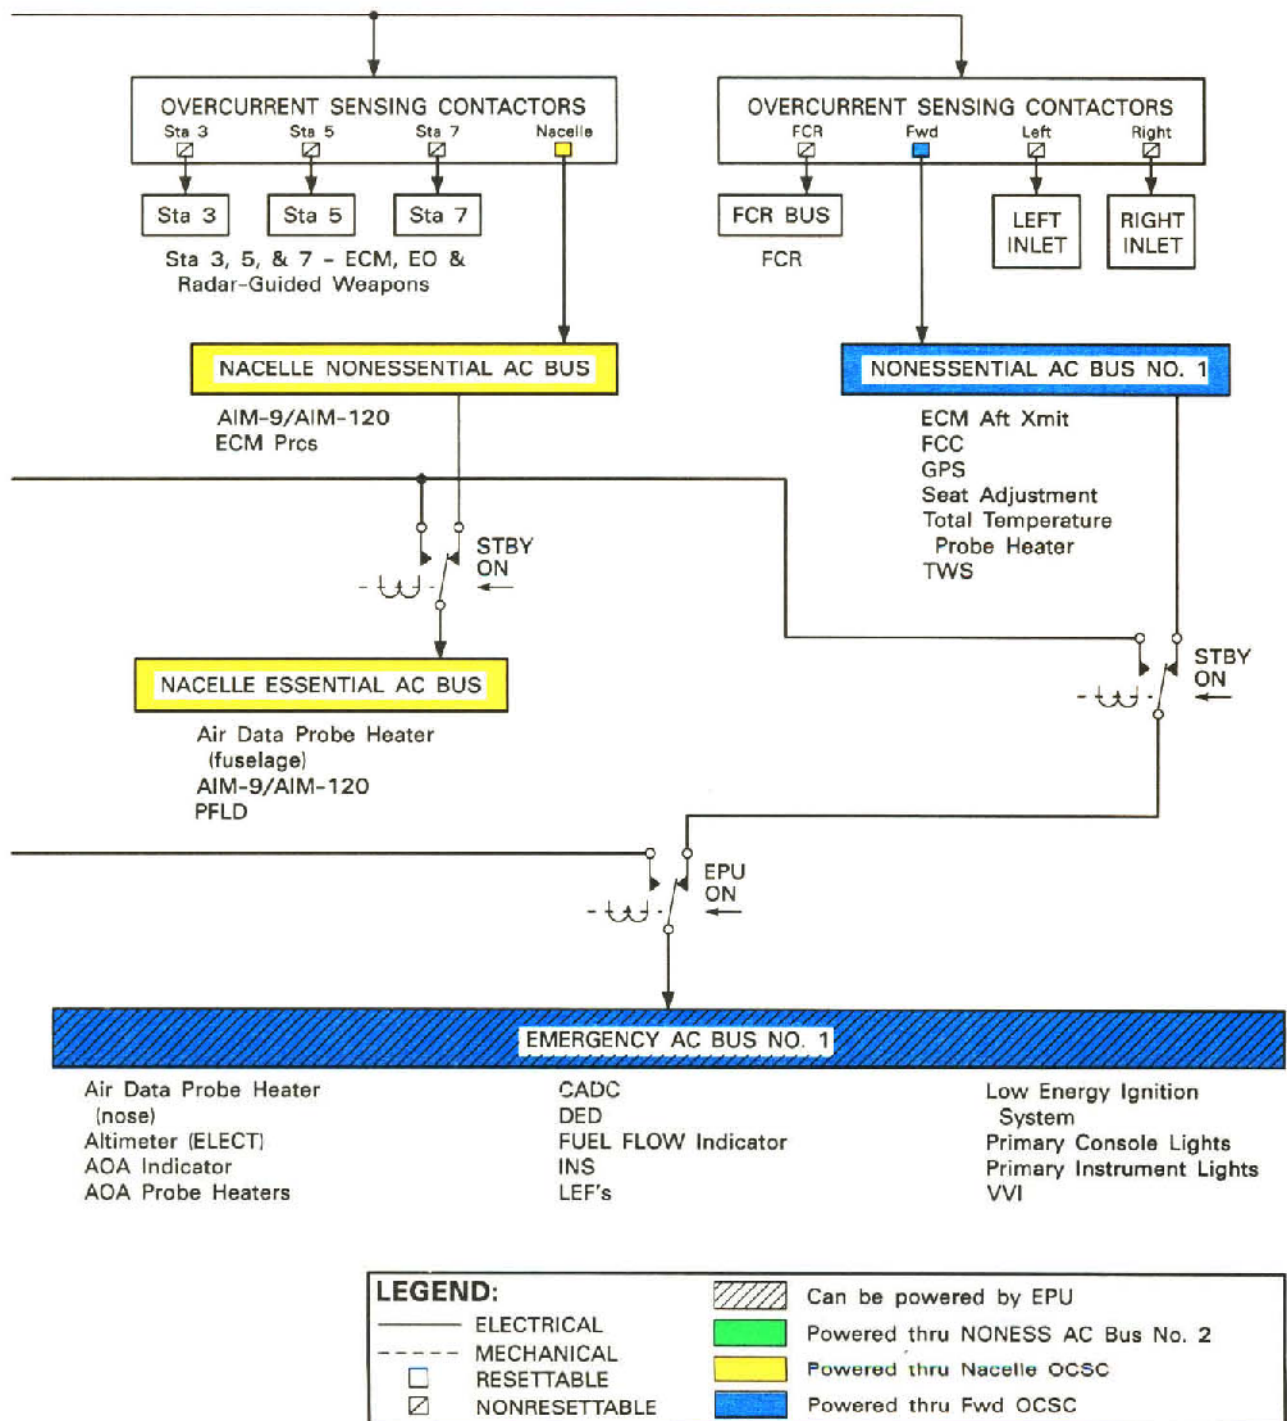

GR1F-16CJ-1-1154-2X37 ©


Figure 1-24. (Sheet 2)

DC Power Distribution Diagram

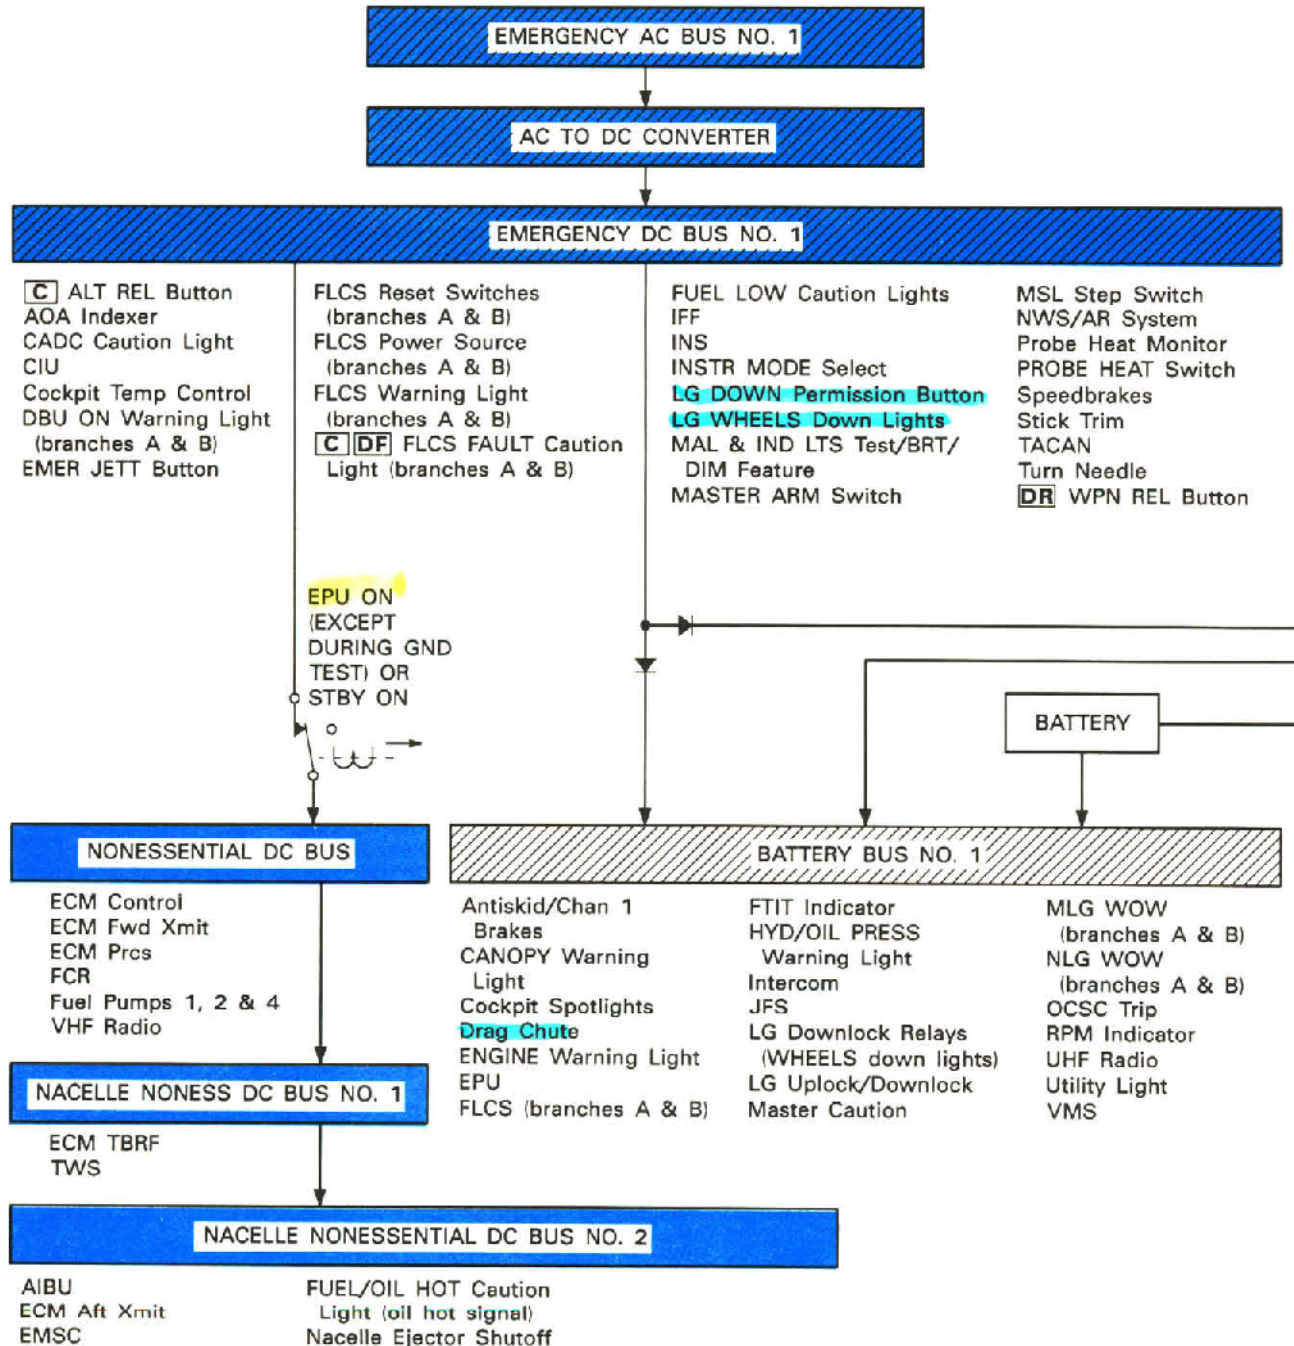

GR1F-16CJ-1-1155-1X37 ©

Figure 1-25. (Sheet 1)

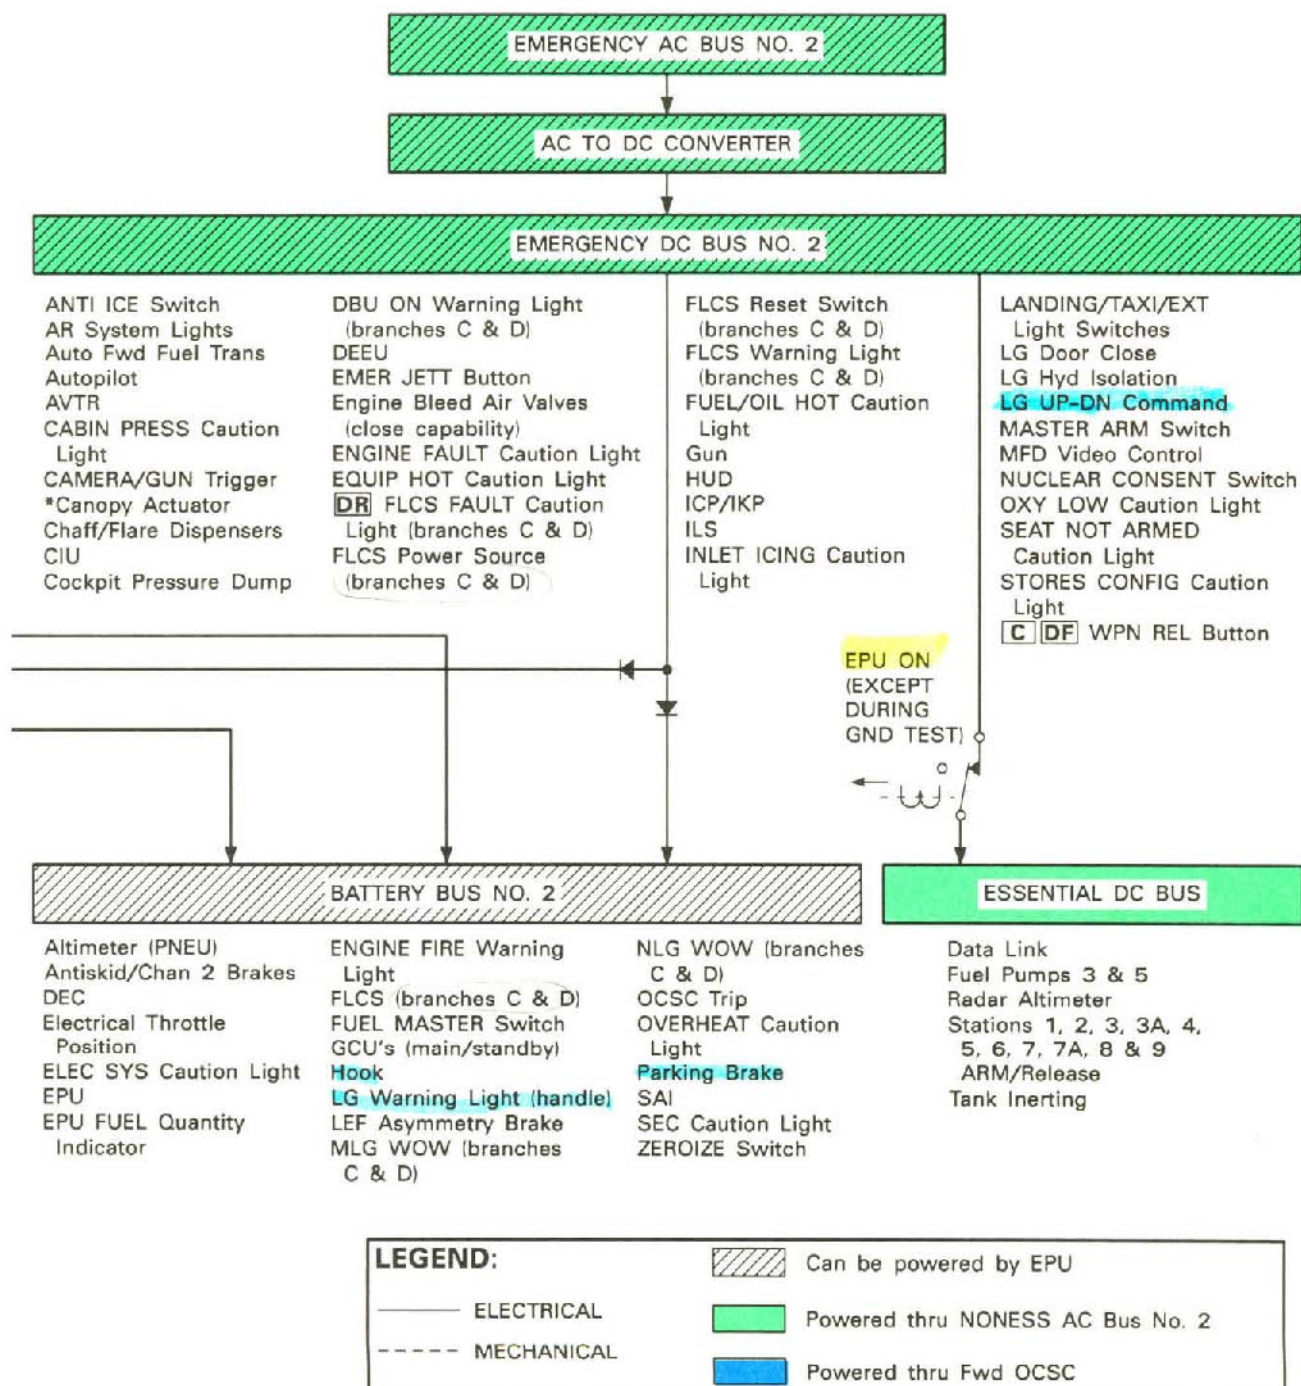

* Power available from the battery bus box with MAIN PWR switch OFF.

GR1F-16CJ-1-1155-2X37

Figure 1-25. (Sheet 2)

HYDRAULIC SYSTEM

Refer to figure 1-26. Hydraulic pressure is supplied by 3000 psi hydraulic systems designated as systems A and B. The systems are powered by two independent engine-driven pumps located on the ADG. Each system has a reservoir to store hydraulic fluid. The reservoirs are pressurized by their respective hydraulic system to insure positive pressure at the pump. For hydraulic system cooling, refer to ENGINE FUEL SUPPLY SYSTEM, this section.

Both systems operate simultaneously to supply hydraulic power for the primary flight controls and LEF's. If one of the systems should fail, the remaining system provides sufficient hydraulic pressure; however, the maximum actuation rate of the FLCS is reduced. System A also supplies power to the FFP and the speedbrakes. All remaining utility functions, consisting of the gun and gun purge door, AR system, LG, brakes, and NWS, are supplied by system B. System B also charges the brake/JFS accumulators (which provide start power for the JFS and backup pressure for the brakes), provided the engine is rotating at a minimum of 12 percent rpm. System B takes between 40 seconds (hot ambient conditions) and 60 seconds (cold ambient conditions) to recharge the brake/JFS accumulators.

The LG can be extended pneumatically in the event of hydraulic system B failure. Should both hydraulic systems fail, a third hydraulic pump located on the EPU automatically provides hydraulic pressure to system A. Refer to EMERGENCY POWER UNIT (EPU), this section, for a further discussion of the EPU.

Each hydraulic system has an FLCS accumulator which is isolated from the main system by check valves. These FLCS accumulators serve a dual function. If demand exceeds the pump maximum flow rate during rapid control surface movement, the FLCS accumulators provide additional hydraulic pressure. Also, if both hydraulic systems fail, the FLCS accumulators provide adequate hydraulic pressure to the flight controls while the EPU comes up to speed. Refer to SERVICING DIAGRAM, this section, for servicing/specifications information.

HYD PRESS INDICATORS AND WARNING LIGHT

Refer to figure 1-27.

HYD PRESS Indicators

The HYD PRESS indicators, one for system A and one for system B, are located on the right auxiliary console. The indicators are powered by emergency ac bus No. 2.

HYD/OIL PRESS Warning Light

A HYD/OIL PRESS warning light, located on the right glareshield, comes on when hydraulic system A or B pressure drops below 1000 psi or when engine oil pressure drops below 10 (± 2) psi. For the oil pressure function only, there is a 30-second time delay in the light circuit to minimize transient lights during negative g maneuvers. The light is powered by battery bus No. 1.

EMERGENCY POWER UNIT (EPU)

Refer to figure 1-28. The EPU is a self-contained system which simultaneously provides emergency hydraulic pressure to system A and emergency electrical power. The EPU automatically activates when both main and standby generators fail or when both hydraulic system pressures fall below 1000 psi. The EPU may be operated manually regardless of failure conditions.

The EPU requires dc power from either battery bus No. 1 or No. 2 for automatic or manual activation. When the EPU is operating, the emergency ac and dc buses are powered by the EPU generator. To reduce electrical loads, the nonessential and essential dc buses are unpowered whenever the EPU is operating (except when activated for ground test using the EPU/GEN test switch).

When operating, the EPU augments hydraulic system A as required. If the normal system A hydraulic pump fails, the EPU is the only source of system A pressure.

The EPU uses engine bleed air and/or hydrazine to operate. Normally, engine bleed air is used to maintain operating speed. When bleed air is insufficient, hydrazine augmentation automatically occurs. Hydrazine is always used when the EPU is commanded to start except when activated during ground test using the EPU/GEN test switch.

On system command, hydrazine is forced by nitrogen pressure into a decomposition chamber. The gaseous products of the reaction spin the turbine/gearbox which then powers the EPU generator and hydraulic pump. Hydrazine exhaust is vented overboard on the lower inboard side of the right strake and consists primarily of nitrogen, hydrogen, ammonia, and water. The temperature of exhaust gases can reach 1600°F and will ignite in the presence of a flame. The exhaust gases have an ammonia odor, are irritating to the nose and eyes, and should be avoided to the maximum extent possible.

EPU CONTROLS AND INDICATORS

Refer to figure 1-29.

EPU Ground Safety Switch

The ground safety switch, located on the right side of the engine inlet, is used to disable the EPU on the ground. With the EPU safety pin installed, the EPU does not operate.

EPU Switch

The EPU switch, located on the EPU control panel, is a three-position toggle switch.

Functions are:

- OFF
 - Prevents or terminates EPU operation on the ground (WOW).
 - Does not prevent or terminate EPU operation in flight for main and standby generator failures if switch was cycled or placed to NORM at anytime since takeoff (since WOW).
 - Prevents EPU operation in flight if switch has remained in the OFF position since takeoff (since WOW).
- Terminates EPU operation in flight except during main and standby generator failures.
- NORM – The system is armed for automatic operation except during engine shutdown on the ground. With WOW and throttle in OFF, the EPU does not activate when the main and standby generators drop off line.
- ON – Commands EPU to run regardless of failure conditions. Operation will cease when switch is positioned to OFF except for main and standby generator failures in flight.

The switch has a split guard; the top half can be raised to move the switch to ON, and the bottom half can be raised to move the switch to OFF. When both sections of the guard are down, the switch is retained in the NORM position.

EPU Run Light

The EPU run light, located on the EPU control panel, illuminates when the EPU turbine speed is within the proper range and the EPU-driven hydraulic pump discharge pressure is above 2000 psi.

HYDRAZN Light

The HYDRAZN light, located on the EPU control panel, illuminates when the EPU is commanding hydrazine for operation (whether hydrazine is available or not) or if a primary speed control failure has occurred.


AIR Light

The AIR light, located on the EPU control panel, illuminates whenever the EPU has been commanded to run with the EPU safety pin removed. It remains on even when the EPU is augmented by hydrazine.

EPU/GEN Test Switch


The EPU/GEN test switch, located on the TEST switch panel, has positions of OFF and EPU/GEN. The switch is spring-loaded to the OFF position. It provides a means to test the EPU generator and EPU PMG output to FLCS on the ground without using hydrazine.

Hydraulic Power Supply (Typical)

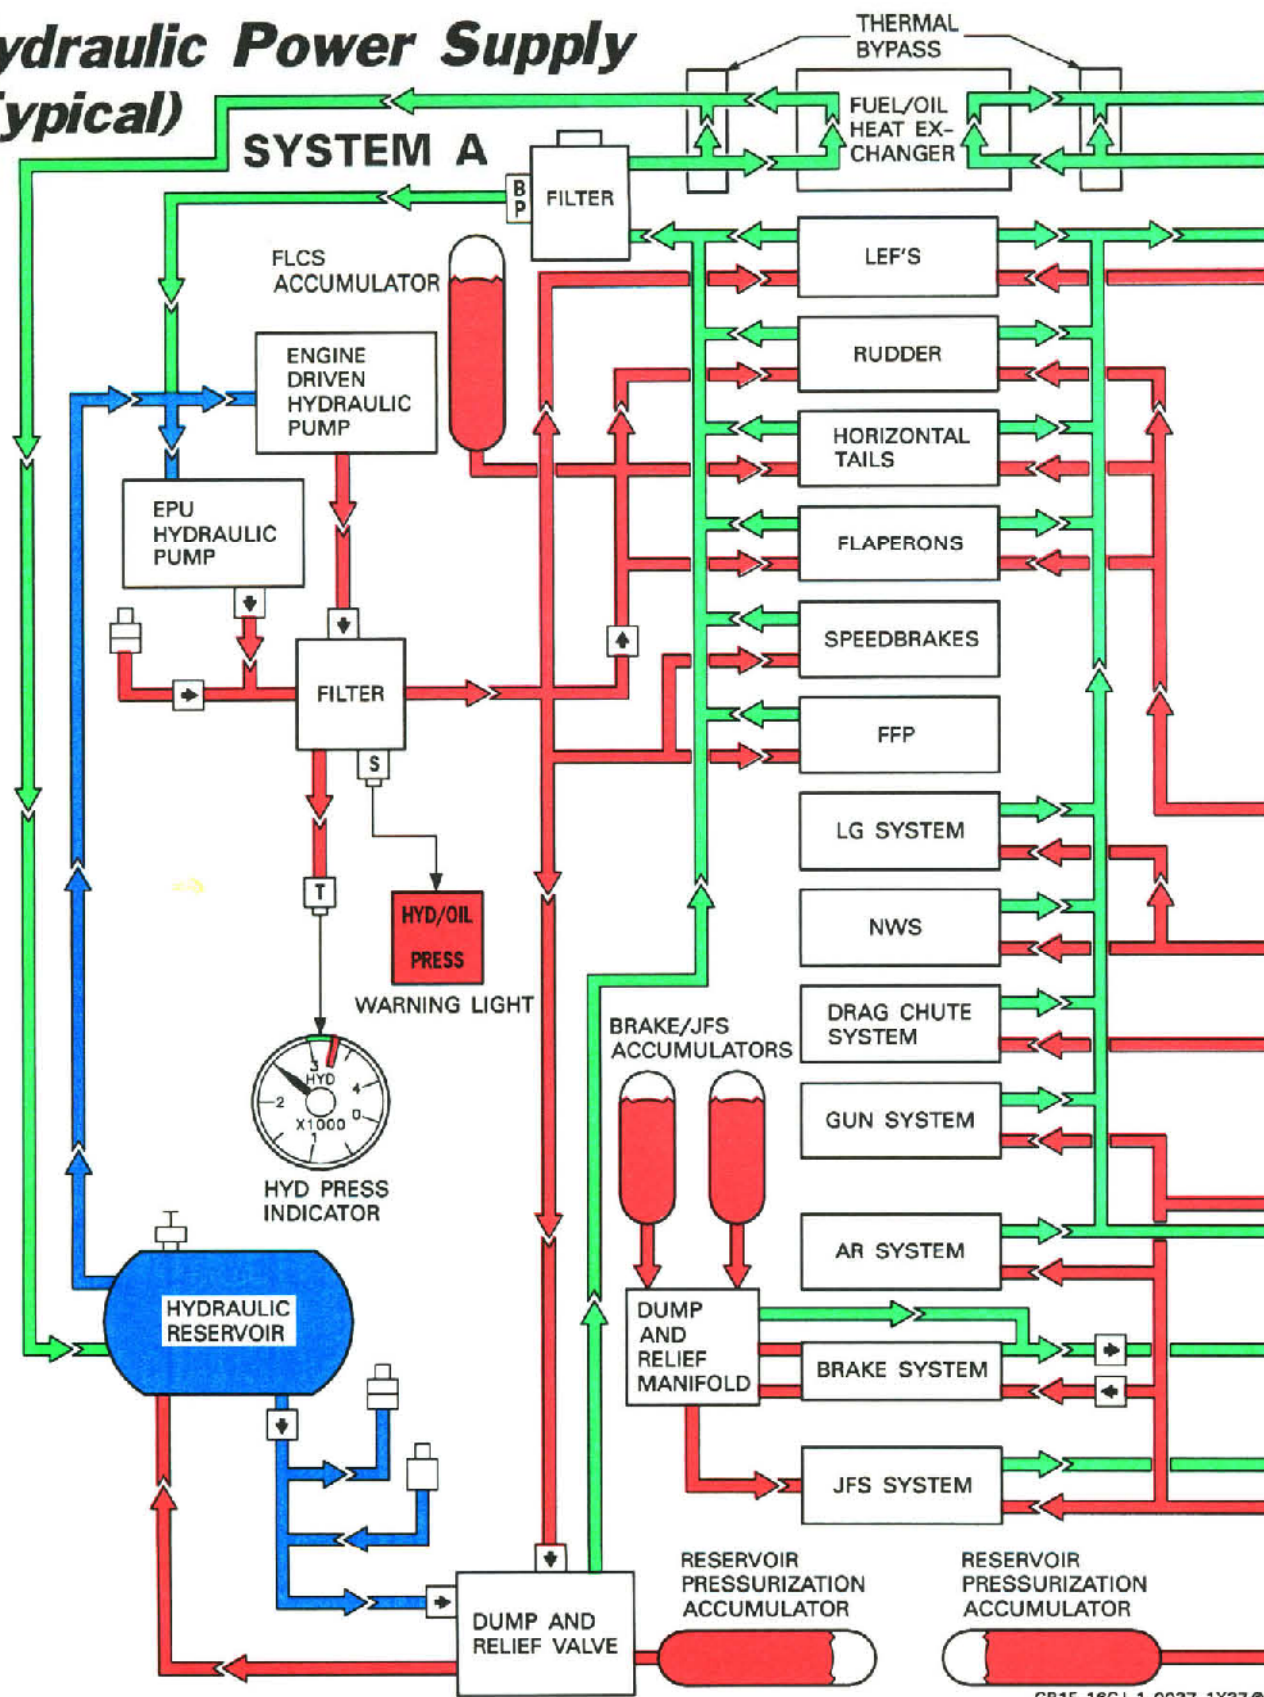

GR1F-16CJ-1-0037-1X37 ©

Figure 1-26. (Sheet 1)

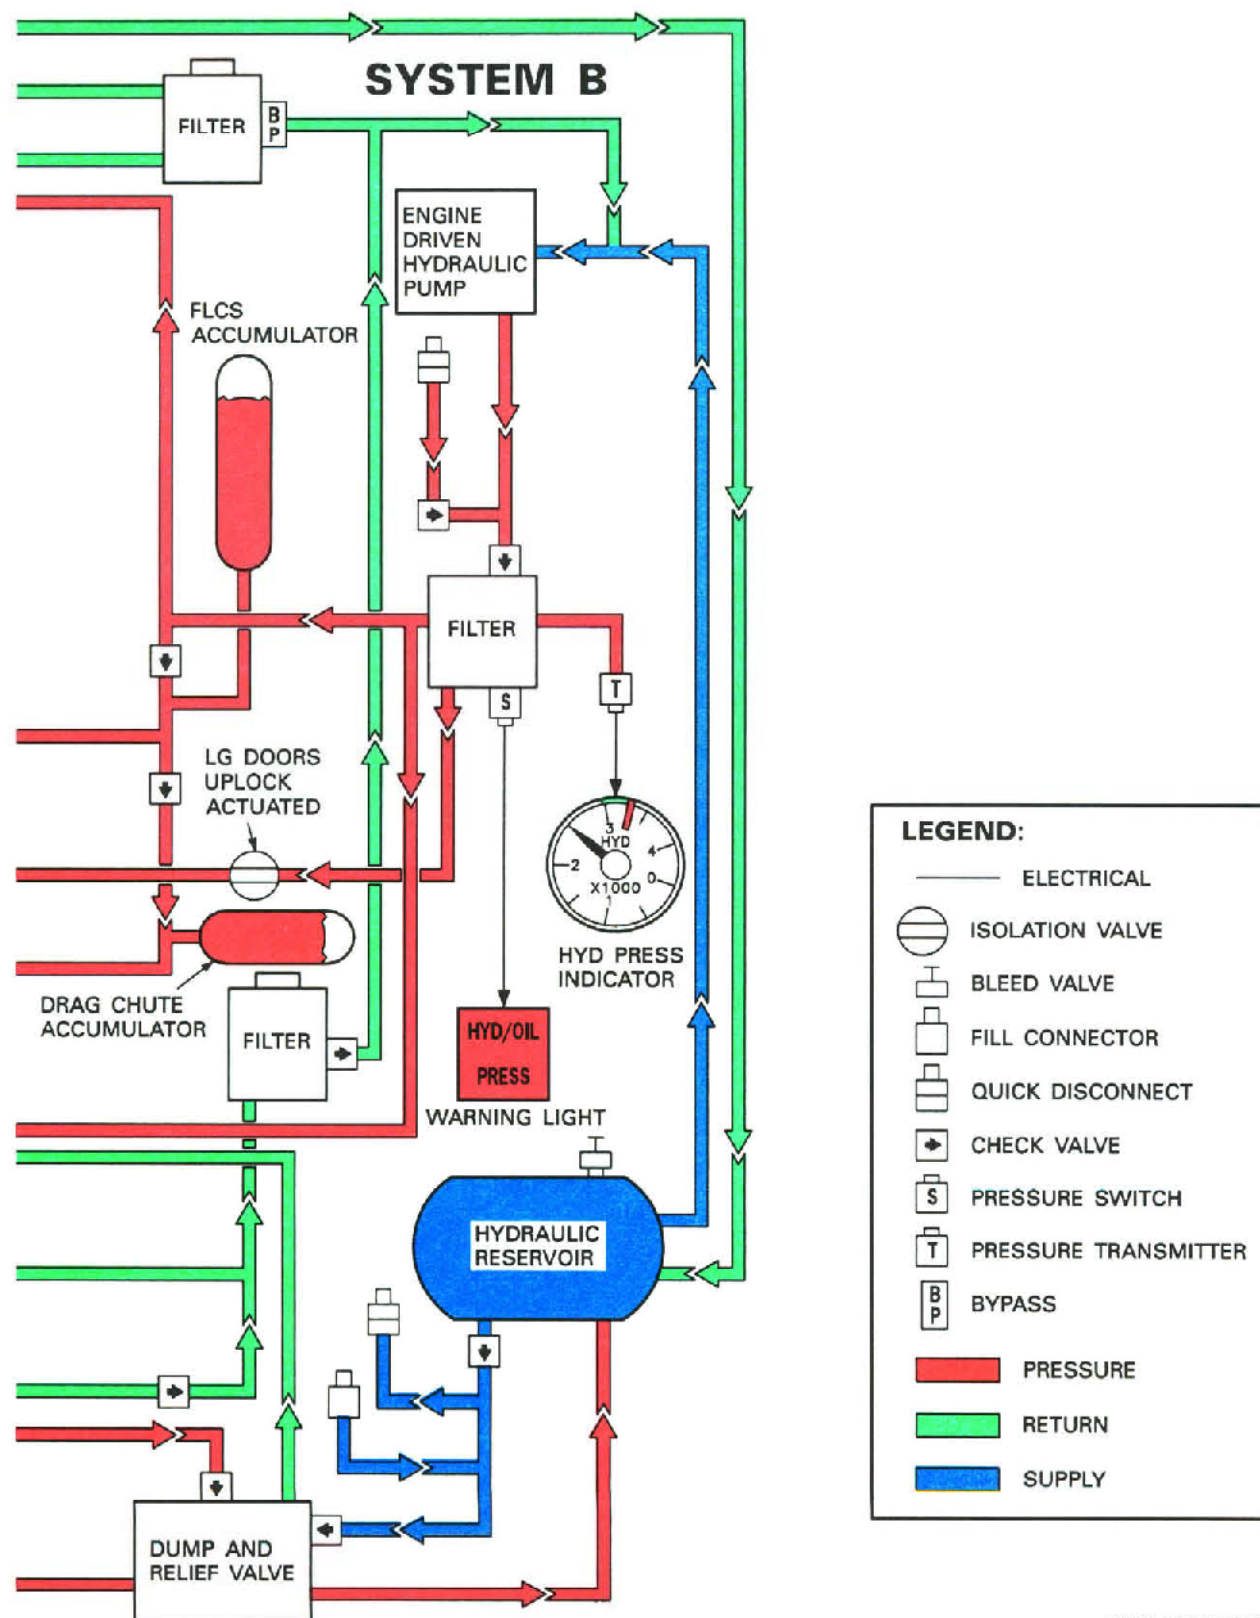

GR1F-16CJ-1-0037-2X37 ©

Figure 1-26. (Sheet 2)

HYD PRESS Indicators and Warning Light (Typical)

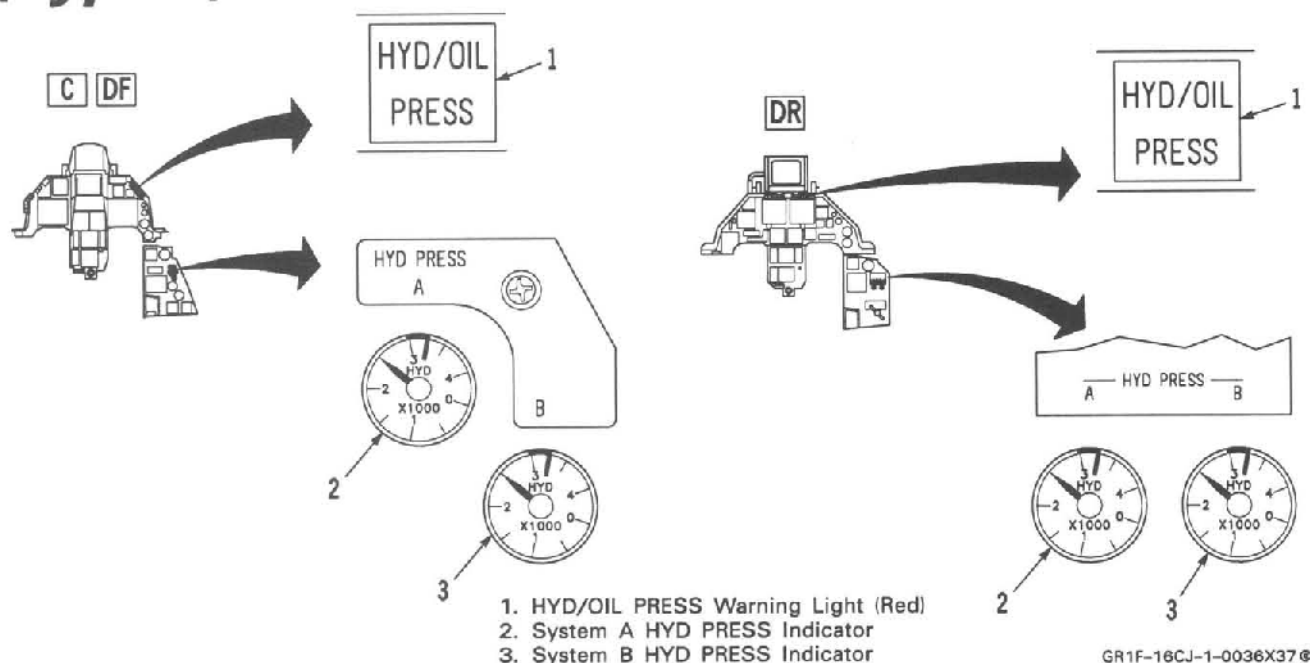


Figure 1-27.

EPU FUEL Quantity Indicator **C** **DF**

Refer to figure 1-3. The EPU FUEL quantity indicator, located on the right auxiliary console, is graduated 0-100 and indicates the percent of hydrazine remaining. The indicator is powered by battery bus No. 2.

Hydrazine Leak Detector

The hydrazine leak detector is a silicone base, mustard yellow disc visible through access door 3208. The viewing area is black on one half to provide contrast with the mustard yellow disc. The mustard yellow turns purple/black in the presence of hydrazine and/or its vapors, indicating a leak in the EPU and/or fuel tank system.

EPU Fired Indicator

The EPU fired indicator is located next to the EPU ground safety switch on the right side of the engine inlet. Normally, the indicator displays a gray and

black disc. If the EPU has been activated, the indicator displays six equally spaced black and white triangles.

EPU OPERATION

The EPU is designed to operate automatically for main and standby generator failure, dual hydraulic system failure, PTO shaft or ADG failure, and engine flameout or if the engine is shut down in flight. The EPU can also be activated manually. After receiving any start command, the EPU requires approximately 2 seconds to come up to speed.

EPU startup may not be audible. Once operating, however, the EPU may be heard but does not sound the same as during the EPU ground check. A lack of sound during EPU startup does not indicate lack of EPU operation which must be confirmed by monitoring the EPU run light. EPU rpm is controlled by three speed controls. The primary and secondary speed controls are based on EPU rpm. The tertiary speed control is based on EPU PMG frequency.

Emergency Power Unit Schematic (Typical)

NOTE:

Shown in augment mode with main and standby generators failed.


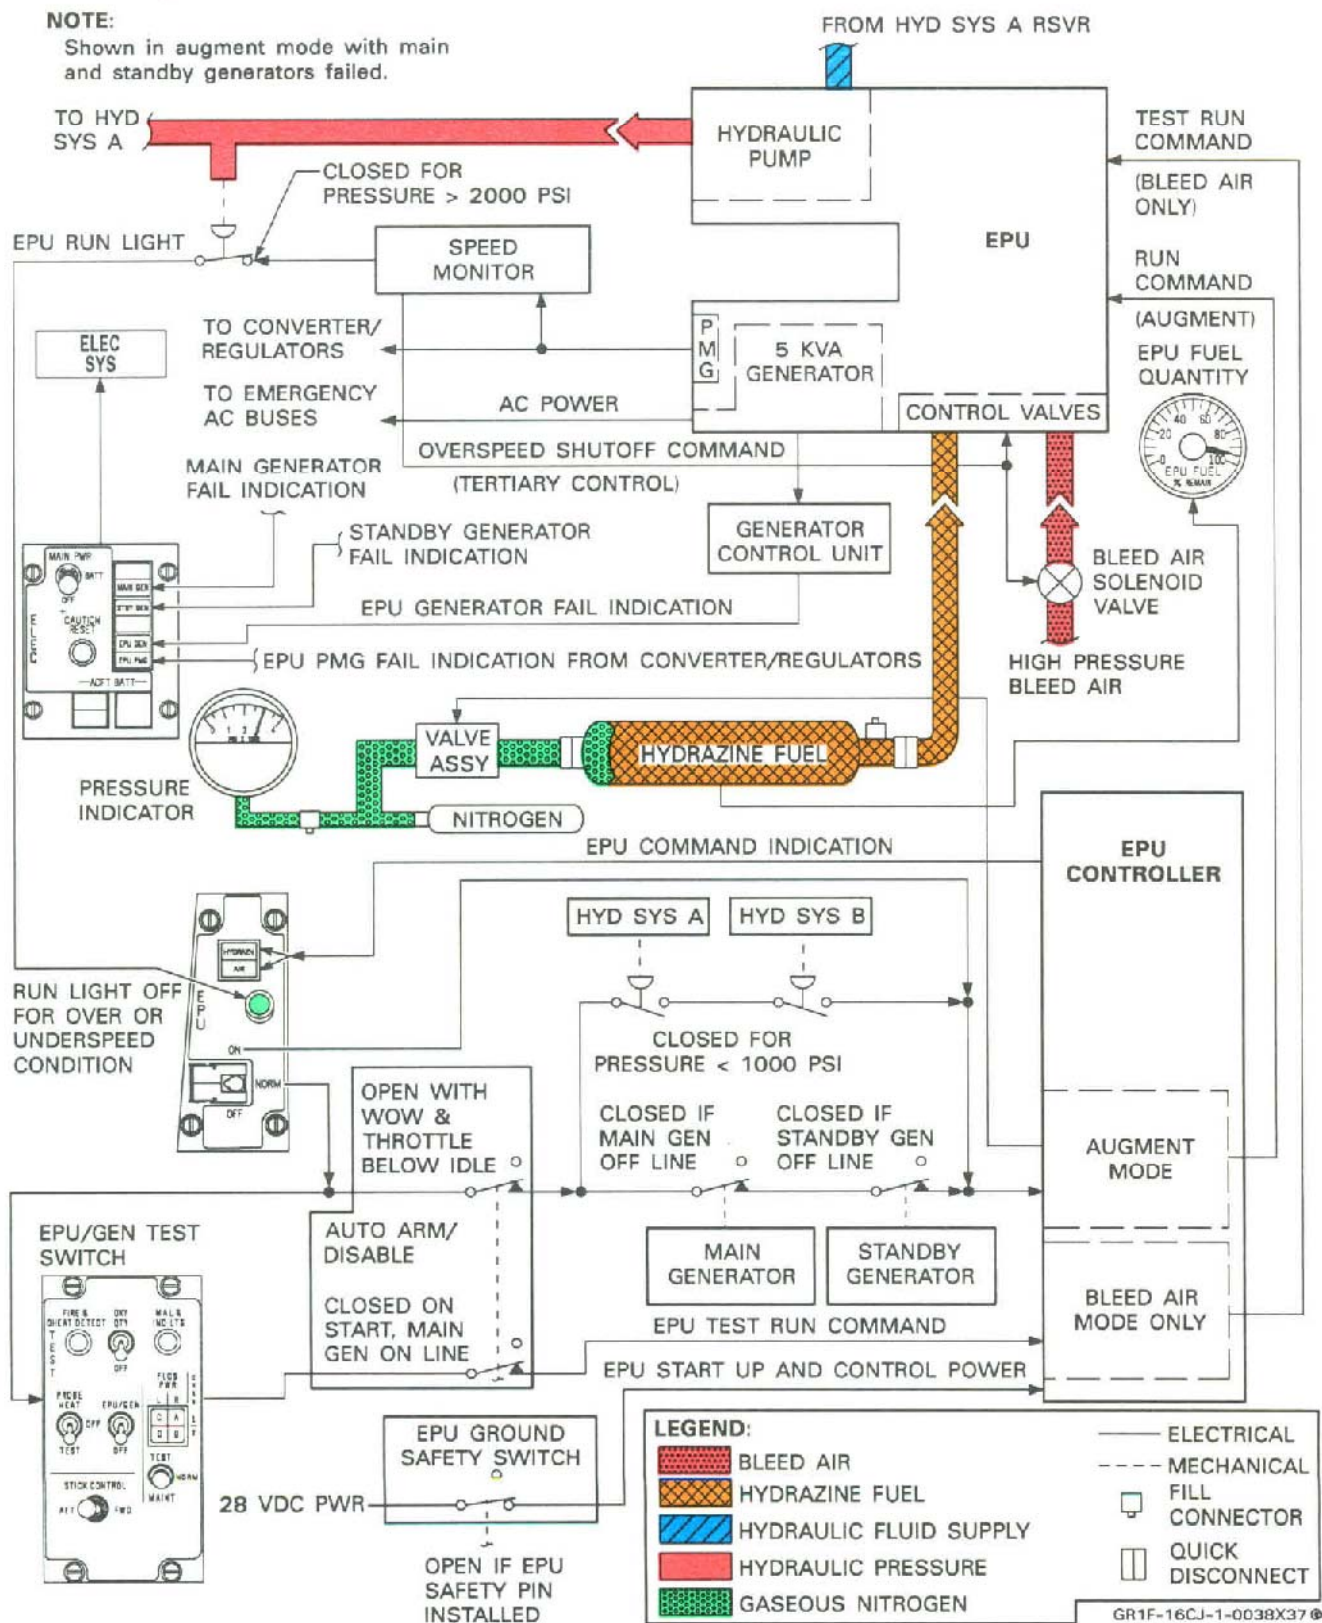


Figure 1-28.

EPU Control Panel

C DF (Typical)

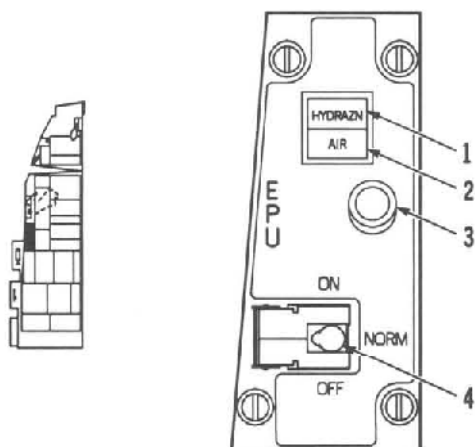

1. HYDRAZN Light (Amber)
2. AIR Light (Amber)
3. EPU Run Light (Green)
4. EPU Switch

GR1F-16CJ-1-0039X37

Figure 1-29.

When the EPU is operating, engine thrust settings should be maintained to prevent using hydrazine. This normally requires a minimum of 82-90 percent rpm depending on pressure altitude.

If the engine fails, hydrazine alone is used to power the EPU. With hydrazine only, operating time of the system is approximately 10 minutes under normal load requirements. Increased flight control movement reduces this operating time. When the EPU is the sole source of hydraulic power, EPU loss results in loss of aircraft control.

LANDING GEAR (LG) SYSTEM

The LG system is normally operated by hydraulic system B. The NLG is extended and retracted by hydraulic pressure. The MLG's are retracted hydraulically but are extended by free-fall assisted by airloads. All the LG doors are hydraulically activated with electrical sequencing during retraction and mechanical sequencing during extension. If hydraulic system B fails, the LG may be extended pneumatically.

MAIN LANDING GEAR (MLG)

The two MLG's are independent of each other and retract forward with a mechanical wheel twist into two separate wheel wells. Each MLG wheel is equipped with three fusible (thermal pressure relief) plugs.

NOSE LANDING GEAR (NLG)

The NLG retracts aft with a 90-degree mechanical wheel twist into the wheel well. A torque arm quick-disconnect is provided so that the nosewheel can be turned beyond the steerable range for towing.

LANDING GEAR CONTROLS AND INDICATORS

Refer to figure 1-30. The LG control panel is located on the left auxiliary console.


Landing Gear Handle

The LG handle, located on the LG control panel has a wheel-shaped grip. Movement of the handle operates electrical switches (powered by emergency dc bus No. 2) to command LG retraction or extension. A warning light in the LG handle, powered by battery bus No. 2 illuminates when the LG and doors are in transit or have failed to lock in the commanded position. The warning light also illuminates when all LG's are not down and locked, airspeed is less than 190 knots, altitude is less than 10,000 feet, and rate of descent is greater than 250 feet per minute. The handle is locked in the DN position when the aircraft is on the ground (weight on wheels). In flight, a signal from the left MLG WOW switch automatically activates a solenoid which unlocks the handle, allowing movement to the UP position. The handle is locked in the UP position to prevent LG extension during high g maneuvers.

Landing Gear Handle Down Permission Button

The LG handle down permission button, located on the LG handle, unlocks the handle electrically to permit movement to the DN position. The button energizes an electrical solenoid which releases the spring-actuated handle lock. The button must be depressed before downward force is applied to the LG handle. The electrical solenoid may not unlock the handle while any appreciable downward force is applied.

Landing Gear Control Panel (Typical)

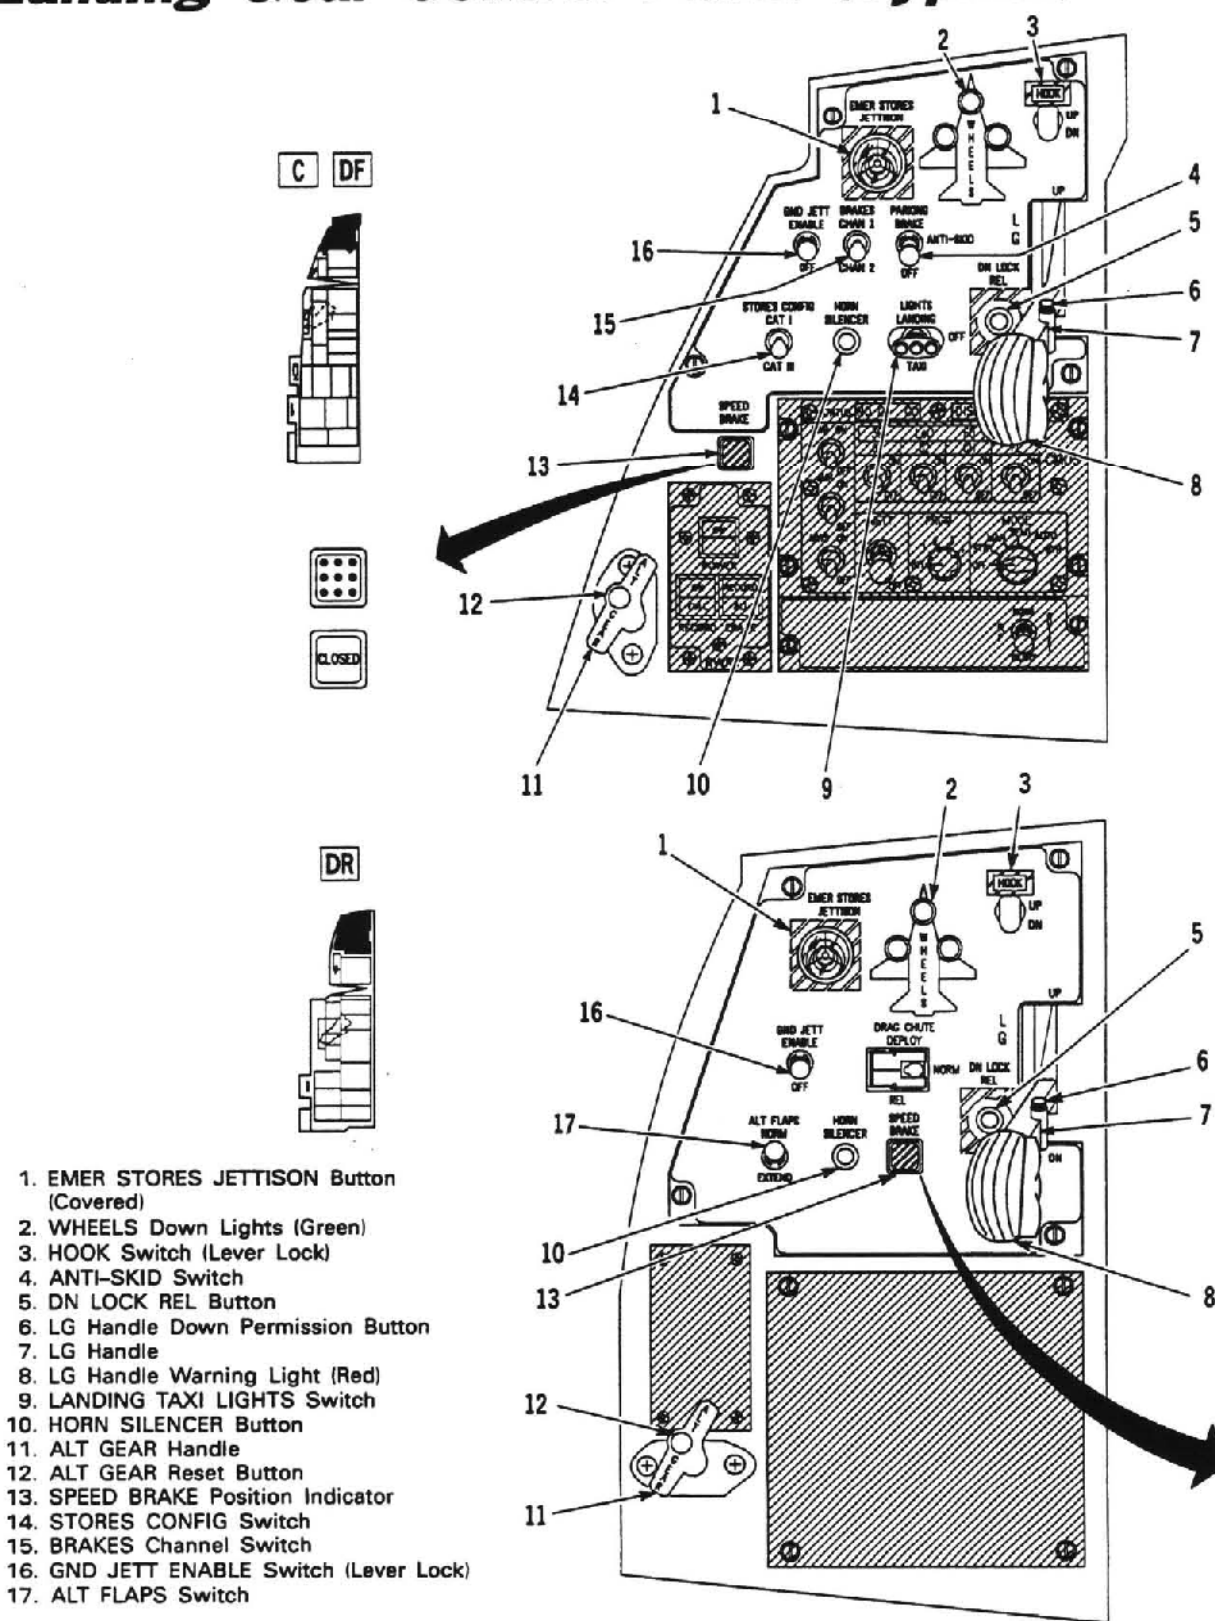

GR1F-16CJ-1-0040X37

Figure 1-30.

DN LOCK REL Button

Ⓒ ⒹF The DN LOCK REL button, located on the LG control panel, when depressed, mechanically unlocks the spring-actuated handle lock if the electrical solenoid should fail or not be powered. It overrides all electrical LG control signals. Depressing this button and raising the LG handle on the ground retracts the LG. The downlock release button may not unlock the LG handle while any appreciable downward force is applied. ⒹR For DN LOCK REL button differences, refer to F-16D AIRCRAFT, this section.

ALT GEAR Handle

The ALT GEAR handle, located just outboard of and below the LG control panel, is used to extend the LG if normal extension is not possible. Pulling the ALT GEAR handle supplies pneumatic pressure to open all LG doors, extend the NLG, and shut off the LG selector hydraulic valve. The LG/hook emergency pneumatic bottle is also used to lower the hook and contains sufficient pneumatic pressure for one LG extension and to hold the hook down. The bottle cannot be recharged in flight. Since pneumatic pressure is reduced by expansion as the actuators extend, less than the normal extending force is available.

An LG reset button, located on the ALT GEAR handle, provides a means of retracting the LG after an alternate extension if system B hydraulic pressure is available.

LG Warning Horn

The LG warning horn is an intermittent fixed volume signal which sounds in the headset when the NLG or MLG is not down and locked and all the following conditions exist:

- Airspeed is below 190 knots.
- Pressure altitude is less than 10,000 feet.
- Rate of descent is greater than 250 fpm.

HORN SILENCER Button

The HORN SILENCER button is located on the LG control panel. Depressing the button silences the LG warning horn. If the warning condition is eliminated, the horn resets. If it is not eliminated, subsequent LG audio warnings do not occur.

TO/LDG CONFIG Warning Light

The TO/LDG CONFIG warning light, located on the right glareshield, illuminates in flight whenever pressure altitude is less than 10,000 feet, airspeed is less than 190 knots, rate of descent is greater than 250 fpm, and either of the following conditions exists:

- TEF's not full down.
- NLG or either MLG not down and locked (accompanied by LG warning horn).

The TO/LDG CONFIG warning light illuminates on the ground if TEF's are not full down.

With TEF's full down, rapid reversals of roll command inputs may cause the TO/LDG CONFIG warning light to momentarily illuminate if the altitude, airspeed, and rate of descent conditions outlined above are met or WOW.

WHEELS Down Lights

The three green WHEELS down lights, located on the LG control panel, are arranged on the silhouette of the aircraft. When any LG is down, its respective light is on. A safe up and locked LG condition is indicated when all three of the lights and the LG handle warning light are off. The lights are powered by battery bus No. 1 (to energize downlock relays) and emergency dc bus No. 1 (to illuminate lights).

Landing Gear Weight-on-Wheels (WOW) Switches

The LG WOW switches, located on both MLG's and on the NLG, operate as a function of LG strut extension to allow or terminate various system functions.

Refer to figure 1-31 for a list of systems affected by the WOW switches and symptoms of WOW switch failure.

LG WOW Switch

RIGHT MLG — SYSTEMS

Aircraft Battery	FCR
Air Data Probe	FLCC
Altimeter (ELECT)	LG Warning
AOA Probes	Pitot Probe
Brakes/Antiskid	Probe Heat Monitor
ECS	SMS
Engine Controls	☐ VMS
EPU	
Fails to Ground Position in Flight	Fails to In-Flight Position on Ground
FCR does not transmit Stores cannot be emergency jettisoned with LG down unless GND JETT ENABLE switch is in ENABLE ☐ VMS is inoperative Brakes can be applied before touchdown if toe brakes are depressed ANTI-SKID switch holds in PARKING BRAKE with throttle in OFF to IDLE range With simultaneous failure of left and right MLG WOW switches, ACFT BATT FAIL light indicates aircraft battery failure (voltage 20V or less) or battery charger failure ☐ LG and low speed warning tones are inoperative Probe heat monitor is inoperative unless TEST or PROBE HEAT is selected	FCR transmits Stores can be emergency jettisoned with GND JETT ENABLE switch in OFF ☐ VMS is operative unless INHIBIT is selected With simultaneous failure of left and right MLG WOW switches and ANTI-SKID switch in ANTI-SKID, toe brakes are inoperative when groundspeed is less than 20 knots With simultaneous failure of left and right MLG WOW switches, ANTI-SKID switch must be held in PARKING BRAKE to operate parking brake ACFT BATT FAIL light indicates aircraft battery failure only EPU is commanded on during engine shutdown; operation cannot be terminated with the EPU switch Probe heat monitor is operative All probe heaters except total temperature are on FLCS BIT cannot be initiated

Figure 1-31. (Sheet 1)

LG WOW Switch

LEFT MLG — SYSTEMS

Aircraft Battery AOA Probe (right) Brakes/Antiskid Chaff/Flare Dispenser EPU FLCC	Ground Test Panel (fuel pump lights) JFS Ground Cutout LG Handle LG Warning Total Temperature Probe ☐ VMS
Fails to Ground Position in Flight	Fails to In-Flight Position on Ground
Chaff/flare dispenser is inoperative JFS shuts down automatically during engine start LG UP position cannot be selected unless DN LOCK REL button is depressed TO/LDG CONFIG warning light is on with TEF's not down Total temperature probe heater is inoperative ☐ VMS is inoperative Brakes can be applied before touchdown if toe brakes are depressed ANTI-SKID switch holds in PARKING BRAKE with throttle in OFF to IDLE range With simultaneous failure of right and left MLG WOW switches, ACFT BATT FAIL light indicates aircraft battery failure (voltage 20V or less) or battery charger failure ☐ LG and low speed warning tones are inoperative	Chaff/flare dispenser is operative AOA probe heater (right) is on JFS does not shut down automatically during engine start LG UP position can be selected without DN LOCK REL button depressed TO/LDG CONFIG warning light is off with TEF's up Total temperature probe heater is on ☐ VMS is operative unless INHIBIT is selected With simultaneous failure of right and left MLG WOW switches and ANTI-SKID switch in ANTI-SKID, toe brakes are inoperative when groundspeed is less than 20 knots With simultaneous failure of right and left MLG WOW switches, ANTI-SKID switch must be held in PARKING BRAKE to operate parking brake Fuel pump lights on external ground test panel are inoperative ACFT BATT FAIL light indicates aircraft battery failure only EPU is commanded on during engine shutdown; operation cannot be terminated with the EPU switch FLCS BIT cannot be initiated

Figure 1-31. (Sheet 2)

LG WOW Switch

NLG — SYSTEMS

Air Data Probe AOA Probe (Left) ☐ AR FLCP		FLCS Power ☒ NWS Pitot Probe Speedbrakes	
Fails to Ground Position in Flight		Fails to In-Flight Position on Ground	
AOA indicator displays zero degrees ☒ A/R DISC button is inoperative NWS can be engaged and follows rudder inputs with NLG down Speedbrakes are not limited to 43 degrees with right MLG down and locked ACFT BATT TO FLCS light indicates aircraft battery is supplying power to one or more FLCS branches FLCS PMG light indicates FLCS PMG power is not available at one or more FLCS branches		Air data, pitot, and left AOA probe heaters are on ☒ A/R DISC button is operative FLCS fails BIT NWS is inoperative Speedbrakes do not remain open more than 43 degrees ACFT BATT TO FLCS light indicates aircraft battery is supplying power to one or more FLCS branches (bus voltage 25 vdc or less) FLCS PMG light indicates the FLCS PMG is not supplying power to any FLCS branches	

Figure 1-31. (Sheet 3)

LANDING GEAR OPERATION

Movement of the LG handle to the UP position causes the following events:

- LG handle warning light illuminates.
- LG unlocks and retracts.
- Three WHEELS down lights go off.
- MLG wheel spin is stopped.
- LG doors close and lock.
- LG handle warning light goes off.
- Hydraulic pressure removed from LG.
- FLCS switches to cruise gains.
- TEF's retract to streamlined position.
- Electrical power is removed from brake channel 1.

Movement of the LG handle to the DN position causes the following events:

- LG handle warning light illuminates.
- LG doors and LG unlock, extend, and lock into place.
- Three WHEELS down lights illuminate.
- LG handle warning light goes off.
- TEF's extend.
- FLCS switches to takeoff and landing gains.
- Speedbrakes close to 43 degrees if not overridden.
- Electrical power is supplied to brake channel 1.

NOSEWHEEL STEERING (NWS) SYSTEM

The NWS is electrically controlled using dc bus No. 1 power and is hydraulically operated using system B pressure. Steering signals are provided through the rudder pedals. Should NWS be engaged with the rudder pedals displaced, the nosewheel drives to the rudder pedal commanded position. NWS is limited to

32 degrees in each direction; however, turn radius can be reduced by using inside brake. NWS is automatically disengaged when the NLG strut is extended. NWS is not available following an alternate LG extension and may not be available anytime the nosewheel WHEELS down light is not illuminated.

NWS CONTROLS AND INDICATORS

Refer to figure 1-3.

NWS A/R DISC MSL STEP Button

The NWS A/R DISC MSL STEP button, located on the outboard side of the stick, is used to engage or disengage NWS when the aircraft is on the ground. Once depressed, NWS is engaged and the button may be released. If the button is held depressed, continuous NWS is provided.

NWS Light

The NWS light, the center element of the AR/NWS status indicator located on the top of the glareshield, illuminates green when NWS is engaged. NWS does not operate even though the NWS light is illuminated when the NWS FAIL caution light is on or when system B hydraulic pressure is unavailable. On the ground, NWS continues to operate with the AIR REFUEL switch in OPEN even though the NWS light is off.

NWS FAIL Caution Light

The NWS FAIL caution light, located on the caution light panel, illuminates when a failure in the NWS system has caused electrical power to be switched off.

NOSEWHEEL STEERING (NWS) SYSTEM ☐

Either cockpit can control the NWS. Control is accomplished by means of an NWS control button/indicator located in both cockpits just aft of the stick. Depressing the button/indicator transfers control of the NWS; the indicator illuminates green in the cockpit which has control. Control then remains in that cockpit even if the engine is shut down and/or electrical power is removed. NWS can only be engaged and operated from the cockpit which has control. When NWS is selected, the NWS light illuminates green in both cockpits. The aft stick

paddle switch allows immediate override of the forward cockpit if the STICK CONTROL switch on the TEST switch panel is in AFT; the NWS control button/indicator in the aft cockpit and OVRD light illuminates. The front cockpit paddle switch cannot override the aft cockpit regardless of the position of the STICK CONTROL switch. With the AIR REFUEL switch in OPEN, NWS can be engaged or disengaged from either cockpit without using the paddle switch regardless of which cockpit has control.

WHEEL BRAKE SYSTEM

Each MLG wheel is equipped with a hydraulically powered multiple disc brake. The brakes are electrically controlled by conventional toe brake pedals. The amount of braking gradually increases as pedal pressure is applied. A parking brake is also provided. An antiskid system protects against blown tires and is only available when using toe brakes.


☐ Brakes may be applied singly or simultaneously from the forward or rear cockpits. The brake signals from both cockpits are additive so that the total signal to the brakes is the sum of the pedal forces from both cockpits.

Brake hydraulic power is supplied by system B. If system B fails or the engine is operating at less than 12 percent rpm, the toe brakes and parking brake are available until the brake/JFS accumulators deplete. Continuous use of the toe brakes, even with the parking brake set, depletes accumulator fluid and causes loss of all braking capability after approximately 75 seconds (brake/JFS accumulators initially fully charged). When holding the aircraft stationary, use of the parking brake is preferred since brake/JFS accumulator fluid is not depleted.

TOE BRAKE SYSTEM

Refer to figures 1-32 and 1-33. The toe brakes use electrical power from the FLCC and CHAN 1 and CHAN 2 dc power sources. The brake pedals require FLCC power to operate. The pedal signals are supplied to the brake control box which, in turn, uses both CHAN 1 and CHAN 2 dc power sources to operate valves for controlling hydraulic pressure to the brakes. CHAN 1 and CHAN 2 are powered by battery buses No. 1 and No. 2, respectively.

Toe Brake System

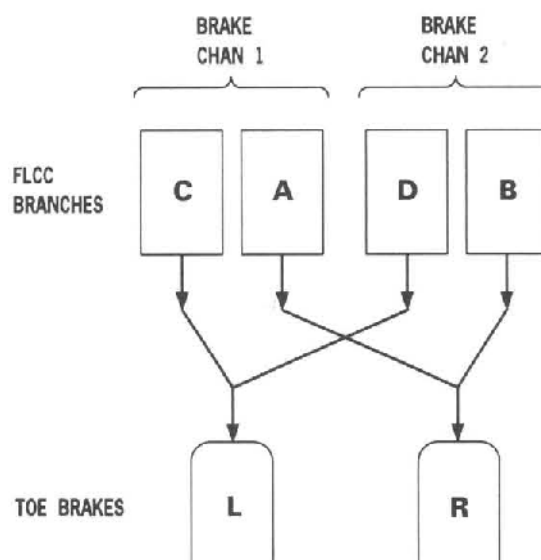

1F-16X-1-0026X®


Figure 1-32.

The electrical power sources are grouped to provide two redundant channels. Channel 1 uses FLCC branches A and C and CHAN 1 dc power. Channel 2 uses FLCC branches B and D and CHAN 2 dc power. If one FLCC branch fails, one toe brake in either CHAN 1 or CHAN 2 is inoperative.

An inoperable FLCC branch may illuminate the FLCS FAULT caution light and generate a BRK PWR DEGR PFL. FLCS PWR lights on the TEST switch panel should be used to determine the proper BRAKES channel switch position.


After engine shutdown (main and standby generators and FLCS PMG not operating), the brakes remain powered as long as the MAIN PWR switch is not moved out of MAIN PWR. If the MAIN PWR switch is moved to BATT, the FLCS relays open and the FLCC is no longer powered by the aircraft battery. Therefore, the toe brakes are inoperative.

Wheel Brake Schematic (Typical)

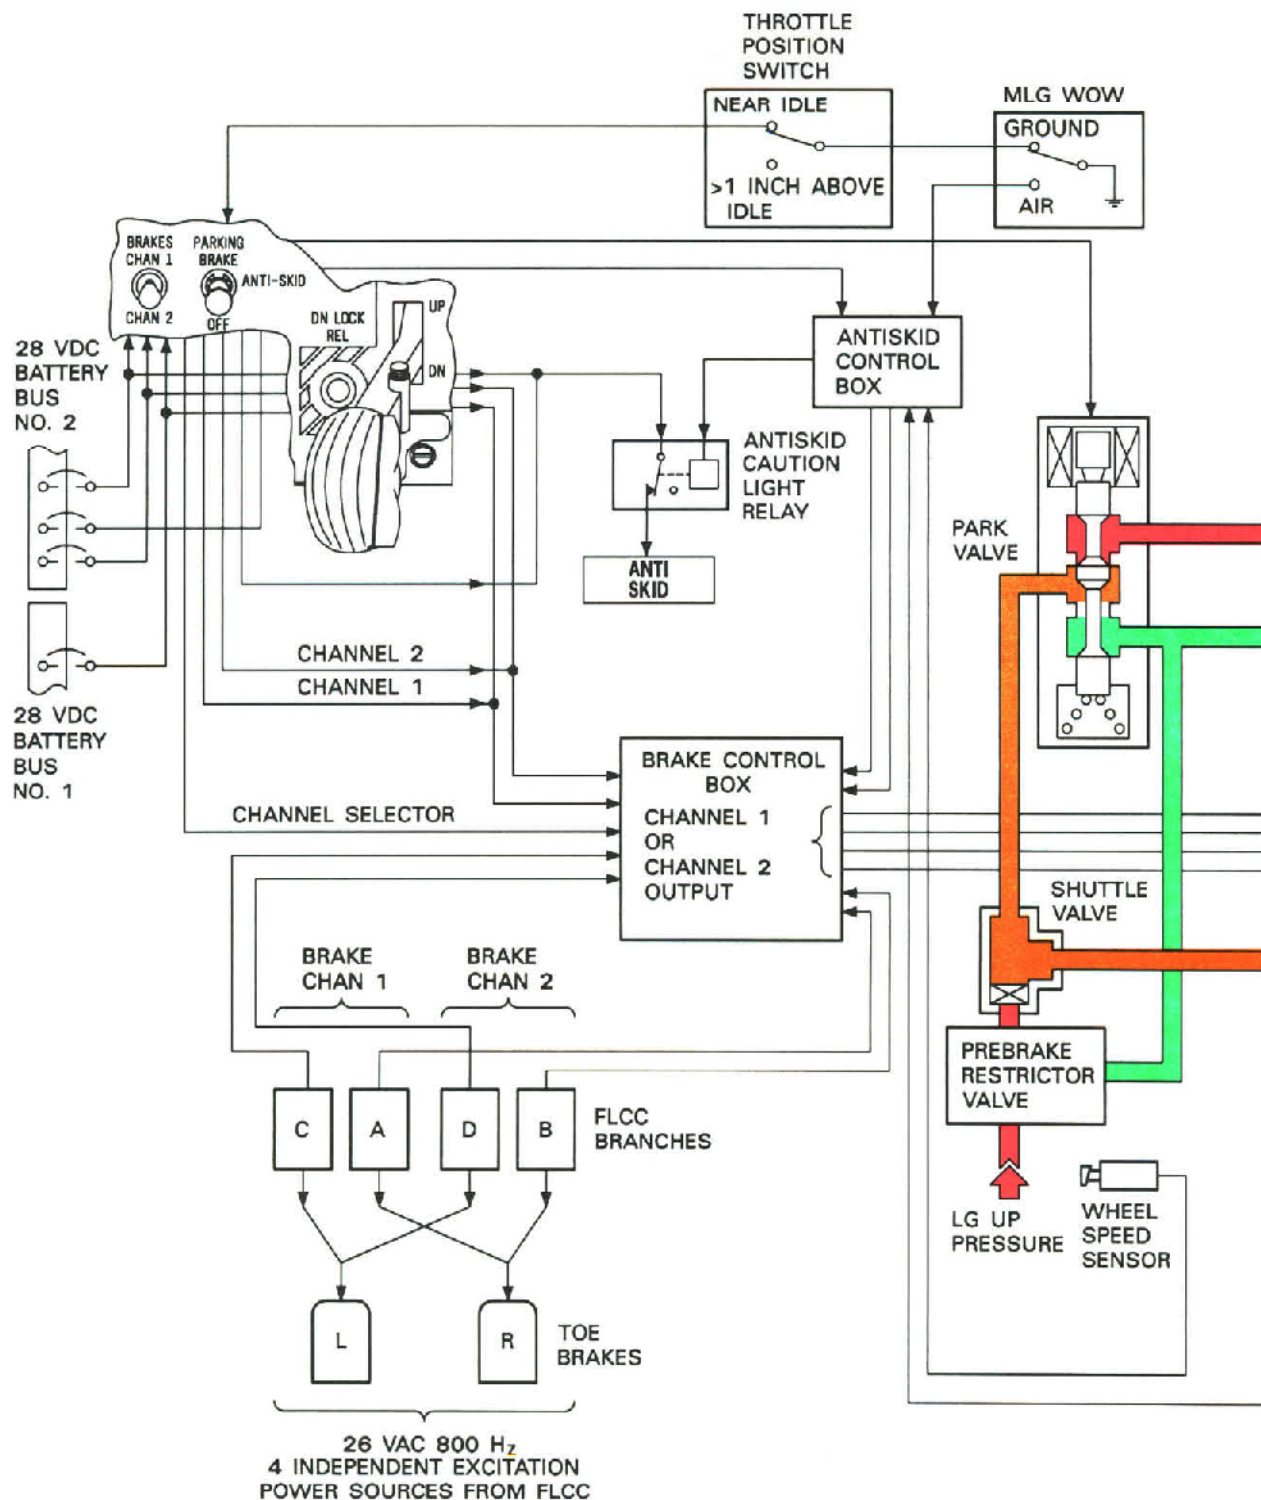

GR1F-16CJ-1-0042-1X37 ©

Figure 1-33. (Sheet 1)

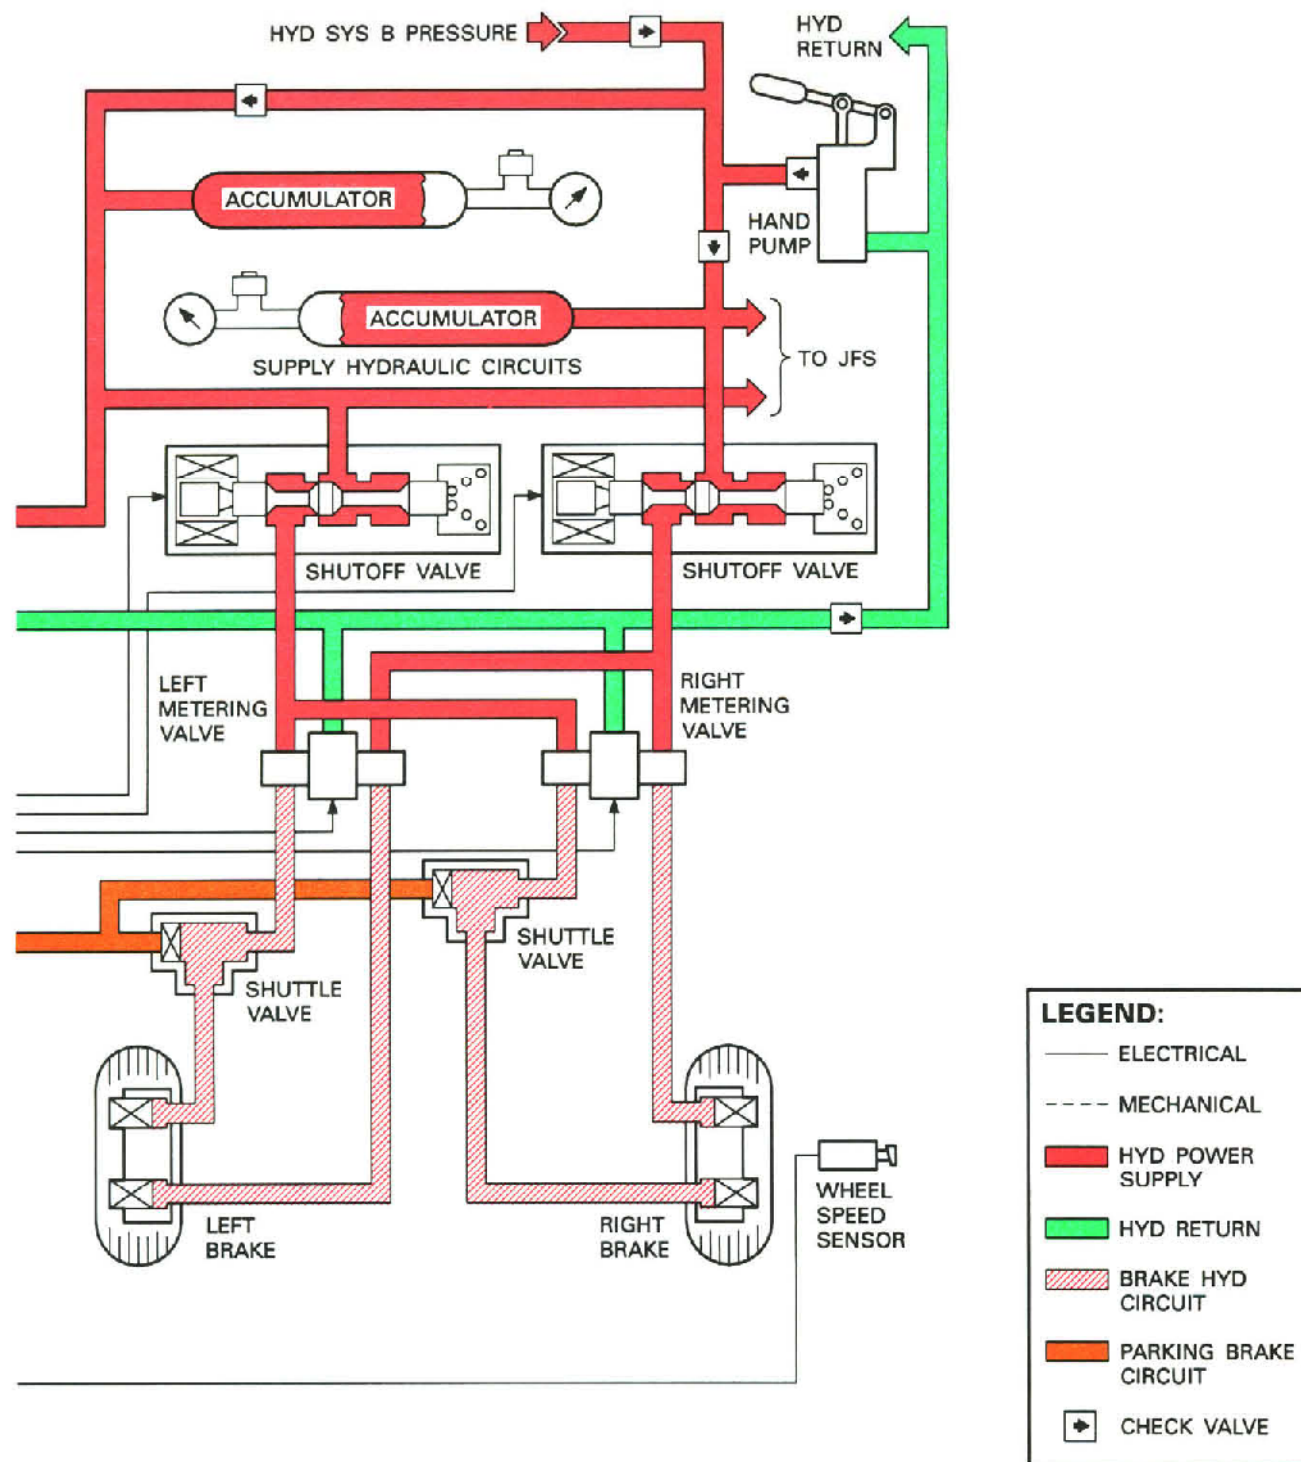

GR1F-16CJ-1-0042-2X37 ©

Figure 1-33. (Sheet 2)

Regardless of which channel is selected, hydraulic pressure to three of the six pistons in each brake is controlled by electrical power from one dc power source and pressure to the other three pistons of each brake is controlled by electrical power from another dc power source. A loss of one dc power source when CHAN 1 is selected results in degraded brake operation (only one-half of the pistons are powered and significantly more brake pedal force than normal is required to stop). Due to redundancy features, selecting CHAN 2 may restore full braking. If all dc power sources fail or if all FLCC branches are off, the toe brakes are totally inoperative.

Channels 1 and 2 use separate redundant circuit elements for controlling the brakes and operate the same except that when CHAN 1 is selected, both dc power sources are switched off when the LG handle is up. With CHAN 1 selected, the brakes only operate with the LG handle down; with CHAN 2 selected, the brakes are operable with the LG handle either up or down. If the LG handle is stuck in the UP position, CHAN 2 must be selected to achieve braking.

SPIN DOWN BRAKING SYSTEM

The spin down braking system provides hydraulic brake pressure to stop MLG wheel spin during LG retraction. The hydraulic pressure is relieved when the LG is up and locked.

BRAKES CHANNEL SWITCH

The BRAKES channel switch, located on the LG control panel, has positions of CHAN 1 and CHAN 2 and allows wheel brake system switching. CHAN 1 is the normal position.

PARKING BRAKE

The parking brake is activated by the ANTI-SKID switch located on the LG control panel, and supplies full, unmetered pressure to three of the six pistons in each brake. The parking brake holds the aircraft stationary without the use of toe brakes. It can also be used for emergency braking if the toe brakes are inoperative. The parking brake is powered by battery bus No. 2 and system B hydraulics or one brake/JFS accumulator (the brake/JFS accumulator which is not used for START 1).

ANTISKID SYSTEM

The antiskid system is available in either brake channel anytime the toe brakes are powered.

Functions are:

- Touchdown skid control – Prevents brake application prior to wheel spinup even if brake pedals are fully depressed.
- Proportional skid control – Prevents skidding due to overbraking at 5 knots groundspeed or greater.
- Locked wheel skid control – Backs up the proportional skid control and operates at 20 knots groundspeed and greater.
- Antiskid failure detection – Detects an antiskid system malfunction.

If a failure is detected, the ANTI SKID caution light illuminates and the brake system automatically switches to pulsating pressure (constant frequency pulsating on-off pressure). In this mode, braking effectiveness is reduced approximately 50 percent; however, in most cases, braking effectiveness is as good as can be obtained with ANTI-SKID switch in OFF while avoiding wheel lockup and its associated risk of control difficulty. Short field landing distances are increased approximately 60 percent for dry runway and 25 percent for wet runway from those normally computed. The amount of pulsating braking is dependent on the toe pressure applied. Pulsating braking continues until the ANTI-SKID switch is placed to OFF. At that time, the ANTI SKID caution light remains on and the brake system reverts to manual control. The brakes then can be locked by applying too much pedal pressure, which may result in blown tires.

The antiskid system does not provide skid or locked wheel protection if MLG wheels are not spinning due to hydroplaning. If WOW occurs prior to spinup of at least one MLG wheel, wheel brakes become operative without antiskid protection.

Antiskid protection and failure detection are intentionally diminished as speed decreases below 20 knots to allow a complete stop without continuous brake release or an ANTI SKID caution light. Consequently, maintaining maximum toe pressure while the aircraft comes to a complete stop may cause wheel lockup during the last 5-10 feet before stopping with resultant tire flat spotting. A dragging brake not correctly releasing in response to antiskid signals may also cause wheel lockup without an illuminated ANTI SKID caution light at speeds below 20 knots. Avoid maximum braking at speeds below 20 knots whenever possible to prevent tire flat spotting and possible blowout.

ANTI-SKID Switch C DF

The ANTI-SKID switch, located on the LG control panel, is not lever-locked in the ANTI-SKID position and can be bumped to OFF.

Functions are:

- **PARKING BRAKE** – Full unmetered brake pressure is applied with the throttle in the OFF to IDLE range and WOW. Advancing the throttle more than 1 inch beyond IDLE automatically returns the switch to ANTI-SKID which releases the parking brakes.
- **ANTI-SKID** – Antiskid protection is available.
- **OFF** – Antiskid and parking brake features are deactivated.

ANTI SKID Caution Light

The ANTI SKID caution light, located on the caution light panel, illuminates when a malfunction occurs with the ANTI-SKID switch in ANTI-SKID. It also illuminates when the LG handle is down and the switch is in OFF.

SPEEDBRAKE SYSTEM

The speedbrake system consists of two pairs of clamshell surfaces located on each side of the engine nozzle and inboard of the horizontal tail and is powered by hydraulic system A. The speedbrakes open to 60 degrees with the right MLG not down and locked. With the right MLG down and locked, speedbrake opening is limited to 43 degrees to prevent the lower surfaces from striking the runway during landing. This limit can be overridden by holding the SPD BRK switch in the open (aft) position. When the NLG strut compresses on landing, the speedbrakes can be fully opened and remain fully open without holding the SPD BRK switch.

SPD BRK Switch

C DF The SPD BRK switch, located on the throttle, is a thumb-activated, three-position slide switch. The open (aft) position is spring-loaded to off (center) and allows the speedbrakes to be incrementally opened. The closed (forward) position has a detent, allowing a single motion to close the speedbrakes. To prevent possible creeping, the switch should be left in the closed position. DR For SPD BRK switch differences, refer to F-16D AIRCRAFT, this section.

D The speedbrake switches are connected in parallel and function so that either can override the other by holding in the open position. If one switch is in the closed position, the speedbrakes close when the other is released from the open position.

SPEED BRAKE Position Indicator

A three-position SPEED BRAKE indicator is located on the LG control panel.

Positions are:

- **CLOSED** – Both speedbrakes closed.
- **Speedbrake symbol** – Speedbrakes not closed.
- **Diagonals** – Electrical power removed from the indicator. Diagonals also appear momentarily during switching.

DRAG CHUTE SYSTEM

A drag chute is provided to minimize stopping distance. Drag chute deployment is obtained when hydraulic system B pressure is routed to the drag chute actuator by placing the DRAG CHUTE switch to DEPLOY. Drag chute accumulator pressure is available in case of hydraulic system B failure. Extension of the actuator closes a set of jaws onto the parachute D-ring and pulls the ripcord that releases a spring-loaded pilot chute. The pilot chute functions to pull the main canopy from deployment bag located in an aerodynamic fairing below the rudder. Deployment below 90 knots may result in improper deployment and damage to the drag chute.

The drag chute system has safety provisions for accidental deployments, both commanded and uncommanded:

- Above 190 knots, the mechanical fuse section on the D-ring fails and releases the chute.
- A deployed drag chute (or some residue thereof) resulting from placing the DRAG CHUTE switch to DEPLOY can be released by moving the switch to **[C] [DF]** NORM/REL or **[DR]** REL at any airspeed.
- If the drag chute is deployed uncommanded (i.e., ripcord failure) and airspeed is above 60 knots, the D-ring pulls out of the jaw mechanism.

DRAG CHUTE Switch

Refer to figure 1-34. **[C] [DF]** The DRAG CHUTE switch, located on the MISC panel, is a two-position guarded switch used to deploy and release the drag chute. The switch is powered by battery bus No. 1. **[DR]** For DRAG CHUTE switch differences, refer to F-16D AIRCRAFT, this section.

ARRESTMENT SYSTEM

The hook is electrically controlled and pneumatically operated. Pneumatic pressure is supplied by the LG/hook emergency pneumatic bottle which contains sufficient pressure to lower the LG and hook.

When extended, pneumatic pressure holds the hook on the runway. When subsequently retracted, the hook rises enough to allow the cable to drop off the hook or to be disengaged. The hook is spring-loaded partially up to allow taxiing over a cable. The hook must be raised manually to reset it to the stowed position.

HOOK Switch

The HOOK switch, located on the LG control panel, is lever-locked in the UP or DN position. Positioning the switch to DN causes the hook to extend. Returning the switch to UP partially retracts the hook, allowing for cable disengagement and for taxi over the cable. **[D]** Either HOOK switch may be used to extend the hook. Both switches must be positioned to UP to raise the hook.

HOOK Caution Light

The HOOK caution light, located on the caution light panel, illuminates anytime the hook is not up and locked.

WING FLAP SYSTEM

LEADING EDGE FLAPS (LEF'S)

The LEF's consist of a spanwise flap on each wing leading edge controlled as a function of mach number, AOA, and altitude by command signals from the FLCC.

An asymmetry sensing and braking mechanism prevents LEF asymmetry. If an asymmetry is sensed, the LEF's lock, FLCS LEF LOCK PFL is displayed, and the FLCS warning light illuminates.

The LEF's are automatically programmed when the LE FLAPS switch is in AUTO.

Exceptions are:

- When weight is on both MLG (the LEF's are 2 degrees up).
- When the throttle is at IDLE and MLG wheel speed is greater than 60 knots groundspeed (the LEF's are 2 degrees up).
- LEF asymmetry brakes are locked.
- When the FLCS is operating on standby gains. Refer to STANDBY GAINS, this section.


LE FLAPS Switch

The LE FLAPS switch is covered as a part of the FLT CONTROL panel.

FLCS LEF LOCK PFL

The FLCS LEF LOCK PFL is activated by malfunctions in the flap drive unit or flap commands. The FLCS LEF LOCK PFL is also activated if the LEF's are manually locked or the asymmetry brakes are activated. The FLCS warning light illuminates when the FLCS LEF LOCK PFL occurs.

Drag Chute Controls (Typical)

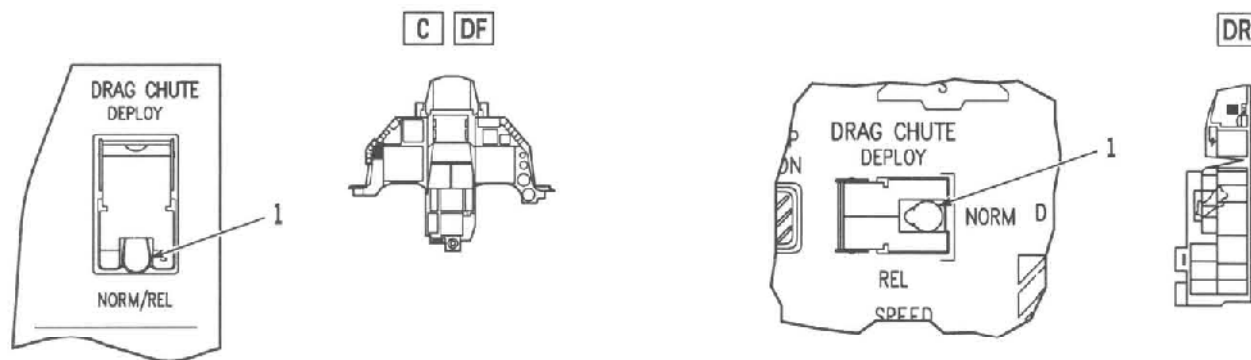

1. **C** **DF** DRAG CHUTE Switch
2. **DR** DRAG CHUTE Switch

NOTE:

DR For DRAG CHUTE switch, refer to F-16D AIRCRAFT, this section.

GR1F-16CJ-1-0043X37 ©

SWITCH POSITION	FUNCTION
NORM	Chute stowed
	Attachment jaws at midrange
DEPLOY	Hydraulic actuator extends
	Ripcord pulled to release spring-loaded pilot chute
	Attachment jaws close on D-ring
REL	Hydraulic actuator retracts for 2 seconds, releasing the D-ring from the attachment jaws and then returns to midrange

Figure 1-34.

TRAILING EDGE FLAPS (TEF'S) (FLAPERONS)

The flaperons are located on the wing trailing edge and function as ailerons and TEF's. The flaperons have a maximum command deflection of 20 degrees down and 23 degrees up. When acting as flaps, the deflection is downward; when acting as ailerons, the deflection is up or down, as commanded. Both functions are operable whenever the FLCS is powered. The TEF's are controlled as a function of the LG handle position, the ALT FLAPS switch, airspeed, and mach number. Positioning the LG handle to DN or the ALT FLAPS switch to EXTEND causes the TEF's to deflect downward. At all airspeeds below 240 knots, the TEF position is 20 degrees down. Above 240 knots, the TEF's reduce deflection as a function of airspeed until nearly/fully retracted at 370 knots.

ALT FLAPS Switch

The ALT FLAPS switch is located on the **[C]** **[DF]** FLCP, **[DR]** on the LG control panel. With the switch in NORM, the TEF's are controlled by the LG handle and airspeed. Placing the switch to EXTEND lowers the TEF's only, depending on airspeed. The ALT FLAPS switch does not affect the operation of the LEF's unless the FLCS is operating on standby gains. Refer to STANDBY GAINS, this section.

FLIGHT CONTROL SYSTEM (FLCS)

Refer to figure 1-35 for FLCS functional schematic and figure 1-36 to FLCS pitch, roll, and yaw schematic. The FLCS is a digital four-channel, fly-by-wire system which hydraulically positions control surfaces. Electrical signals are generated through a stick, rudder pedals, and a MANUAL TRIM panel. A main component of the FLCS is the flight control computer (FLCC). Redundancy is provided in electronic branches, hydraulic systems, power supplies, and sensor systems. A FLT CONTROL panel (FLCP) provides a BIT RUN FAIL light and controls.

Command signals to the FLCC are initiated by applying force to the stick and rudder pedals. These signals are processed by the FLCC along with

signals from the AOA sensors, air data system, flight control rate gyros, accelerometers, and INS. The processed signals are transmitted to the ISA's of the horizontal tails, flaperons, and rudder which are positioned to give the commanded response.

Pitch motion is controlled by symmetrical movement of the horizontal tails. Roll motion is controlled by differential movement of the flaperons and horizontal tails. Yaw motion is controlled by the rudder. Roll coordination is provided by an ARI. The ARI function is not available whenever MLG wheel speed exceeds 60 knots or if AOA exceeds 35 degrees. After takeoff, ARI is activated within 2 seconds after the LG handle is raised (spin down braking system). If the LG handle remains down, 10-20 seconds are required for the MLG wheels to spin down and activate ARI.

Digital Backup (DBU)

DBU provides a software backup in the event of software problems in the primary program. The DBU is a reduced set of control laws which automatically engages when software problems in the FLCC force a majority of the branches into a failed state. DBU can only be disengaged by use of the DIGITAL BACKUP switch.


DBU operation does not significantly impact aircraft handling qualities during normal cruise operation or landing.

During DBU operation:

- The AOS feedback function is inoperative.
- Autopilot, terrain following, and stick steering are inoperative.
- Gun compensation is not provided.
- With the LG handle in DN, the TEF's are positioned to 20 degrees down. With the LG handle in UP and the ALT FLAPS in EXTEND, the TEF's are positioned to 20 degrees down if airspeed is less than 290 knots.
- There is no roll rate input to the AOA limiter. Maximum roll rate command is a constant 167 degrees per second.


- STORES CONFIG switch is inoperative.
- Stick commands are essentially CAT III limited. Rudder pedal commands are essentially CAT I limited.
- Dual air data failures are not recognized in DBU. Standby gains are not engaged. If the LG handle is in UP, midvalue air data is always selected. If the LG handle is in DN, gains are fixed at normal landing values.
- Pitch trim centering at wheel spin-up is inoperative.
- AOA indications do not set to zero and random AOA indications are possible in gusty wind conditions with NLG WOW.
- ☒ The STICK CONTROL switch and the override feature of the paddle switch are inoperative. If MPO is activated, it cannot be overridden in the other cockpit.
- LEF scheduling is simplified and optimized for a cruise condition at approximately 20,000 feet MSL.
- LEF are not commanded to 2 degrees up when MLG wheel speed is greater than 60 knots and the throttle is IDLE or if MLG WOW.
- DBU does not support communication on the MUX bus, so failures while in DBU are not reported.

FLCS Functional Schematic (Typical)

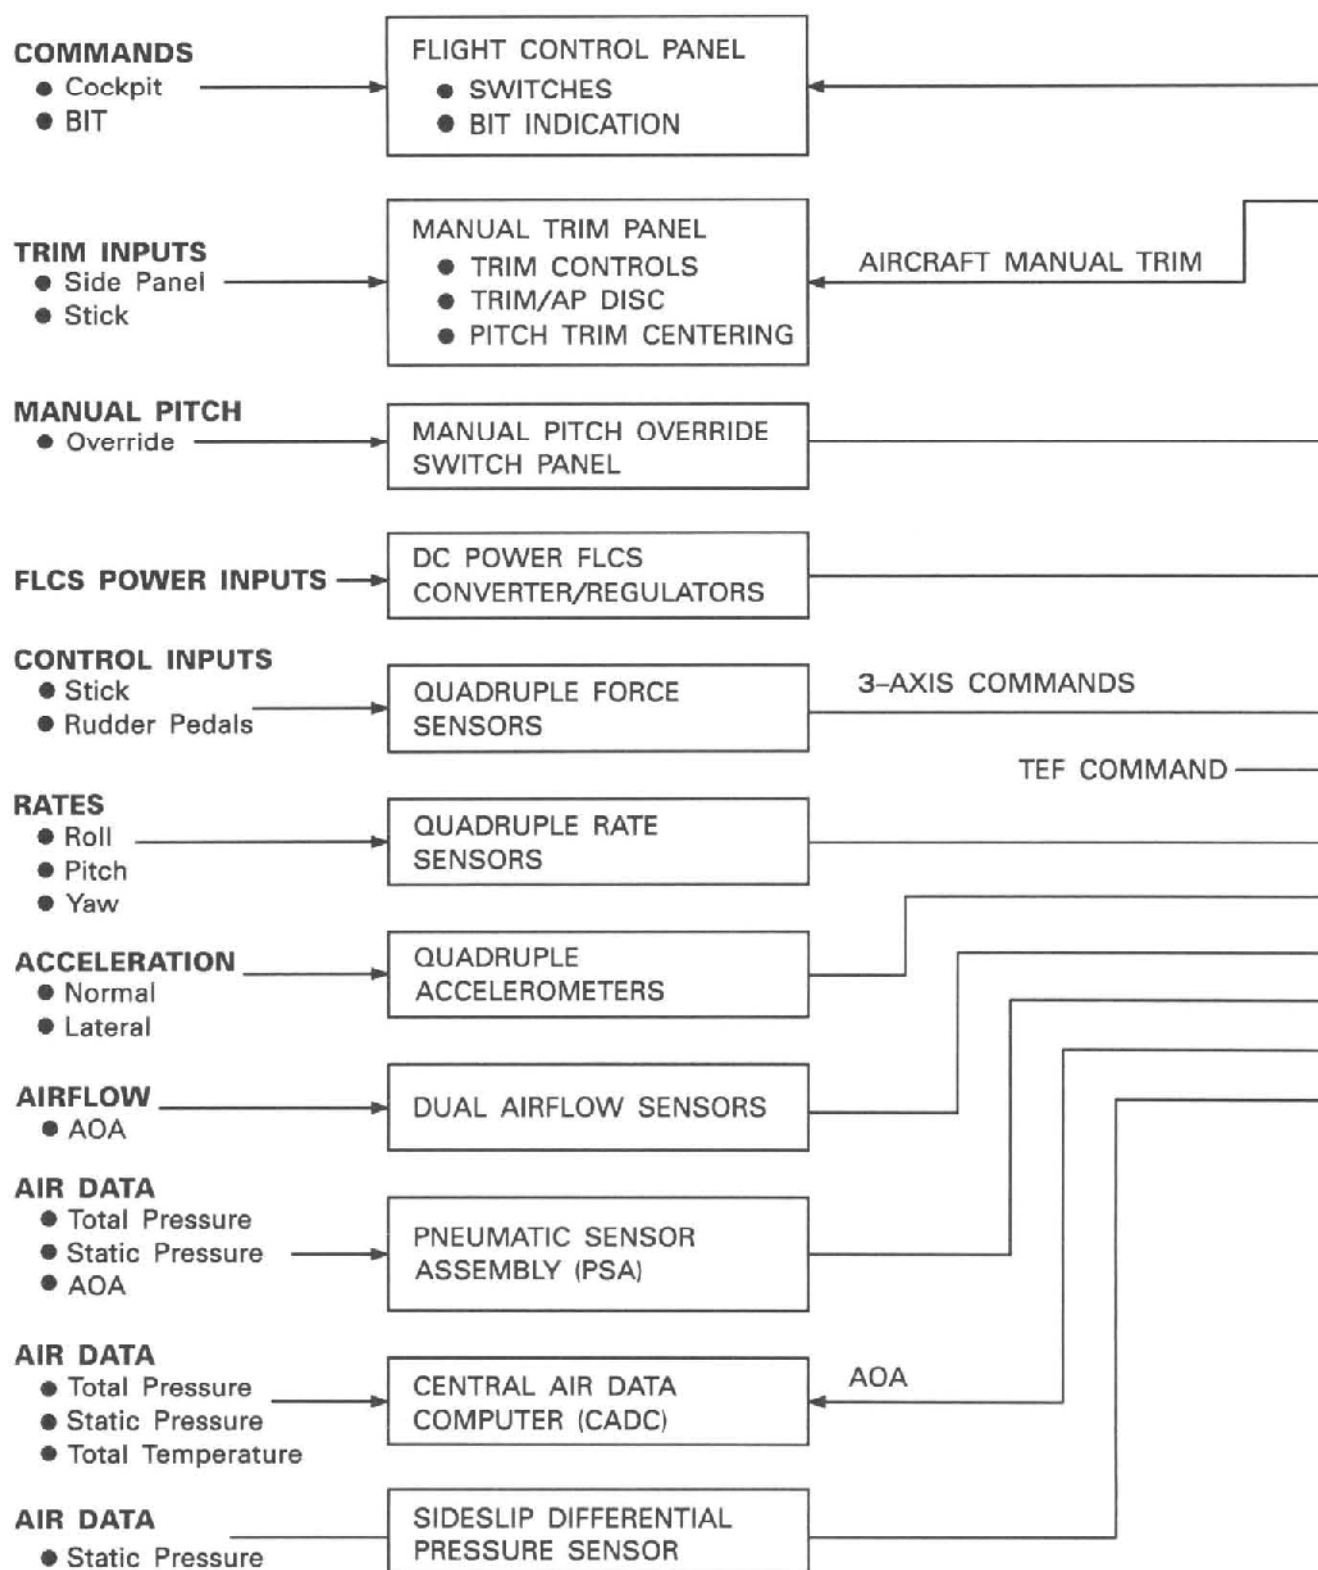

GR1F-16CJ-1-0044-1X37 ©


Figure 1-35. (Sheet 1)

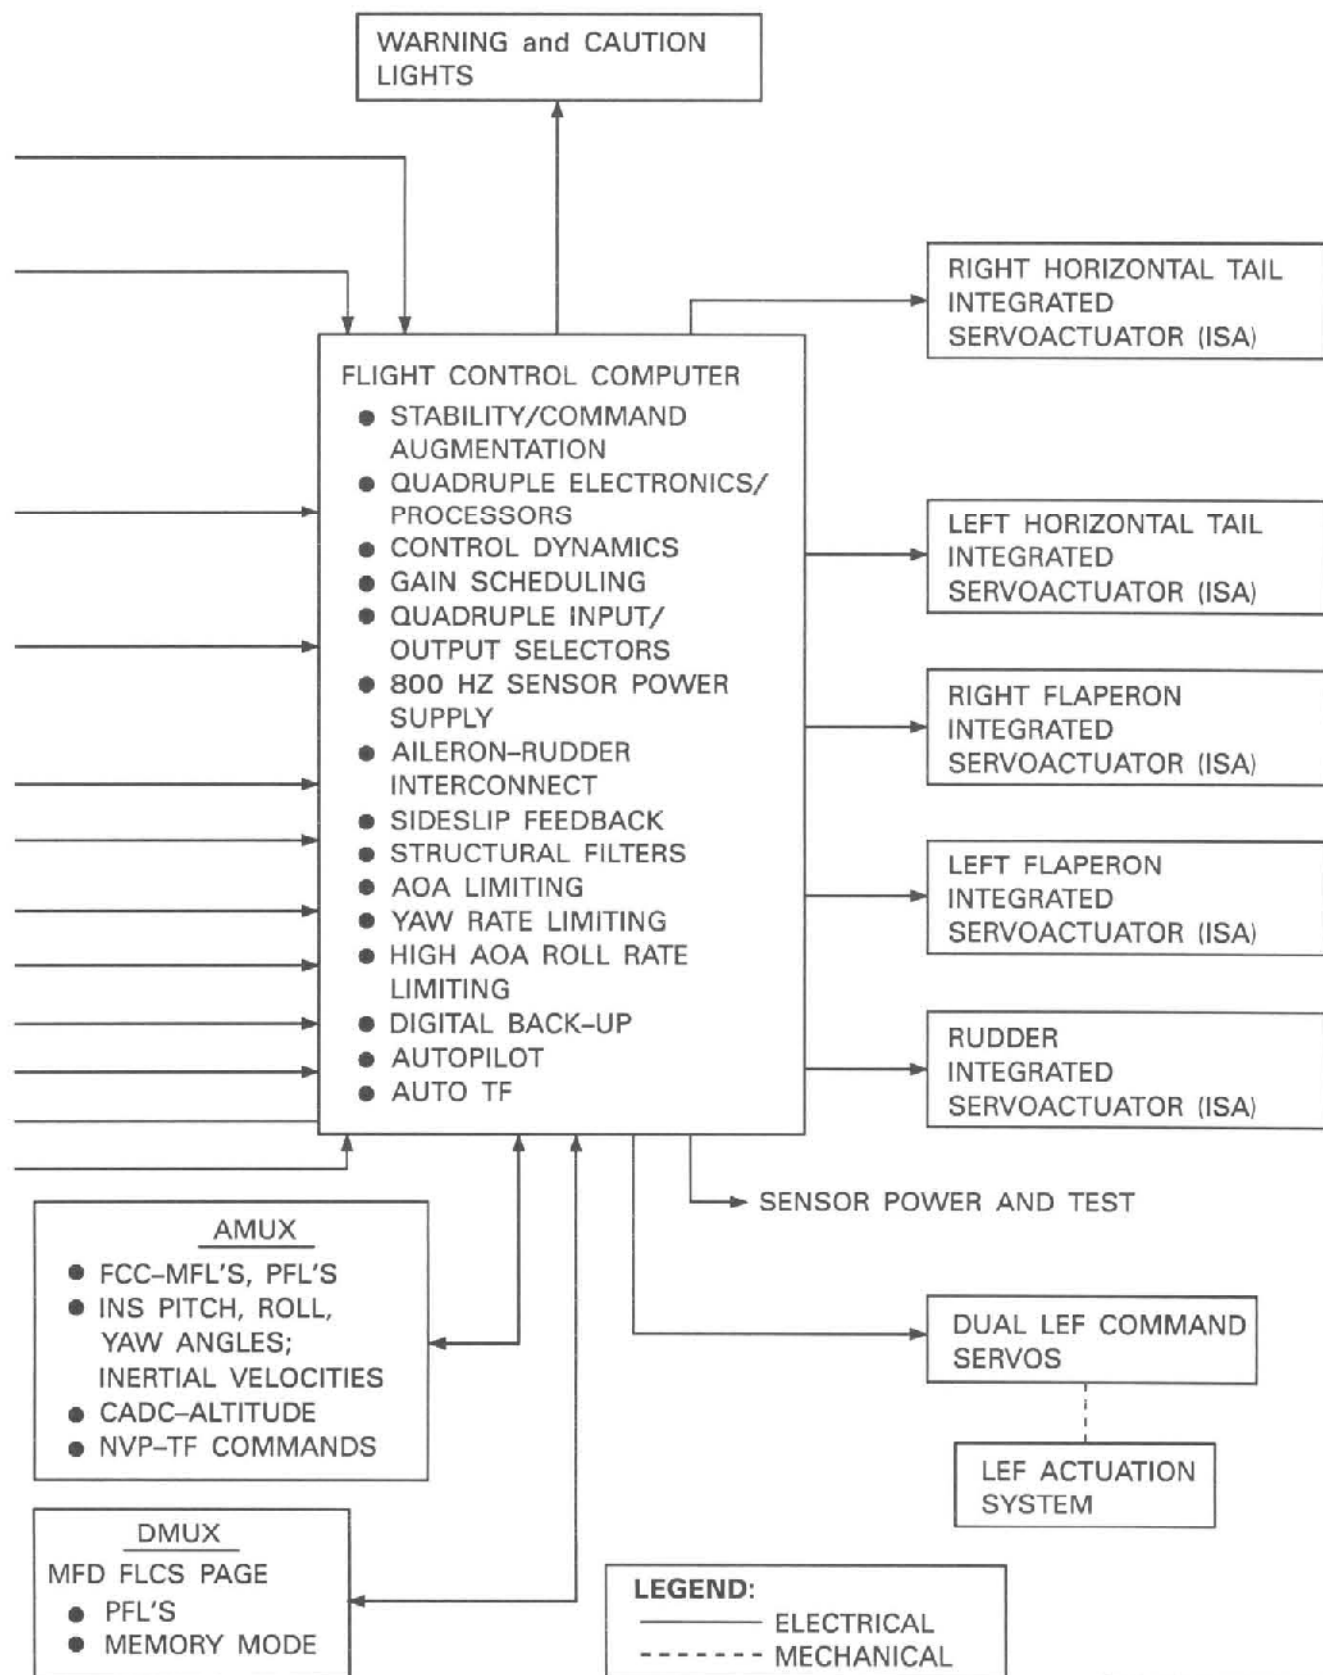

GR1F-16CJ-1-0044-2X37 ©

Figure 1-35. (Sheet 2)

FLCS Pitch, Roll & Yaw Schematic (Typical)

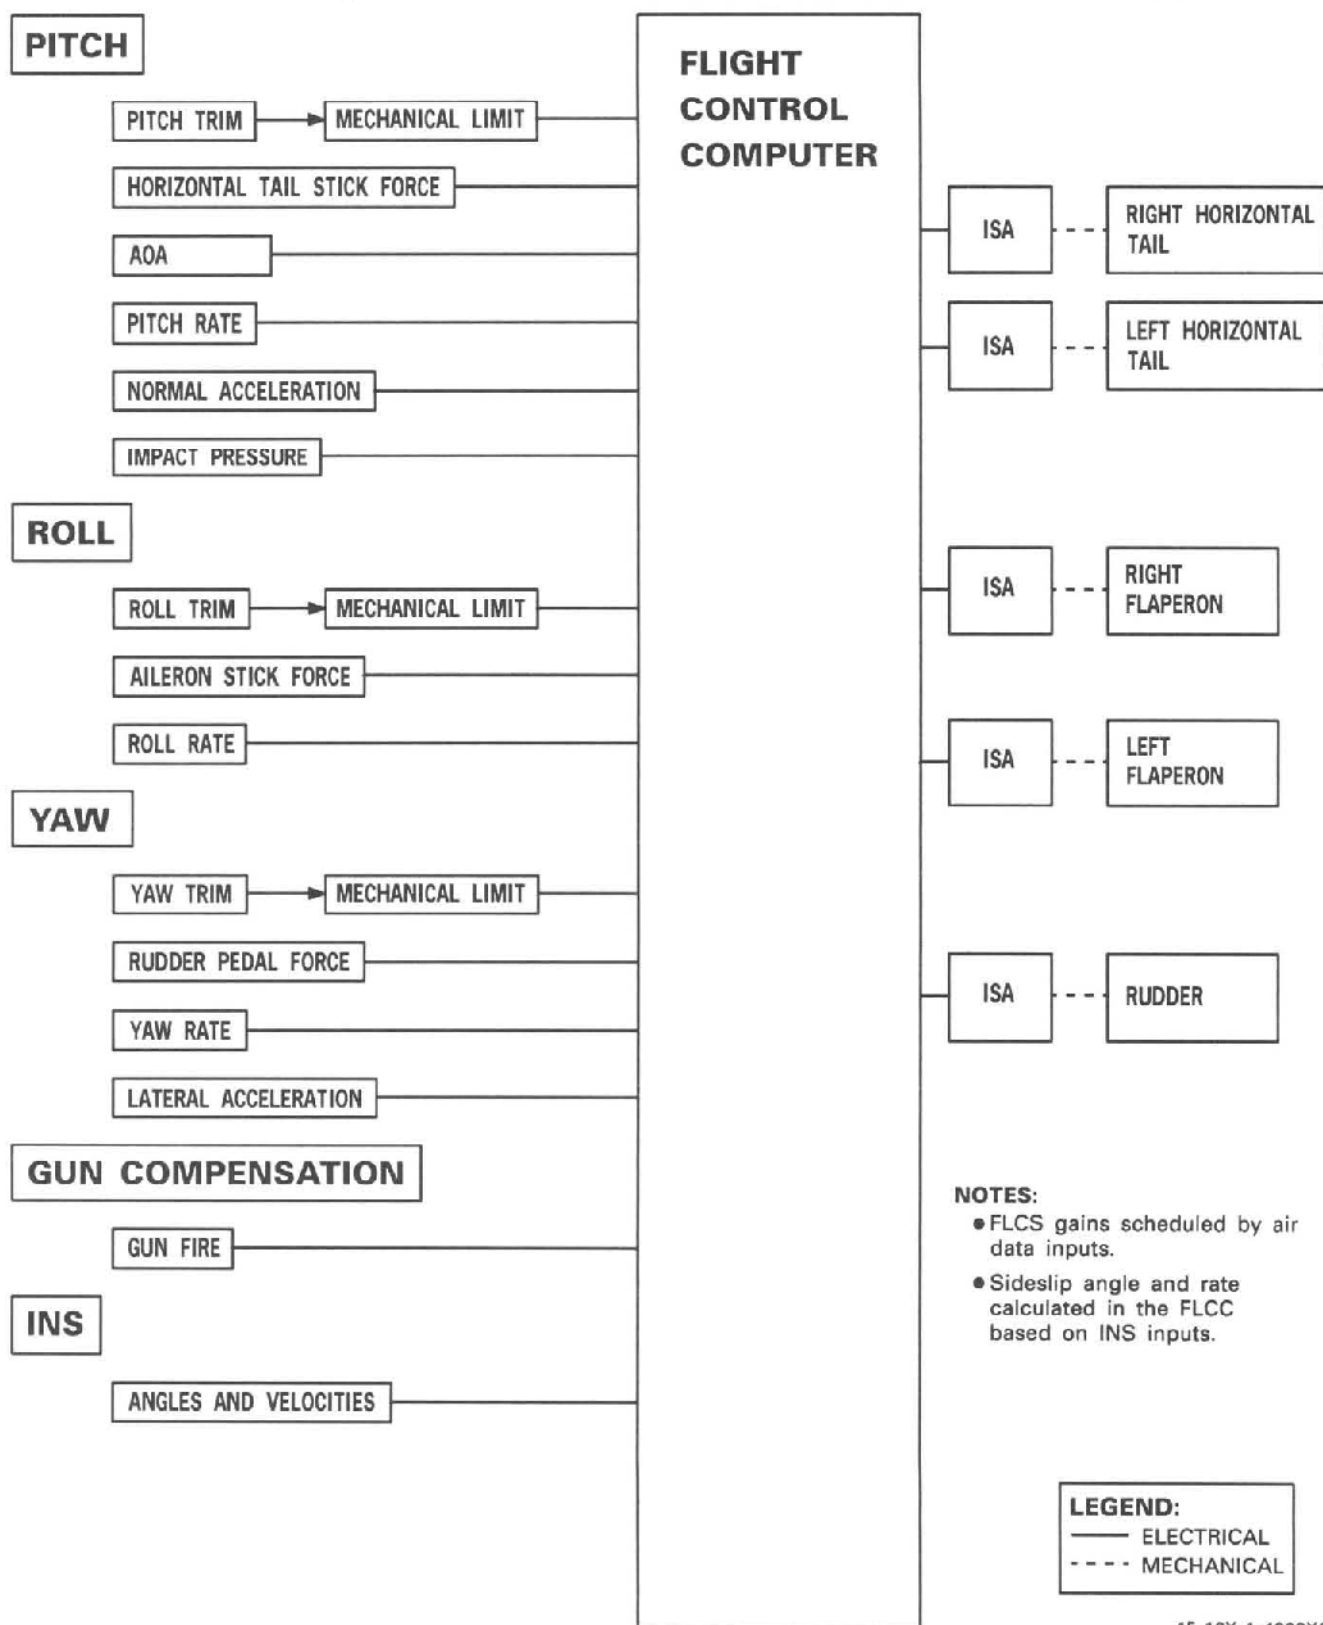

1F-16X-1-4009X®

Figure 1-36.

FLCS LIMITERS

Refer to figure 1-37 for limiter values. FLCS limiters are provided in all three axes to help prevent departures/spins.

AOA/G Limiter

Refer to figure 1-38. In cruise gains, the AOA/g limiter reduces the positive g available as a function of AOA. The negative g available is a function of airspeed. Below 15 degrees AOA, the maximum positive g available is +9g. As AOA increases, the maximum allowable positive g decreases. The positive g limit and maximum AOA depend on the position of the STORES CONFIG switch. In CAT I, positive g decreases to a value of 1g at 25 degrees AOA. Maximum commanded AOA is approximately 25.5 degrees. In CAT III, maximum AOA varies from approximately 16-18 degrees as a function of GW and g.

The negative g available above approximately 250 knots is -3g. Below 250 knots, the available negative g varies between -3g and zero g as a function of airspeed, altitude, and AOA.

In takeoff and landing gains, the STORES CONFIG switch has no effect on limiting or gains. Maximum positive g is a function of airspeed and AOA. The negative g command limit is not a function of airspeed. It is a fixed limit. The maximum AOA for 1g is approximately 21 degrees.

In inverted or upright departures, the AOA/g limiter will override stick pitch commands if the MPO is not engaged. The MPO can always override the negative g function of the limiter. It can also override the AOA function of the limiter when the AOA exceeds 35 degrees. Refer to MPO, this section.

Roll Rate Limiter

In cruise gains, the roll rate limiter reduces available roll rate authority to help prevent roll coupled departures. This authority is reduced as airspeed decreases, AOA increases, or trailing edge down horizontal tail deflection increases. Roll authority is further reduced for large total rudder commands. In takeoff and landing gains, roll rate limiting is available but is a fixed value independent of AOA, airspeed, or horizontal tail position.

Rudder Authority Limiter

In cruise gains, the rudder authority limiter reduces the pedal commanded rudder deflection as a function

of AOA, roll rate, and STORES CONFIG switch position for departure protection. However, ARI authority, stability augmentation, and trim authority are not reduced. In takeoff and landing gains, category I rudder authority limiting is provided.

Yaw Rate Limiter

When AOA exceeds 35 degrees, the yaw rate limiter overrides pilot roll and rudder commands and provides flaperon with and rudder against the yaw rate until AOA is below 32 degrees to enhance spin resistance. The yaw rate limiter provides no protection against yaw departures in the normal flying range (-5 to 25 degrees AOA).

When AOA decreases below -5 degrees and airspeed is less than 170 knots, the yaw rate limiter engages but does not affect pilot roll and rudder commands. Pilot roll and rudder commands are inhibited during inverted departures only when the MPO is engaged. The yaw rate limiter provides rudder against the yaw rate until AOA is above -5 degrees to enhance spin resistance.

Automatic yaw rate limiting to enhance spin resistance is independent of the angle-of-sideslip feedback function; thus, limiting is available even if the FLCS AOS FAIL PFL is present.

FLCS GAINS

During normal operation, the FLCS receives inputs (gains) from the ADC and provides relatively constant aircraft response for a given stick input, regardless of altitude or airspeed. This response varies slightly depending on configuration. In the event of a dual air data failure, the FLCS switches to standby (fixed) gains.

Cruise Gains


The FLCS is in cruise gains with the LG handle in UP, the ALT FLAPS switch either in NORM or in EXTEND above 400 knots, and the AIR REFUEL switch either in CLOSE or in OPEN above 400 knots. At low AOA, the pitch axis of the FLCS is a g command system. As AOA increases, the FLCS switches to a blended g and AOA system to provide a warning of high AOA/low airspeed. Roll rate limiting is available and maximum roll rate decreases as a function of low airspeed, high AOA, and horizontal tail position.

FLCS Limiter Functions

	PITCH AXIS	ROLL AXIS	YAW AXIS
CAT I	Maximum AOA=25°	Maximum roll rate command decreases with: • AOA above 15°	Maximum deflection (pedal command) reduced for: • AOA>14° (zero roll rate) • Roll rate>20°/sec
	g command system until 15° AOA	• Airspeed less than 250 knots • Horizontal tail deflection more than 5° trailing edge down	NOTE: Zero rudder authority available at 26° AOA
	g/AOA command system above 15° AOA	• Total rudder command (from pilot and FLCS) exceeding 20° • Combination of horizontal tail greater than 15° trailing edge down and AOA above 22°	
CAT III	Maximum AOA=16°-18° (depending on GW)	Maximum roll rate command reduced by approximately 40 percent of CAT I authority. Additional decreases as function of AOA, airspeed, horizontal tail position, and total rudder command	Maximum deflection (pedal command) reduced for: • AOA>3° (zero roll rate) • Roll rate>20°/sec NOTE: Zero rudder authority available at 15° AOA
	g command system until 7° AOA at 100 knots to 15° AOA at 420 knots and above		
	g/AOA command system above these values		
NOTES	1. In takeoff/landing gains, the FLCS operates as a pitch rate command system until 10° AOA and a pitch rate/AOA command system above 10° AOA 2. +9g available until 15° AOA. Maximum g decreases as a function of AOA and airspeed	1. In takeoff/landing gains, maximum roll rate is fixed at approximately one-half the maximum roll rate available in cruise gains, regardless of AOA, airspeed, or horizontal tail deflection 2. Above 35° AOA, the yaw rate limiter cuts out stick roll commands and provides roll axis antispin control inputs	1. Above 35° AOA, the yaw rate limiter provides yaw axis antispin control inputs 2. Below -5° AOA and less than 170 knots, the yaw rate limiter provides antispin rudder inputs; pilot roll and rudder commands are cut out only when MPO is engaged 3. Maximum deflection (30°) always available thru ARI and stability augmentation

Figure 1-37.

AOA/G Limiter Function (Cruise Gains)

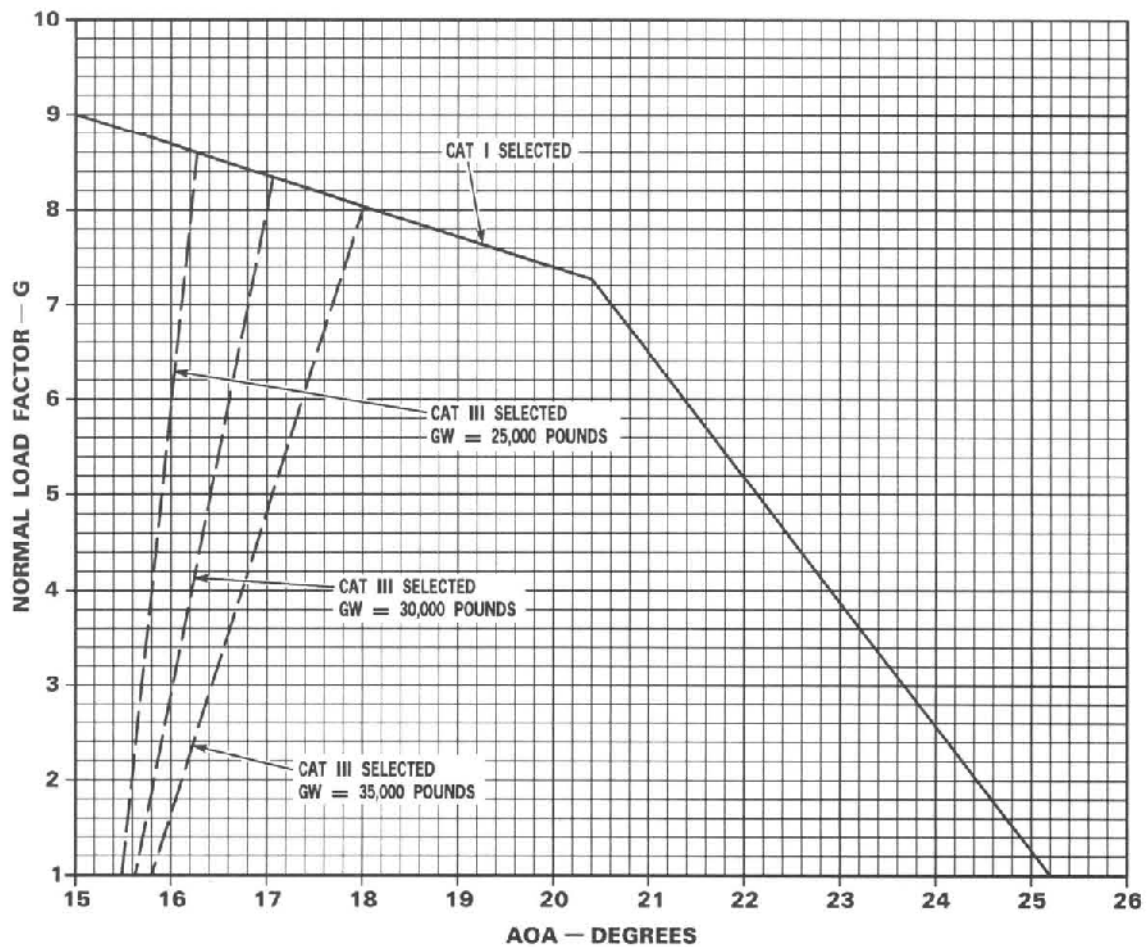

1F-16X-1-0010X®

Figure 1-38.

Takeoff and Landing Gains

The FLCS is in takeoff and landing gains with the LG handle in DN, the ALT FLAPS switch in EXTEND (below 400 knots), or the AIR REFUEL switch in OPEN (below 400 knots). In takeoff and landing gains, the FLCS pitch axis operates as a pitch rate command system until 10 degrees AOA and a blended pitch rate and AOA command system above 10 degrees AOA. Roll rate limiting is available but is a fixed value independent of AOA, airspeed, or horizontal tail position.

Standby Gains

In standby gains, control response is tailored for a fixed altitude (sea level, standard day) and airspeed (LG handle in UP, approximately 600 knots; LG handle in DN, approximately 230 knots). The FLCS warning light and FLCS FAULT caution light illuminate.

When operating on standby gains, the LEF's are at zero degrees with the LG handle in UP and the ALT FLAPS switch in NORM. The LEF's deflect 15 degrees down with the LG handle in DN or the ALT FLAPS switch in EXTEND. The operation of the TEF's is not affected in standby gains.

A standby gains condition can be reset in flight, back to the first failure condition, by using the FLCS RESET switch. The original air data system failure is latched upon occurrence of the second failure and does not reset. If reset is successful, the FLCS warning light goes off.

FLCS DATA RECORDER

The FLCS data recorder is attached to the ejection seat and departs the aircraft on ejection. It retains the same information as the FLCC including FLCS failure data, airspeed, altitude, true heading and elapsed time from takeoff.

ANGLE-OF-SIDESLIP (AOS) FEEDBACK FUNCTION

The angle-of-sideslip feedback function provides improved departure prevention by using AOS and AOS rate feedback to position the rudder. AOS and AOS rate are calculated in the FLCC using INS data. The calculated AOS is also monitored in the FLCC by

comparing it to an AOS derived from differential pressure sensor signals. This monitoring detects one of two possible failures:

- AOS derived from INS is erroneous.
- AOS derived from differential pressure sensor is erroneous.

Either failure deactivates the AOS feedback function and activates the FLCS FAULT caution light and the FLCS AOS FAIL PFL.

The AOS feedback function is active when all of the following conditions are met:

- Airspeed is less than 350 knots.
- AOA is greater than 10 degrees.
- AOS exceeds 2 degrees.
- AOS monitoring has not detected a failure.
- DBU is not engaged.
- MPO switch is in NORM.
- The FLCS is in cruise gains.
- Terrain following is not engaged.

GUN COMPENSATION


The FLCS automatically compensates for the off-center gun and the aerodynamic effects of gun gas emissions during firing by moving the flaperons and rudder. Gun compensation is optimized for 0.7-0.9 mach range; therefore, all excursions may not be eliminated. For example, gunfiring at low mach may result in nose left excursions while nose right excursions are likely at higher mach. Failure monitoring of gun compensation circuits is not provided and there are no caution light indications for incorrect compensation.

FLIGHT CONTROL SYSTEM (FLCS) CONTROLS

Stick

Refer to figure 1-39. The stick is a force-sensing unit which contains transducers in both pitch and roll axes, moves approximately 1/4 inch in both axes, and is rotated slightly cw.

Stick (Typical)

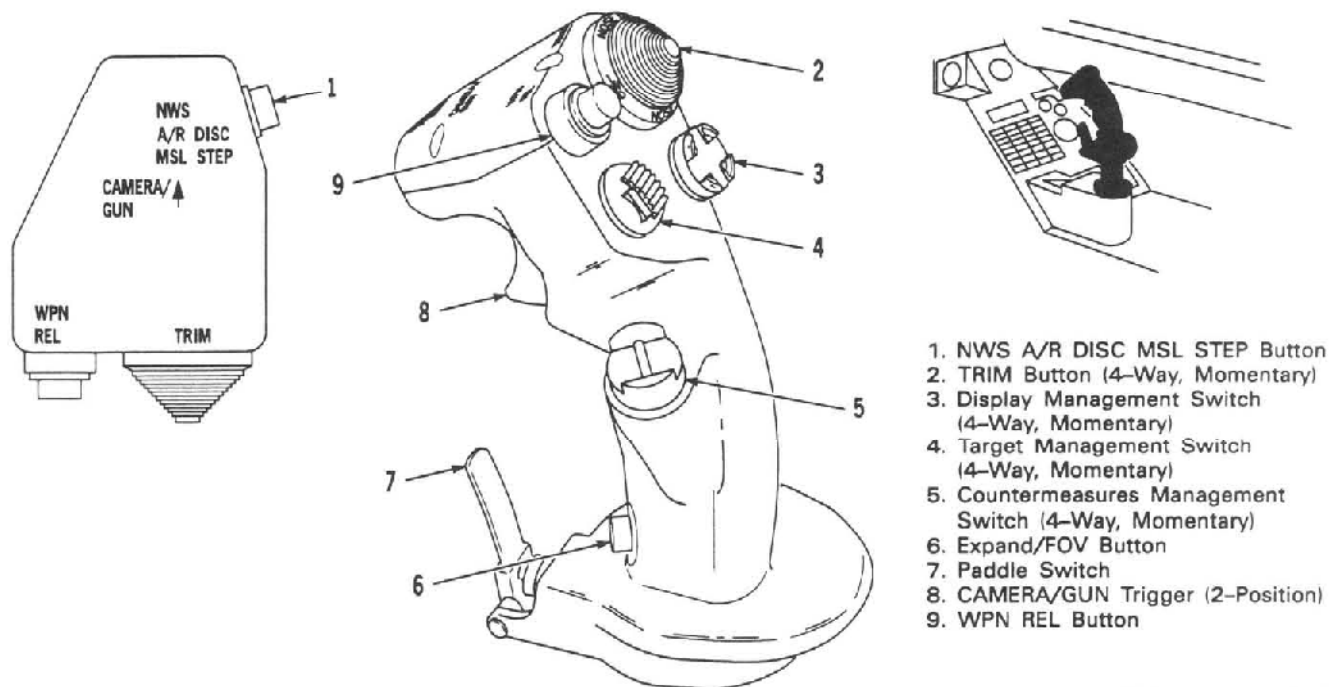

1. NWS A/R DISC MSL STEP Button
2. TRIM Button (4-Way, Momentary)
3. Display Management Switch (4-Way, Momentary)
4. Target Management Switch (4-Way, Momentary)
5. Countermeasures Management Switch (4-Way, Momentary)
6. Expand/FOV Button
7. Paddle Switch
8. CAMERA/GUN Trigger (2-Position)
9. WPN REL Button

GR1F-16CJ-1-0047X37 ©

CONTROL	POSITION	FUNCTION
1. NWS A/R DISC MSL STEP Button (NWS) (A/R DISC) (MSL STEP)	Depress (on ground)	Activates NWS
	Depress (2nd time)	Deactivates NWS
	Depress (in flight)	Disconnects boom latching. AIR REFUEL switch must be in OPEN position
	Depress (in flight)	Activates missile step function. Refer to T.O. GR1F-16CJ-34-1-1
2. TRIM Button (NOSE DOWN) (4-way, momentary)(NOSE UP) (LWD) (RWD)	Fwd	Trims nosedown
	Aft	Trims noseup
	Left	Trims left wing down
	Right	Trims right wing down

Figure 1-39. (Sheet 1)

Stick (Typical)

CONTROL	POSITION	FUNCTION
3. Display Management Switch (4-way, momentary)	Up	Refer to T.O. GR1F-16CJ-34-1-1 for a detailed description of switch functions
	Down	
	Left	
	Right	
4. Target Management Switch (4-way, momentary)	Up	
	Down	
	Left	
	Right	
5. Countermeasures Management Switch (4-way, momentary)	Fwd	
	Aft	
	Left	
	Right	
6. Expand/FOV Button	Depress	Successive depressions sequence through the available field-of-view (FOV) selections for the sensor/system mode being displayed on the DOI
7. Paddle Switch	Depress	Interrupts the autopilot while switch is depressed. Terminates ATF fly-up. If in ATF, reverts to manual TF while depressed. Resets SWIM monitors when released
		☒ For stick override function, refer to F-16D AIRCRAFT, this section
8. CAMERA/GUN Trigger (2-position)	Squeeze trigger to detent	Starts operation of AVTR/CTVS with AUTO selected on AVTR power switch and provides consent for laser fire (if selected and armed)
	Squeeze trigger past detent	Fires gun (if selected and armed), AVTR/CTVS operation continues, and consent for laser fire continues (camera operation continues for 30 seconds after trigger is released)
9. WPN REL Button	Depress	Signals consent to FCC or SMS to initiate weapon release and operates HUD camera for 30 seconds when in AUTO

Figure 1-39. (Sheet 2)

Maximum noseup and nosedown pitch commands are generated by 25 and 16 pounds of input, respectively. Roll commands are generated by a maximum of 17 pounds in cruise gains and by 12 pounds in takeoff and landing gains. When using the switches/buttons on the stick, inadvertent commands to the FLCS are possible.

The wristrest and armrest assemblies which may be used in conjunction with the stick are located on the right side wall aft of the stick.

Rudder Pedals

The rudder pedals are force-sensing units containing transducers. Force on the applicable rudder pedal produces electrical yaw command signals.

The rudder pedals are also used to generate brake and NWS signals. Rudder pedal feel is provided by mechanical springs.

MANUAL TRIM Panel

Refer to figure 1-40. The MANUAL TRIM panel, located on the left console, contains trim controls and indicators.

MANUAL PITCH Override (MPO) Switch

Refer to figure 1-41. The MPO switch, located on the left console, has two positions, NORM and OVRD, and is spring-loaded to the NORM position. This switch is used during a deep stall condition to enable manual control of the horizontal tails. Positioning and holding the switch to OVRD overrides the negative g limiter. If AOA exceeds 35 degrees, the OVRD position overrides the AOA/g limiter and allows pitch commands.

STORES CONFIG Switch

Refer to figure 1-42. The STORES CONFIG switch, located on the LG control panel, has two positions, CAT I and CAT III. The CAT III position shall be selected when the aircraft is configured with a category III loading.

AOA limiting is provided. Refer to FLCS LIMITERS, this section, for a description of categories I and III AOA limiter.

Low Speed Warning Tone

Refer to figure 1-43. A low speed warning tone (steady) sounds in the headset when one of the following conditions exists:

- AOA is 15 degrees or greater with LG handle down or ALT FLAPS switch in EXTEND.
- Combined airspeed and pitch angle fall on a point within the tone on area with LG handle up and ALT FLAPS switch in NORM.
- When the TFR is operating and airspeed drops below 300 knots (KCAS or groundspeed).

The low speed warning tone has priority over the LG warning horn. Depressing the HORN SILENCER button silences the low speed warning tone.

The low speed warning tone is reactivated only after the original warning condition is eliminated. The MAL & IND LTS test button does not test the low speed warning tone.

FLT CONTROL Panel (FLCP)

Refer to figure 1-44. The FLCP, located on the left console, contains indicators and controls related to flight control functions.

FLCS WARNING, CAUTION, AND INDICATOR LIGHTS


The instrument panel, caution panel, PFLD, FLCP, ELEC control panel, TEST switch panel, and avionic system contain warning, caution, and indicator lights related to the FLCS. The FLCS is interfaced to the avionic system via the multiplex (MUX) bus to provide PFL and MFL reporting.

FLCS Warning Light

The FLCS warning light, located on the right glareshield, illuminates to indicate a dual malfunction in the FLCC electronics, including the processors, power supplies, input commands or sensors, AOA, or air data inputs. The FLCS warning light also illuminates if the LEF's are locked or BIT fails. The FLCS warning light remains illuminated until FLCS reset action is successful in clearing the failure. If an active warning fault exists and a subsequent warning level malfunction occurs, the FLCS warning light goes off momentarily to retrigger HUD WARN and voice warning.

More specific system failure information can be obtained from the PFLD.

MANUAL TRIM Panel **C** **DF** (Typical)

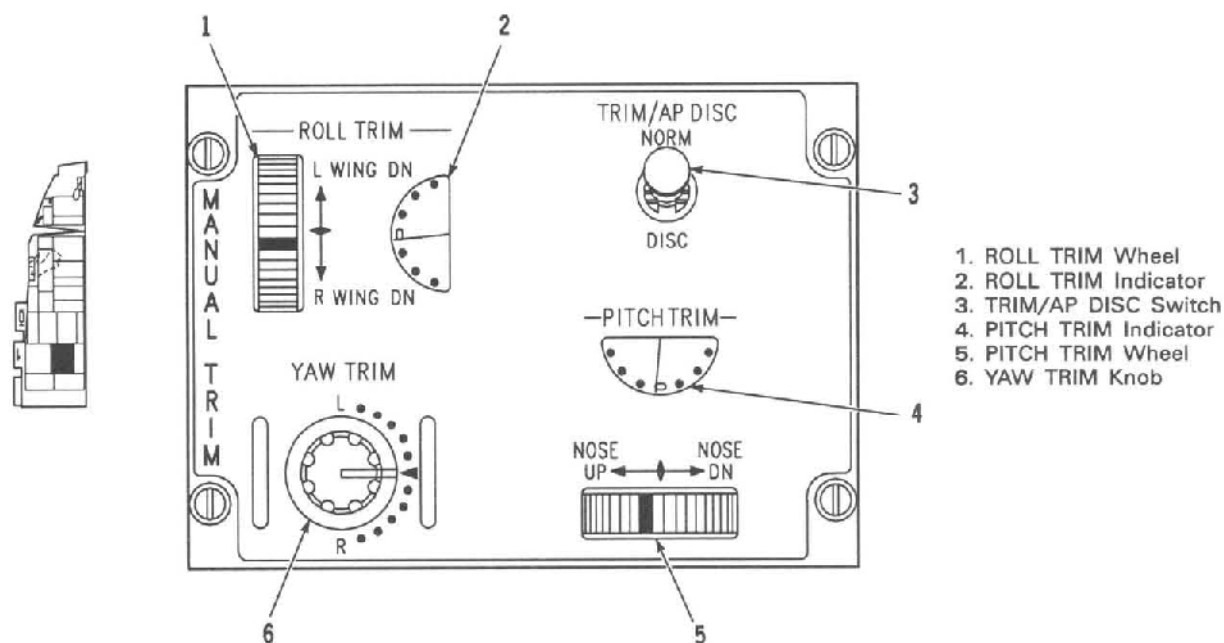


GR1F-16CJ-1-0048X37 ©

CONTROL	POSITION	FUNCTION
1. ROLL TRIM Wheel	L WING DN rotation	Trims left wing down
	R WING DN rotation	Trims right wing down
2. ROLL TRIM Indicator	Visual	Indicates roll trim
3. TRIM/AP DISC Switch	NORM	Energizes stick TRIM button. Permits autopilot engagement
	DISC	Deenergizes stick TRIM button, prevents autopilot engagement and ATF/autopilot blending, and deactivates trim motors (manual trim wheels still operative)
4. PITCH TRIM Indicator	Visual	Indicates pitch trim
5. PITCH TRIM Wheel	NOSE UP rotation	Trims noseup
	NOSE DN rotation	Trims nosedown
6. YAW TRIM Knob	CCW rotation	Trims nose left
	CW rotation	Trims nose right

Figure 1-40.

Manual Pitch Over-ride Switch (Typical)

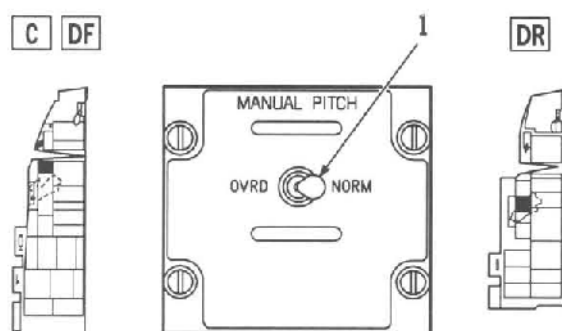


1. MPO Switch

GR1F-16CJ-1-0049X37 ©

Figure 1-41.

STORES CONFIG Switch C DF (Typical)

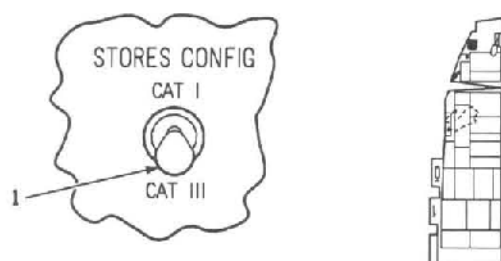

1. STORES CONFIG Switch


GR1F-16CJ-1-0050X37 ©

Figure 1-42.

Low Speed Warning Tone Schedule

NOTES:

- LG handle in UP and ALT FLAPS switch in NORM.
- Dashed lines indicate airspeed tolerances for low speed warning tone activation.

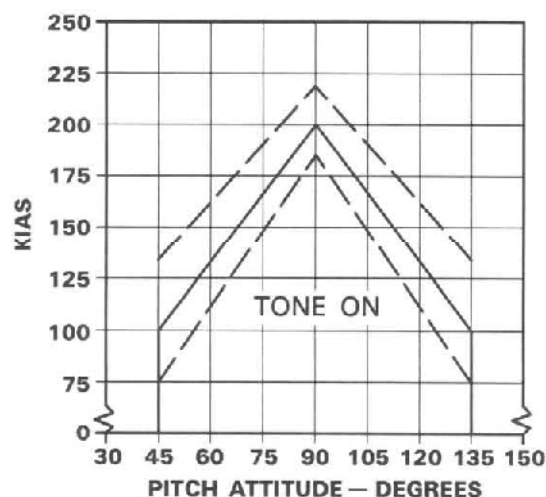

1F-16X-1-0022X ©

Figure 1-43.

DBU ON Warning Light

The DBU ON warning light, located on the right glareshield, illuminates to indicate the FLCC has automatically switched to DBU or if the DIGITAL BACKUP switch is manually positioned to DIGITAL BACKUP.

TO/LDG CONFIG Warning Light

Refer to LANDING GEAR SYSTEM, this section.


FLCS FAULT Caution Light

The FLCS FAULT caution light, located on the caution light panel, illuminates when the FLCC reports a caution level PFL item which requires pilot action. The caution light goes off either when the fault is acknowledged or when FLCS reset action is successful in clearing the failure.

If the FLCS FAULT caution light is illuminated and a subsequent malfunction occurs, the caution light goes off momentarily to activate the MASTER CAUTION light and retrigger voice caution.

More specific system failure information can be obtained from the PFLD.

FLT CONTROL Panel C DF (Typical)

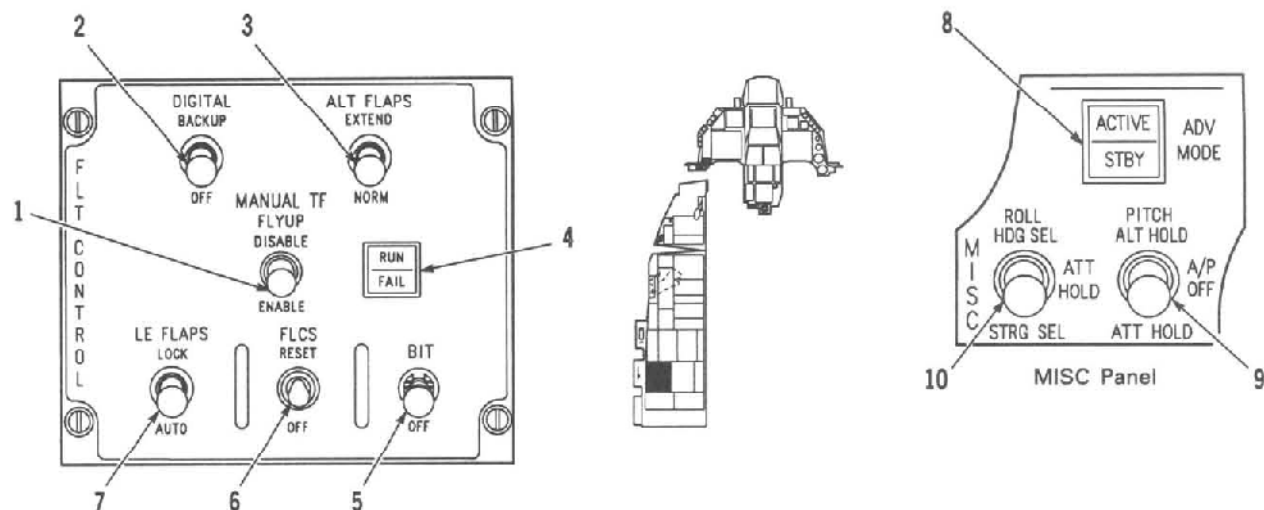

1. MANUAL TF FLYUP Switch
2. DIGITAL BACKUP Switch
3. ALT FLAPS Switch
4. RUN/FAIL Lights
5. BIT Switch

6. FLCS RESET Switch
7. LE FLAPS Switch
8. ADV MODE Switch
9. Autopilot PITCH Switch
10. Autopilot ROLL Switch

GR1F-16CJ-1-0052X37 ©

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION
1. MANUAL TF FLYUP Switch (lever lock)	DISABLE	Fly-up protection not available in manual TF
	ENABLE	Fly-up protection available in manual TF for TF or SWIM detected failure
2. DIGITAL BACKUP Switch (lever lock)	BACKUP	Selects backup software program within the FLCC
	OFF	Normal position
3. ALT FLAPS Switch (lever lock)	NORM	TEF operation controlled by LG handle
	EXTEND	TEF's extend regardless of LG handle positions.
4. RUN/FAIL Lights	RUN (green)	Indicates FLCS BIT is running
	FAIL (red)	Indicates a failure during the FLCS BIT
5. BIT Switch (solenoid held in BIT and lever-locked to OFF)	OFF	Normal position
	BIT	Commands BIT if weight is on main LG and wheel speed is less than 28 knots groundspeed

Figure 1-44. (Sheet 1)

FLT CONTROL Panel **C** **DF** (Typical)

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION
6. FLCS RESET Switch (spring-loaded to OFF)	OFF	Normal position
	RESET	Momentary position which performs servo or electronic reset of FLCS system failures. Resets FLCS warning light, CADC, FLCS FAULT, and MASTER CAUTION lights and clears PFL's if fault is cleared
7. LE FLAPS Switch (lever lock)	AUTO	LEF's are automatically controlled as a function of mach, altitude, and AOA
	LOCK	Manually locks the LEF's in position and illuminates the FLCS warning light and FLCS LEF LOCK PFL
8. ADV MODE Switch	—	Depressing switch illuminates ATF NOT ENGAGED caution light if NVP or FLCS cannot support ATF
	ACTIVE (green)	Depressing switch illuminates ACTIVE light and selects ATF if TFR is in operate mode
	STBY (amber)	Illuminates when ATF/autopilot blended mode is in use or the paddle switch is depressed in ATF. STBY light indicates that ATF is ready to take over if the paddle switch is released or if higher terrain requires it
9. Autopilot PITCH Switch	ALT HOLD	Engages pitch and roll axes of autopilot. Autopilot maintains constant altitude as determined by CADC; roll mode is determined by ROLL switch
	A/P OFF	Disengages pitch and roll axes of autopilot
	ATT HOLD	Engages pitch and roll axes of autopilot. Autopilot maintains constant pitch attitude as determined by INS; roll mode is determined by ROLL switch
10. Autopilot ROLL Switch NOTE: Autopilot roll modes are functional when the PITCH switch is out of A/P OFF.	HDG SEL	Autopilot turns the aircraft to capture and maintain the heading selected by the heading reference marker on the HSI
	ATT HOLD	Autopilot maintains roll attitude as determined by the INS
	STRG SEL	Autopilot steers aircraft to the selected steer-point

Figure 1-44. (Sheet 2)

Built-In Test (BIT)

The BIT switch, located on the FLCP, is a two-position switch which is lever-locked in OFF and solenoid held in BIT. When engaged (green RUN light illuminates), the BIT runs for approximately 45 seconds. A failure during the BIT sequence or a BIT interlock failure terminates BIT, returns the switch to OFF, illuminates the red FAIL light and the FLCS warning light, and sends an FLCS BIT FAIL PFL message. BIT failures are nonresettable and the red FAIL light does not go off until a subsequent BIT is successfully completed. A BIT detected bus communication failure results in illumination of the FLCS FAULT caution light and an FLCS MUX DEGR PFL. An FLCS reset extinguishes the caution light but the PFL remains.

Successful completion of BIT is indicated by the BIT switch automatically returning to OFF, the green RUN light going off, no FLCS BIT FAIL PFL, and a BIT PASS message on the FLCS page of the MFD.

Pilot Fault List Display (PFLD)

The PFLD, located on the **[C]** **[DF]** right auxiliary console, **[DR]** instrument panel, displays FLCS PFL's. Refer to WARNING, CAUTION, AND INDICATOR LIGHTS, this section, for a description of the PFLD. Refer to PILOT FAULT LIST - FLCS, Section III, for a description of FLCS PFL's.

TRIM

Pitch trim inputs may be initiated from either the TRIM button on the stick or the PITCH TRIM wheel on the MANUAL TRIM panel. In cruise gains, pitch trim inputs are g command signals identical in function to normal stick pitch commands. In takeoff and landing gains, the FLCS operates as a pitch rate command system until 10 degrees AOA and a pitch rate and AOA command system above 10 degrees AOA.

With both main wheel speeds at 60 knots groundspeed or greater, pitch trim automatically centers.

Roll trim inputs can be initiated from either the TRIM button on the stick or the ROLL TRIM wheel on the MANUAL TRIM panel. For asymmetric configurations or rudder mistrim, roll retrimming may be required as flight conditions change. Roll trim inputs also command proportional rudder deflection through the ARI function.

Rudder trim is initiated from the YAW TRIM knob on the MANUAL TRIM panel only. For asymmetric configurations or roll mistrim, rudder retrimming may be required as flight conditions change.

AUTOPILOT

The autopilot provides attitude hold, heading select, and steering select in the roll axis and attitude hold and altitude hold in the pitch axis. These modes are controlled by PITCH and ROLL switches on the MISC panel. The TRIM/AP DISC switch on the MANUAL TRIM panel disengages the autopilot. The paddle switch on the stick interrupts autopilot operation while the switch is held depressed.

The PITCH switch is a three-position switch which is solenoid held in an engaged position and goes to the A/P OFF position if any of the following conditions exist.

Conditions are:

- AIR REFUEL switch - OPEN.
- ALT FLAPS switch - EXTEND.
- A/P FAIL PFL occurs.
- AOA greater than 15 degrees.
- DBU - Engaged.
- LG handle - DN.
- Low speed warning tone sounds.
- MPO switch - OVRD.
- STBY GAIN PFL occurs.
- TRIM/AP DISC switch - DISC.

Movement of the PITCH switch out of A/P OFF engages both the pitch and roll autopilot modes selected.

The ROLL switch is a three-position switch which enables one of the three roll autopilot modes whenever a pitch autopilot mode is selected.

AUTOPILOT OPERATION

The autopilot is fully engaged when the PITCH switch is not in A/P OFF. Autopilot options are selected by positioning the PITCH switch (ALT HOLD, A/P OFF, or ATT HOLD) and the ROLL switch (HDG SEL, ATT HOLD, or STRG SEL). Stick trim is inoperative with the autopilot engaged. The manual trim is operable and may be used while the autopilot is engaged. However, due to the limited authority of the autopilot, engagement of any mode in other than a trimmed flight condition degrades autopilot performance.

The autopilot loop in the FLCC receives inputs from the INS and CADC by means of the AMUX bus. A lack of data, inaccurate data, or degradation/failure of the AMUX disconnects the autopilot and activates the FLCS FAULT caution light and the FLCS A/P FAIL PFL message. The sensor information used by the autopilot does not include the redundancy of the FLCS so its use must be closely monitored at low altitude or in close formation. If AOA is greater than 15 degrees, the autopilot will disconnect and the FLCS FAULT caution light and the FLCS A/P FAIL PFL message will activate.

Additionally, the FLCC monitors autopilot operation for a failure to maintain the selected mode and for prolonged engagement outside of autopilot attitude limits with no stick inputs. Detection of a failure results in activation of the FLCS FAULT caution light and the FLCS A/P DEGR PFL message.

Positioning the PITCH switch to ALT HOLD enables the FLCS to use CADC information to generate commands to the horizontal tails which result in the aircraft maintaining a constant altitude. The FLCS limits the pitch command to +0.5g to +2g. Engagement of altitude hold at rates of climb or dive less than 2000 fpm selects an altitude within the pitch command g limits. Engagement above rates of 2000 fpm causes no unsafe maneuvers; however, the engaged altitude may not be captured. Control accuracy of ± 100 feet is provided to 40,000 feet pressure altitude for normal cruise conditions. The altitude reference may be changed by depressing the paddle switch, changing altitude, and releasing the paddle switch. ALT HOLD in the transonic region may be erratic.

Positioning the PITCH switch to ATT HOLD allows an attitude signal from the INU to be used to maintain the selected pitch attitude. This mode does not function if pitch angle exceeds ± 60 degrees; however, the PITCH switch remains engaged.

Positioning the ROLL switch to HDG SEL allows the FLCS to use a signal from the HSI to maintain the heading set on the HSI. Adjusting the HSI heading reference marker to the aircraft heading prior to engagement maintains the existing aircraft heading; otherwise, when the autopilot is engaged with the ROLL switch in HDG SEL, the aircraft turns to capture the heading indicated by the heading reference marker on the HSI. The roll command does not exceed a 30-degree bank angle or a 20-degree/second roll rate. This mode does not function if bank angle exceeds ± 60 degrees; however, the ROLL switch remains engaged.

Positioning the ROLL switch to ATT HOLD allows the FLCS to use an attitude signal from the INU to maintain the aircraft at selected roll attitude. This mode does not function if bank angle exceeds ± 60 degrees.

Positioning the ROLL switch to STRG SEL allows the autopilot to steer the aircraft to the selected steerpoint using roll commands. The roll command does not exceed a 30-degree bank angle or a 20-degree/second roll rate. This mode does not function if bank angle exceeds ± 60 degrees; however, the ROLL switch remains engaged.

ADV MODE Switch

ADV MODE switch is a two-function switch. The ACTIVE light, which is located on the top half of the ADV MODE switch, illuminates whenever ATF is engaged. Depression of the ADV MODE switch when the NVP is in an operate mode engages ATF. The STBY light, which is located on the bottom half of the ADV MODE switch, illuminates when PITCH autopilot is engaged and the NVP is in an operate mode. This configuration engages the TF/PITCH autopilot blending mode; depression of the ADV MODE switch at this point deselects the blending mode and illuminates the ACTIVE light (ATF). The STBY light also illuminates from the ATF mode if the paddle switch is depressed, indicating that ATF is ready to assume control (when paddle switch is released).

STICK STEERING

Stick steering is operable only with the pitch and roll attitude hold modes. Stick steering operation is accomplished by applying force to the stick. With ATT HOLD selected, a force applied in the appropriate axis large enough to activate stick steering causes the autopilot to drop the selected reference and the system accepts manual inputs from the stick.

AOA SYSTEM

The system consists of two AOA transmitters located on each side of the nose radome, AOA ports on the fuselage-mounted air data probe, a PSA, an AOA correction device in the CADC, an AOA indexer, and a vertical scale AOA indicator. In flight, the airflow direction is sensed by the conical AOA probes and the AOA ports of the fuselage-mounted air data probe. The AOA signals from all three sources are sent to the input selector/monitor of each of the four FLCC branches.

The AOA indicator, AOA indexer, and HUD AOA bracket display the correct AOA until NLG WOW. Therefore, accurate AOA indication is available throughout two-point aerodynamic braking. When NLG WOW occurs, all AOA indications are based on zero degrees.

The first AOA input signal or sensing failure is indicated by the FLCS FAULT caution light and the

 

 

 
 

PFL message FLCS AOA FAIL on the PFLD and the FLCS MFD page. A second failure is indicated by the FLCS warning light and the FLCS AOA WARN PFL message on the PFLD. When a first AOA failure is identified, the failed input is set to 11 degrees AOA. If a second AOA failure subsequently occurs, the 11-degree signal existing in the first failed branch prevents hardover AOA inputs and may provide AOA information for landing.

During DBU operation, AOA failures are not reported and a first AOA failure is not set to 11 degrees.

AOA Indicator

Refer to figure 1-45. The AOA indicator, located on the instrument panel, displays actual AOA in degrees. The indicator has a vertically moving tape display indicating an operating range of -5 to approximately +32 degrees. The tape is color coded from 9-17 degrees to coincide with the color-coded symbols on the AOA indexer.

AOA Displays

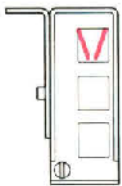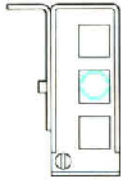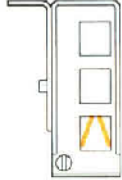INDICATOR	INDEXER	HUD DISPLAY	ATTITUDE
 15			
 13			
 11			

GR1F-16CJ-1-0053X37 ©

Figure 1-45.

AOA Indexer

Refer to figure 1-45. The AOA indexer, located on the top left side of the glareshield, consists of three color-coded symbols arranged vertically. The indexer provides a visual head-up indication of aircraft AOA by illuminating the symbols individually or in combinations as shown. The indexer lights display AOA correction (based on approximately 13 degrees AOA). This correction may be used during landing approaches as visual direction toward optimum landing AOA. The AOA indexer operates continuously with the LG handle up or down.

A dimming lever, located on the left side of the indexer, controls the intensity of the lighted symbols.

The indexer lights are tested by activation of the MAL & IND LTS switch on the TEST switch panel. The test should be performed with the dimming lever in the bright position.

HUD AOA Display

Refer to figure 1-45. The HUD AOA bracket and flightpath marker provide a visual head-up indication of aircraft AOA. The flightpath marker aligned with the top of the bracket indicates 11 degrees AOA. The flightpath marker centered on the bracket indicates 13 degrees AOA. The flightpath marker aligned with the bottom of bracket indicates 15 degrees AOA. The HUD AOA display is only available with the NLG lowered.

AIR DATA SYSTEM

Refer to figure 1-46. The air data system uses probes and sensors to obtain static and total air pressures, AOA, sideslip, and air temperature inputs. These air data parameters are processed and supplied to various systems.

Proper AOA transmitter and fuselage air data probe operation is essential for safe flight operation. Interference from foreign objects (especially ice, internal or external) or improperly installed AOA

transmitters can result in erroneous AOA data at weight off wheels. Reporting of false high AOA concurrently from two sources can cause the FLCC to command full nose down pitch which is impossible for the pilot to stop. Ground use of probe covers protects the system from foreign objects and moisture intrusion. Ice on/in the probes is eliminated by using probe heat prior to takeoff.

Air Data Probes

Two air data probes provide data inputs to the air data system. One air data probe (pitot probe) is mounted on the nose and provides a dual source of static and total pressure. The other air data probe is mounted on the forward right side of the fuselage and provides a source of AOA, sideslip, static pressure, and total pressure.

AOA Transmitters

The AOA transmitters are mounted on each side of the radome and each provides sensor data to the FLCS proportional to local AOA. The probe of the transmitter protrudes through the radome to align with the airstream.

Total Temperature Probe

The total temperature probe provides the CADC with an analog signal which is required for true airspeed and air density computation. The probe is located on the underside of the right forebody strake.

Static Pressure Ports

Two flush-mounted static pressure ports used for measuring sideslip are located on the fuselage left and right sides aft of the forward equipment bay doors. These two ports provide inputs to a differential pressure sensor for angle-of-sideslip measurement. The measurement is also used to compensate the third AOA source error and to verify the AOS derived from the INS.

Air Data System Schematic (Typical)

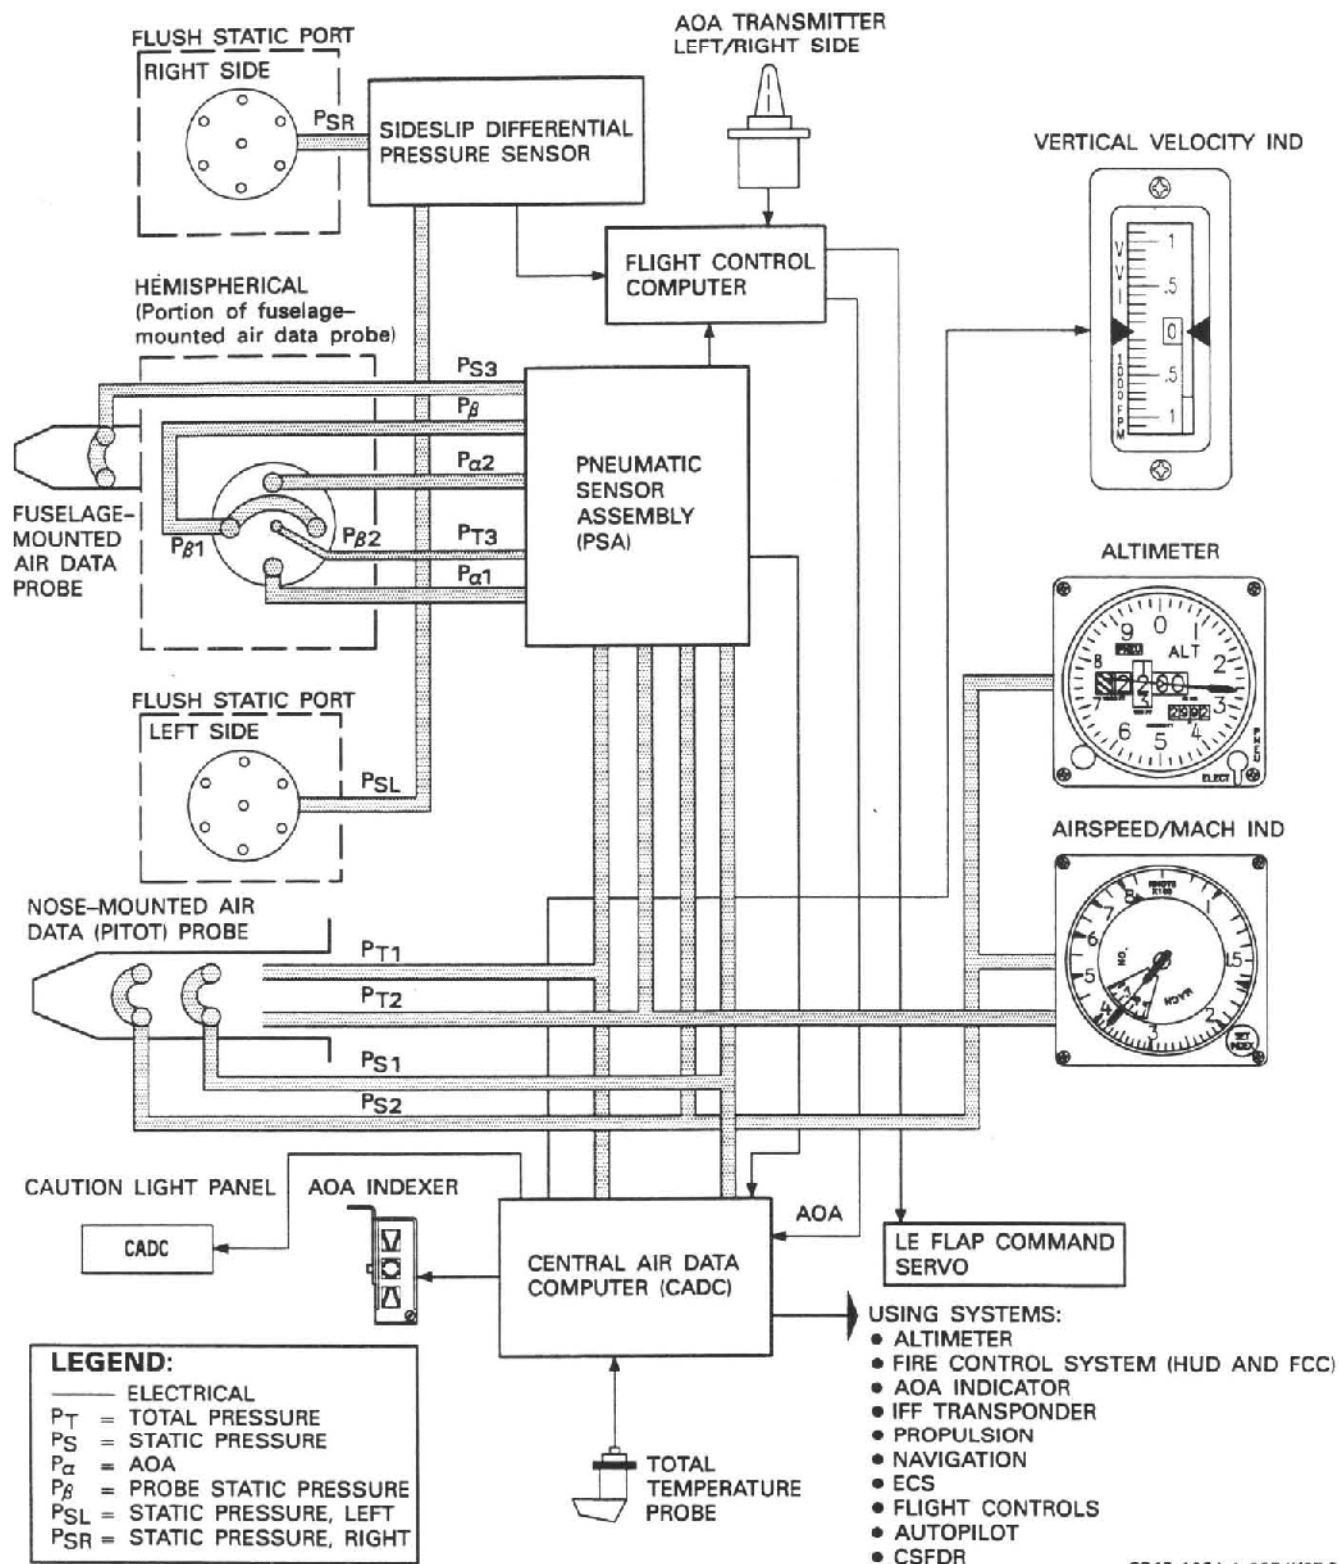


Figure 1-46.

Probe Heat Monitor

The probe heat monitor monitors current flow to the pitot, fuselage air data, and AOA probes (total temperature probe current is not monitored). If the current flow decreases below a certain value, the monitor illuminates the PROBE HEAT caution light. The monitor operates anytime the aircraft is airborne, regardless of the PROBE HEAT switch position.

PROBE HEAT Switch

The PROBE HEAT switch is located on the TEST switch panel. The pitot, fuselage air data, AOA, and the total temperature probe heaters are on anytime the aircraft is airborne, regardless of the PROBE HEAT switch position.

Functions are:

- **PROBE HEAT** – On the ground, this position energizes the pitot, fuselage air data, AOA, and the total temperature probe heaters and the probe heat monitor.
- **OFF** – On the ground, circuits deenergized.
- **TEST** – On the ground and in flight, this position performs a functional test of the probe heat monitoring system. The PROBE HEAT caution light flashes 3-5 times per second. If the caution light does not illuminate or if it illuminates but does not flash, the probe heat monitoring system is inoperative. The test feature does not verify proper operation of probe heaters.

PNEUMATIC SENSOR ASSEMBLY (PSA)

The PSA converts pneumatic inputs from the nose air data probe and the fuselage air data probe into electrical signals. The PSA supplies static and impact pressure signals and single AOA signals to the input selector/monitor of each branch of the FLCC. A ratio of impact to static pressure is

generated within the FLCC and used with AOA and static pressure to schedule the LEF's and for gain scheduling. The input selector/monitors also are capable of detecting single and dual malfunctions of the air data sensor signals. Single static or impact pressure failures illuminate the FLCS FAULT caution light and the FLCS ADC FAIL PFL on the PFLD and MFD. A dual malfunction of static or impact pressure signals results in the following:

- Illumination of the FLCS warning light, continued illumination of the FLCS FAULT caution light, and the FLCS ADC FAIL (for first failure) and STBY GAINS PFL messages.
- Activation of FLCS standby gains. Refer to STANDBY GAINS, this section.

Pitot probe tip icing results in erroneously low airspeed indications, illumination of the FLCS FAULT caution light with an FLCS ADC FAIL PFL message, and flight control gains scheduled for low airspeed conditions.


CENTRAL AIR DATA COMPUTER (CADC)

Refer to figure 1-47 for a signal flow diagram showing the systems interacting with the CADC. The CADC receives total and static pressures, AOA, and total temperature inputs, converts the inputs into digital data, and then transmits the data to the using systems. The CADC has continuous BIT and initiated BIT features; initiated BIT is run during the FLCS BIT.

CADC Caution Light

The CADC caution light, located on the caution light panel, illuminates whenever a malfunction in the CADC is detected. If there is a mach signal failure from the CADC, the ENGINE FAULT caution light also illuminates and the ENG MACH FAIL PFL is displayed on the PFLD. A CADC malfunction may result in an FLCS AOS FAIL PFL and deactivation of the AOS feedback function.

CADC and Interfacing Systems

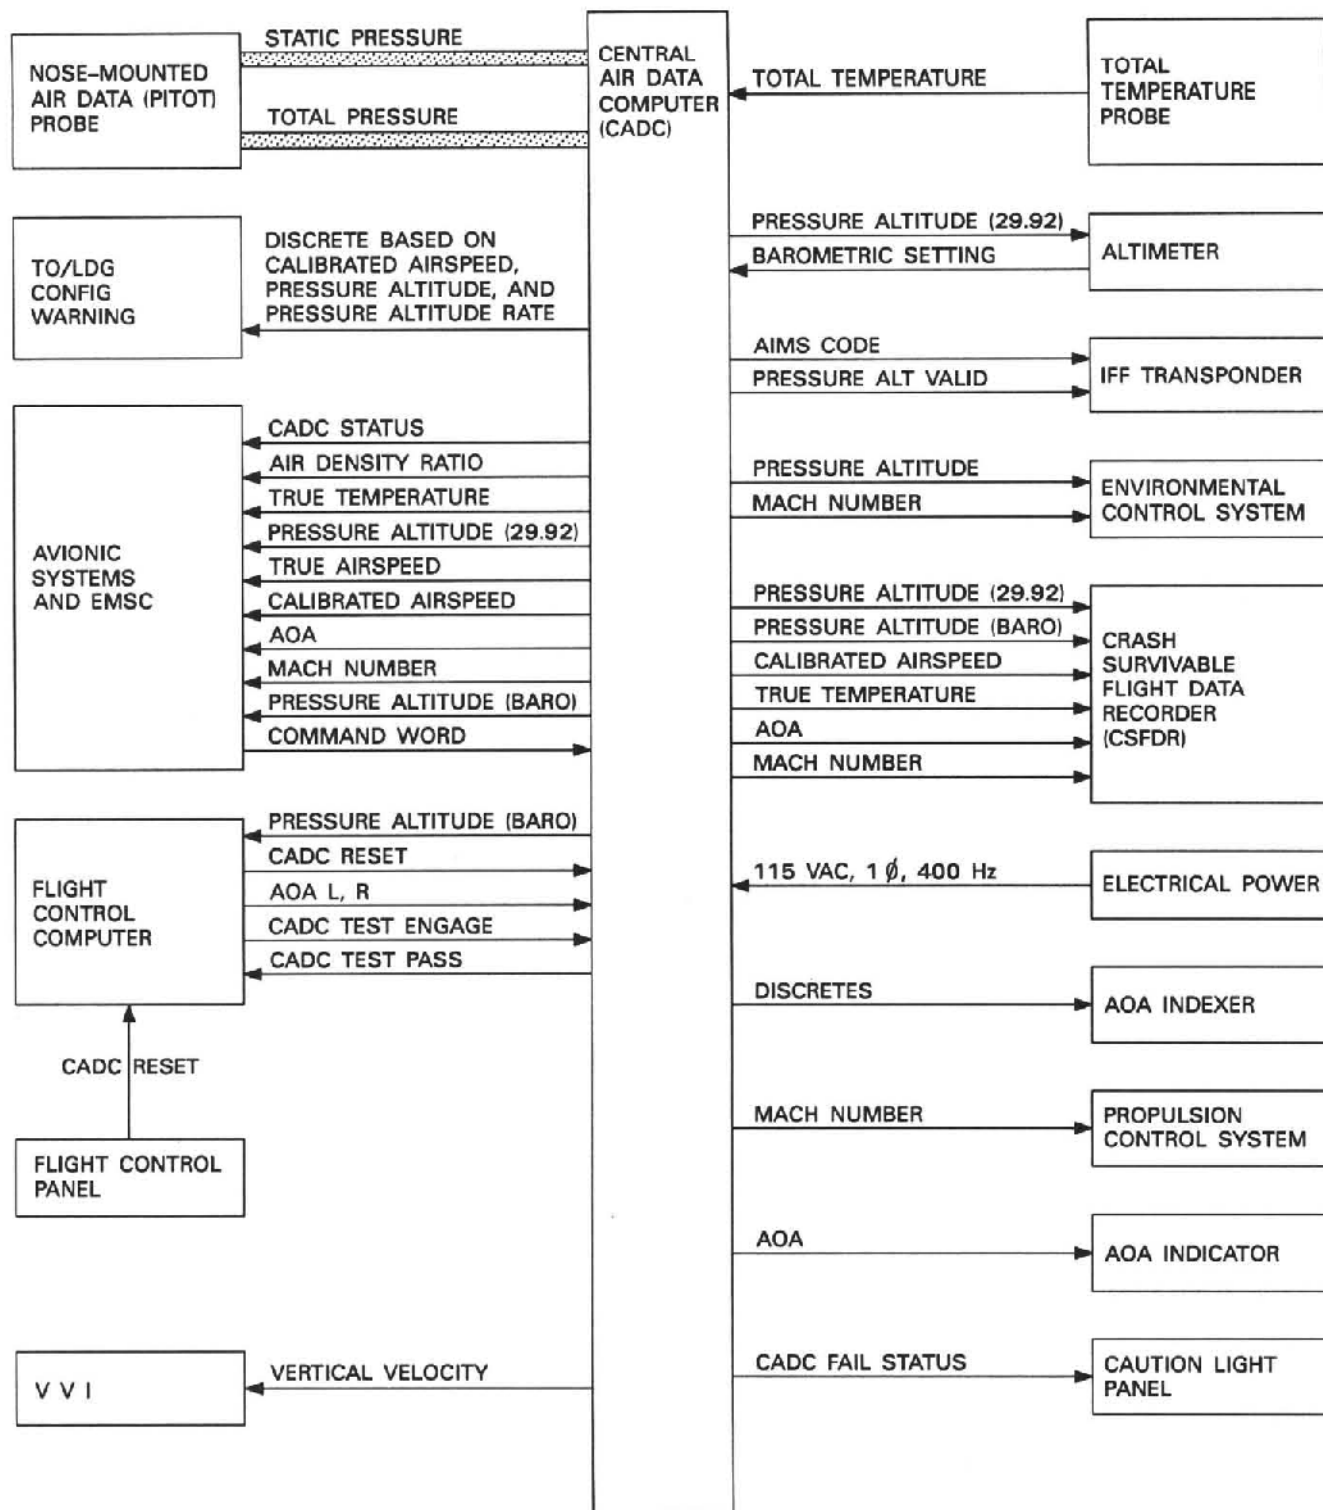

GR1F-16CJ-1-0055X37 ©

Figure 1-47.

WARNING, CAUTION, AND INDICATOR LIGHTS

Refer to figure 1-48. Warning, caution, and indicator lights are used throughout the cockpit to call attention to a condition or to allow an item to be easily read. Red warning lights and the amber MASTER CAUTION light are all located on the edge of the glareshield. All of the lights, except the MASTER CAUTION light, are described under their respective systems.

The warning and caution lights (except MASTER CAUTION) are not press-to-test or press-to-reset lights. Pressing these lights releases them from their modules and deactivates them. To reengage a released light, pull it out slightly and then press to reengage the module.

VOICE MESSAGE SYSTEM (VMS)

The VMS provides a warning message, a caution message, or discrete messages. The fixed volume voice message does not blank other audio and, therefore, may not be heard.

The warning message (WARNING-WARNING pause WARNING-WARNING) is automatically activated 1.5 seconds after illumination of any glareshield-mounted warning light.

The caution message (CAUTION-CAUTION) is automatically activated 7 seconds after the illumination of any light on the caution light panel except the IFF caution light. If the MASTER CAUTION light is reset immediately after its illumination, the caution message does not occur.

The warning/caution messages are reset for subsequent activation by:

- Resetting the WARN RESET on the ICP for voice warning.
- Resetting the MASTER CAUTION for voice caution.
- Eliminating the condition that originally activated the lights and messages.

Discrete voice messages are provided when certain conditions occur.

Messages are:

• ALTITUDE-ALTITUDE – Advises that:

- Descent is occurring after takeoff.
- Radar altitude is below the entered radar ALLOW value.
- Barometric altitude is below the entered MSL ALLOW value.

Refer to T.O. GR1F-16CJ-34-1-1 for a detailed description.

• BINGO-BINGO – Advises that the bingo fuel warning has been activated. Refer to T.O. GR1F-16CJ-34-1-1 for a detailed description.

• IFF – Not operable in flight (message is heard during ground test).

• JAMMER – Active if REQJAM option is turned on via the DED CMDS BINGO page. Advises that a threat should be jammed and pilot consent is required.

• LOCK-LOCK – Advises that radar has locked on to target. Refer to T.O. GR1F-16CJ-34-1-1 for a detailed description.

• PULLUP-PULLUP-PULLUP-PULLUP:

- In ATF or in manual TF (fly-up enabled), advises that an automatic fly-up has been initiated.
- In manual TF (fly-up disabled), advises that TF failure, SWIM-detected failure, g-limit warning, or obstacle warning has occurred.
- Advises that GAAF was activated.

• COUNTER – Active in semiautomatic mode only if REQCTR option is turned on via the DED CMDS BINGO page. Advises that a dispense command should be initiated.

• CHAFF-FLARE – Active if FDBK option is turned on via the DED CMDS BINGO page. Advises that CMDS has initiated a dispense program.


• LOW – Active if BINGO option is turned on via the DED CMDS BINGO page. Advises that expendable low quantity exists.

• OUT – Active if BINGO option is turned on via the DED CMDS BINGO page. Advises that expendable type is completely spent.

• LOCK – Not operable in flight (message is heard during ground test).




1-106

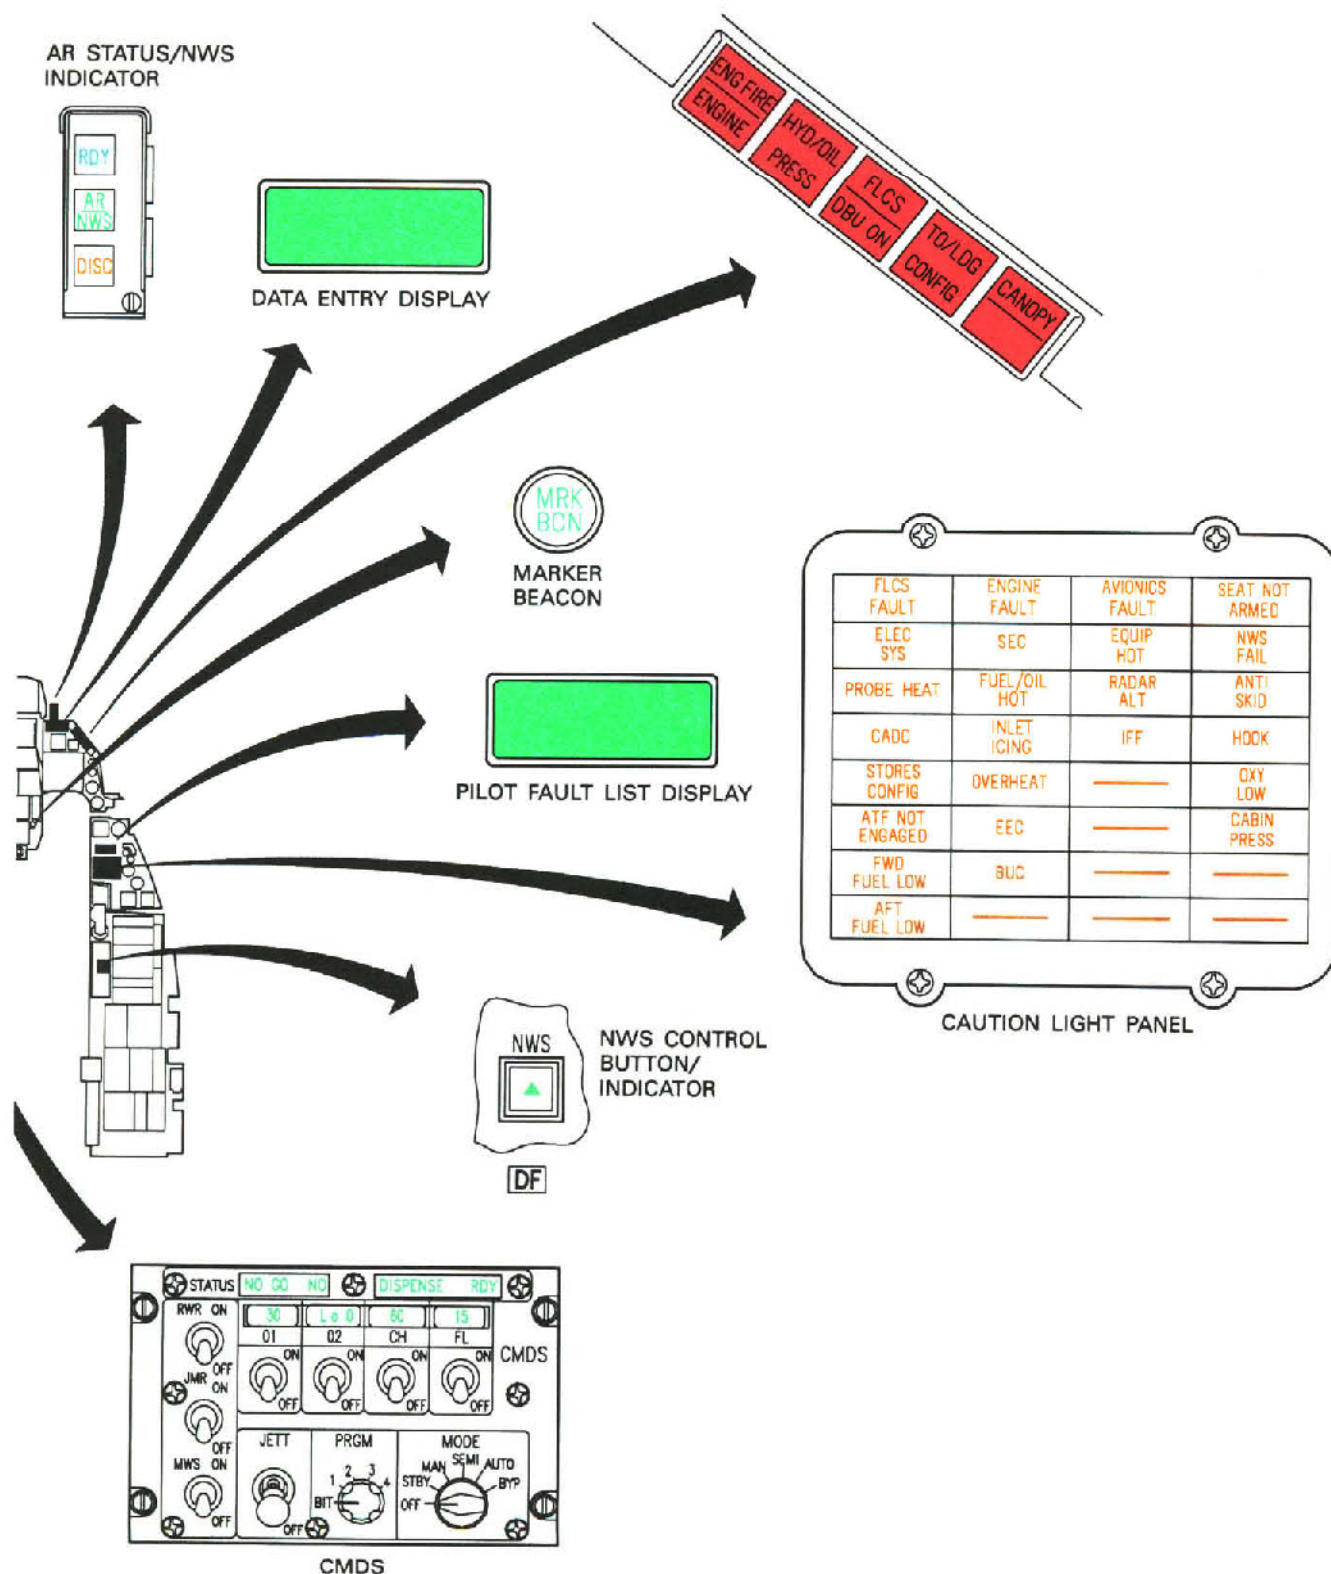

GR1F-16CJ-1-0056-2X37 ©

Figure 1-48. (Sheet 2)

Warning, Caution, and Indicator Lights **DR** (Typical)

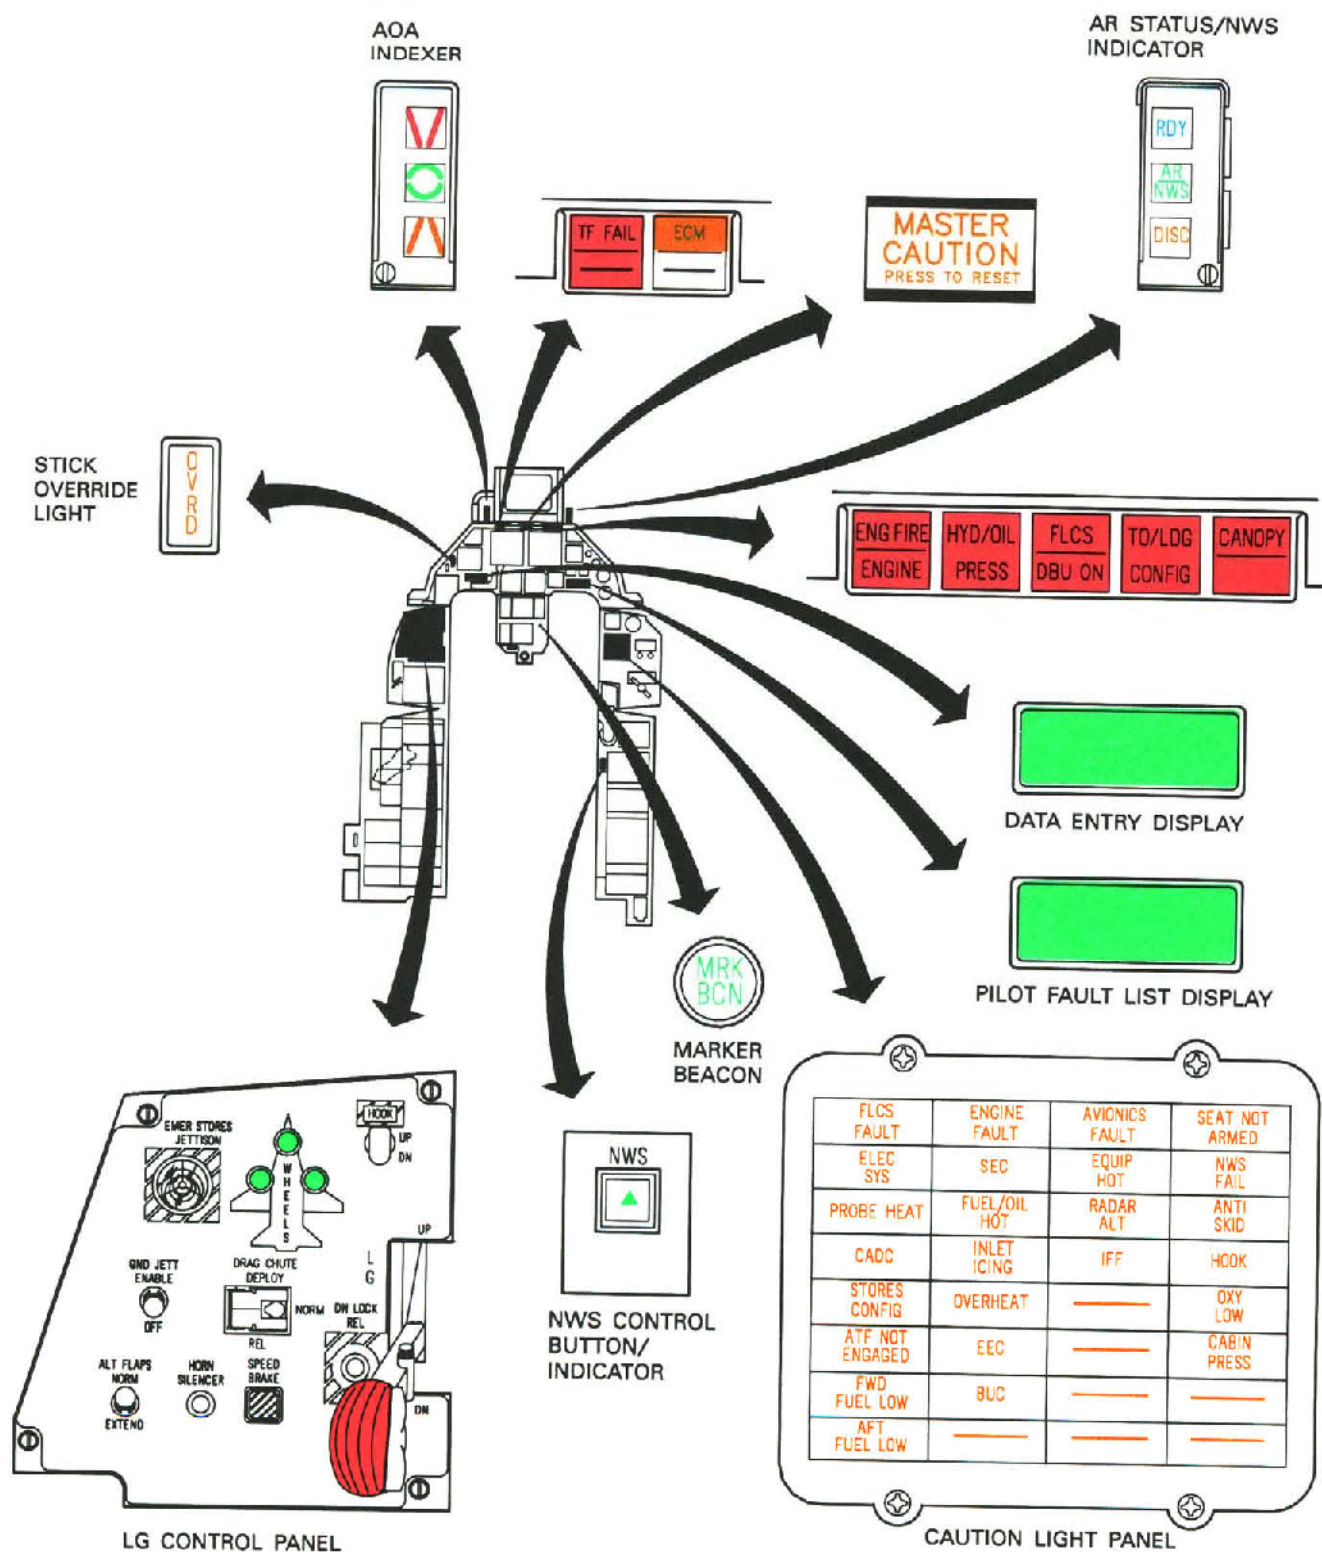

GR1F-16CJ-1-0057X37

Figure 1-48. (Sheet 3)

All voice messages have priority over the low speed warning tone and LG warning horn. Voice messages are also prioritized.

Priority sequence is:

- PULLUP.
- ALTITUDE.
- WARNING.
- JAMMER.
- COUNTER.
- CHAFF-FLARE.
- LOW.
- OUT.
- LOCK.
- CAUTION.
- BINGO.
- DATA.
- IFF.

The VMS does not function with WOW. However, it can be tested by pressing the MAL & IND LTS test button on the TEST switch panel. During test, each word is heard one time. The VMS is powered by battery bus No. 1.

VOICE MESSAGE Switch ☐ ☐

Refer to figure 1-3. The VOICE MESSAGE switch, located aft of the stick, is a two-position switch. Positions are marked VOICE MESSAGE and INHIBIT. During normal operation, the switch is safety-wired in VOICE MESSAGE. Placing the switch to INHIBIT disables all voice messages. INHIBIT should only be used to clear a voice message which repeats abnormally. Placing the switch back to VOICE MESSAGE enables normal operation.

MASTER CAUTION LIGHT

The MASTER CAUTION light, located on the ☐ ☐ left upper edge, ☐ center of the glareshield, illuminates shortly after an individual light on the caution light panel illuminates (except the IFF

caution light) to indicate a malfunction or specific condition exists.

The MASTER CAUTION light does not illuminate in conjunction with the warning lights. The MASTER CAUTION light may be reset by depressing the face of the light unless it is illuminated by the ELEC SYS caution light. For FLCS FAULT, ENGINE FAULT, and AVIONICS FAULT caution lights, the MASTER CAUTION light may also be reset by depressing the ☐ ☐ F-ACK, ☐ FAULT ACK button. The light should be reset as soon as feasible so that other caution lights can be monitored should additional malfunctions or specific conditions occur. Unless it is reset, the MASTER CAUTION light remains illuminated as long as the individual caution light is illuminated. ☐ The MASTER CAUTION light is a repeater and cannot be reset individually.

PILOT FAULT LIST DISPLAY (PFLD)


Refer to figure 1-49. The PFLD, located on the ☐ ☐ right auxiliary console, ☐ instrument panel, displays engine, avionics, and FLCS PFL's. In addition, a status line displays a system code to identify the system associated with an active fault(s).

Two types of PFL's are displayed: warning level and caution level. Warning level PFL's are associated with the FLCS (TFR system PFL's are considered to be associated with the FLCS) and are distinguished from caution level PFL's by a warning indicator which brackets the PFL message. When an FLCS warning level PFL occurs, the PFL message and FLCS code are displayed on the PFLD, the FLCS warning light illuminates, a flashing WARN is displayed in the HUD, and the voice warning message is activated. Caution level PFL's are associated with the FLCS, engine, and avionic system. When a caution level PFL occurs, the PFL message and system code are displayed on the PFLD, the appropriate system fault caution panel light illuminates, the MASTER CAUTION light illuminates, and the voice caution message is activated.

If multiple PFL's occur, they are displayed in the following priority order:

- FLCS warning level PFL's.
- FLCS caution level PFL's.
- Engine PFL's.
- Avionic PFL's.

Pilot Fault List Display (Typical)

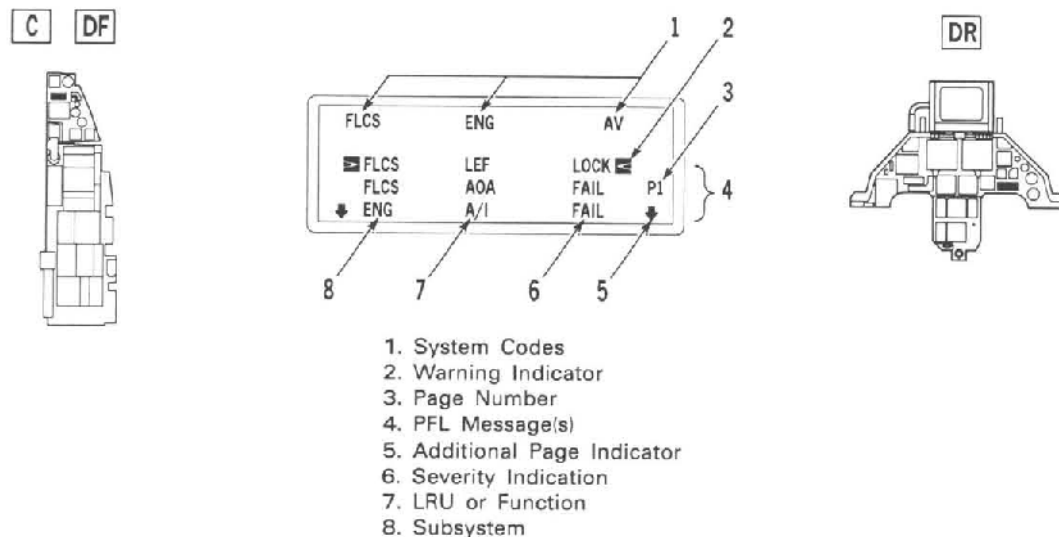

GR1F-16CJ-1-0058X37 ©

Figure 1-49.

Each page of the PFLD displays up to three PFL's. Additional pages are indicated by an arrow at each end of the bottom PFL and are accessed by depressing the **C** **DF** F-ACK, **DR** FAULT ACK button. Page numbers are also displayed when more than three PFL's are listed.

PFL's are acknowledged and recalled by depressing the **C** **DF** F-ACK, **DR** FAULT ACK button. Acknowledging a caution level PFL clears it from the PFLD and extinguishes the associated caution panel light and MASTER CAUTION light (if not previously reset). Acknowledging an FLCS warning level PFL clears it from the PFLD; however, the FLCS warning light remains on. Subsequent depressions of the **C** **DF** F-ACK, **DR** FAULT ACK button perform fault recalls. At the time of a fault recall, PFL's that are no longer being reported as a failure within the originating system are not displayed and are cleared from memory. The system code (FLCS, ENG, and/or

AV) provides a real time indication of the presence of active fault(s). If the code is displayed, there is at least one active PFL within the reported category. If no system codes are displayed, there are no active PFL's.

Eliminating a FLCS failure condition by corrective action (e.g., FLCS reset) prior to fault acknowledgment removes all FLCS failure indications. For engine and avionic failure conditions and for FLCS failure conditions after fault acknowledgment, elimination of the failure condition will automatically remove/clear the system codes but not the PFL messages. Fault acknowledgment (if not previously accomplished) and fault recall are required to remove the PFL message(s).

The PFLD blanks if the upfront controls fail. Refer to T.O. GR1F-16CJ-34-1-1 for additional PFLD information. The PFLD is powered by the nacelle essential ac bus.

CAUTION LIGHT PANEL

The caution light panel is located on the right auxiliary console.

The ELEC SYS caution light must be reset at the ELEC control panel with the ELEC CAUTION RESET button. The light may appear nonresettable in situations where the ELEC SYS caution light is rapidly flashing or cycling on and off.

The following caution lights may be reset with the **[C]** **[DF]** F-ACK **[DR]** FAULT ACK button:

- FLCS FAULT.
- ENGINE FAULT.
- AVIONICS FAULT.

MAL & IND LTS Test Button

The MAL & IND LTS test button, located on the TEST switch panel, operates relays which test the illumination of all warning, caution, and indicator lights, the LG warning horn, and voice messages.

LIGHTING SYSTEM

EXTERIOR LIGHTING

Refer to figure 1-50. All of the exterior lights except the landing/taxi lights are controlled from the EXT LIGHTING control panel.

Anticollision Strobe Light

The anticollision strobe light is masked to minimize projections in the cockpit.


Position/Formation Lights

Refer to figure 1-51.

Air Refueling Lights

The AR floodlight shares the housing of the top fuselage formation light. The light is directed aft to flood the receptacle, fuselage, wing, and empennage. The AR slipway contains embedded lights on each side of the slipway. These lights are enabled when the AIR REFUEL switch is in OPEN.

EXT LIGHTING Control Panel **[C]** **[DF]** (Typical)

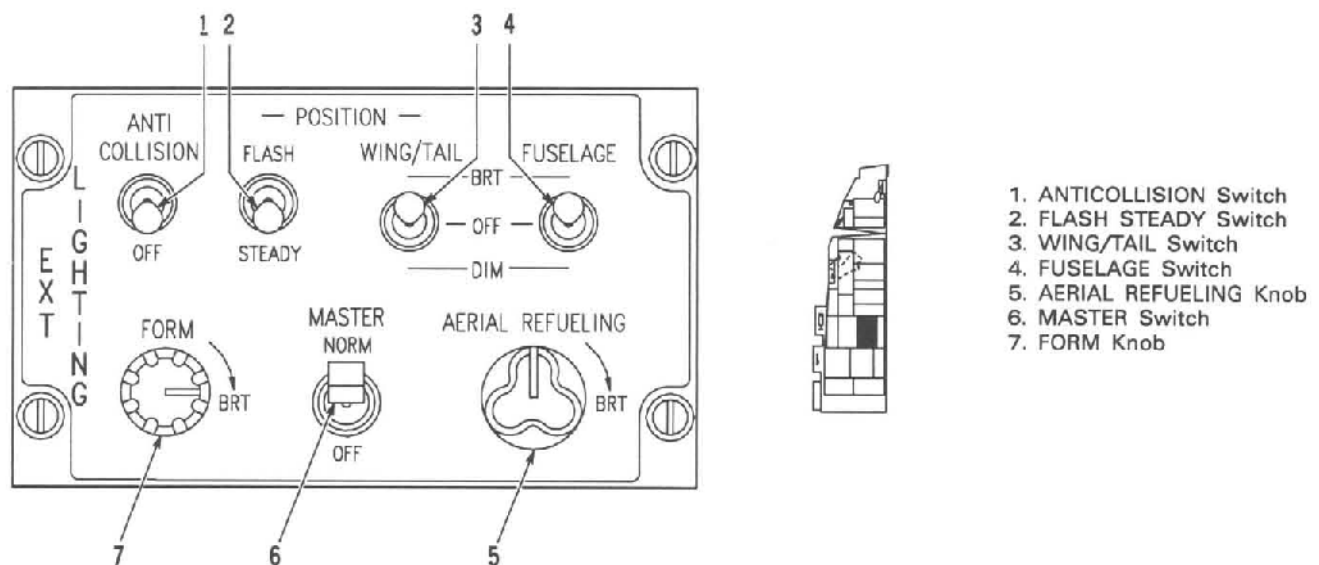

GR1F-16CJ-1-0059X37 ©

Figure 1-50. (Sheet 1)

EXT LIGHTING Control Panel **C** **DF**

(Typical)

CONTROL	POSITION	FUNCTION
1. ANTICOLLISION Switch	ANTICOLLISION	Turns on the white anticollision strobe (flash) light on top of vertical tail
	OFF	Turns off the anticollision strobe light
2. FLASH STEADY Switch	FLASH	Causes the lights controlled by WING/TAIL switch to flash when turned on
	STEADY	Causes the lights controlled by WING/TAIL switch to light steady when turned on
3. WING/TAIL Switch	BRT	Turns on the red and green wingtip and inlet lights and white light at trailing edge of vertical tail bright
	OFF	Turns off the white light at trailing edge of vertical tail and the inlet lights. Allows the red and green wingtip lights to be controlled by the FORM knob
	DIM	Turns on the red and green wingtip lights dim. Turns on the red and green inlet lights and the white light at the trailing edge of the vertical tail dim
4. FUSELAGE Switch	BRT	Turns on the white floodlights at the base of the vertical tail bright
	OFF	Turns off the white floodlights
	DIM	Turns on the white floodlights dim
5. AERIAL REFUELING Knob	Variable from off to BRT	Varies the AR slipway lights from off to bright if AIR REFUEL switch is in OPEN
6. MASTER Switch	NORM	Enables all exterior lights except landing and taxi lights
	OFF	Disables all exterior lights except landing and taxi lights
7. FORM Knob	Variable from off to BRT	Varies the white formation lights on top and bottom of fuselage and, when the WING/TAIL switch is OFF, varies the red and green wingtip lights from off to bright

Figure 1-50. (Sheet 2)

Exterior Lighting (Typical)

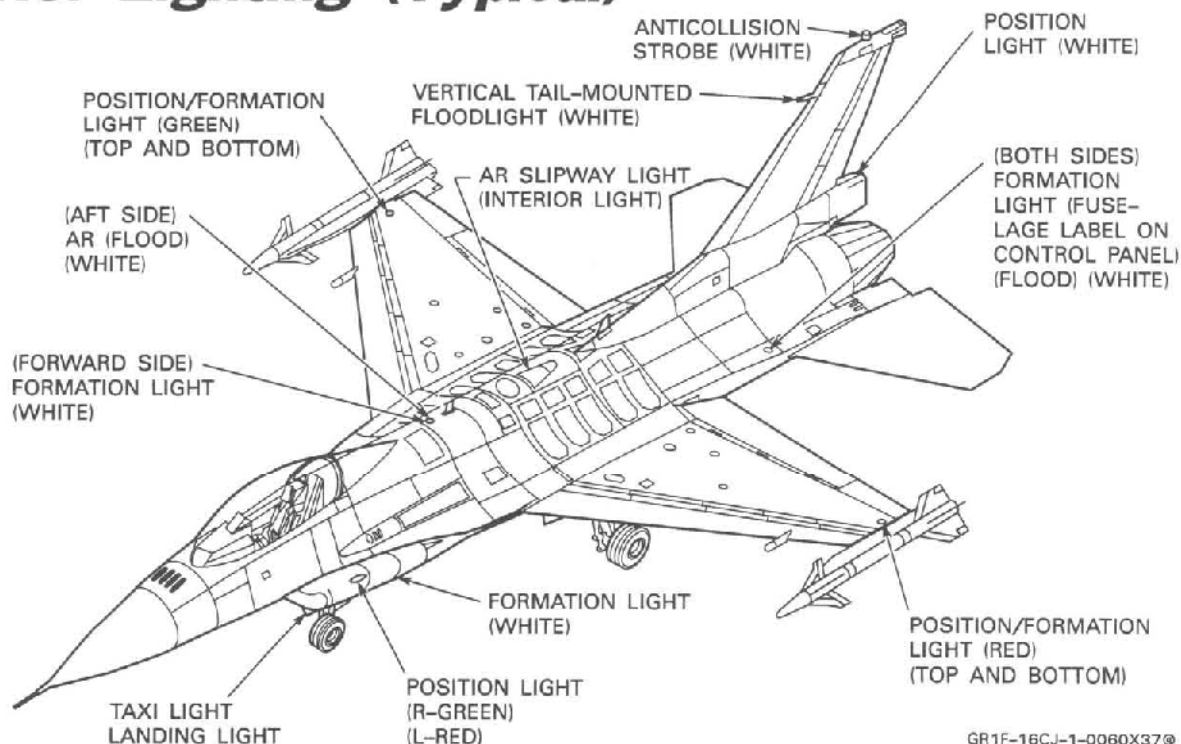


Figure 1-51.

Vertical Tail-Mounted Floodlight

A white light is mounted on the upper leading edge of the vertical tail and is directed forward to flood the AR receptacle and upper fuselage. The light illuminates by the OPEN position of the AIR REFUEL switch.

Landing and Taxi Lights

A white landing and taxi light assembly is located on the NLG door. The landing light is angled to illuminate the landing area. The lights are turned on by the three-position LANDING TAXI lights switch located on the LG control panel. The switch has positions of LANDING, OFF, and TAXI. The light goes off during LG retraction if the switch is left in either the LANDING or TAXI position.

INTERIOR LIGHTING

Refer to figure 1-52. The interior LIGHTING control panel, located on the right console, contains the power and intensity controls for the primary (console and

instrument) and secondary (flood) lighting systems for the cockpit. The HIGH INT position of the FLOOD CONSOLES knob provides thunderstorm lighting.

PRIMARY CONSOLES Knob

The PRIMARY CONSOLES knob has a cw arrow pointing toward BRT. Rotating the knob cw varies the intensity of the primary console and left auxiliary console lighting from dim to bright.


PRIMARY INST PNL Knob

The PRIMARY INST PNL knob has a cw arrow pointing toward BRT. Rotating the knob cw varies the intensity of the forward instrument panel and right auxiliary console lighting from off to bright.

DATA ENTRY DISPLAY Knob

The DATA ENTRY DISPLAY knob has a cw arrow pointing toward BRT. The knob controls the lighting of the DED and PFLD from dim to bright.

Interior **LIGHTING** Control Panel (Typical)

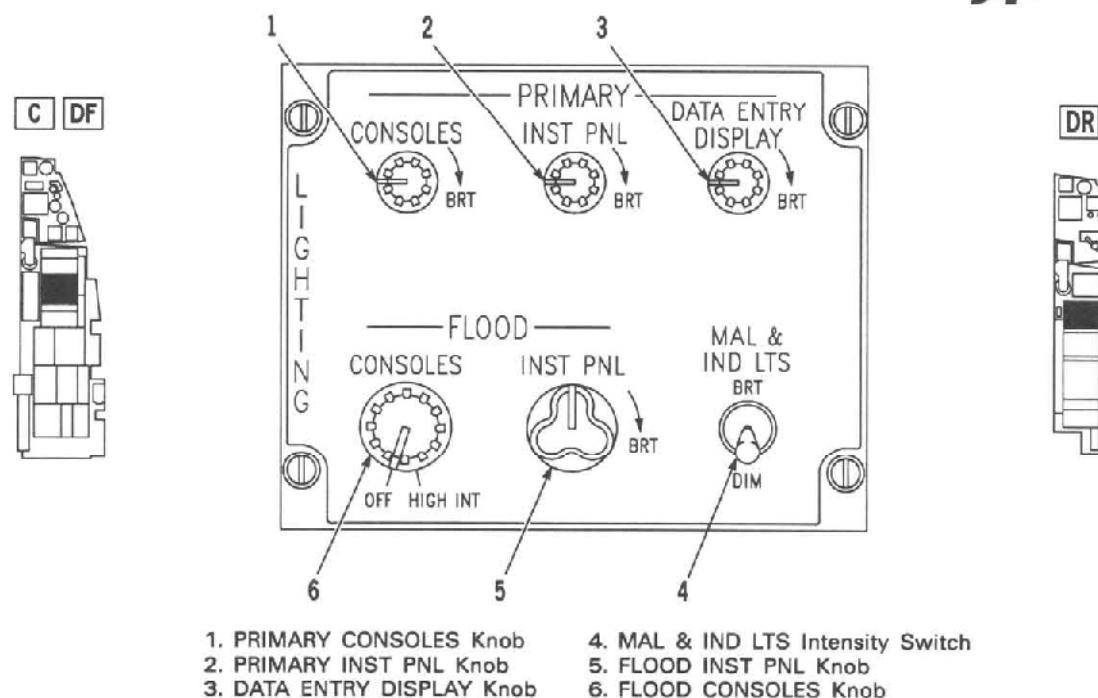

GR1F-16CJ-1-0061X37 ©

Figure 1-52.

MAL & IND LTS Switch

The MAL & IND LTS switch has positions of BRT and DIM and a spring-loaded unmarked center position. If the PRIMARY INST PNL knob is on, momentary activation of the switch to DIM places the lighting system to the dim condition. The system automatically returns to the BRT condition if the FLOOD CONSOLES knob is turned past the detent to HIGH INT, if the PRIMARY INST PNL knob is turned off, or if emergency dc power is lost. The BRT condition can be manually selected anytime. The switch controls the light intensity of all the warning, caution, and indicator lights except the following individually dimmed lights:

- AOA indexer.
- AR/NWS indexer.
- DED.
- ECM control panel.
- MFD's.

- PFLD.

- TWS indicators.

FLOOD INST PNL Knob

The FLOOD INST PNL knob has a cw arrow pointing toward BRT. Rotating the knob cw varies the floodlights intensity from off to bright.

FLOOD CONSOLES Knob

The FLOOD CONSOLES knob rotates from OFF to HIGH INT. Rotating the knob cw varies the console floodlights intensity from off to bright. If rotated to HIGH INT, the MAL & IND LTS and instrument panel floodlights automatically go to bright and the alphanumeric displays controlled by the DATA ENTRY DISPLAY knob go to the highest intensity level. CCW rotation past a certain point restores the alphanumeric displays to the intensity level set by the DATA ENTRY DISPLAY knob, but the MAL & IND LTS switch must be manually reset to DIM, if dim is desired.

Utility Light

Refer to figure 1-53. The utility light, located on the right console, includes three controls: a pushbutton switch to allow momentary operation at the highest intensity level, an OFF DIM BRT rotary knob to allow continuous operation at any desired intensity level, and a lens housing which, when rotated, adjusts the beam from flood to spot. To release the light from its stowed position, lower the knurled collar at the base of the light and it will pop free. The light can be locked back into position by placing the body of the light parallel to the sidewall fairing and pushing down firmly on the light assembly. With the canopy closed, the utility light may be attached to an adjustable sliding holder located on the right body positioning handle (towel rack). The light is powered by battery bus No. 1.

Cockpit Spotlights

Refer to figure 1-53. The cockpit spotlights are located under the upper left and right glareshields. In the stowed position (horizontal, facing forward), the spotlight is off. The spotlight is turned on by pulling the spotlight barrel downward. Illumination intensity

is controlled by turning the knurled barrel (dimmer). To turn the spotlight off, return it to the stowed position. Overrotation of the knurled barrel may cause breakage of the bulb or rheostat. The lights are powered by battery bus No. 1.

ESCAPE SYSTEM

CANOPY

The canopy is a two-piece, plastic, bubble-type, transparent enclosure. The forward part is a single-piece windshield-canopy transparency, which is hinged at the aft end and is unlatched, opened, or closed/latched by an electrically operated actuator with a manual backup. ☐ A smaller fixed transparency fairings to the fuselage aft of the seat. The canopy may be jettisoned by internal controls for in-flight or ground escape and by external controls for ground rescue. An inflatable pressurization seal on the cockpit sill mates with the edge of the movable canopy. A noninflatable rubber seal on the canopy prevents the entry of water when the cockpit is not pressurized.

Utility Light and Spotlights (Typical)

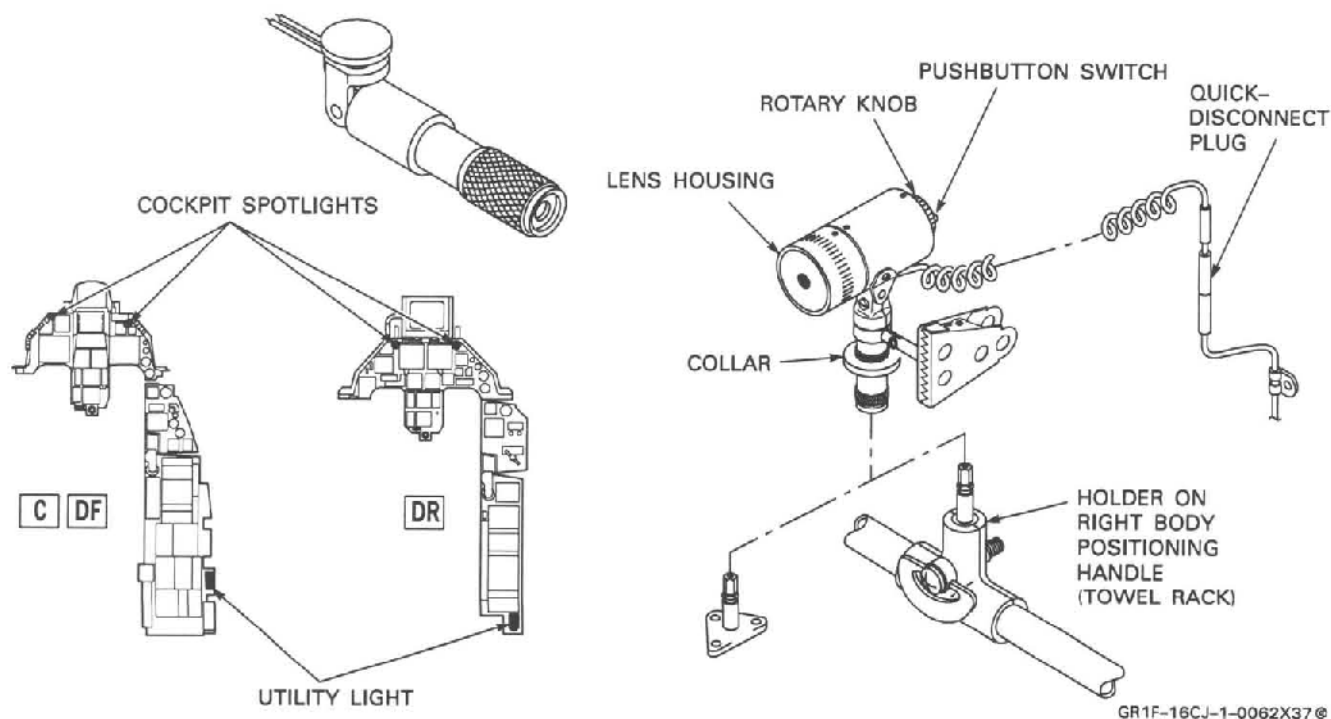


Figure 1-53.

The canopy provides some bird strike protection. Bird strikes on centerline at approximately eye level may produce enough canopy deflection to shatter the HUD combiner glass and cause rearward propagation of a deflection wave. Deflection of the canopy in the area of the pilot's helmet has been observed to be approximately 3/4 to 1-1/4 inches. Impacts off center may not shatter the HUD glass. High energy bird strikes may cause canopy penetration or larger deflection waves.

CANOPY CONTROLS AND INDICATORS

Refer to figure 1-54.

MANUAL CANOPY CONTROL Handcrank

[C] [DF] An internal MANUAL CANOPY CONTROL handcrank manually performs the same function as the canopy switch. Due to the strength required to open the canopy with the handcrank, the method should be considered a last resort.

An external flush-mounted CANOPY handcrank receptacle just opposite the inside manual drive is used for ground crew manual operation of the canopy.

Canopy Handle **[C] [DF]**

The canopy handle, located on the canopy sill just forward of the throttle, hinges down to cover and protect the internal canopy switch. The handle also functions to inflate/deflate the canopy pressure seal, to turn the CANOPY warning light off/on, and to mechanically prevent the canopy actuator from unlatching. The canopy handle should be in the up (unlock) position prior to lowering the canopy.

CANOPY JETTISON

Pulling the external canopy jettison D-handle, located on either side of the fuselage, initiates the canopy jettison sequence independent of seat ejection.

Depressing the button, located on either side of the internal CANOPY JETTISON T-handle, and pulling the T-handle initiates the canopy jettison sequence independent of seat ejection.

Pulling the ejection handle (PULL TO EJECT), located on the front of the ejection seat, initiates the

canopy jettison sequence followed by the seat ejection sequence.

EJECTION SEAT

Refer to figure 1-55. The ACES II ejection seat is a fully automatic emergency escape system. One of three ejection modes is automatically selected. Mode 1 is a low airspeed, low altitude mode during which the recovery parachute assembly is deployed almost immediately after the ejection seat departs the aircraft. Mode 2 is an intermediate airspeed, low altitude mode during which a drogue chute is first deployed to slow the ejection seat followed by the deployment of the recovery parachute assembly. Mode 3 is a high airspeed/high altitude mode in which the sequence of events is the same as mode 2, except that automatic pilot/seat separation and deployment of the recovery parachute assembly are delayed until safe airspeed and altitude are reached. Controls are provided to adjust seat height and lock shoulder harness.

Ejection Handle

The ejection handle (PULL TO EJECT) is sized for one-handed or two-handed operation and requires a pull of 40-50 pounds to activate. The handle remains attached to the seat by a wire cable after activation.

SHOULDER HARNESS Knob

The SHOULDER HARNESS knob unlocks the inertia reel when in the aft position and locks it when in the forward position. If high longitudinal deceleration force or high shoulder harness strap payout velocities are encountered, the inertia reel automatically locks.


EMERGENCY MANUAL CHUTE Handle

The EMERGENCY MANUAL CHUTE handle is locked while the ejection seat is in the aircraft. After ejection, the handle provides a backup to the automatic pilot/seat separation and recovery parachute deployment system. The handle must be pulled approximately 6 inches. The first 2 inches of pull ballistically deploys the recovery parachute assembly; however, the seat will still be attached by the lapbelt and the inertia reel straps, and the survival kit under the latched seat pan lid. Continued pull releases the lapbelt and inertia reel straps and unlatches the seat pan lid.

Canopy Controls and Indicators (Typical)

NOTE:

If the internal canopy switch is in the up position, the canopy cannot be closed using the external canopy switch.

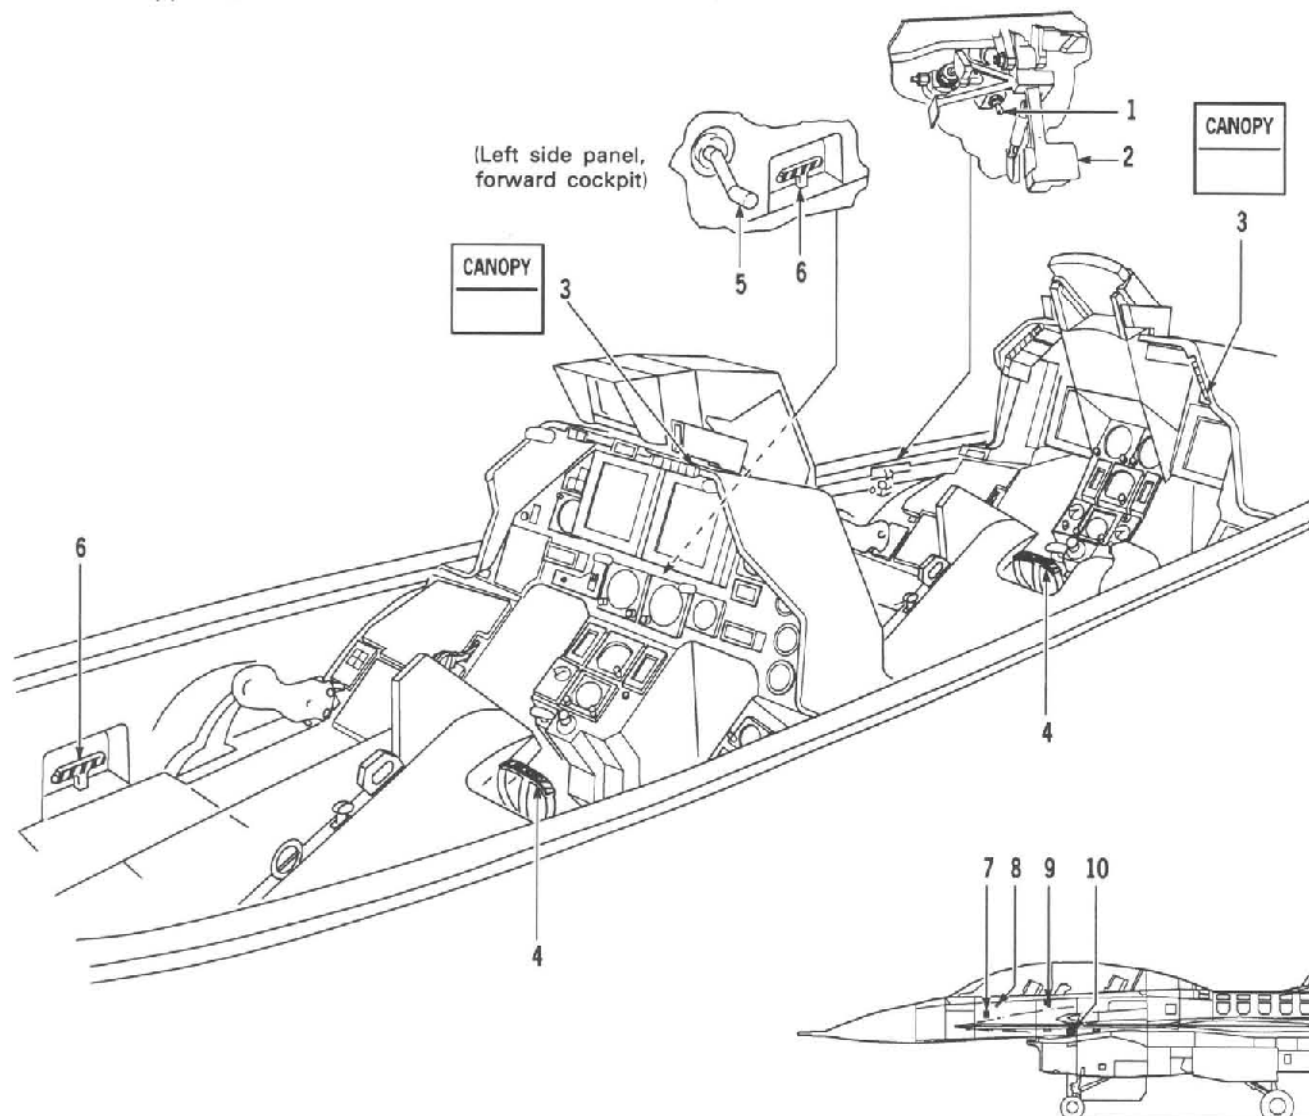

1. **[C] [DF]** Canopy Switch (internal) (spring-loaded to center from down position)
2. **[C] [DF]** Canopy Handle (shown in unlocked position)
3. CANOPY Warning Light (Red)
4. Ejection Handle (PULL TO EJECT)
5. **[C] [DF]** MANUAL CANOPY CONTROL Handcrank
6. CANOPY JETTISON T-Handle
7. Canopy Jettison D-Handle (each side of fuselage)
8. Canopy Lock Access Plug (external)
9. CANOPY Handcrank Receptacle (external)
10. Canopy Switch (external) (spring-loaded to center)


GR1F-16CJ-1-0063X37©

Figure 1-54. (Sheet 1)

Canopy Controls and Indicators (Typical)

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION
1. ☐ ☐ Canopy Switch (internal) (spring-loaded to center from down position)	Up	Opens canopy
	Center	Stops canopy motion
	Down	Closes and latches canopy
2. ☐ ☐ Canopy Handle	Up	Unlocks canopy
	Down	Locks canopy
3. CANOPY Warning Light (red)	Off	Canopy locked
	On	Canopy unlocked
4. Ejection Handle (PULL TO EJECT)	Pull	Jettisons canopy and ejects seat
5. ☐ ☐ MANUAL CANOPY CONTROL Handcrank	Rotate ccw	Opens canopy
	Rotate cw	Closes and latches canopy
6. CANOPY JETTISON T-Handle	Pull (depress either button)	Jettisons canopy independent of seat ejection
7. Canopy Jettison D-Handle (each side of fuselage)	Pull (approximately 6 feet) (either handle)	Jettisons canopy independent of seat ejection
8. Canopy Lock Access Plug (external)	Remove access plug	Access to unlock internal canopy handle
		Refer to EMERGENCY ENTRANCE AND CREW RESCUE, Section III
9. CANOPY Handcrank Receptacle (external)	Rotate cw	Opens canopy
	Rotate ccw	Closes and latches canopy
10. Canopy Switch (external) (spring-loaded to center position)	☐ Up	Opens canopy
	☐ Aft	
	Center	Stops canopy motion
	☐ Down	Closes and latches canopy
	☐ Fwd	

 Figure 1-54. (Sheet 2)



1-119

Ejection Seat Controls and Indicators (Typical)

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION
1. Emergency Oxygen Green Ring	Pull	Activates emergency oxygen
2. SHOULDER HARNESS Knob	UNLOCKED (aft)	Unlocks inertia reel and allows free movement of shoulder harness
	LOCKED (forward)	Locks inertia reel and prevents forward movement of shoulder harness
3. Ejection Safety Lever	Up	Prevents pulling of ejection handle
	Down	Allows ejection handle to be pulled
4. RADIO BEACON Switch	MAN (green dot visible)	Selects manual mode
	AUTO (red dot visible)	Selects automatic mode
5. Survival KIT DEPLOYMENT Switch	A (forward)	Selects automatic mode
	M (aft)	Selects manual mode
6. Ejection Handle (PULL TO EJECT)	Pull	Jettisons canopy and ejects seat
7. EMERGENCY MANUAL CHUTE Handle	Pull	After ejection – ballistically deploys the recovery parachute assembly and releases lapbelt and inertia reel straps and unlatches the seat pan lid
8. Survival Kit Ripcord	Pull	Deploys survival kit
9. Electronic Recovery Sequencer Battery Indicator	White	Sequencer thermal batteries not activated – operational
	Red	Sequencer thermal batteries activated – not operational
10. SEAT NOT ARMED Caution Light (amber)	On	Ejection safety lever up
	Off	Ejection safety lever down
11.  EJECTION MODE SEL Handle (LIFT TURN)	AFT/NORM/SOLO	Selects ejection mode
		Refer to F-16D AIRCRAFT, this section

Figure 1-55. (Sheet 2)

Ejection Safety Lever

The ejection safety lever mechanically safeties (in the up/vertical position) or arms (in the down/horizontal position) the seat ejection handle.

SEAT NOT ARMED Caution Light

The SEAT NOT ARMED caution light, located on the caution light panel, illuminates when the ejection safety lever is in the up (vertical) position.  The caution lights illuminate independently of each other.

SEAT ADJ Switch

Refer to figure 1-3. The SEAT ADJ switch is located on the right cockpit sidewall outboard of the stick. Center position is spring-loaded off. The up position raises the seat, while the down position lowers the seat. The seat adjustment motor is protected by a thermal relay which interrupts electrical power when overheated. After a 1-minute cooling period, the motor should operate normally. The motor is powered by nonessential ac bus No. 1.

Shoulder Harness Straps/Parachute Risers

The upper torso restraints consist of shoulder harness straps which also act as parachute risers. The inertia reel straps are attached to the parachute risers.

Inertia Reel Straps

The inertia reel straps may be manually released after ejection by pulling the EMERGENCY MANUAL CHUTE handle approximately 6 inches.

Lapbelt

The lower torso restraint is the lapbelt. The lapbelt may be released after ejection by pulling the EMERGENCY MANUAL CHUTE handle approximately 6 inches.

Survival Kit

The survival kit is stowed under the seat pan lid. The KIT DEPLOYMENT switch has a manual (aft) or automatic (forward) position which selects the mode

of postejection survival kit deployment. Pulling the kit ripcord handle deploys the kit which remains attached by a 25-foot lanyard.

RADIO BEACON Switch

The RADIO BEACON switch allows the pilot to select AUTO or MAN. In AUTO (red dot visible), the beacon activates after pilot/seat separation. In MAN (green dot visible), the beacon does not activate. The beacon may be activated when on the ground if the RADIO BEACON switch is placed to AUTO or it can be removed and manually operated as desired. The beacon transmits on 243.0 MHz.

Emergency Oxygen

Emergency oxygen supply is automatically activated during ejection or may be manually activated by pulling the emergency oxygen green ring.

EJECTION SEAT OPERATION

Seat ejection is initiated by pulling the ejection handle (PULL TO EJECT). This action retracts the shoulder harness straps and locks the inertia reel, fires the initiators for canopy jettison, and ignites two canopy removal rockets. As the canopy leaves the aircraft, lanyards fire two seat ejection initiators.

A rocket catapult propels the seat from the cockpit exposing the seat environmental sensor pitots and activating the emergency oxygen. The recovery sequencer selects the correct ejection mode, ignites the stabilization package (STAPAC) rocket and the trajectory divergence rocket, and (if in mode 2 or 3) initiates the drogue gun.

If the automatic pilot/seat separation and recovery parachute deployment system fails, pulling the EMERGENCY MANUAL CHUTE handle approximately 6 inches ballistically deploys the recovery parachute assembly and releases the lapbelt and inertia reel straps and unlatches the seat pan lid.

The liferaft, survival kit, and radio beacon antenna are deployed following pilot/seat separation when the survival KIT DEPLOYMENT switch is in AUTO. If the parachute is equipped with SEAWARS, the parachute risers are automatically released within 2 seconds after entering saltwater.

T.O. GR1F-16CJ-1

Seat ejection also automatically performs an escape zeroize operation by purging coded electronic information associated with the following equipment:

- DTC.
- FCC.
- GPS.
- IFF.
- MFDS.
- TWS.

EJECTION MODE ENVELOPES

Refer to figure 1-56.

EJECTION SEQUENCE TIMES

Refer to figure 1-57.


CANOPY JETTISON/SEAT EJECTION

Refer to figure 1-58.

EJECTION SEAT PERFORMANCE

Refer to figure 1-59.

Ejection Mode Envelopes

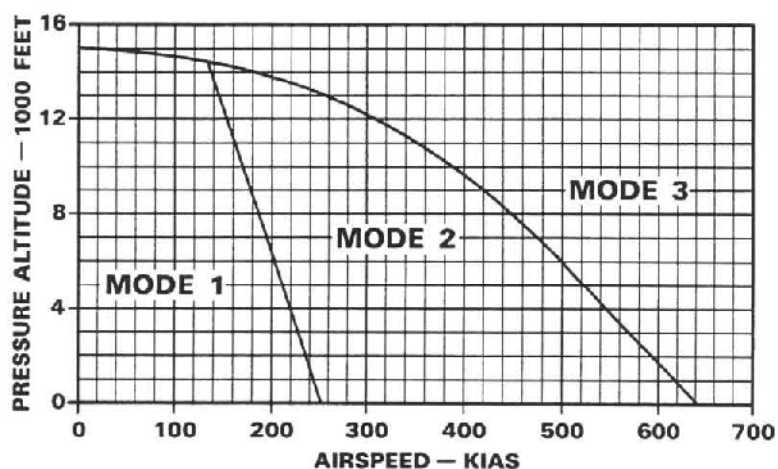

1F-16X-1-0011X@


Figure 1-56.

Ejection Sequence Times


NOTE:	EVENT	TIME (SECONDS)	
		Mode 1	Mode 2
- In mode 3, events after drogue deployment are delayed until within mode 2 envelope. Recovery parachute deploys 1 second after entering mode 2 envelope. D Times in the aft/forward sequence increase to include a 0.33-second delay for the rear seat and a 0.73-second delay for the forward seat. In SOLO, the forward seat is delayed 0.33 second. - Canopy jettison time varies from 0.75 second at 0 KIAS to 0.13 second at 600 KIAS. Ejection begins when canopy jettison initiates seat lanyards.	1. Catapult Initiation	0.0	0.0
	2. Drogue Gun Fired	NA	0.16
	3. Drogue Chute Inflated	NA	0.38
	4. Parachute Fired	0.20	1.17
	5. Seat/Drogue Separation	NA	1.32
	6. Pilot/Seat Separation	0.45	1.42
	7. Recovery Parachute Inflated	1.80	2.90
	8. Survival Kit Deployed	5.80	6.90

Figure 1-57.

MODE 1

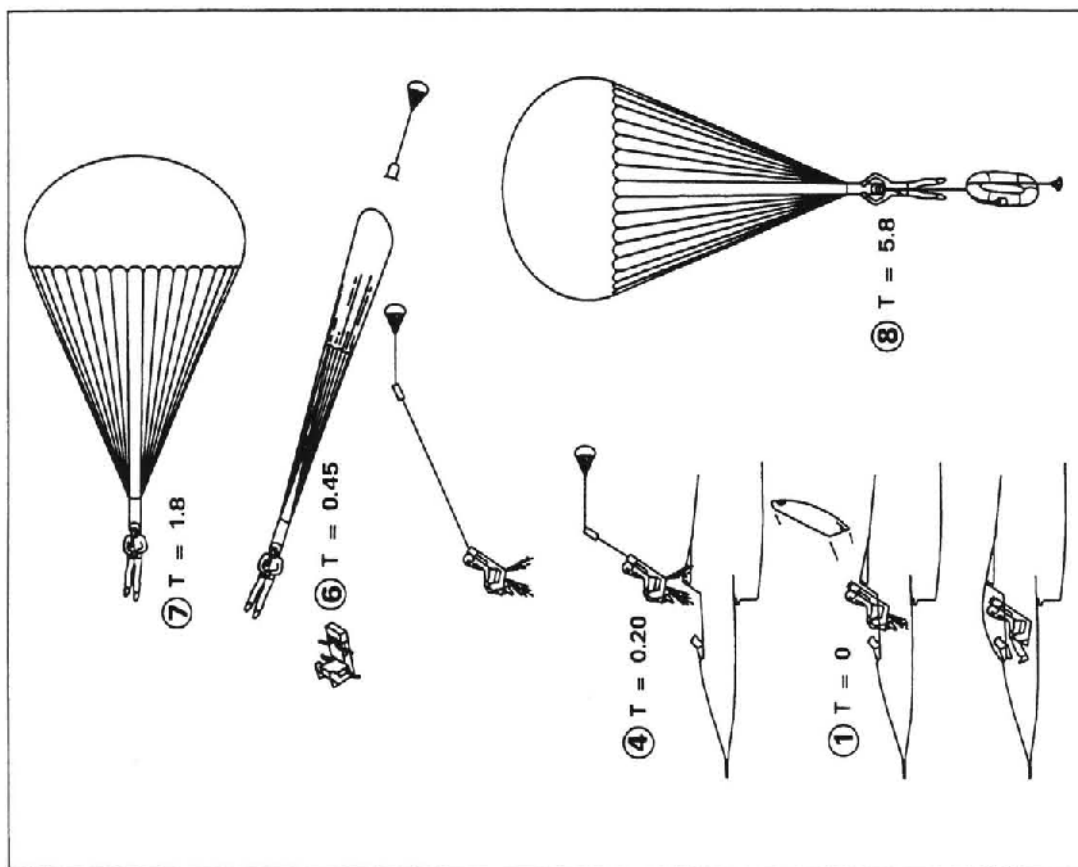

MODE 2

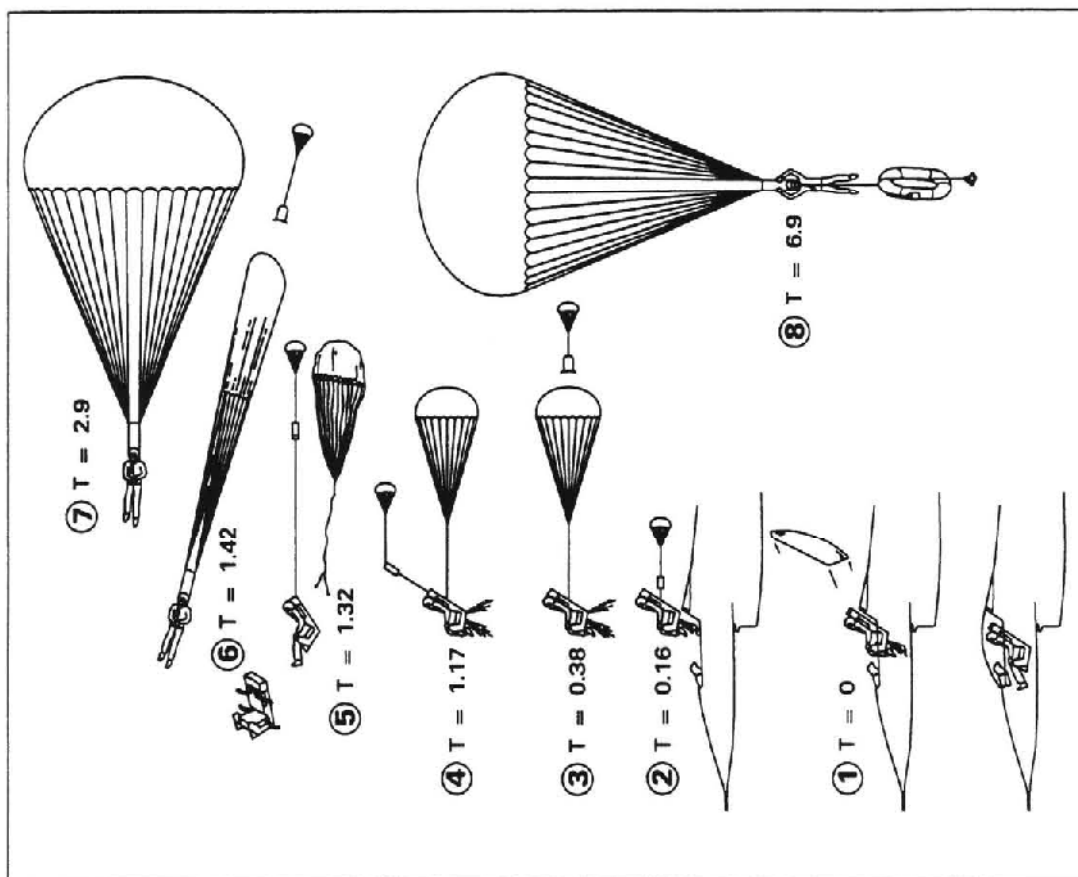

1F-16X-1-0012X


Figure 1-58.

Ejection Seat Performance C

MINIMUM EJECTION ALTITUDE vs DIVE ANGLE AND SPEED

NOTES:

- ZERO PILOT REACTION TIME
- SEA LEVEL
- WINGS LEVEL
- 95th PERCENTILE PILOT

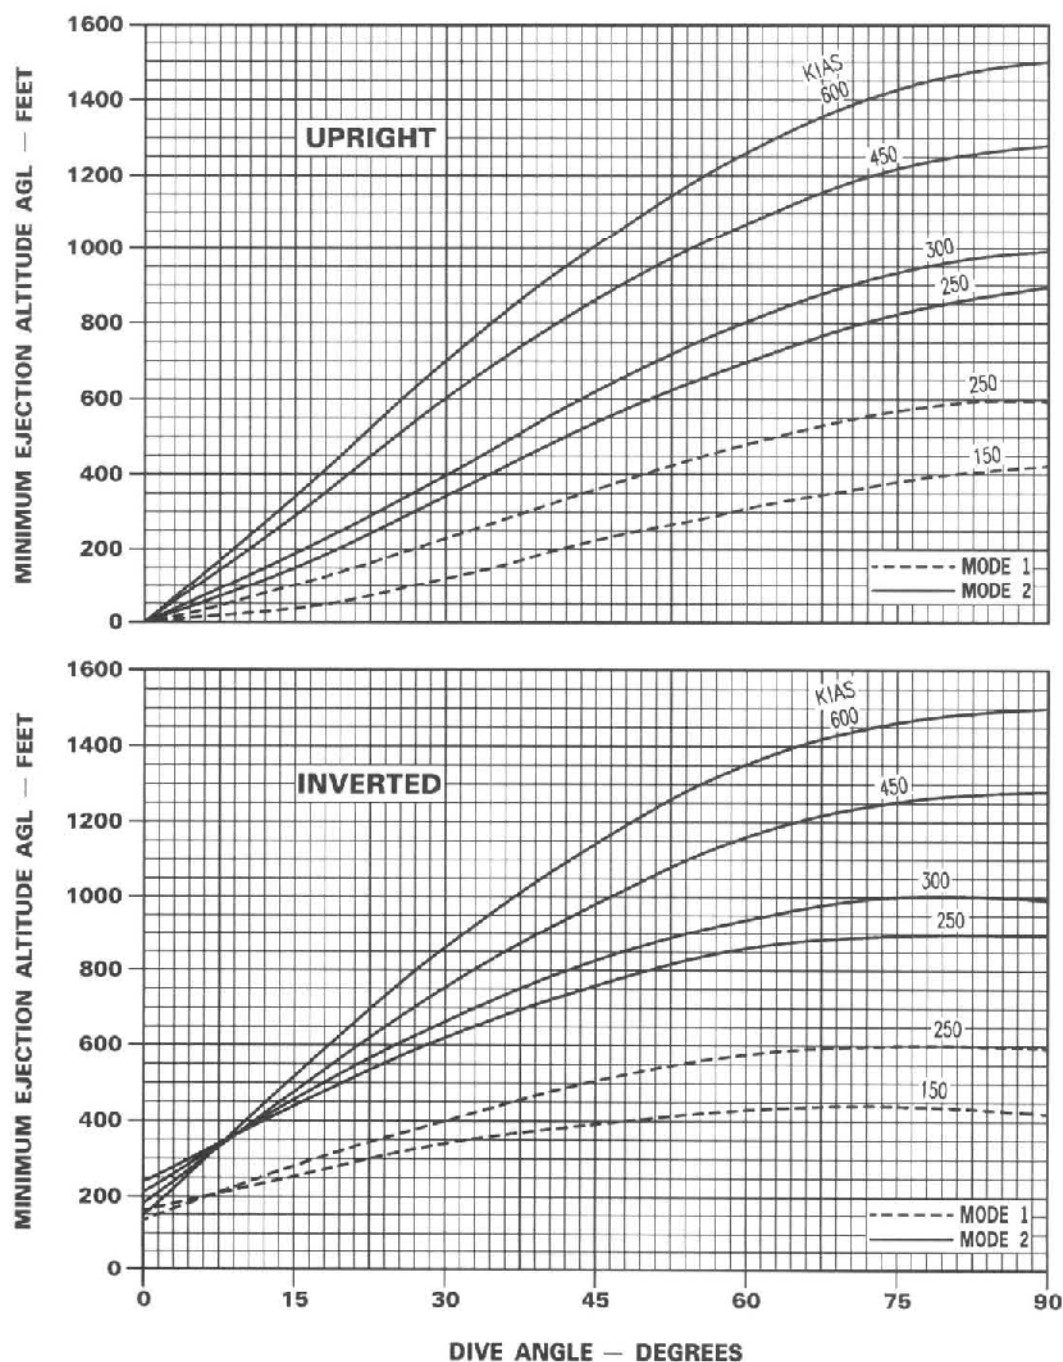

1F-16X-1-2002X®


Figure 1-59. (Sheet 1)

Ejection Seat Performance C

MINIMUM EJECTION ALTITUDE vs SINK RATE AND SPEED

NOTES:

- ZERO PILOT REACTION TIME
- SEA LEVEL
- WINGS LEVEL
- 95th PERCENTILE PILOT

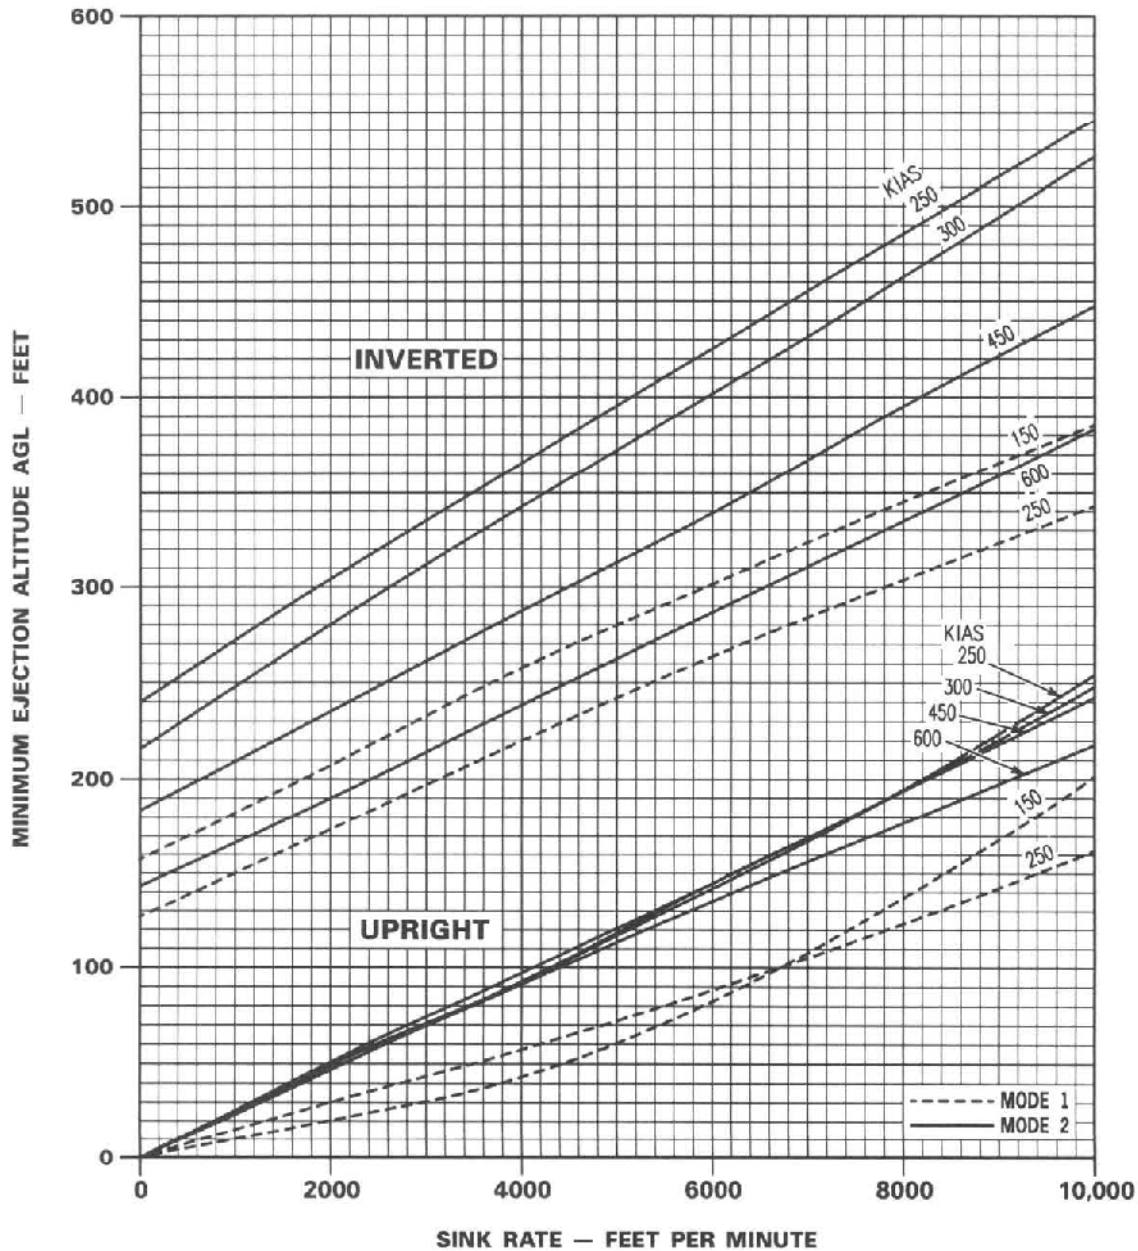

1F-16X-1-2003X@


Figure 1-59. (Sheet 2)

Ejection Seat Performance C

MINIMUM EJECTION ALTITUDE vs SPEED, DIVE ANGLE, AND BANK ANGLE

NOTES:

- ZERO PILOT REACTION TIME
- SEA LEVEL
- 95th PERCENTILE PILOT

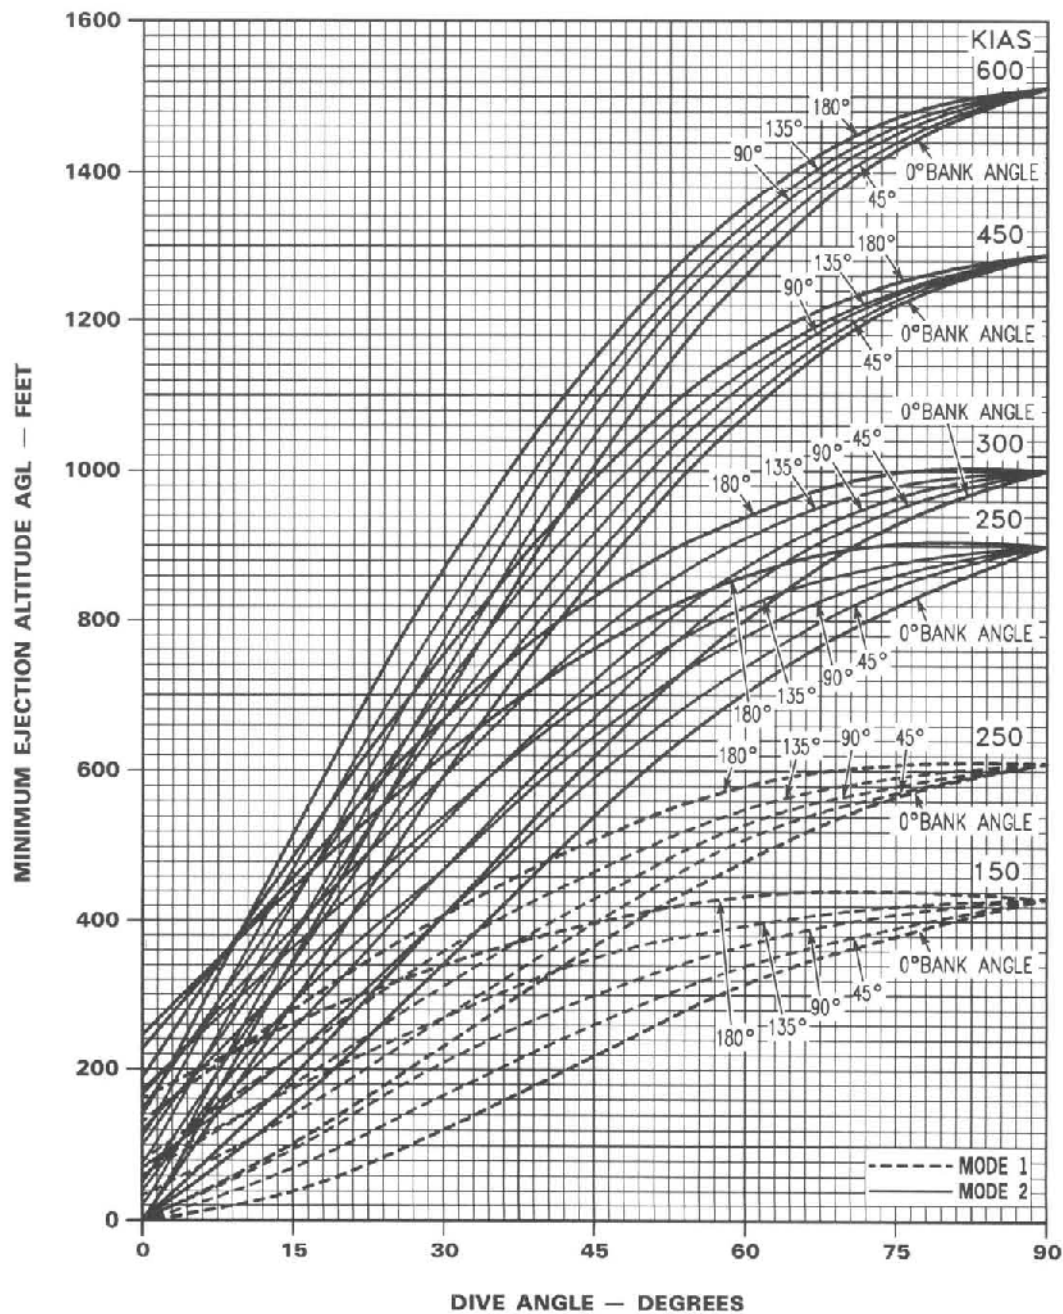

1F-16X-1-2004X


Figure 1-59. (Sheet 3)

Ejection Seat Performance D

MINIMUM EJECTION ALTITUDE vs DIVE ANGLE AND SPEED

NOTES:

- ZERO PILOT REACTION TIME
- WINGS LEVEL
- SEA LEVEL
- FORWARD SEAT DURING DUAL, SEQUENCED EJECTION
- 95th PERCENTILE PILOT

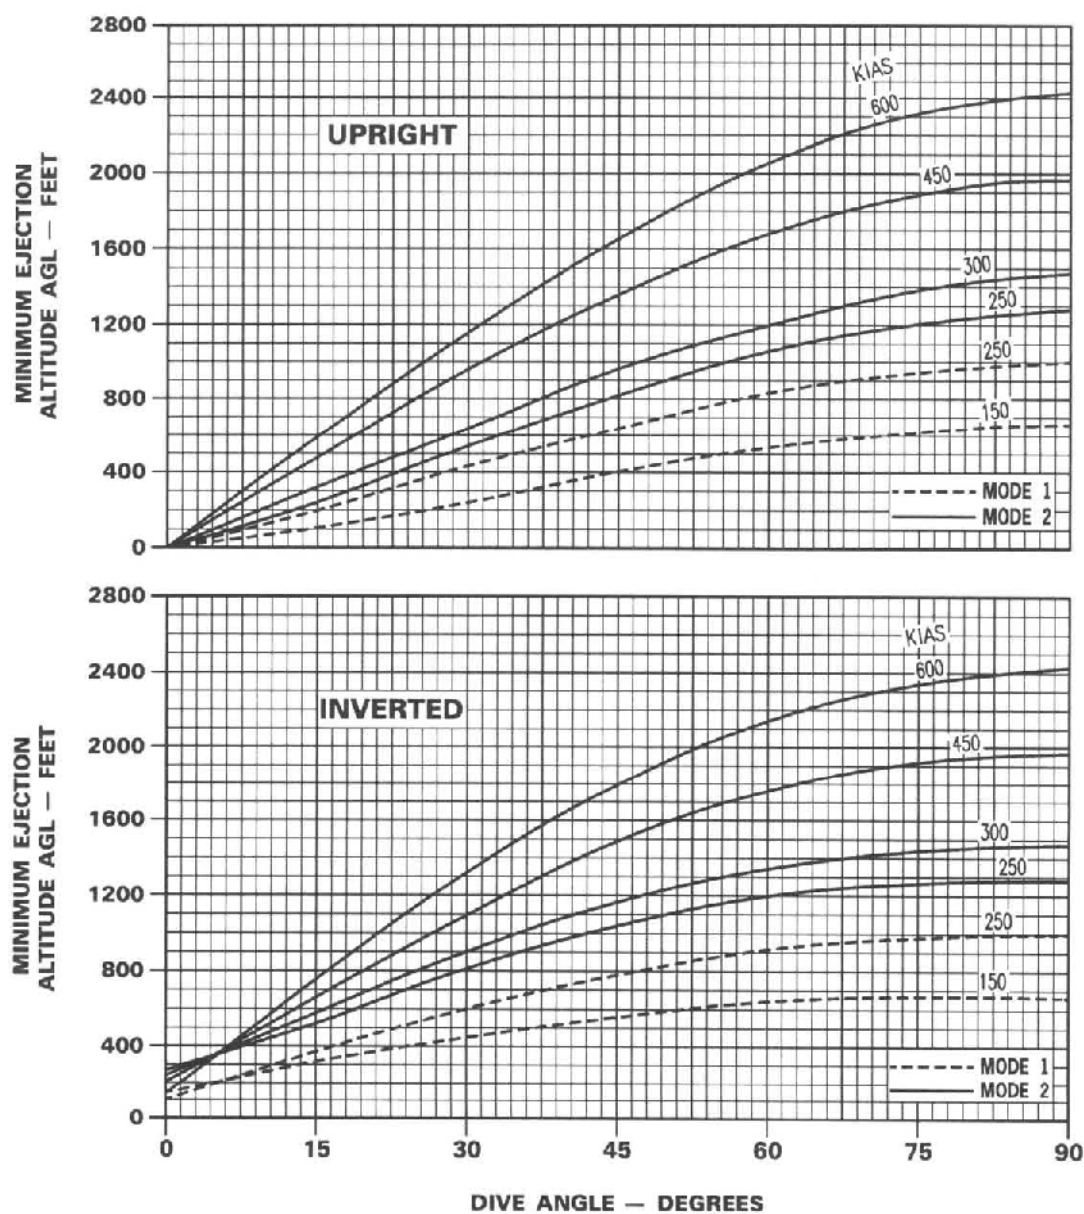

1F-16X-1-2005X®


Figure 1-59. (Sheet 4)

Ejection Seat Performance D

MINIMUM EJECTION ALTITUDE vs SINK RATE AND SPEED

NOTES:

- ZERO PILOT REACTION TIME
- WINGS LEVEL
- SEA LEVEL
- FORWARD SEAT DURING DUAL, SEQUENCED EJECTION
- 95th PERCENTILE PILOT

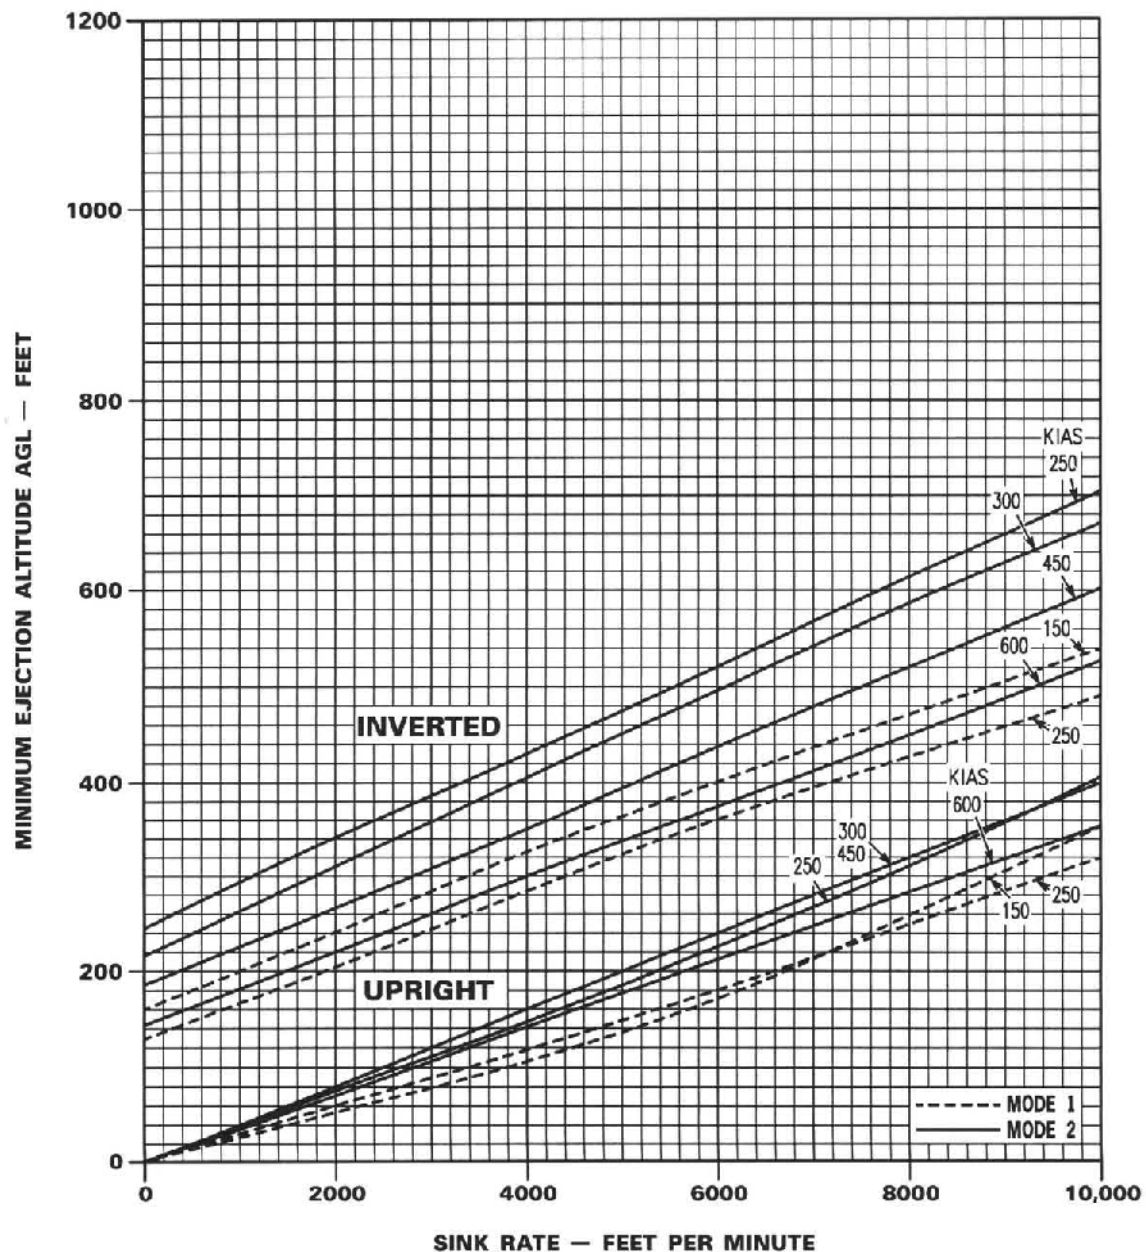

1F-16X-1-2008X

Figure 1-59. (Sheet 5)

Ejection Seat Performance D

MINIMUM EJECTION ALTITUDE vs SPEED, DIVE ANGLE, AND BANK ANGLE

NOTES:

- ZERO PILOT REACTION TIME
- SEA LEVEL

- FORWARD SEAT DURING DUAL, SEQUENCED EJECTION
- 95th PERCENTILE PILOT

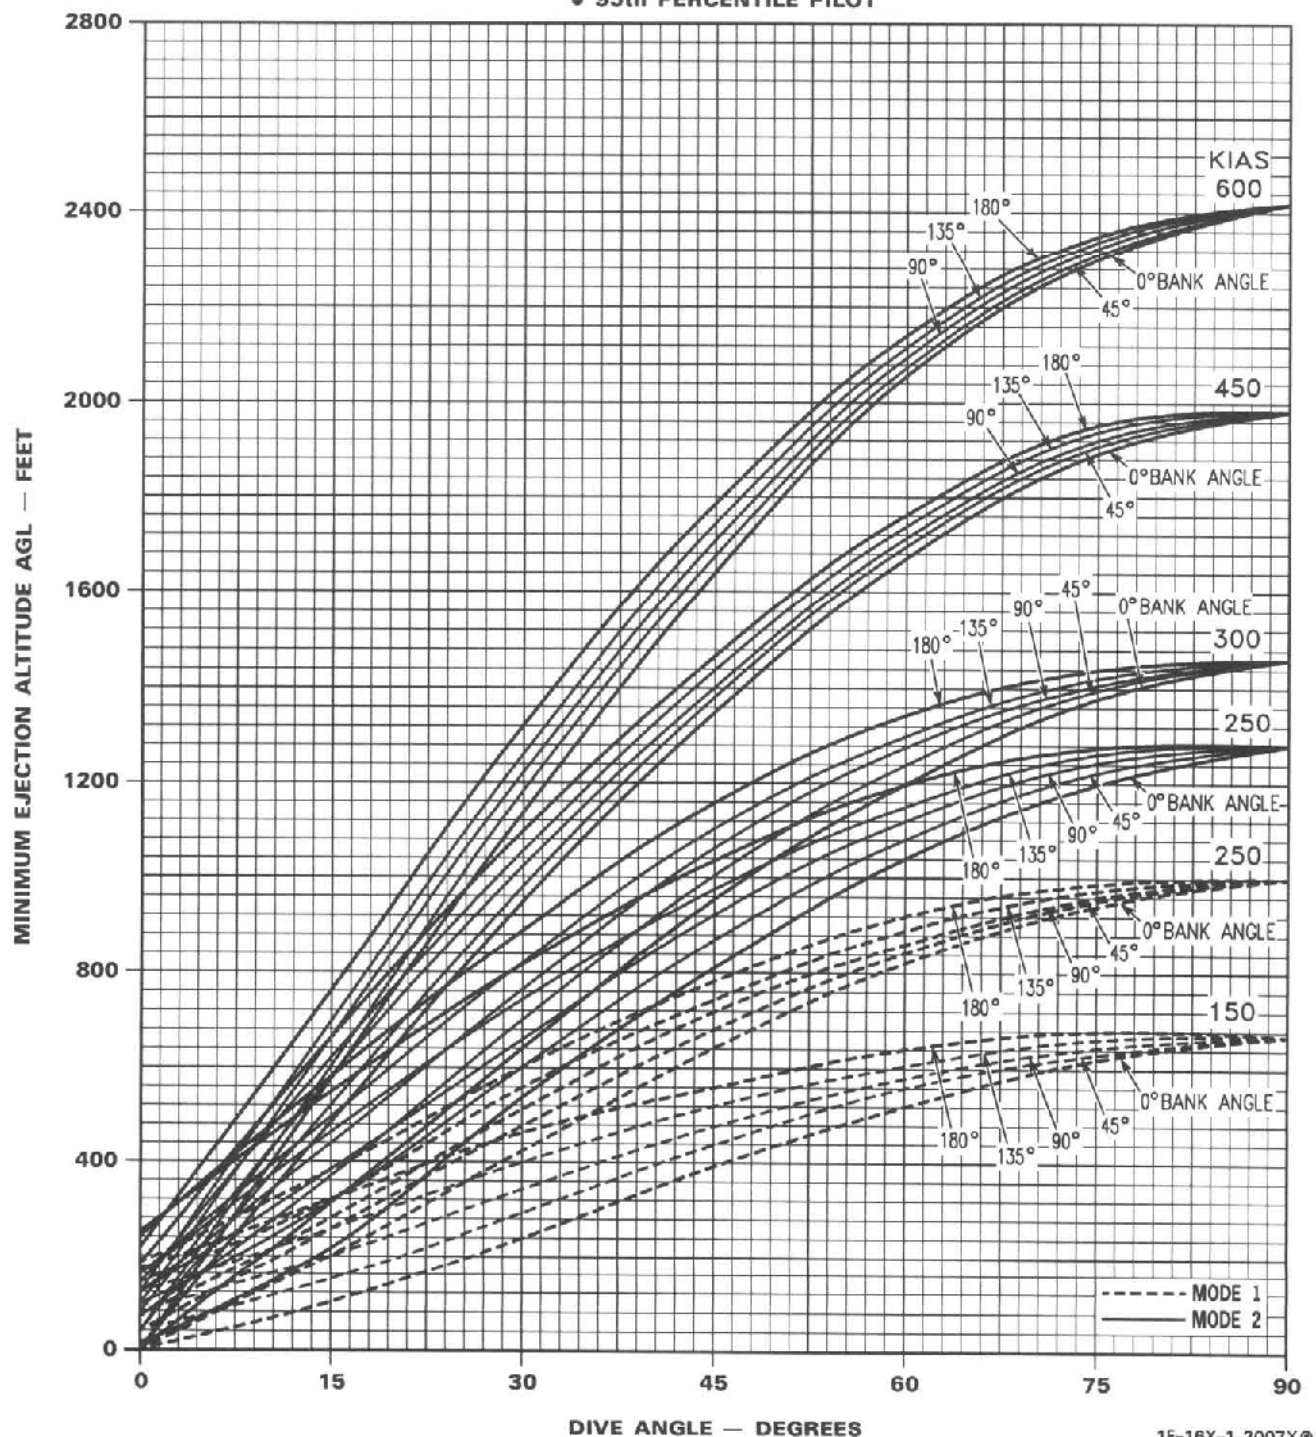


Figure 1-59. (Sheet 6)

OXYGEN SYSTEM

The oxygen system consists of a liquid system and an emergency gaseous system.

LIQUID OXYGEN SYSTEM

A 5-liter liquid oxygen system provides breathing oxygen to a diluter demand oxygen regulator. The regulator provides for selection of normal diluted oxygen and 100 percent oxygen and selection of PBG. Quick-disconnects are used to expedite egressing the aircraft on the ground. Oxygen duration varies depending upon altitude, regulator settings, and usage.

Pressure Breathing for G (PBG)

The PBG mode of the oxygen regulator provides pressure breathing above 4g's to enhance g tolerance and reduce pilot fatigue. ECS air used to inflate the g-suit is also used by the oxygen regulator to control the amount of pressurization supplied to the oxygen mask, helmet, and vest.

Oxygen System Controls and Indicators

Refer to figure 1-60 for description of the oxygen system controls and indicators.

Oxygen Duration

Refer to figure 1-61.

EMERGENCY OXYGEN SYSTEM


The emergency oxygen system consists of a high-pressure bottle with a flow controller mounted on the left side of the ejection seat. The hose is routed to the right side of the seat. The system is activated:

- Automatically upon ejection.
- Manually by pulling the emergency oxygen green ring located on the left aft side of the seat.

OXYGEN SYSTEM SCHEMATIC

Refer to figure 1-62.

Oxygen System Controls and Indicators (Typical)

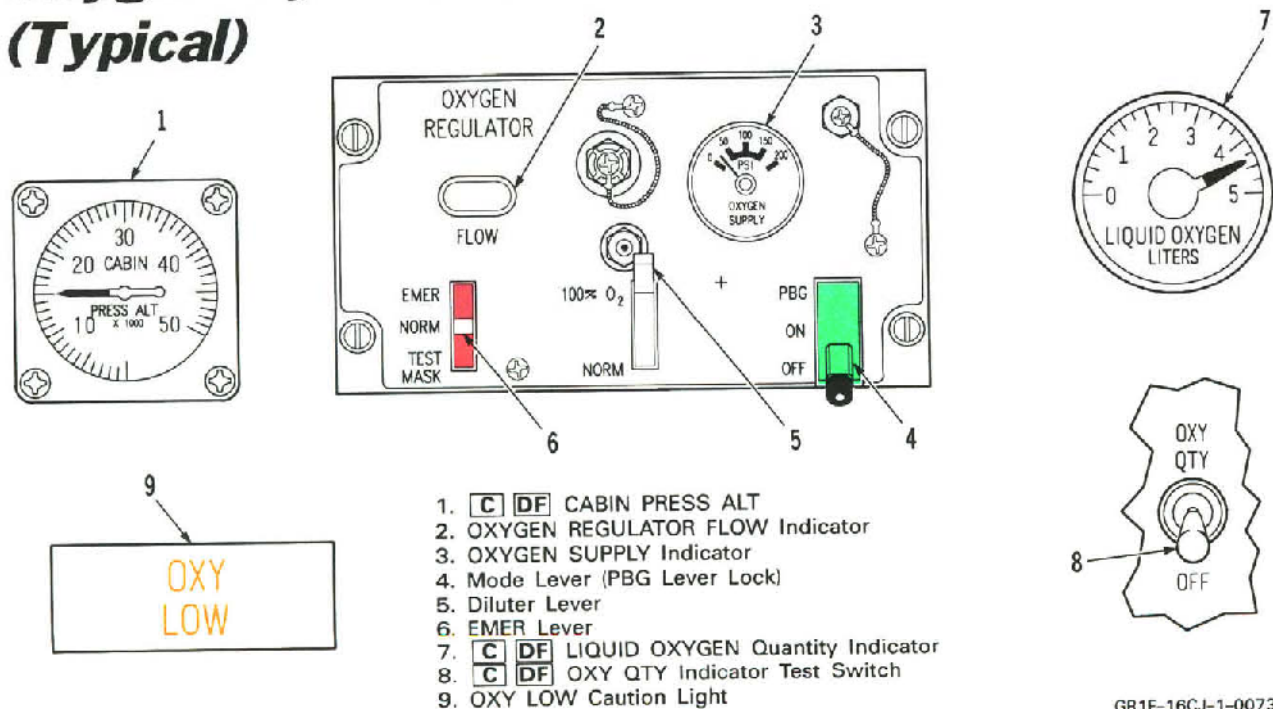

GR1F-16CJ-1-0073X37 ©

Figure 1-60. (Sheet 1)

Oxygen System Controls and Indicators (Typical)

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION
1. C DF CABIN PRESS ALT	0-50,000 feet	Indicates cockpit pressure altitude
2. OXYGEN REGULATOR FLOW Indicator	White	Indicates oxygen flow
	Black	Indicates no oxygen flow
3. OXYGEN SUPPLY Indicator	Oxygen pressure (psi)	Indicates gaseous oxygen pressure at regulator in psi
4. Mode Lever	PBG (lever lock)	Provides oxygen supply to mask, helmet bladder, and vest. Pressure breathing as a function of g is available
	ON	Provides oxygen supply to mask, helmet bladder, and vest. Pressure breathing as a function of g is not available
	OFF	Turns off oxygen supply
5. Diluter Lever	NORM	Provides regulated mixture of cockpit air and oxygen as determined by cockpit pressure altitude
	100% O ₂	Provides regulated 100 percent oxygen
6. EMER Lever	NORM	Provides normal operation. Positive pressure is provided if cabin pressure altitude exceeds 28,000-32,000 feet
	EMER	Provides 100 percent oxygen under positive pressure. This position is used by the pilot to test for leaks
	TEST MASK	Provides 100 percent oxygen under positive pressure. This position is used for testing by life support maintenance

Figure 1-60. (Sheet 2)

Oxygen System Controls and Indicators (Typical)

CONTROL/INDICATOR	POSITION/INDICATION	FUNCTION
7. ☒ ☒ LIQUID OXYGEN Quantity Indicator	0-5 liters	Indicates quantity of liquid oxygen
8. ☒ ☒ OXY QTY Indicator Test Switch	OXY QTY	Drives pointer ccw toward 0. As pointer passes 0.5 liter, OXY LOW caution light comes on. Light goes off after the switch is released and the pointer passes 0.5 liter
9. OXY LOW Caution Light (amber)	On	Indicates oxygen quantity is less than 0.5 liter or system pressure below 42 psi

Figure 1-60. (Sheet 3)

Oxygen Duration


OXYGEN DURATION (HOURS)						
COCKPIT PRESSURE ALTITUDE (FEET)	DILUTER LEVER (POSITION)	INDICATED QUANTITY (LITERS)				
		5	4	3	2	1
35,000 AND UP	100%	30.94	24.75	18.56	12.37	6.19
	NORM	30.94	24.75	18.56	12.37	6.19
30,000	100%	22.63	18.11	13.58	9.05	4.53
	NORM	23.00	18.40	13.80	9.20	4.60
25,000	100%	17.48	13.98	10.49	6.99	3.50
	NORM	21.72	17.37	13.03	8.69	4.34
20,000	100%	13.19	10.55	7.91	5.28	2.64
	NORM	24.43	19.55	14.66	9.77	4.89
15,000	100%	10.62	8.49	6.37	4.25	2.12
	NORM	29.86	23.89	17.92	11.94	5.97
10,000	100%	8.53	6.83	5.12	3.41	1.71
	NORM	29.86	23.89	17.92	11.94	5.97

NOTES:

1. Oxygen duration increases as cockpit pressure altitude increases because there is less ambient pressure acting upon the lungs. Therefore, a smaller quantity of oxygen at altitude expands the lungs to the same size that they were at sea level.
2. With two people, decrease NORM/100% oxygen duration by 50 percent.
3. Use of PBG may reduce the listed available oxygen times.

Figure 1-61.

Oxygen System Schematic (Typical)

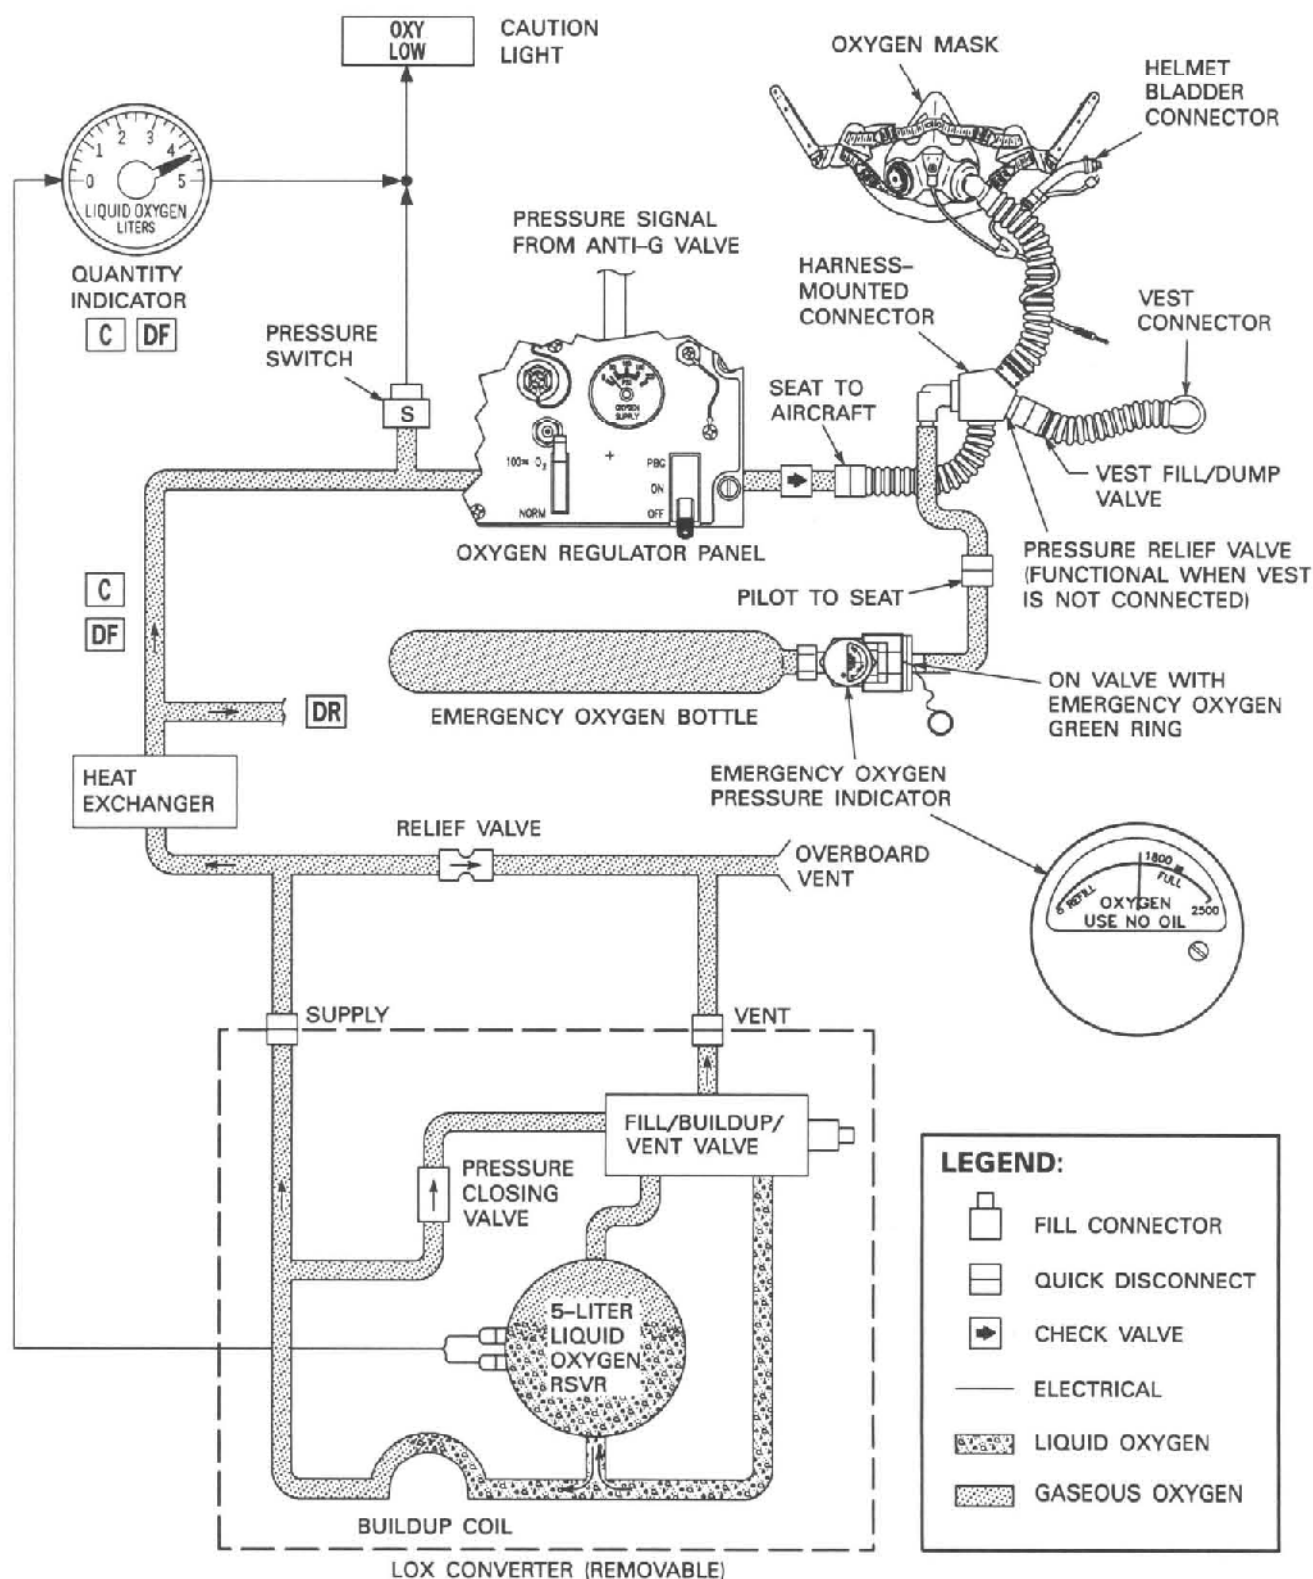

GR1F-16CJ-1-0074X37 ©

Figure 1-62.

COMMUNICATIONS, NAVIGATION, AND IFF (CNI) EQUIPMENT

Cockpit controls for CNI equipment are divided between control units on the consoles and the upfront controls located on the instrument panel. Controls for less frequently used functions, such as power and audio volume, and essential functions, such as communications backup and guard, are located on console panels. Controls for frequently used functions of CNI are located on the upfront controls to permit head-up control during flight.

UPFRONT CONTROLS

Refer to figure 1-63. The upfront controls provide a simplified, centralized, head-up means of controlling the most frequently used functions of the communications system, navigation systems, and IFF. The upfront control set consists of the data entry display (DED), **C** **DF** the integrated control panel (ICP), and

DR the integrated keyboard panel (IKP). The upfront controls are powered by emergency dc bus No.2 and emergency ac bus No. 2. Refer to F-16D AIRCRAFT, this section, for supplementary **D** information.

DED/CNI READOUTS

Refer to figure 1-63 and 1-64. The DED is an integral part of the upfront controls and provides a visual display of the switch actions made via upfront controls. The primary readouts of communication, navigation, and IFF systems are included in the page selections available for display on the DED. Channel, frequency, mode, and code selections of UHF, VHF, TACAN, ILS and IFF are presented when the appropriate page is selected. INS present position and steerpoint data may be selected for display on the DED.

Displays for UHF, TACAN, and IFF show the word BACKUP when the CNI knob is in BACKUP. The word GUARD appears on UHF and VHF pages when guard is selected.

Upfront Controls (Typical)


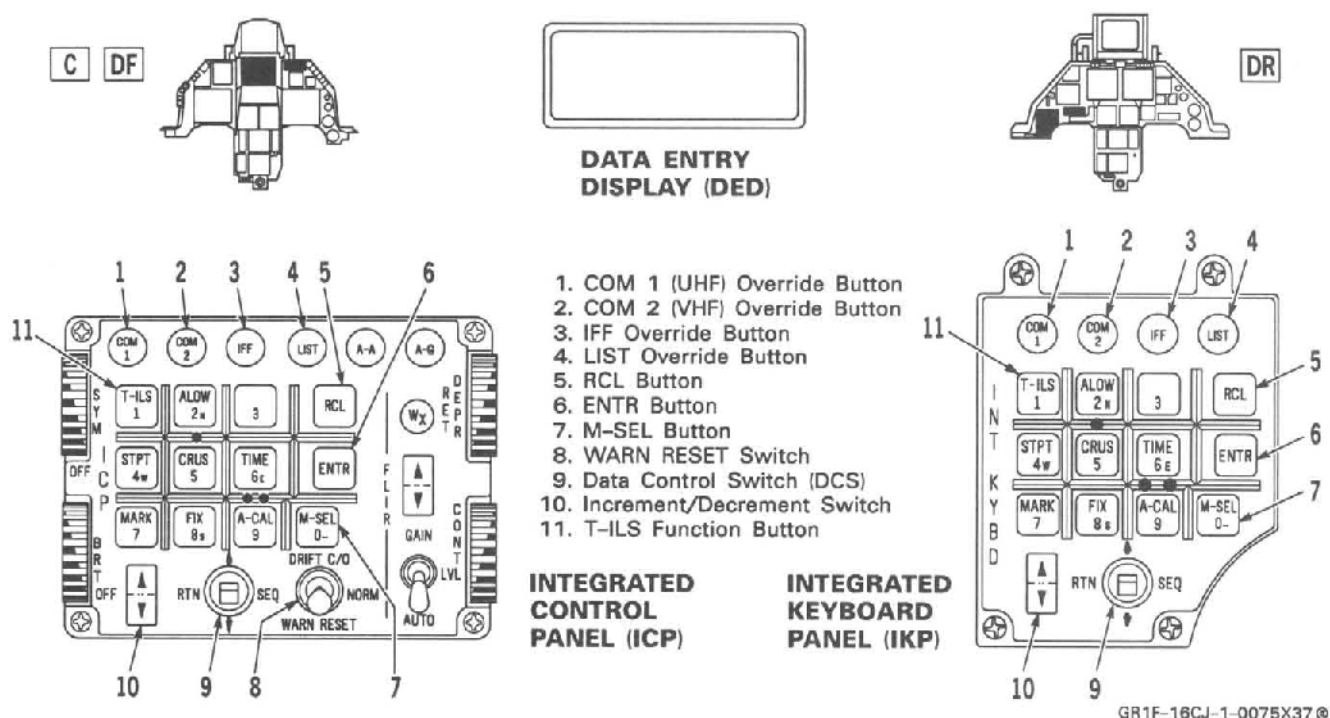


Figure 1-63.

CNI Readout/DED Page Summary

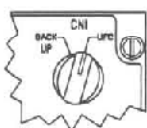

Normal Display Pages (Upfront Control)

UHF	10	STPT	5
VHF	12	10 : 32 : 47	
M1	34CS	4567	STBY T123X

CNI PAGE

UHF	10	MAIN	
PRE	10	235.00	TOD NB
	225.00		

UHF PAGE

HO-TNG	TNET	
002	12	TOD
PRE	12	123

HAVE QUICK PAGE

VHF ON	
12	135.00
PRE	12
	126.00
	NB

VHF PAGE

TCN	T/R	ILS ON
CHAN	24	CMD STRG
BAND	X (0)	FRO 106.10
	CRS	10°

TCN/ILS PAGE

IFF ON	MAN
M1 25	MC (5)
M2 1432	M4 A(6)
M3 2365	OUT (7) MS (8)

MAN PAGE


IFF ON	AUTO	POS 1
M1	MC (5)	NOF04
M2	M4	MS (8)
M3		

POS PAGE

IFF ON	AUTO	TIM 2
M1 21	MC (5)	01:36
M2	M4 A(6)	MS
M3 1234		

TIM PAGE

DISPLAYED ON INITIAL POWER-UP

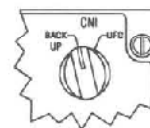

Backup or Guard Pages (Typical)


UHF	STPT	5
BUPT	12	10 : 32 : 47
VHF		
GRD		
M	BUPT	

UHF ON
BACKUP
10 235.00



All 3 Positions Function

 VHF ON
AM GUARD



TCN ON	ILS ON
BACKUP	FRO CMD STRG
	CRS 106.10
	205°

IFF ON
BACKUP

ALL IFF MODES

GR1F-16CJ-1-0076X37

Figure 1-64.

The current state of CNI operation is shown on the DED and is automatically displayed on initial power up of the upfront controls or may be selected by positioning the data control switch (DCS) to RTN momentarily.

CNI Readout/DED Page Summary

The CNI page displays data concerning the UHF (COM 1), VHF (COM 2), steerpoints, IFF, system time, and TACAN. The CNI page displays its data on five lines.

The first line displays information concerning the UHF radio mode, preset channel or manual frequency, and current steerpoint number. The label at the far left indicates the radio mode (either UHF or HQ). UHF is displayed when the normal mode is selected; HQ is displayed when the AJ mode is selected. The UHF/HQ label is highlighted when the UHF VHF IFF transmit switch is keyed to UHF. Adjacent to the mode label is the preset UHF channel, if one is selected. If a preset channel is not selected, this area contains the manual frequency. The right side of the first line displays navigation information. If a steerpoint is selected, STPT is displayed. If an initial point is selected, IP is displayed. Adjacent to the steerpoint label is the number of the current steerpoint. Line one displays UHF (normal mode), the selected preset UHF channel (10), and the selected steerpoint (STPT 5).

The left side of the second line displays the status of the UHF radio and default value indication. During normal operation, this area is blank. OFF, BUP, and GRD are other indications of UHF radio status. OFF is displayed when the power is turned off with the COMM 1 power knob. When BACKUP or GUARD is selected, BUP or GRD is displayed. The middle area of line two is blank during normal operation. If the upfront controls memory is lost, the upfront controls revert to default values and DFLT is displayed in the middle of line two. DFLT is displayed if UFC memory is lost and the UFC automatically uses default values. The right side of the second line can display wind direction and velocity. When the SEQ position of the DCS is activated, wind direction (referenced to magnetic north) and velocity, in knots, is displayed. When the SEQ position of the DCS is again activated, wind data is blanked. If wind data is displayed when the CNI page is exited, wind data is displayed when the CNI page is reentered. Wind data is not displayed upon UFC power-up.

The third line displays VHF (COM 2) function, preset channel or manual frequency, and system

time. The left side of line three always displays the radio mode label VHF. When the UHF VHF IFF transmit switch is keyed to VHF, the VHF label is highlighted. Adjacent to the VHF label is the active preset channel or manual frequency number. The right side of line three shows VHF, active preset VHF channel (12), and system time.

The fourth line displays the status of the VHF radio. A blank area indicates normal operation. OFF indicates that the power is off, and GRD indicates that GUARD has been selected. The CNI readout/DED page summary displays blank for normal operation. The right side of the fourth line also displays hack time anytime the stopwatch is activated.

The fifth line displays IFF and TACAN information. The area at the far left displays IFF modes selected. M, which stands for mode, is always displayed; 1, 2, 3/A, 4, C, and S are displayed when the corresponding mode is selected. When a mode 4 reply is issued, the 4 is highlighted. The next area of line five displays the four-digit code associated with IFF mode 3/A. The next area displays IFF status. During normal operation, this area is blank. OFF, STBY, BUP, and AUTO are other indications of IFF status. OFF is displayed when the power is turned off with the IFF MASTER knob. When STANDBY or BACKUP is selected, STBY or BUP is displayed. AUTO is displayed when the automatic transponder switching function of IFF is selected. The right side displays TACAN channel number and band. TACAN channel number and band are not displayed when TACAN radio is off or in backup. The CNI readout/DED page summary displays IFF modes 1, 3/A, 4, C, and S selected, 4567 (mode 3/A code), AUTO (automatic transponder switching function), T123 (TACAN channel number), and X (TACAN band).

To change preset channels or steerpoint numbers, the up/down triangles must be next to the item to be changed. When the DCS is positioned up or down, the up/down triangles move between the steerpoint and the UHF and VHF preset channels. With the up/down triangles next to the desired item, the steerpoint/channel can be changed by depressing the increment/decrement switch until the desired steerpoint or channel is selected. If a manual frequency is selected, the triangles are displayed but are not functional. The up/down triangles are displayed at the steerpoint number during initial upfront control power-up. UHF, VHF, IFF, TACAN, and ILS detailed operation using the upfront controls is described under their respective system.


AUX COMM PANEL C DF

Refer to figure 1-65. The AUX COMM panel, located on the left console, provides backup control of essential CNI functions and some primary functions of IFF.

CNI (Communications, Navigation, and IFF) Knob

Functions are:

- **BACKUP** – In the event of failure of the upfront controls, the BACKUP position provides for alternate operation of the UHF, TACAN, and IFF (mode 4 and EMER functions only). BACKUP may be selected, when desired, even when upfront controls are functioning.
- **UFC** – Provides for normal control of communications, navigation, and IFF primarily via upfront controls. Refer to UPFRONT CONTROLS, this section.

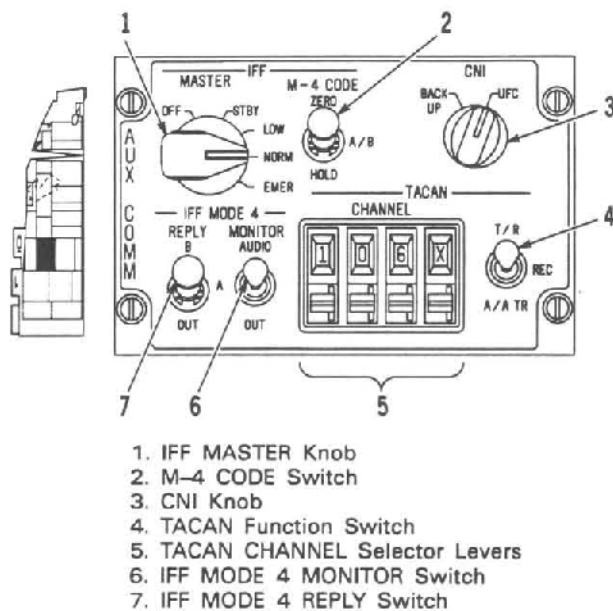AUX COMM Panel**C DF (Typical)**

GR1F-16CJ-1-0077X37 ©

Figure 1-65.

IFF MASTER Knob

The IFF MASTER knob functions with the CNI knob in BACKUP or UFC.

Functions are:

- **OFF** – Removes power from the IFF equipment and zeroizes mode 4 settings unless HOLD function has been used. The knob must be pulled outward to position to OFF from STBY.
- **STBY** – The equipment is turned on and warmed up but does not transmit.
- **LOW or NORM** – Full range recognition and reply occur. Transmitted power from the IFF system is the same for both the LOW and NORM positions.
- **EMER** – The knob must be pulled outward to position to EMER. When so positioned, an emergency-indicating pulse group is transmitted each time a mode 1, 2, 3/A, or S interrogation is recognized.

M-4 CODE Switch

The M-4 CODE switch has three positions. It is spring-loaded to center (A/B) from HOLD and is lever locked in ZERO position.

Functions are:

- **ZERO** – Zeroizes mode 4 settings whenever IFF MASTER knob is not OFF.
- **A/B** – A/B position permits code selection via upfront controls or via mode 4 REPLY switch when in BACKUP.
- **HOLD** – Both code settings can be retained after flight by placing the M-4 CODE switch to HOLD momentarily prior to placing the IFF MASTER knob to OFF or removing power.

IFF MODE 4 REPLY Switch

The IFF MODE 4 REPLY switch has three positions and is used when the CNI knob is in BACKUP position.

Functions are:

- OUT – Mode 4 operation is disabled.
- A – Enables mode 4 and selects the preset code for A.
- B – Enables mode 4 and selects the preset code for B.

IFF MODE 4 MONITOR Switch

The IFF MODE 4 MONITOR switch permits audio monitor of mode 4 replies when in BACKUP.

Functions are:

- AUDIO – Monitoring of mode 4 interrogations and replies is provided by an audio tone on the intercom. An audio tone of 0 to 1000 Hz is generated when the transponder is not replying to valid mode 4 interrogations. The frequency of the tone depends on the number of interrogations received; i.e., the higher the number of interrogations, the higher the frequency.
- OUT – Removes audio monitor from intercom.

TACAN Function Switch

The TACAN function switch provides control of TACAN functions when the CNI knob is in BACKUP position.

Functions are:

- T/R – Transmit/receive mode. Same as REC and in addition, interrogates the TACAN ground station for DME information; distance (nm) is displayed in the HSI range indicator (MILES).
- REC – Receive mode. The system receives signals which result in a bearing and course deviation display on the HSI and audio in the headset. TACAN range indicator (MILES) on HSI is shuttered.

- A/A TR – Air-to-air transmit-receive mode. TACAN system interrogates and receives signals from aircraft having air-to-air capability, providing slant range (nm) distance between aircraft operating 63 TACAN channels apart. (KC-10A also provides bearing information.) Up to five aircraft can determine distance from a sixth lead aircraft.

TACAN CHANNEL Selector Levers

Four TACAN CHANNEL selector levers and readout windows are provided for TACAN operation when the CNI knob is in BACKUP. The TACAN channel is set into the first three windows. The fourth window is used to select X or Y band.

AUDIO 1 CONTROL PANEL

Refer to figure 1-66. The AUDIO 1 control panel provides control of less frequently used functions of the communications system. Except as noted, controls are active regardless of the position of the CNI knob.

COMM 1 (UHF) Power Knob

The COMM 1 power knob has an OFF position and a cw arrow pointing to INC. The OFF position removes power from the UHF radio. Rotating the knob cw applies power and increases UHF audio volume.


COMM 1 (UHF) Mode Knob

The COMM 1 mode knob has three positions and may be depressed in any of the three positions. Depressing the knob interrupts reception and transmits a tone signal and TOD for HQ on the selected frequency.

Functions are:

- OFF – Disables squelch circuit to permit reception of a weak signal.
- SQL – Enables squelch circuit to help reduce background noise in a normal operation.
- GD – The main receiver and transmitter are automatically tuned to the guard frequency and the guard receiver is disabled. GD position is not functional with CNI knob in BACKUP.

Audio Control Panels (Typical)

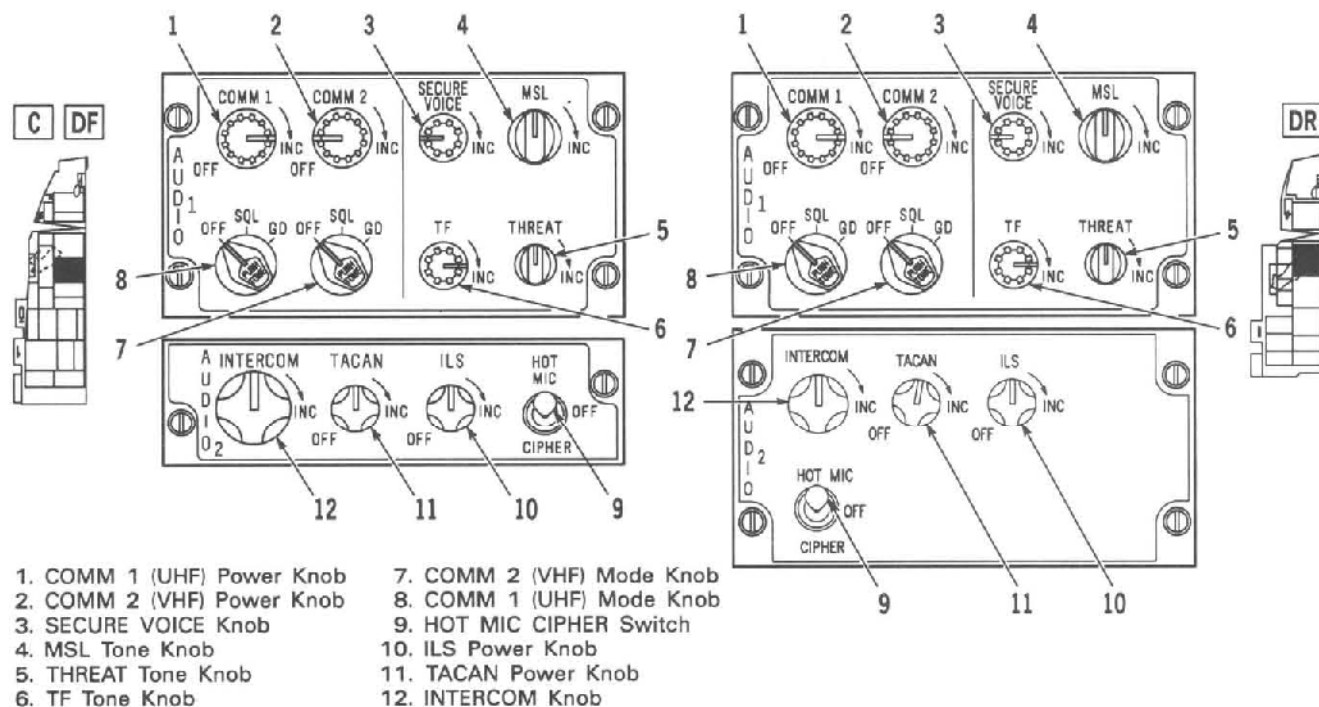

GR1F-16CJ-1-0078X37 ©

Figure 1-66.

COMM 2 (VHF) Power Knob

The COMM 2 power knob has an OFF position and a cw arrow pointing to INC. The OFF position removes power from the VHF radio. Rotating the knob cw applies power and increases VHF audio volume.

COMM 2 (VHF) Mode Knob

The COMM 2 mode knob has three positions and may be depressed to transmit a VHF tone in any of the three positions. The COMM 2 mode knob may not function during certain failures of the upfront controls.

Functions are:

- OFF – Disables squelch circuit to permit reception of a weak signal.
- SQL – Enables squelch circuit to help reduce background noise in normal operation.

- GD – The main receiver and transmitter are automatically tuned to the guard frequency.

SECURE VOICE Knob

The SECURE VOICE knob is inoperative.

MSL Tone Knob

The MSL tone knob has a cw arrow pointing to INC. Rotating the knob cw increases the volume of the tone from the AIM-9 missile being monitored.

TF Tone Knob

The TF tone knob is not functional.

THREAT Tone Knob

The THREAT tone knob has a cw arrow pointing to INC. CW rotation increases the volume of the TWS composite tone.

AUDIO 2 CONTROL PANEL

Refer to figure 1-66. The AUDIO 2 control panel provides control of less frequently used functions of the communications system. Except as noted, controls are active regardless of the position of the CNI knob.

ILS Power Knob

The ILS power knob has an OFF position and a cw arrow pointing to INC. The OFF position removes power from the ILS receiver. Rotating the knob cw applies power and increases the volume of the localizer identification signal. The ILS may not function during certain failures of the upfront controls.

TACAN Power Knob

The TACAN power knob has an OFF position and a cw arrow pointing to INC. The OFF position removes power from the TACAN receiver. Rotating the knob cw applies power and increases volume of the TACAN station identification signal.

INTERCOM Knob

The INTERCOM knob has a cw arrow pointing to INC. Rotating the knob increases the volume of the signals available to the intercom set.

The intercom provides the following functions:

- Monitoring and volume control of voice communication between pilot and ground crew or between pilot and tanker boom operator, monitoring and volume control of AIM-9 missile tone, TWS composite audio tone, and TWS missile launch tone.
- Monitoring of systems individually volume controlled from the audio control panels.
- Monitoring of fixed volume warning tones (LG and low speed warning tone, TWS missile launch tone, and IFF mode 4 audio monitor) and voice messages.

HOT MIC CIPHER Switch

The HOT MIC CIPHER switch is a three-position switch.

Functions are:

- HOT MIC – Activates communication between pilot and tanker boom operator or ground crew. Activation of UHF VHF IFF transmit switch on the throttle will override this function.

- OFF – Deactivates HOT MIC and CIPHER functions.

- CIPHER – Momentary position which limits UHF and VHF reception to secure voice only. CIPHER is functional only when operating in secure voice mode.

ANT SEL PANEL C DF

Refer to figure 1-67. The ANT SEL panel allows selection of various antennas for optimum transmission and reception of IFF and UHF signals.


IFF ANT SEL Switch C DF

The IFF ANT SEL switch is a three-position switch.

Functions are:

- UPPER – Upper antenna is used to receive and reply to interrogation signals.
- NORM – The system selects the antenna which is receiving the best signal.
- LOWER – Lower antenna is used to receive and reply to interrogation signals.

ANT SEL Panel C DF (Typical)

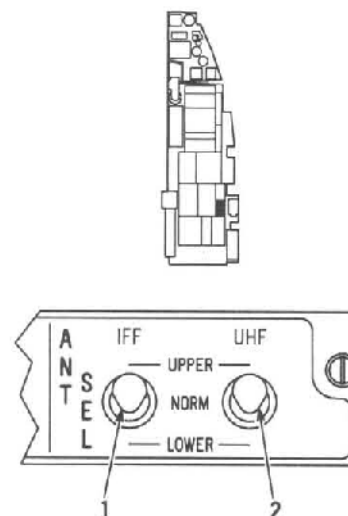

1. IFF ANT SEL Switch
2. UHF ANT SEL Switch

GR1F-16CJ-1-0079X37 ©

Figure 1-67.

UHF ANT SEL Switch

The UHF ANT SEL switch is a three-position switch.

Functions are:

- **UPPER** – Upper antenna is used to receive and transmit signals.
- **NORM** – The antennas cycle between upper and lower to provide omnidirectional antenna pattern.
- **LOWER** – Lower antenna is used to receive and transmit signals.

COMMUNICATIONS SYSTEM

The aircraft communications system consists of a HAVE QUICK II UHF radio, a VHF radio, and an intercom set. Communications are controlled by the upfront controls, two audio control panels, a UHF radio backup control panel, and an AUX COMM panel.

ANTENNA LOCATIONS

Refer to figure 1-68.

HAVE QUICK (HQ) SYSTEM

The HQ system provides normal and antijamming, air-to-air, and air-to-ground UHF communication capability. The usual operating mode for an HQ UHF radio is in the normal mode where the radio uses 1 of 7000 channels. The antijamming (AJ) mode uses a frequency hopping scheme to change the channel or frequency many times per second. Because the particular frequency used at any instant depends on the precise time of day (TOD), both participating HQ UHF radios must have clocks which are synchronized. In addition, the HQ UHF radio uses word of day (WOD) and net number in the AJ mode.

Single Word of Day (WOD)

The WOD entry is normally entered before flight, but it is possible to enter it in flight. WOD is entered by using the six preset channels 15-20. The WOD elements are entered with the manual frequency knobs and the PRESET button. For a new WOD entry, start at preset channel 15 and enter an element using the same method as in entering preset

frequencies in the normal mode. Progressively select the next higher preset channel (16-20) and continue to enter WOD elements into preset memory. A short tone is heard when the PRESET button is depressed for channel 20. This tone indicates that the WOD element for channel 20 was accepted and transferred to the radio. The WOD is stored in the nonvolatile preset channel memory until a WOD transfer occurs. This procedure overwrites preset channels 15-20.

Single WOD Transfer


The WOD must be transferred from the nonvolatile preset channel memory to the volatile WOD memory for HQ operation. Progressively select the next lower channel (19-15) until a double beep is heard at channel 15. A double beep indicates that all WOD elements have been transferred to the volatile memory.

When the HQ radio is off, the WOD data is not lost, but is stored in nonvolatile preset memory. When the radio is initially turned on, the WOD must be transferred to the volatile memory. To transfer WOD data to the volatile memory, select preset mode and repeat the steps described above.

Multiple Word of Day (MWOD)

MWOD capability allows for up to six WOD's and dates to be stored at one time into nonvolatile MWOD memory. If the radio is turned off or power is lost after entry of MWOD and date codes, the data is not lost; therefore, the information remains intact until manually changed. The six most recent WOD's are retained. If a WOD with a duplicate date is entered, the new entry takes precedence. After the MWOD information is entered, the operational date must be entered so the radio can select the proper WOD. If power is lost, the operational date is lost and must be reentered. However, if a TOD is received, the operational date is automatically entered as part of the TOD message. To access MWOD load, select preset mode, enter 220.025 in channel 20, and depress PRESET button. Next, select manual mode and load word of day elements in channels 20-15 by depressing the TONE button. After each entry is made, a tone is heard. After the first WOD is entered, the corresponding date code is entered by selecting channel 14. The date code is represented by the format 3AB.000, where AB equals the day of the month; e.g., 315.000 indicates the 15th of the month. Press the TONE button to complete the date entry.

Antenna Locations (Typical)

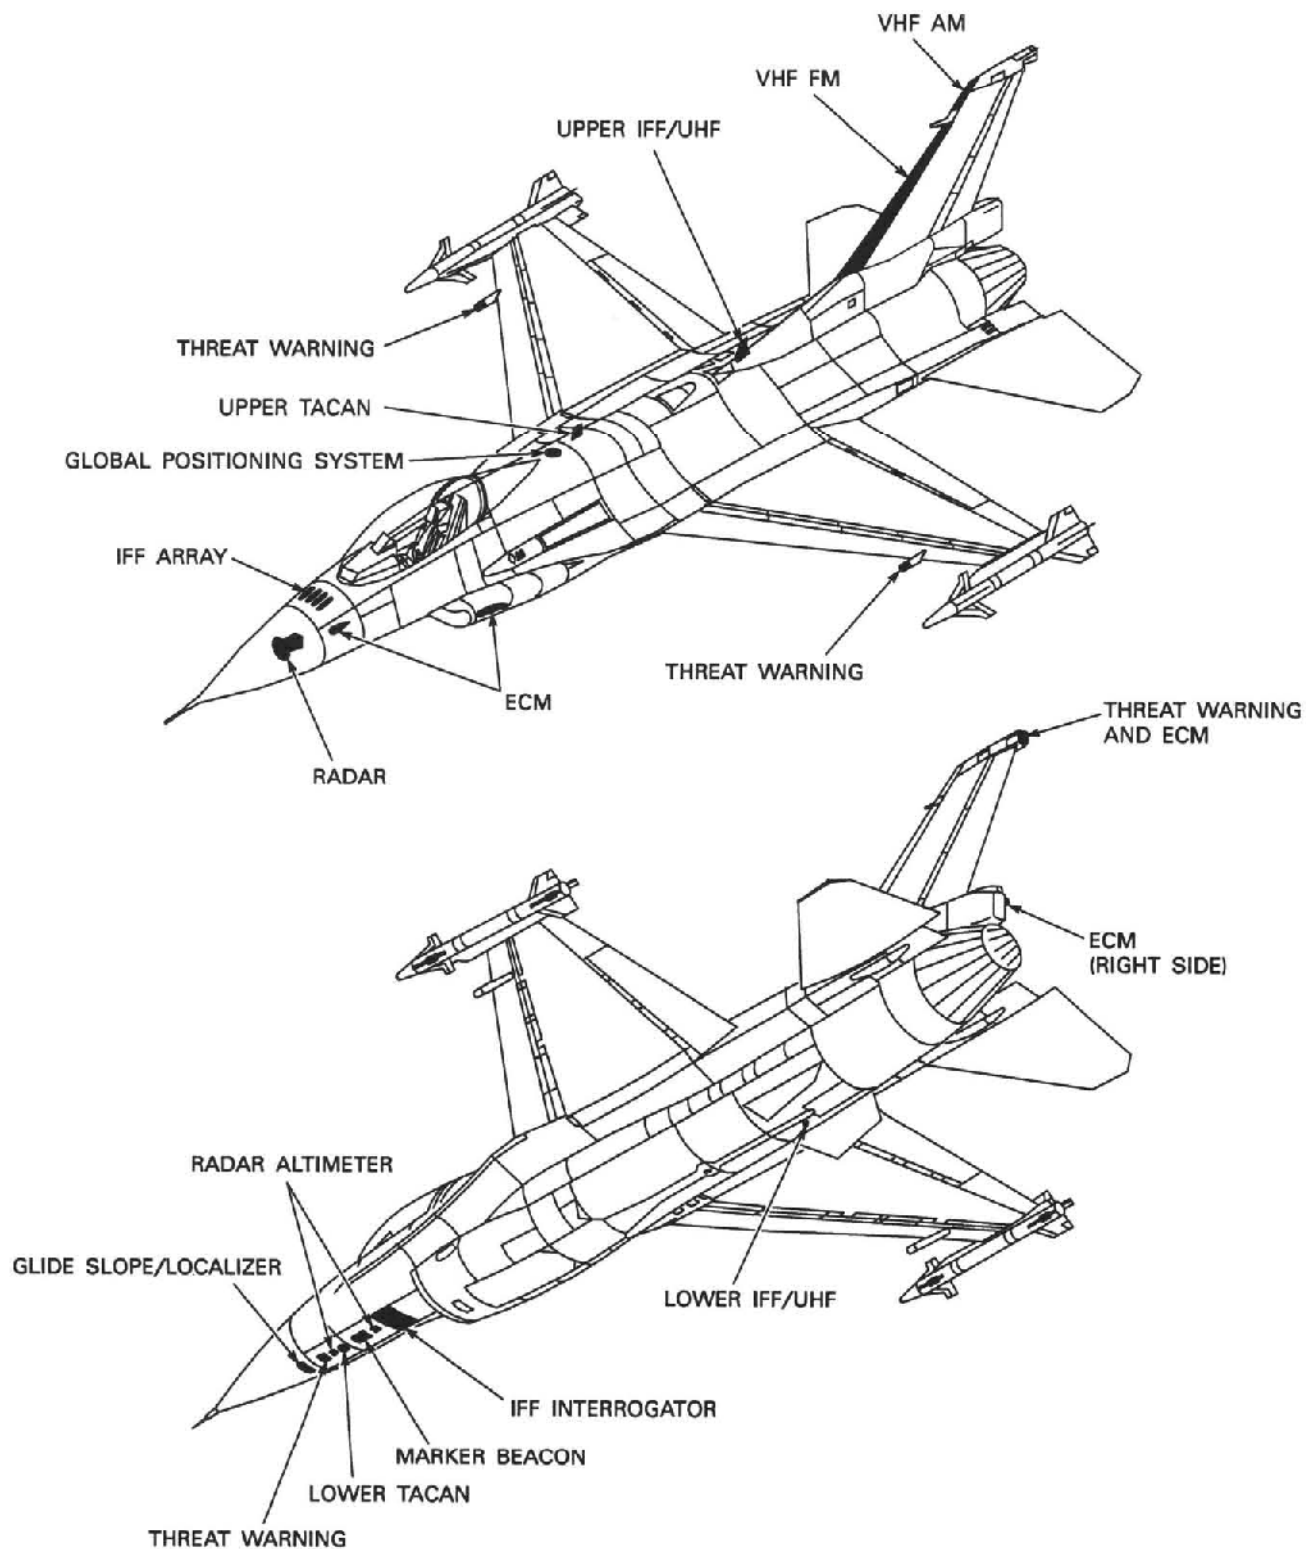

GR1F-16CJ-1-0080X37 ©

Figure 1-68.

A double beep indicates the date code has been entered. When using MWOD, the current date must be set into channel 1 prior to receiving TOD or the current date must be part of the received TOD message. Without date information, the radio cannot select the current WOD, and a steady tone results when entering AJ mode. After entering WOD(s) and/or setting operational date, select 220.00, preset channel 20, and depress PRESET button to enter the verify/operate mode. The UHF radio is inoperative when in any mode other than verify/operate. MWOD capability can be determined by selecting 220.000, channel 20 preset mode, and pressing the PRESET button. Select channel 19; if one or two beeps are heard, the radio is not equipped with MWOD capability. If no beep is heard, the radio has MWOD capability. Verify a WOD for a particular date is loaded by selecting channel 20, manual mode, and by selecting the date to be verified with the manual frequency knobs. Select CHAN 19, then CHAN 20. A single beep signifies that a WOD for that date is present. The single WOD entry procedure remains valid for radios that are equipped for MWOD operation. Preset channel 20 is reserved for MWOD mode selection.

Time-of-Day (TOD) Transmission

The TOD entry is normally entered before flight, but it is possible to enter it in flight. It is possible to transmit timing information in both normal and AJ modes by momentarily pressing the TONE button. In the normal mode, a complete TOD message is transmitted, while in the AJ mode, only an abbreviated time update is transmitted. A time transmission allows a time update if one radio has drifted out of synchronization.

Time-of-Day (TOD) Reception

Reception is possible in both normal and AJ modes. The radio automatically accepts the first TOD message received after the radio is turned on. Subsequent messages are ignored unless the T position is selected with the A-3-2-T knob. The radio then accepts the next TOD update in either normal or AJ mode, provided the TOD update arrives within 1 minute of the time the T position has been selected. To receive time in the normal mode, position the A-3-2-T knob to T and return to a normal channel in either manual or preset mode. To receive a time update in AJ mode, rotate the A-3-2-T knob to the T position and then back to the A position. A TOD

update (time tick) can now be received on the selected AJ net for 1 minute.

Net Number

After TOD and WOD are entered, any valid AJ net number can be selected by using the manual frequency knobs.

Antijamming (AJ) Mode Operation

An intermittent tone is heard in the headset if an invalid AJ net is selected. A steady tone is heard if TOD was not received or if a WOD for the current date was not entered.

In the AJ mode, the radio can receive and process two simultaneous transmissions on the same net. Conferencing is controlled by the WOD loaded in channel 19. If the WOD in channel 19 ends with 00 or 50, conferencing is possible. If the WOD in channel 19 ends with 25 or 75, conferencing is disabled.

If the function knob is set to BOTH and guard channel jamming is encountered, switching the function knob to MAIN negates the jamming.

HAVE QUICK (HQ) UHF RADIO

The UHF radio provides line-of-sight communications. UHF transmissions are made by holding the UHF VHF IFF transmit switch on the throttle to the UHF position. Frequencies range from 225.000-399.975 MHz. The guard receiver monitors the guard frequency of 243.0 MHz. Power, volume, squelch, guard, and tone controls are located on AUDIO 1 control panel. HAVE QUICK mode selection and other UHF functions are controlled by the upfront controls.

Twenty or 19 channels may be preset using upfront or backup controls, respectively. The UHF radio is powered by battery bus No. 1 and requires power from emergency ac bus No. 2 and emergency dc bus No. 2 for operation on upfront control.

Operation of the UHF Radio on Upfront Controls

To change UHF preset channels on the CNI page, refer to CNI READOUT/DED PAGE SUMMARY, this section.

The UHF page is selected by depressing the COM 1 override button on the upfront controls.

Functions available on the UHF page are:

- Changing preset channels and manual frequencies.
- Changing between MAIN and BOTH functions.
- Channelizing frequencies.
- Changing bandwidth.
- Updating TOD and selecting AJ mode.

The UHF page displays its data on five lines. The first line contains information about the radio mode and transmission status. The radio mode displays UHF-TOD for normal operation; HQ-TOD is displayed when the AJ mode is selected. Either label is highlighted when the radio is keyed. The transmission status is displayed as OFF, MAIN, or BOTH. OFF is displayed when power is turned off with the COMM 1 power knob. MAIN is displayed when transmissions are received only on the main UHF receiver; BOTH is displayed when transmissions are received on both the main and guard receivers. The second line displays the active frequency or preset channel number. Line three displays the data entry scratchpad. The fourth line displays the label PRE and a preset channel number, increment and decrement symbols, and the label TOD. Line five displays the frequency associated with the preset channel. The fifth line also shows the selected bandwidth, which is displayed as either narrow band (NB) or wide band (WB). The CNI readout/DED page summary shows the radio mode (UHF-TOD), transmission status (MAIN), active preset channel number (10), the scratchpad frequency (*235.00*), a preset channel (PRE 10), the frequency associated with the preset channel in line four (226.00), and radio bandwidth (NB).

Changes on the UHF page are made by the use of asterisks and the keyboard, the increment/decrement switch, or the SEQ position of the DCS, depending on the nature of the change. Asterisks (*235.00*) are moved by up/down movement of the DCS through the following locations: scratchpad, bandwidth (UHF mode only), radio mode, preset channel, preset channel frequency designation, and back to the scratchpad. Information enclosed by the asterisks may be changed. With asterisks properly positioned, the radio mode and bandwidth are changed by depressing any ICP/IKP key (1-9). Channels/frequencies are changed by placing the asterisks over the scratchpad, keying in the desired channel/frequency, and then depressing the ENTR button. If one or two

digits are entered, a preset channel is selected; if three to five digits are entered, a frequency is selected. Extra numbers over five digits are ignored. When the ENTR button is depressed, the channel/frequency changes and the DED reverts to the overridden page. (If the COM 1 override button is depressed and the ENTR button is depressed without keying new digits in the scratchpad, the channel or frequency that was previously in the scratchpad is selected.) The preset channel is changed by using either the increment/decrement switch (note the up/down triangles next to the preset channel number) or by use of the asterisks and keyboard as previously described. As the preset channel is changed, its associated frequency also changes. Changing between MAIN and BOTH functions can only be accomplished by positioning the DCS to SEQ. This action can be accomplished independently of asterisk position.

Special considerations should be given in instances where the features of the HAVE QUICK radio are used. The HAVE QUICK radio operates in two modes: UHF-TOD, for the normal mode using a single UHF frequency, and HQ-TOD, for the AJ mode using pseudorandom frequency-hopping techniques. Before the AJ mode can be used, time of day (TOD) must be updated. This can be accomplished on the upfront controls by placing the asterisks around the radio mode label (UHF-TOD or HQ-TOD) on the UHF page and then depressing the ENTR or M-SEL button. The TOD is updated by requesting a TOD transmission. In either mode, the transmission must be received within 1 minute of depressing the ENTR or M-SEL button. After the TOD update and with proper WOD entries on the UHF backup control panel, the AJ mode is accessed by placing the DED asterisks around the UHF-TOD label on the UHF page and then depressing any ICP/IKP key (1-9). Nets are entered and changed just as operating frequencies and can be preentered in preset locations.

UHF Radio Backup Control Panel

Refer to figure 1-69. The UHF radio backup control panel, located on the left console, controls the UHF radio, when required, by positioning the CNI knob to BACKUP (AUX COMM panel). When BACKUP is selected, the controls on the UHF radio backup control panel have the following functions:

Function Knob

Functions are:

- OFF – Power off.

- **MAIN** – With COMM 1 power switch on, UHF radio operates on selected frequency.
- **BOTH** – Normal operation plus receiving on guard frequency.
- **ADF** – Not operational.

Mode Knob

Functions are:


- **MANUAL** – UHF frequency is selected by manually setting the five frequency knobs.
- **PRESET** – UHF frequency is determined by the CHAN knob.
- **GUARD** – The main receiver and transmitter are automatically tuned to the guard frequency and the guard receiver is disabled.

CHAN Knob

The CHAN knob permits the selection of 1 of 19 (MWOD) or 14 (single WOD) preset frequencies (channels 1-19) with the mode knob at PRESET and the A-3-2-T knob in either 2 or 3. Preset channels used for WOD storage cannot be used as preset channels for normal radio operation. Frequencies set for each channel can be manually written on a channel frequency card located on the access door. Preset channel frequencies are set (or changed) as follows:

- Function knob – MAIN or BOTH.
- Mode knob – PRESET.
- Manual frequency knobs – Set to desired frequency.
- CHAN knob – Set to desired channel.
- Lift access door.
- Depress PRESET button under access door.

UHF Radio Backup Control Panel C DF (Typical)

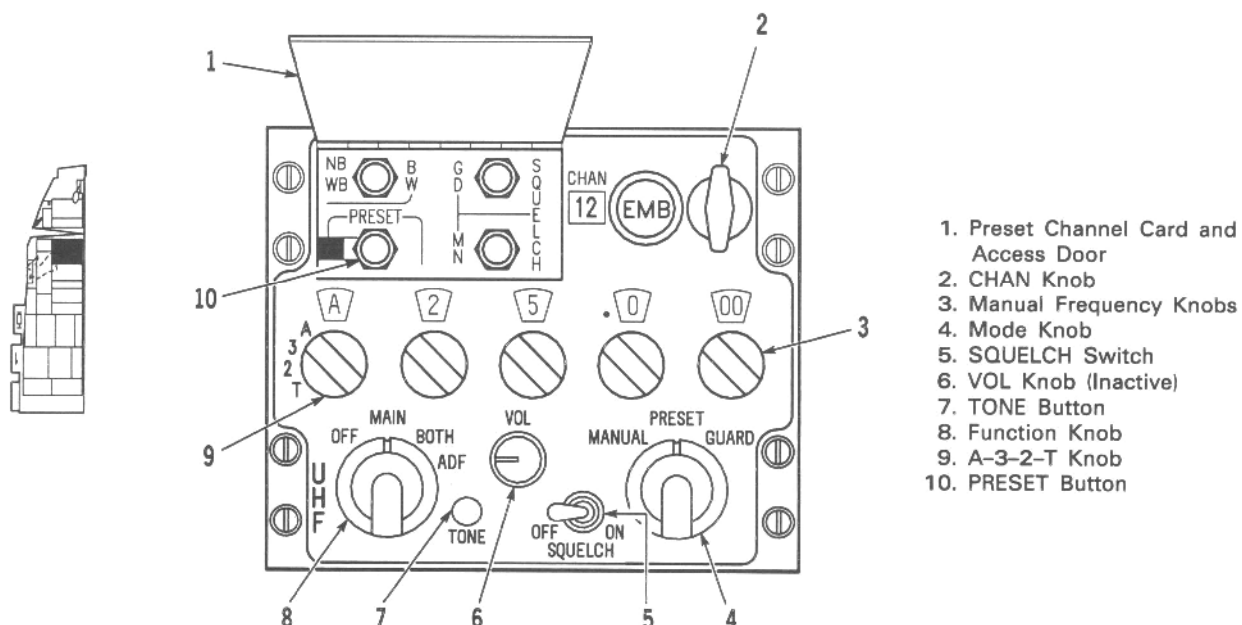

GR1F-16CJ-1-0081X37®

Figure 1-69.

Manual Frequency Knobs

The five manual frequency knobs allow manual selection of frequencies in steps of 0.025 MHz from 225.000-399.975 MHz.

A-3-2-T Knob

Functions are:

- A – Selects AJ mode.
- 3 – Allows manual selection of frequencies.
- 2 – Allows manual selection of frequencies.
- T – Momentary position which enables the radio to accept a new TOD for up to 1 minute after selection. Also used in conjunction with the TONE button for emergency startup of the TOD clock when TOD is not available from external sources.

VOL Knob

The VOL knob is nonfunctional. Volume can only be controlled by the COMM 1 (UHF) power knob.

SQUELCH Switch

Functions are:

- ON – Enables squelch circuit which helps to eliminate background noise in normal reception.
- OFF – Disables squelch circuit to permit reception of a weak signal.

TONE Button

Depressing the TONE button in normal or AJ mode interrupts reception and transmits a tone signal and TOD for HQ on the selected frequency. Simultaneously pressing the TONE button in conjunction with the A-3-2-T knob in T position starts the emergency startup of the TOD clock. Pressing the TONE button with channels 1, 14, 15-20 selected in manual mode enters MWOD data when in load mode. Pressing the TONE button in erase mode erases all MWOD data.

VHF RADIO

The VHF radio provides line-of-sight voice communication. VHF transmissions are made by holding the

UHF VHF IFF transmit switch on the throttle to the VHF position. Transmission and reception are available for AM from 116.000-151.975 MHz and for FM from 30.000-87.975 MHz. Only reception is available from 108.000-115.975 MHz. Twenty channels may be preset. Operation may be either on narrow band or wide band. Narrow band is used for all normal operations. Power, volume, squelch, guard, and tone controls for the VHF radio are located on the AUDIO 1 control panel. Other VHF radio functions are controlled by the upfront controls. There are no backup controls. In the event of certain failures of the upfront controls, the VHF radio may remain on the last frequency set prior to the failure. The VHF radio is powered by the nonessential dc bus.

Operation of the VHF Radio on Upfront Controls

To change VHF preset channels on the CNI page, refer to CNI READOUT/DED PAGE SUMMARY, this section.

The VHF page is selected by depressing the COM 2 override button on the upfront controls. Functions available on the VHF page are:

- Changing preset channels and manual frequencies.
- Channelizing frequencies.
- Changing bandwidth.

The VHF page displays its data on five lines. The first line displays information about secure voice, the VHF radio mode and status. The radio mode always displays VHF for normal operation. The radio status is displayed as ON or OFF; however, the ON and OFF functions can only be controlled via the AUDIO 1 control panel. The second line displays active frequency or preset channel. Line three displays the data entry scratchpad, which is a five-digit area highlighted by two asterisks. The scratchpad is used to change either channels or manual or active frequencies, and it displays the channel/frequency not currently being used. When the VHF page is first selected, the scratchpad is displayed in one of two ways: (1) If the radio is operating on manual frequency, the scratchpad displays preset channel entry. (2) If the radio is operating on preset channels, the scratchpad displays manual or active frequency entry. The fourth line contains the label PRE and a preset channel number. The label PRE is highlighted

when the radio is tuned to a preset channel. Line five displays the frequency associated with the preset channel. The fifth line also shows the selected bandwidth, which is displayed as either narrow band (NB) or wide band (WB). The CNI readout/DED page summary displays the radio mode (VHF), radio power status (ON), active preset channel number (12), the scratchpad frequency (*135.00*), a preset channel (PRE 12), the frequency associated with the preset channel in line four (126.00), and bandwidth (NB).

Changes on the VHF page are made by use of the asterisks and the keyboard or the increment/decrement switch, depending on the change. Asterisks (*135.00*) are moved by up/down movement of the

DCS through the following locations: scratchpad, bandwidth, manual frequency, preset channel number, preset channel frequency designation, and back to the scratchpad. Information enclosed with asterisks may be changed as described under OPERATION OF THE UHF RADIO ON UPFRONT CONTROLS, this section. The preset channel may be changed by using either the increment/decrement switch (note the up/down triangles next to the preset channel number) or by use of the asterisks and the keyboard.

When operating on guard frequency, AM or FM selections are available on the VHF page. To switch from AM to FM or FM to AM, depress any ICP/IKP key (1-9).

)

)

)

)

)

)

)

)

)

)

)

ZEROIZE SWITCH

Refer to figure 1-3. The ZEROIZE switch is a guarded three-position toggle switch.

When positioned to OFF, coded electronic information associated with the following equipment is purged:

- DTC.
- FCC.
- GPS.
- AIFF mode 4.
- PDG.
- RWR.

When positioned to DATA, coded electronic information associated with the following equipment is purged:

- DTC.
- GPS.
- AIFF mode 4.

Seat ejection also automatically performs an escape zeroize operation; refer to EJECTION SEAT OPERATION, this section.

NAVIGATION SYSTEMS

GLOBAL POSITIONING SYSTEM (GPS)

The GPS receives signals from orbiting satellites to determine accurate aircraft position, velocity, and time information. The FCC uses this data to reduce inertial navigation errors and enable accurate weapon delivery solutions. GPS data can also be used for in-flight alignment of the INS. The FLCS uses GPS data for SWIM during TF. GPS data is also used in HAVE QUICK time-of-day updates.

Refer to T.O. GR1F-16CJ-34-1-1 for a detailed description of GPS.

INERTIAL NAVIGATION SET (INS)

The INS is a prime sensor for aircraft velocity, attitude, and heading and is a source of navigation information.

The INS, in conjunction with the upfront controls, GPS, CADC, and FCC provides:

- Present position with update and storage capability.
- Current winds.
- Groundspeed and drift angle.
- Great circle course computation with steering provided to 30 points.
- Instantaneous and maximum g data for display in the HUD.

For a detailed system description, refer to T.O. GR1F-16CJ-34-1-1.

TACTICAL AIR NAVIGATION (TACAN) SYSTEM

The TACAN system provides continuous bearing and distance information from any selected TACAN station within a line-of-sight distance up to approximately 390 miles, depending upon terrain and aircraft altitude. Only distance information is presented when a DME navigational aid is selected. There are 252 channels available for selection. Two antennas, one on top and one on the bottom of the fuselage, provide omnidirectional coverage regardless of aircraft attitude. The TACAN bearing, selected course, range, and course deviation information are displayed on the HSI as determined by HSI and INSTR MODE knob settings.

Operation of the TACAN on Upfront Controls

The TACAN is controlled by the upfront controls when the TACAN power knob on the AUDIO 2 control panel is placed to on (cw) and the CNI knob is in UFC. The TCN/ILS page is selected by verifying the CNI page is displayed on the DED and then depressing the T-ILS function button on the upfront controls. The DED displays information about three TACAN items: operating mode, channel number, and band. The operating mode is displayed (REC, T/R, or A/A TR) and may be changed by positioning the DCS to SEQ until the desired mode is displayed. Channel (1-126) and band (X or Y) may be changed within the scratchpad with the keyboard.

Channels are selected by keying in the desired number on the scratchpad and then depressing the ENTR button. Asterisks remain about the scratchpad after channel change. TACAN band is selected by keying zero in the scratchpad and then depressing the ENTR button. The asterisks remain about the scratchpad after band change.

TERRAIN FOLLOWING RADAR (TFR) SYSTEM

The TFR system provides manual TF and ATF capability. In manual TF, the NVP provides pitch steering cues via the HUD. In ATF, climb/dive commands are calculated in the NVP and sent to the FLCS to maintain a selectable clearance above the terrain.

Refer to T.O. GR1F-16CJ-34-1-1 for expanded TFR system description, operating procedures, and operating limitations.

AIFF SYSTEM

The AIFF system provides selective identification feature (SIF), automatic altitude reporting, and encrypted mode 4 IFF. Normal operation is possible in any of six modes:

- Mode 1 – Security identity.
- Mode 2 – Personal identity.
- Mode 3/A – Traffic identity.
- Mode 4 – Encrypted identity.
- Mode C – Altitude reporting.
- Mode S – Data Link (Surveillance mode)

AIFF TRANSPONDER

The transponder only transmits coded replies to correctly coded interrogations. Backup control is provided for mode 4 and EMER functions. Refer to AUX COMM PANEL, this section, for functions of IFF MASTER knob and mode 4 backup controls. In the event of certain failures of upfront controls, IFF

modes 1 and 3/A may continue to reply on the last codes selected prior to failure.

Modes 2 and C, if selected prior to failure, may continue to reply. However, when the CNI knob is placed in BACKUP, modes 1, 2, 3/A, C, and S are disabled except when the IFF MASTER knob is in EMER. Mode C provides altitude information from the CADC in 100-foot increments. The AIFF transponder also provides for selection of manual or automatic operation. If the automatic function is selected, IFF operation can be programmed to:

- Turn modes on or off when a certain position is reached.
- Change codes when a specific time is reached.
- Turn modes on or off when a certain position is reached and changes codes when specific time is reached.

If the automatic position switching mode is selected, two mode groups are available. Mode groups contain selection status and position criteria that determine where a selected group becomes active. Mode groups are designated 1 or 2. Mode groups may be preprogrammed via the DTE or manually.

If the automatic time switching mode is selected, six code groups for IFF modes 1, 3/A, 4, and S are available. Code groups (1-6) designate the codes for the four IFF modes and a time when the selected code group becomes active. Code groups may be preprogrammed via the DTE or manually.

Operation of the Transponder on Upfront Controls

When the IFF MASTER knob, located on the AUX COMM panel, is placed to LOW or NORM and the CNI knob is in UFC, the AIFF transponder is controlled by the upfront controls. The IFF page is selected by depressing the IFF override button on the upfront controls. The IFF page displayed depends on the mode/code switching function last selected; i.e., the MAN page is displayed if manual function was last selected. IFF pages are accessed by placing the DCS to SEQ. Information is displayed on the IFF pages in four lines (lines one, three, four, and five). Refer to CNI READOUT/DED PAGE SUMMARY, this section.

The first line displays IFF and power status (OFF, STBY, or ON). The next area displays MAN for manual IFF operation or AUTO for automatic IFF operation. If POS page is selected, the label POS is displayed in the next area of line one. The next area displays the selected mode group (1 or 2). The area at the far right displays two items: the label TIM is displayed if TIM is selected; the selected code group (1-6) for the IFF modes 1, 3/A, 4 and S is displayed next to the TIM label.

Line three displays four items. M1 is displayed at the far left. Displayed with the M1 label is the two-digit mode 1 code. The next area displays the MC label and a 5. MC represents IFF mode C, and it is highlighted when mode C is selected (MAN and POS only). The 5 represents the ICP/IKP key that provides selection of mode C if the ICP/IKP key is entered by the scratchpad. The area at the far right displays the scratchpad, which is displayed only when values are being keyed in. The scratchpad provides on/off control for each of the six IFF modes, code control for modes 1, 2, 3/A, 4 and S, and monitoring control for mode 4.

Line four displays five items. The first area at the left displays the M2 label, representing mode 2, and enterable mode 2 code (MAN only). The second area displays M4 and an A or a B. M4 represents mode 4. A or B indicates the two mode 4 codes. The third area displays a 6, which represents the ICP/IKP key that alternates selection of the mode 4 code (A or B). The fourth area displays the criteria used for position switching or time switching. This area displays a direction (N, S, E, or W), the fixed label OF, and a destination number (1-25) (POS only) or a time (HH:MM) (TIM only).

Line five displays data concerning IFF modes 3/A and 4 (MAN only) and S. The first area displays the label M3 and the enterable four-digit mode 3/A code. The second area displays mode 4 monitoring modes (OUT, LIT, AUTO). The third area displays a 7, which represents the ICP key that rotates selection of mode 4 monitoring (MAN only). The fourth area displays the label MS and an 8, which represents the ICP key that rotates selection of mode S.

IFF manual mode switching is accomplished by verifying the IFF MAN page. With asterisks positioned about the scratchpad, depress appropriate ICP/IKP key and depress ENTR. ICP/IKP keys represent the following: 0, 8, and 9 are invalid (scratchpad flashes); 1 for mode 1 selection; 2 for mode 2; 3 for mode 3/A; 4 for mode 4; 5 for mode C; 6

for mode 4 A/B code; 7 for mode 4 monitoring (OUT, LIT, or AUD); 8 for mode S selection; two digits (mode 1 code); 2 plus four digits (mode 2 code); three or four digits (mode 3/A code).

IFF automatic switching is accomplished on the IFF AUTO pages. IFF AUTO pages are accessed by placing DCS to SEQ. To select AUTO POS or AUTO TIM switching functions, position asterisks about the POS and/or the TIM labels and depress the M-SEL button. If AUTO POS switching function is selected, only position and mode criteria is displayed. Labels (6) (mode 4 codes) and (7) (mode 4 audio monitor function) are removed and mode 4 A/B codes are not modifiable. The scratchpad is reduced to one digit (mode numbers only). The mode group number is displayed on the page and is highlighted when that mode group is active. The DCS provides access to the different mode groups by positioning the switch to INC or DEC. Sequencing to a different mode group does not affect the active squawks.

If AUTO TIM switching function is selected, only time and code criteria is displayed. Labels (5) (mode C is not modifiable from this page) and (7) (mode 4 audio monitor), and (8) (mode S) are removed. Mode 2 codes are not displayed (only modifiable from the IFF MAN page). The code group number is displayed on the page and is highlighted when that code group is active. The DCS provides access to the different code groups by positioning the switch to INC or DEC. Sequencing to a different code group does not affect the active squawks.

If the FCC fails, only IFF manual mode is available.

AIFF INTERROGATOR

The interrogator provides selective interrogation of IFF systems along a line-of-sight (LOS) or within a specific scan area. For a specific scan area, the interrogator may be selectively coupled or decoupled with the FCR. Refer to T.O. GR1F-16CJ-34-1-1 for details.

Location and classification of a particular IFF system as a friend or unknown is possible by comparison SIF codes. During interrogation, the interrogator is commanded to the modes 1, 2, 3/A, 4 (A or B) code, and C as programmed via the DTE or manually entered using the scratchpad. The mode 4 (A/B) interrogator code is independent of the mode 4 (A or B) transponder code as displayed on the CNI interrogator (INTG) page.

Control of the interrogator is accomplished via the AUX COMM panel, the MISC panel, the UHF VHF IFF transmit switch, the INTG page, and the MFDS FCR display. Interrogation of other IFF systems is possible when in any one of five modes:

- Mode 1 – Security identity.
- Mode 2 – Personal identity.
- Mode 3/A – Traffic identity.
- Mode 4 – Encrypted identity.
- Mode C – Altitude reporting.

Operation of the Interrogator on Upfront Controls

Selecting the INTG page displays and commands the interrogator to the same mode 1, 2, 3/A, and 4 (A/B) codes as the transponder mode 1, 2, 3/A, and 4 (A/B) codes. The interrogator continues to use the same codes until modified via the scratchpad. The scratchpad is displayed only when data is keyed in and provides on/off control for each of the five IFF modes and enterable code control for modes 1, 2, 3/A, and 4. After modification, the interrogator operates independently of the transponder mode codes. The interrogator is commanded back to the current transponder mode 1, 2, 3/A, and 4 (A/B) codes via the scratchpad or by entering the ICP/IKP 7 key via the scratchpad. The INTG page displays its data on four lines (lines one, three, four, and five).

The first line displays INTG and the interrogator power status (ON/OFF). The next area displays the coupled (CPL) or decoupled (DCPL) status with the FCR. The area on the right displays the current selected steerpoint. For CPL and DCPL detailed description, refer to T.O. GR1F-16CJ-34-1-1.

The third line displays M1 and enterable mode 1 interrogation code, MC and 5, and the scratchpad. The 5 represents the ICP/IKP key that provides mode C interrogation when entered by the scratchpad.

The fourth line displays M2 and enterable mode 2 interrogation code, M4 and selectable mode 4 A/B code and 6. The 6 represents the ICP/IKP key that provides selection of mode 4 A/B interrogation when entered by the scratchpad.

The fifth line displays M3, mode 3/A interrogation code, RST, and 7. The 7 represents the ICP/IKP key that resets the interrogator modes and codes to match the active transponder modes and codes when entered by the scratchpad.

AIFF CONTROLS AND INDICATORS

IFF IDENT Button

Refer to figure 1-70. The IFF IDENT button, located on the instrument panel, provides the primary method of initiating the identification of position (I/P) function of the IFF system. Pushing the button momentarily causes the I/P timer to energize for 15-30 seconds. If a mode 1, 2, 3/A, or S interrogation is recognized within this 15-30 second period, I/P replies are made.

IFF (Mode 4) Caution Light

The IFF (mode 4) caution light, located on the caution light panel, indicates that the IFF system was interrogated on mode 4 and is unable to respond because the mode 4 codes (A and B) are zeroized or not coded, mode 4 is not enabled, or the RF switch is in QUIET or SILENT.

UHF VHF IFF Transmit Switch

The UHF VHF IFF transmit switch, located on the throttle, provides control of the area for interrogation (LOS or scan). For a detailed description, refer to T.O. GR1F-16CJ-34-1-1.

IFF IDENT Button (Typical)

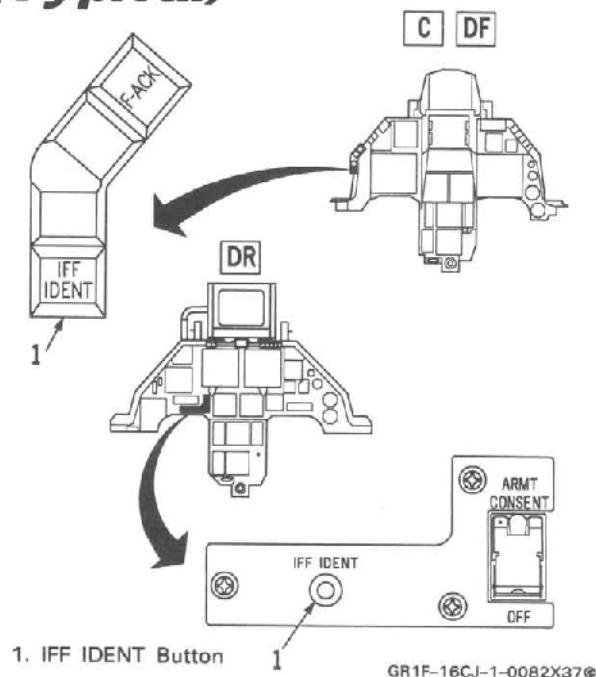


Figure 1-70.

INSTRUMENT LANDING SYSTEM (ILS)

The ILS provides precision approaches to runways equipped with localizer, glide slope, and marker beacon equipment. Localizer identification signals are supplied to the headset for station identification. The glide slope and localizer receivers supply glide slope and localizer deviation data to the deviation bars on the ADI and HUD; the HSI also displays course or localizer deviation data. Two warning flags, designated LOC and GS, appear on the ADI when deviation data is invalid. A course deviation warning flag appears on the HSI if localizer deviation data is invalid. HUD symbology consists of localizer and glide slope deviation bars. Dashed deviation bars indicate invalid data. Deviation bars are roll stabilized with tic marks positioned at the one-dot and two-dot deflections.

The symbology automatically displayed on the HUD with ILS selected is the same as LG down with the following exceptions:

- The great circle steering symbol is replaced by the ILS deviation bars.
- The lower HUD windows, except distance-to-destination, are not blanked unless the NLG is lowered and inertial velocity exceeds 80 knots.
- The HUD altitude scale does not change from 100-foot increments to 20-foot increments until NLG is lowered.
- AOA bracket is not displayed until NLG is lowered.

The flight director displays command steering data on the HUD when selected on the upfront controls. Command steering symbology consists of a circle, a tic mark positioned at the top of the circle, and a reference mark/caret positioned at the heading/ground track scale. The flight director circle is referenced to the FPM and appears when localizer data is valid. Proper use of the flight director requires that the localizer be intercepted from a heading no more than 45 degrees from the localizer course using bank angles of 30 degrees or less. When the aircraft is within two dots deflection of the localizer deviation bar, the flight director commands a turn to roll out on the localizer course. The tic mark appears on the flight director circle when glide slope deviation nears center, indicating that pitch steering data is valid. The glide slope should be intercepted from a position that is wings level and on the localizer course. If the pitch steering becomes invalid, the symbol X appears over the tic mark. The reference caret indicates the heading required to maintain the course selected on the DED (magnetic heading scale displayed) or ground track error relative to the course selected

(magnetic ground track scale displayed). The course value may be changed only by entering the new value through the DED.

The ILS flight director is designed to intercept the glide slope from below while in approximately level flight. If the aircraft approaches the glide slope from above, there is no pitch steering data. The flight director symbol remains on the horizon, displaying bank steering data, and the symbol X appears over the tic mark, indicating that pitch steering data is invalid. Valid pitch steering is provided after the glidepath is intercepted.

The marker beacon receiver operates on a fixed frequency of 75 MHz. Refer to MRK BCN LIGHT, this section.

ILS Controls

The ILS power knob, located on the AUDIO 2 panel, controls ILS power and audio volume. The ILS presentation on the HSI and ADI is controlled by the CRS set knob (HSI) and INSTR MODE knob. All other control functions are selected by the upfront controls. There are no backup controls. In the event of certain upfront control failures, the ILS may remain on the last frequency selected prior to failure.

Operation of the ILS on Upfront Controls

The ILS is controlled by the upfront controls when the ILS power knob on the AUDIO 2 control panel is placed to on (cw). The ILS page is selected by verifying the CNI page is displayed on the DED and then depressing the T-ILS function button. Commanded (OFF or ON) ILS status and three changeable items appear: the ILS frequency, the localizer course for the ILS flight director cues on the HUD, and the selection of the flight director (CMD STRG). The asterisks initialize over the scratchpad when the TCN/ILS page is selected. The ILS frequency is changed by insuring that the asterisks are over the scratchpad, keying in the desired frequency, and then depressing the ENTR button. The asterisks then automatically step to the ILS course for course entry. The flight director is selected/deselected by positioning the asterisks about the CMD STRG label and depressing the M-SEL button. (The flight director is automatically selected at ILS power up.) Positioning the INSTR MODE knob to one of the ILS positions is required before ILS deviation data (localizer and glide slope) can be displayed on the HSI, HUD, and ADI.

Three steps are required before the ILS flight director (command steering) HUD cues are usable: the localizer course is displayed on the DED, the flight director is mode-selected on the upfront controls, and an ILS mode is selected with the INSTR MODE knob.

The course setting on the HSI is not connected to the flight director in the HUD. For consistent ILS displays, the inbound localizer course should be set on both the DED and the HSI.

MRK BCN Light

Refer to figure 1-3. The MRK BCN light is located on the instrument panel. When the aircraft is over a marker beacon facility, the light illuminates green and blinks according to the code of the marker beacon.

INSTR MODE SELECT PANEL

Refer to figure 1-71. The INSTR MODE select panel, located on the instrument panel, provides for the selection of the displays on the HSI and the ADI.


INSTR HDG Knob C DF

Refer to figure 1-71. The INSTR HDG knob, located on the INSTR MODE select panel, has arrows pointing in cw and ccw directions. The knob is pushed and turned to set the INS heading to a known magnetic heading in the event of an INS failure (indicated by the AUX warning flag on the ADI).

INSTR MODE Knob

Refer to figure 1-72 for functions and details of the INSTR MODE knob, located on the INSTR MODE select panel. Refer to figure 1-73 for details of the ADI and HSI in the instrument modes.

INSTR MODE Select Panel (Typical)

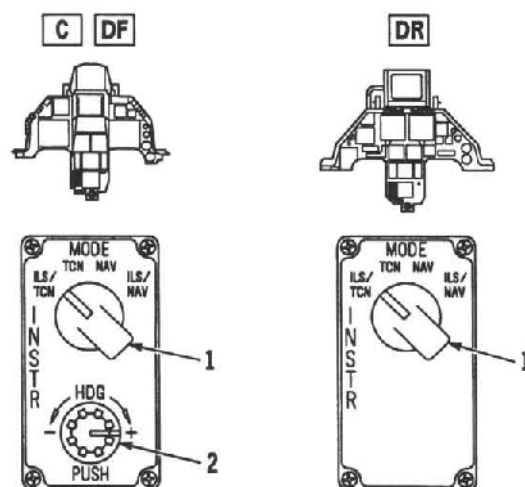

1. INSTR MODE Knob
2. INSTR HDG Knob

GR1F-16CJ-1-0083X37©

Figure 1-71.

 
Navigation Aids and Display

Refer to figure 1-72.


Instrument Modes

Refer to figure 1-73.


Navigation Aids and Display (Typical)




C DF AUDIO 2 CONTROL PANEL

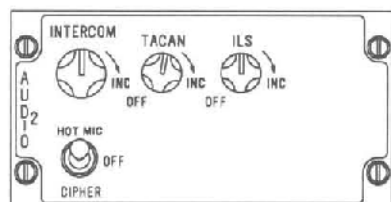

DR AUDIO 2 CONTROL PANEL

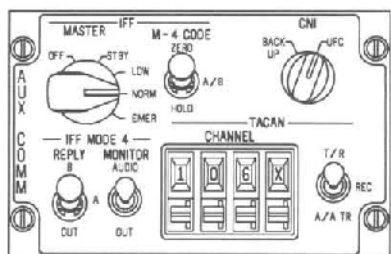

C DF AUX COMM PANEL

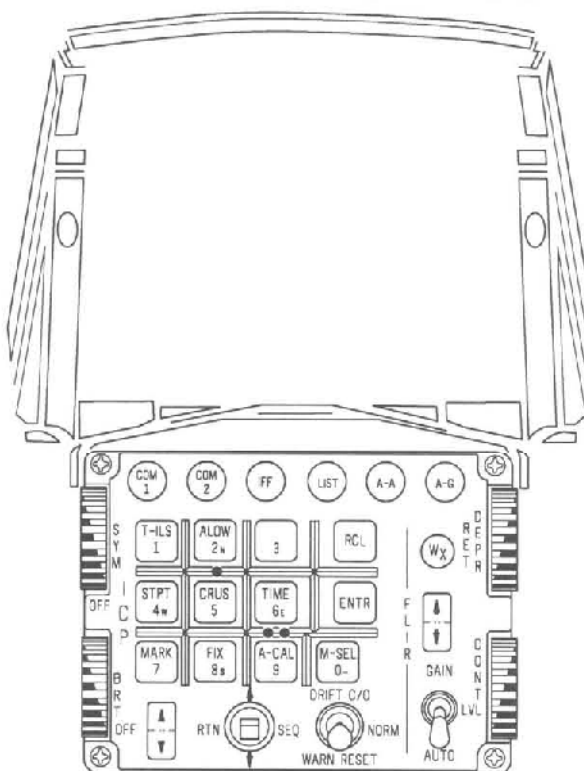


HUD/ICP

INSTR MODE SELECT PANEL (IMSP)




MRK BCN

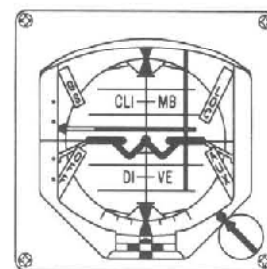

ADI



DED

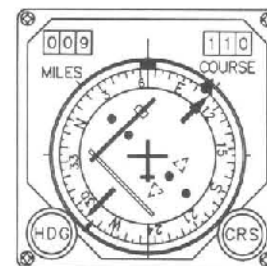

HSI

IMSP	HSI					ADI		
INSTRUMENT MODE SELECTED	RANGE INDICATOR	COURSE ARROW & COURSE SELECTED	COURSE DEVIATION INDICATOR	TO — FROM INDICATOR	BEARING POINTER	ATTI- TUDE SPHERE	LOCALIZER DEVIATION BAR	GLIDE SLOPE DEVIATION BAR
ILS/TCN	RANGE TO TACAN STATION OR DME NAV AID	MANUALLY SELECTED LOCALIZER COURSE	LOCALIZER DEVIATION	OUT OF VIEW	BEARING TO TACAN STATION	INS ROLL AND PITCH ATTI- TUDE	LOCALIZER DEVIATION	GLIDE SLOPE DEVIATION
TCN		MANUALLY SELECTED COURSE	DEVIATION FROM SELECTED COURSE	IN VIEW			OUT OF VIEW	OUT OF VIEW
NAV	RANGE TO INS DESTINA- TION			MANUALLY SELECTED LOCALIZER COURSE	LOCALIZER DEVIATION			
ILS/NAV								

GR1F-16CJ-1-0084X37©


Figure 1-72.

Instrument Modes (Typical)


TCN

NOTE:

The TCN mode has no effect on HUD symbology.

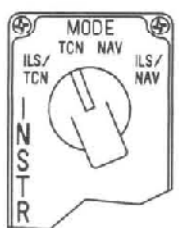

**INSTR MODE
SELECT PANEL
(IMSP)**

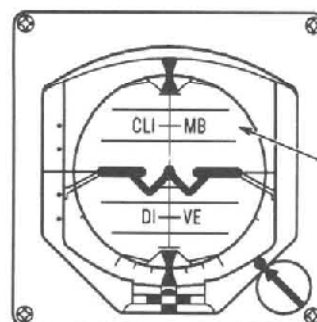

INS PITCH AND
ROLL ATTITUDE

ADI


INS MAGNETIC HEADING

HEADING REFERENCE MARKER

RANGE TO TACAN
STATION OR DME
NAV AID

TACAN COURSE SIGNAL
UNRELIABLE

DEVIATION FROM
SELECTED COURSE

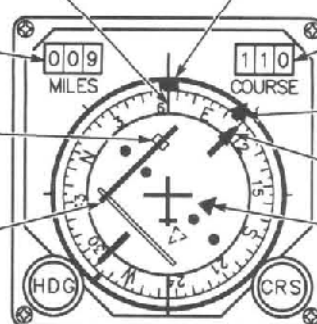

MANUALLY SELECTED
COURSE

BEARING TO TACAN
STATION

MANUALLY SELECTED
COURSE

TO-FROM INDICATOR

HSI


NAV

NOTE:

The NAV mode has no effect on HUD symbology.



**INSTR MODE
SELECT PANEL
(IMSP)**

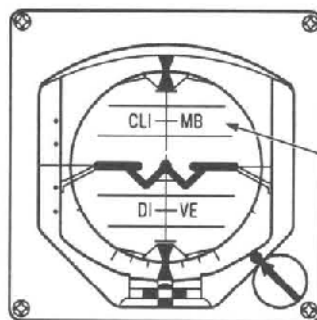

INS PITCH AND
ROLL ATTITUDE

ADI


INS MAGNETIC HEADING

HEADING REFERENCE MARKER

RANGE TO INS
DESTINATION

INS MAGNETIC HEADING
SIGNAL UNRELIABLE

DEVIATION FROM
SELECTED COURSE

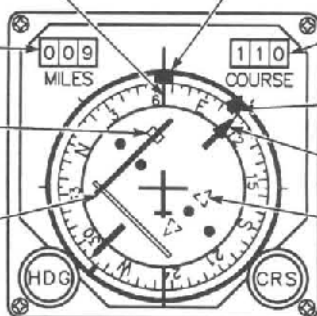

MANUALLY SELECTED
COURSE

BEARING TO INS
DESTINATION

MANUALLY SELECTED
COURSE

TO-FROM INDICATOR
(OUT OF VIEW)



HSI

GR1F-16CJ-1-0085X37 ©

Figure 1-73. (Sheet 1)

Instrument Modes (Typical)

ILS/TCN

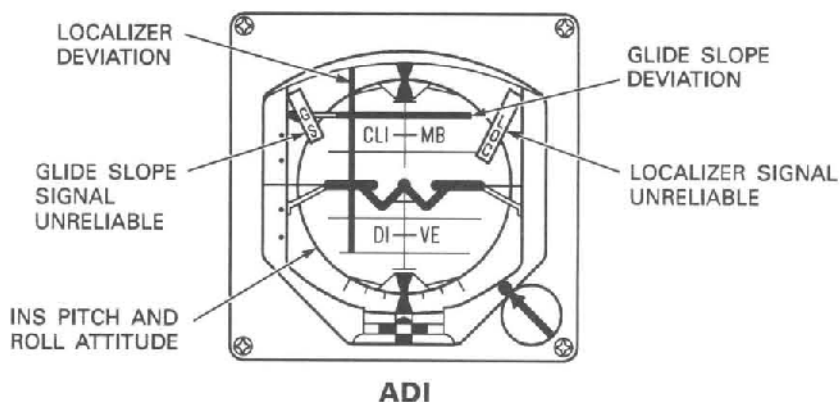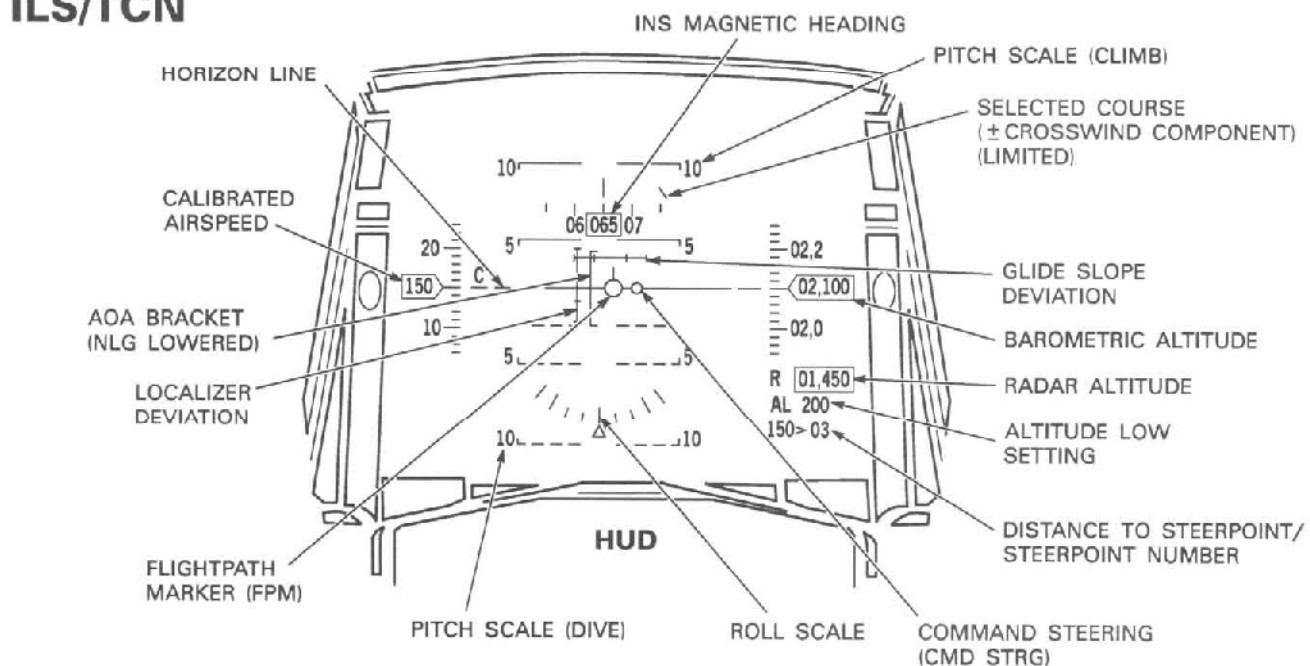


NOTES:

1. Glide slope and localizer bars indicate deviation only, not steering.
2. Command steering is referenced to the localizer course displayed on the DED.



**INSTR MODE
SELECT PANEL
(IMSP)**


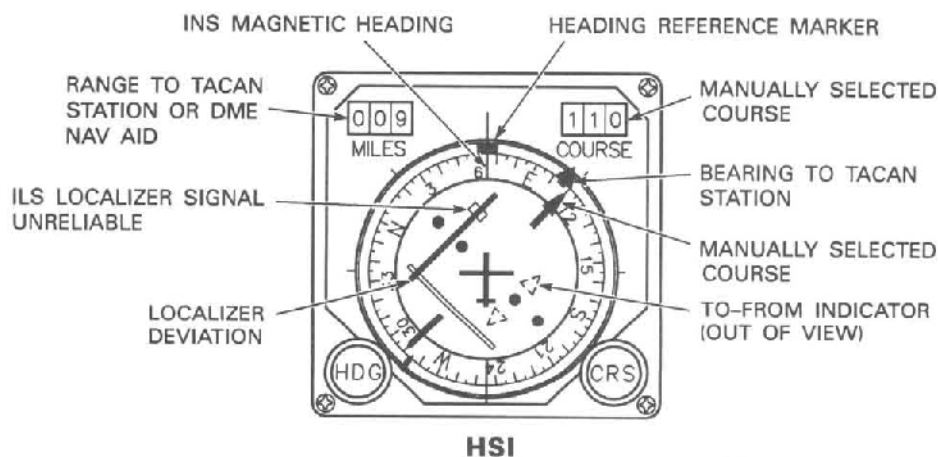


GR1F-16CJ-1-0086X37 ©

Figure 1-73. (Sheet 2)


Instrument Modes (Typical)

ILS/NAV

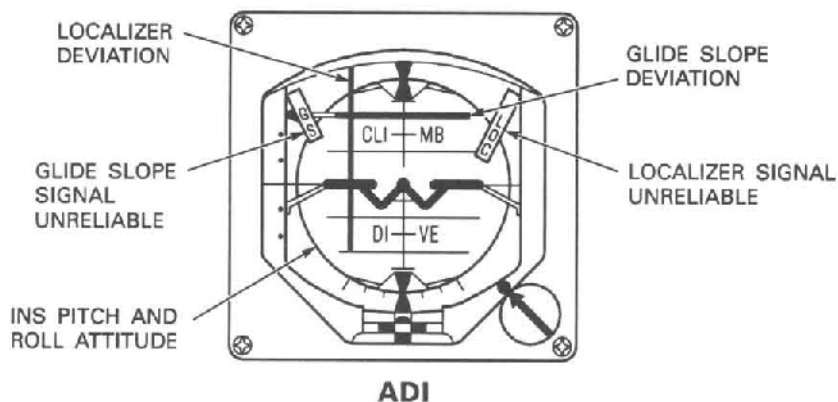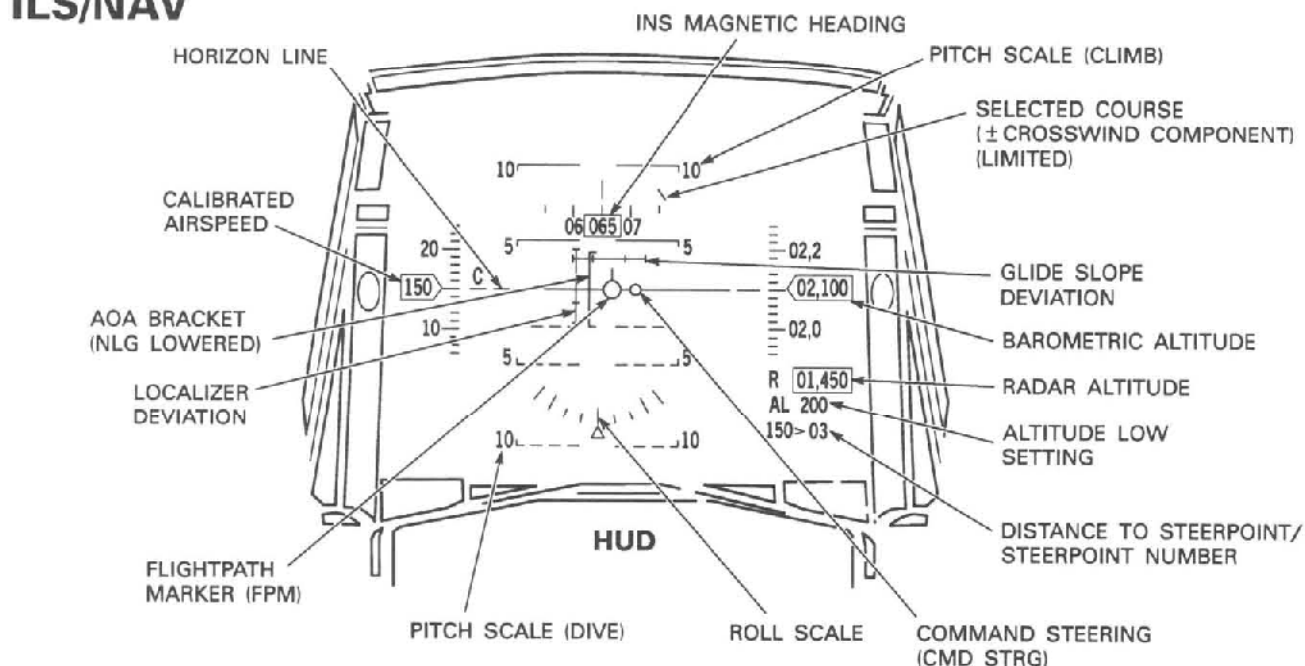

NOTES:

1. Glide slope and localizer bars indicate deviation only, not steering.
2. Command steering is referenced to the localizer course displayed on the DED.

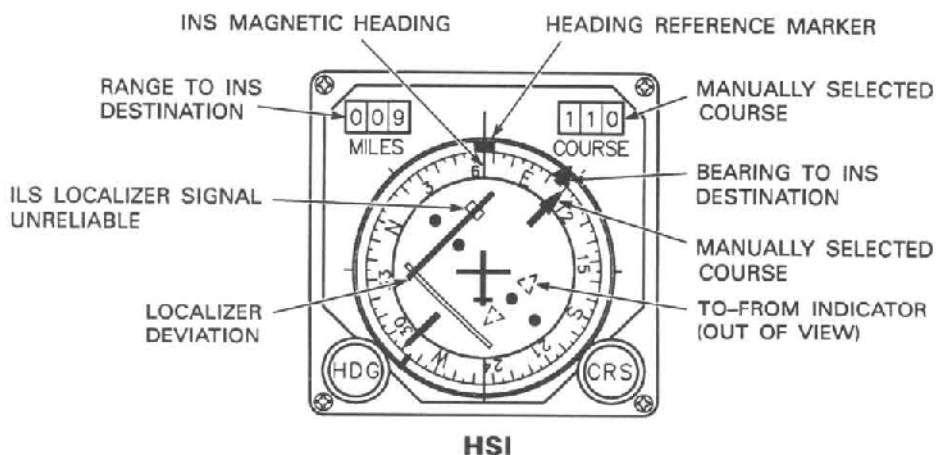


GR1F-16CJ-1-0087X37 ©

Figure 1-73. (Sheet 3)

Instrument Modes (Typical)

ILS HUD DISPLAYS

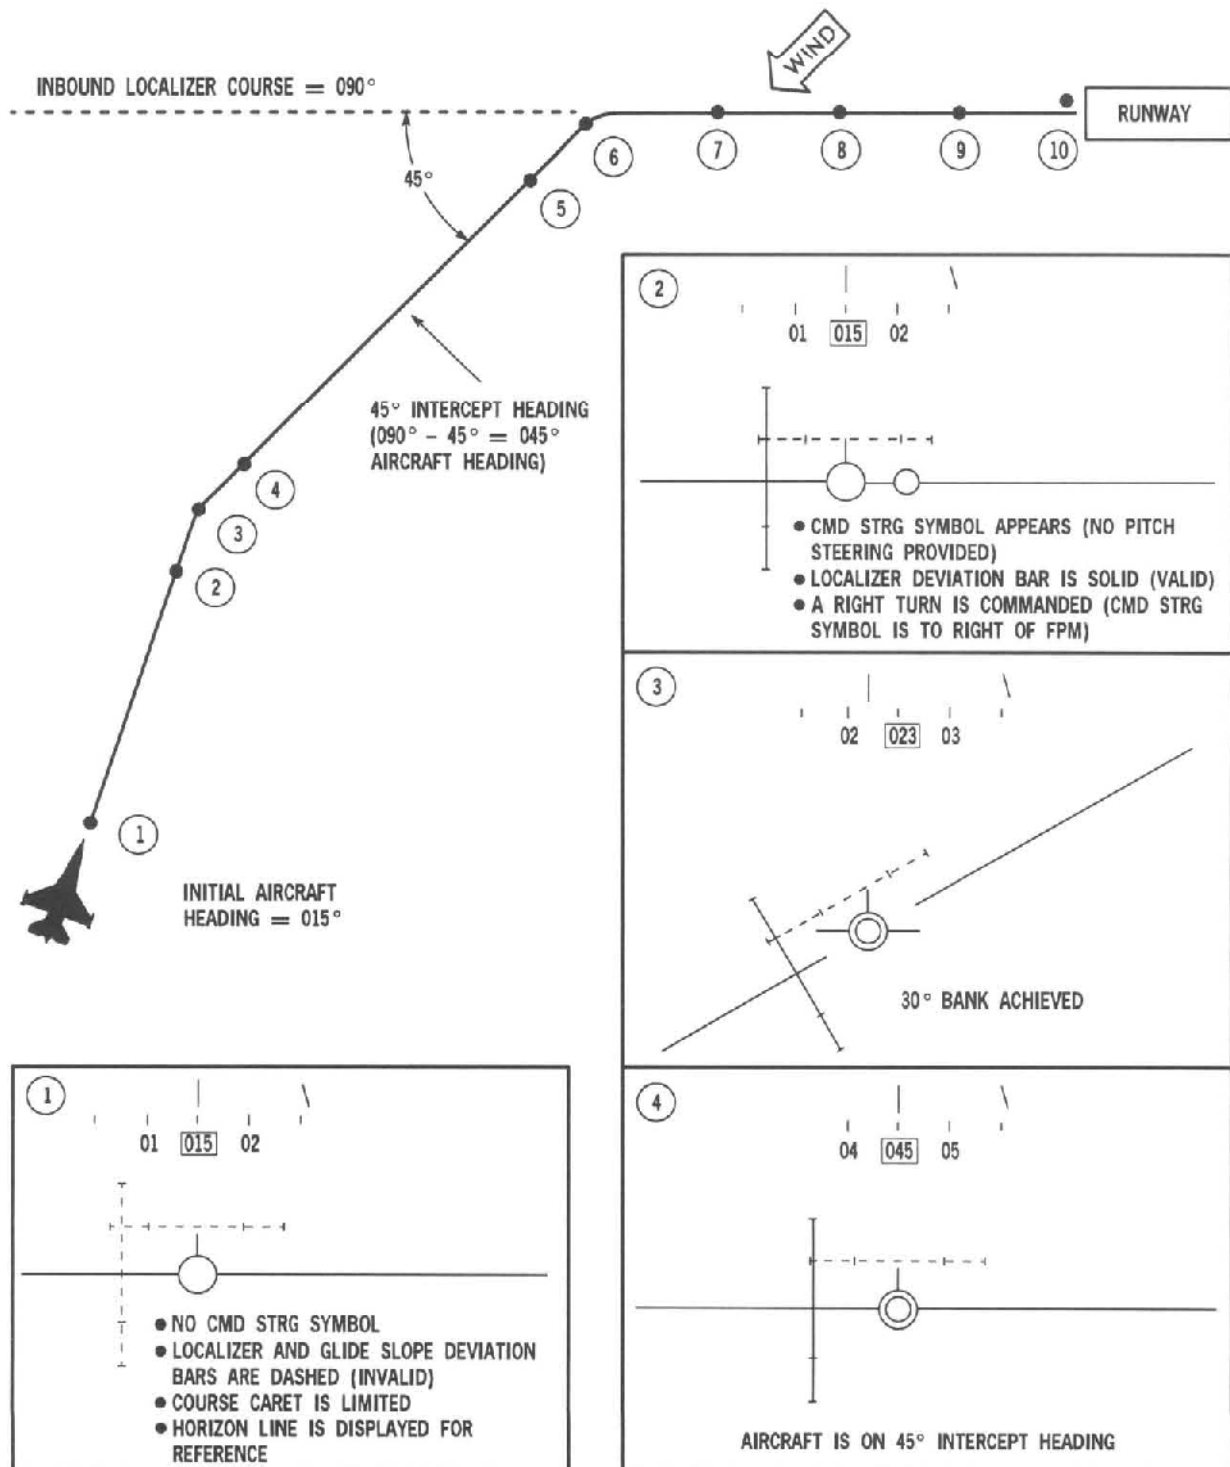


GR1F-16CJ-1-0088X37©

Figure 1-73. (Sheet 4)

Instrument Modes (Typical)

ILS HUD DISPLAYS

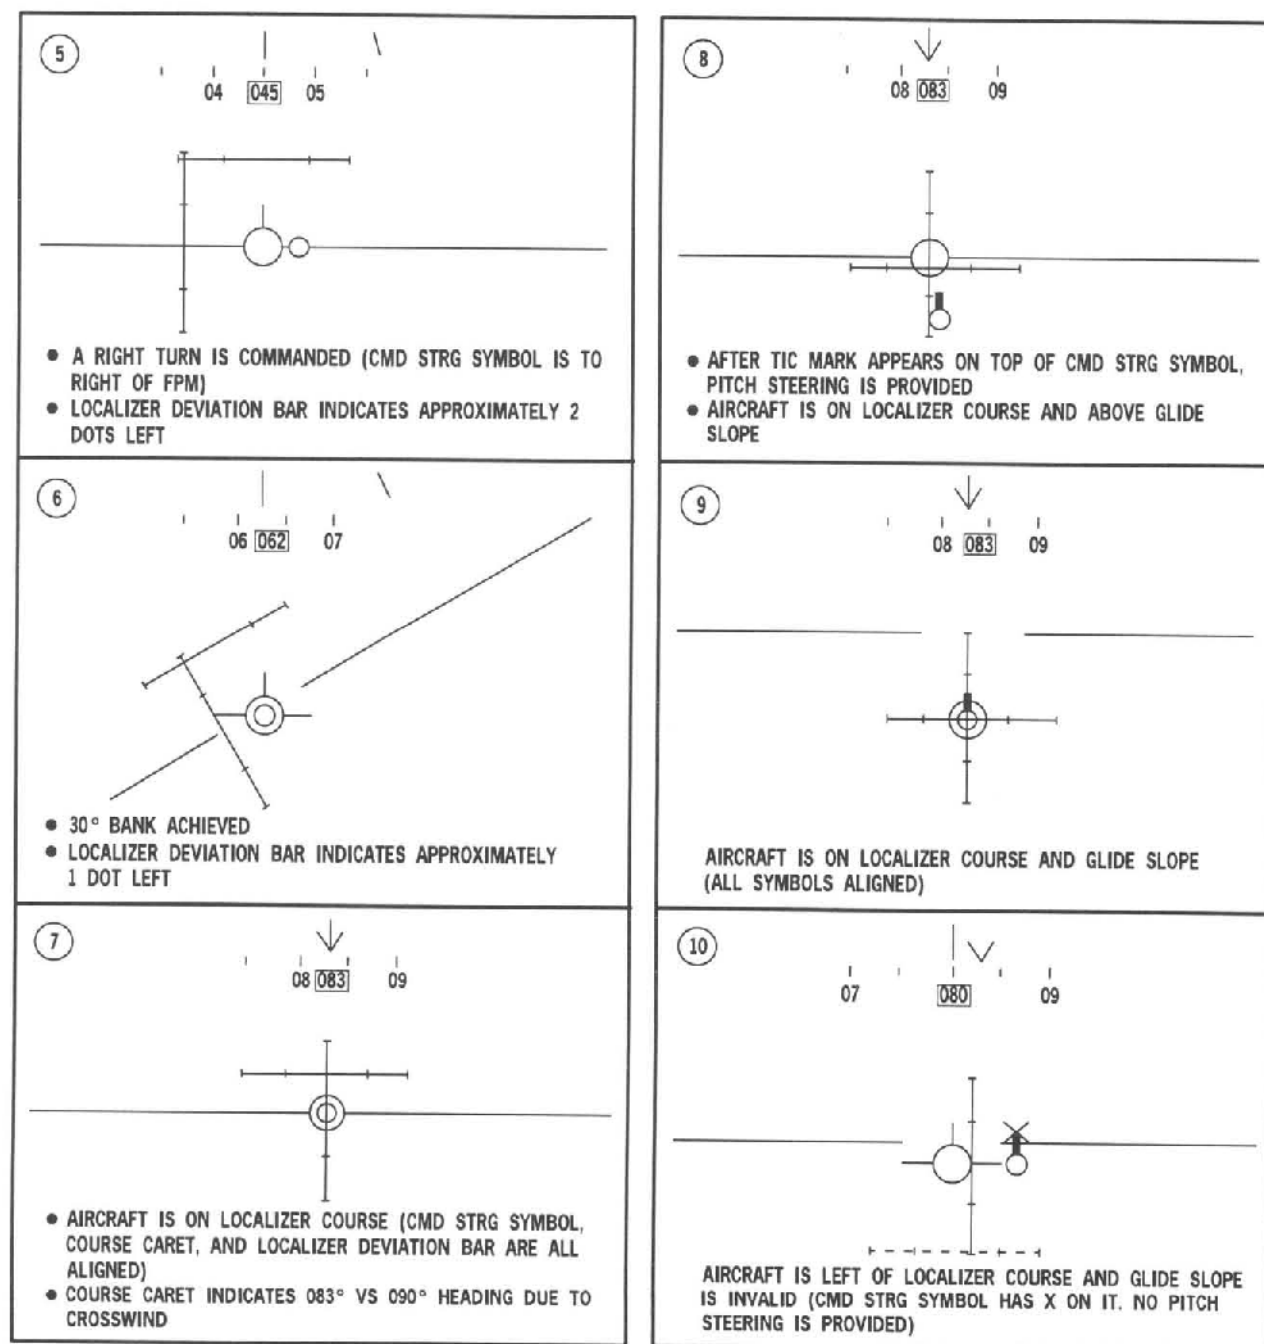

GR1F-16CJ-1-0089X37®

Figure 1-73. (Sheet 5)

FLIGHT INSTRUMENTS

Refer to figure 1-74. The flight instruments are located on the instrument panel. The instruments listed below are common and are not illustrated in detail.

- Airspeed/Mach Indicator.
- Clock.
- Magnetic Compass.
- Servo-Pneumatic Altimeter.
- Standby Attitude Indicator.
- Vertical Velocity Indicator.

ALTIMETER

The servo-pneumatic altimeter is a dual mode pressure altitude indicator with a range of -1000 to

+80,000 feet. The operating mode is manually selected by the mode lever located at the lower right corner of the instrument. In the ELECT (primary) operating mode, the altimeter is electrically driven by the CADC. In the PNEU (secondary) operating mode, the altimeter is pneumatically operated by static pressure supplied by the pitot-static system. Should the CADC or altimeter servo malfunction, the altimeter automatically reverts to the pneumatic mode and the PNEU flag appears on the face of the altimeter. The PNEU flag may also appear when accelerating or decelerating through the transonic region or while performing high g maneuvers.

The barometric setting knob, located at the lower left corner of the instrument, is used to set the desired altimeter setting. **C DF** The barometric setting of the altimeter is electrically transmitted to the CADC as a manual input correction for the pressure altitude display on the HUD. The barometric setting is shown in inches of mercury (Hg).

Flight Instruments (Typical)

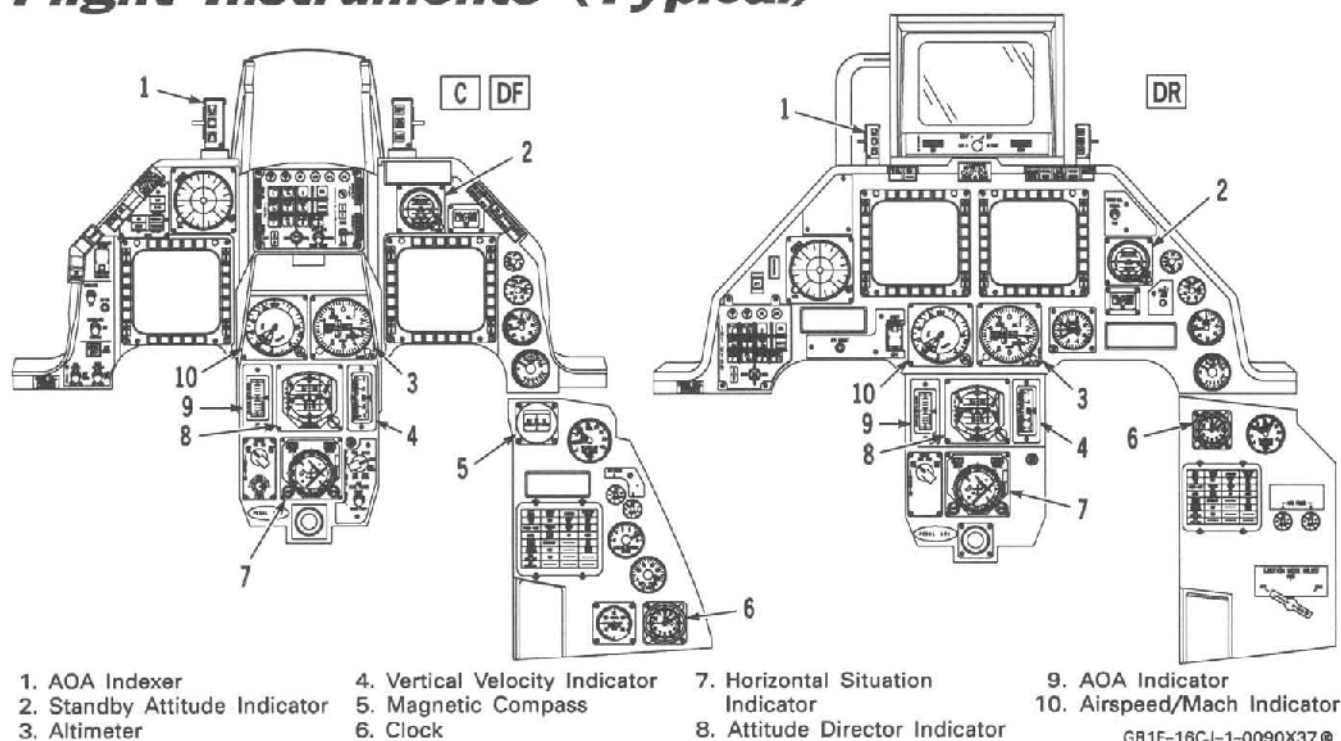


Figure 1-74.

AIRPEED/MACH INDICATOR

The airspeed/mach indicator is pneumatically operated by total and static pressure supplied by the pitot-static system. The indicator displays indicated airspeed and mach number. Indicated airspeed is displayed by a moving airspeed/mach pointer against a fixed airspeed scale. Mach number, which is read against the airspeed/mach pointer, is displayed by a rotating mach scale. The range of the indicator is from 80-850 knots and from 0.5-2.2 mach.

The maximum allowable airspeed pointer indicates 800 knots at sea level. Higher airspeeds are indicated as altitude is increased. This indication is not a valid maximum allowable airspeed cue; it should be disregarded. Refer to MAXIMUM AIRSPEED OPERATING LIMITATIONS, Section V.

The SET INDEX knob is used to set the airspeed reference index.

STANDBY ATTITUDE INDICATOR (SAI)

The SAI is a self-contained, electrically powered vertical gyroscope that mechanically positions the attitude sphere of the indicator to display aircraft pitch and roll attitudes. Manual caging of the gyroscope is accomplished by pulling the PULL TO CAGE knob at the lower right corner of the indicator. The knob is held out until the sphere is caged to zero pitch and roll indication and then released. Adjustment of the miniature aircraft reference symbol is accomplished by rotation of the PULL TO CAGE knob.

Since the SAI is mounted in the instrument panel at an angle, it indicates a pitch angle of 4 degrees less than the ADI when pitch trim knobs on both indicators are set at the pitch trim index. If caging is required, the aircraft should be flown wings level, constant altitude, and at an AOA of approximately +4 degrees. When caged on the ground, allow 2 minutes prior to taxi.

An OFF warning flag appears whenever electrical power is lost or whenever the PULL TO CAGE knob is pulled. After power loss, the indicator continues to provide usable attitude information for approximately 9 minutes. The gyroscope of the indicator is unrestricted in roll but is limited to approximately ± 85 degrees in pitch.

The indicator can develop errors during aerobatic maneuvering, primarily when pitch is near 90

degrees. If these errors exceed 7 degrees after returning to level flight, erection is cut off. If this occurs, the gyro does not automatically erect and must be manually caged to eliminate the error. The indicator is powered by battery bus No. 2.

VERTICAL VELOCITY INDICATOR (VVI)

The VVI displays rate of climb/descent information provided by the CADC. The indicator has a vertically moving tape display with a range of 6000 fpm climb or dive. The VVI is powered by emergency ac bus No. 1.

MAGNETIC COMPASS

The magnetic compass is a self-contained indicator which shows the heading of the aircraft with respect to magnetic north. Adjustable compensating magnets in the compass provide the means for cancelling magnetic disturbances originating within the aircraft. A deviation correction card for the compass is located immediately below and aft of the compass.

ATTITUDE DIRECTOR INDICATOR (ADI)

Refer to figure 1-75. The ADI displays pitch and roll attitude information supplied by the INS. The ADI is not limited in pitch or roll and displays any aircraft attitude accurately. In certain modes of operation, the indicator displays ILS glide slope and localizer deviation information. The instrument displays turn rate which is presented in standard turn needle format. The turn rate needle is driven by the rate gyroscope transmitter which senses the aircraft turn rate and displaces one needle width in response to a 1-1/2-degree/second turn rate. The slip indicator (ball) is a self-contained item. The pitch trim knob is used to adjust the attitude sphere to the desired pitch attitude in reference to the miniature aircraft.

The OFF warning flag may indicate failure of either the INS or the ADI. A momentary OFF and/or AUX flag, even with proper attitude being displayed, may indicate impending failure of the ADI or INS data to the ADI. The GS warning flag indicates that the glide slope deviation bar is unreliable. The LOC warning flag indicates that the localizer signal is unreliable. The AUX warning flag signifies that the INS has failed or is operating in a less precise attitude condition and that HSI heading must be set to a known heading by the **[C] [DF]** INSTR HDG knob on the INSTR MODE select panel.

HORIZONTAL SITUATION INDICATOR (HSI)

Refer to figure 1-76. The HSI displays horizontal or plan view of the aircraft with respect to the navigation situation. The miniature aircraft symbol in the center of the HSI is fixed and comparable to an aircraft superimposed on a compass rose. The face of the HSI is a compass card driven by the INS so that aircraft magnetic heading is always read at the upper lubber line.

The HDG set knob provides the means for rotating the heading reference marker to the desired heading. Once set, the heading reference marker rotates with the compass card. The heading reference marker provides a reference to the heading select mode of the autopilot.

The CRS set knob provides the means for selecting any one of 360 courses. To select a desired course, rotate the head of the course arrow to the desired course on the compass card and check the course selector window for the precise setting. Once set, the course arrow rotates with the compass card.

The bearing pointer provides bearing information to TACAN station or INS destination. Refer to NAVIGATION AIDS AND DISPLAY, this section.

The range indicator provides a readout of distance in nm to a TACAN station, DME navigational aid, or INS destination. Loss of TACAN or DME signal or an unreliable signal causes a warning flag to cover the range indication window when ILS/TCN or TCN is selected. When NAV or ILS/NAV is selected, an INS failure causes the warning flag to cover the range indication window. Loss of power to the HSI causes the OFF warning flag to come into view.

CLOCK

The clock, located on the right auxiliary console, is an 8-day, manually wound clock with provisions for an elapsed time indication up to 60 minutes.

CRASH SURVIVABLE FLIGHT DATA RECORDER (CSFDR)


The aircraft contains a CSFDR which stores engine usage data, aircraft service life data, and mishap

investigation data. Engine and service life data are stored for approximately the last seven flights. Mishap investigation data storage is limited to approximately the last 15 minutes of flight time; however, there are automatic special event provisions in flight which protect an approximate 30 seconds worth of data from overwrite until the next flight. If desired, a manual special event data save can be accomplished by depressing the FIRE & OHEAT DETECT test button for 1 second. Saved data covers at least the 15 seconds prior to and after button depression. A total of five special events (automatic and manual) may be saved. Special event data save also generates an FDR 024 MFL (except for FLCS reset).

Special events are:

- Acceleration (NZ) greater than 9.5g or greater than -3.5g.
- AOA greater than 29 degrees or greater than or equal to -5 degrees.
- Canopy unlocked in flight.
- Engine overspeed.
- Engine overtemperature.
- Engine stagnation.
- Engine subidle.
- Engine transfer to SEC.
- EPU overspeed.
- FLCS reset.
- FLCS warning light.
- LEF's locked by asymmetry brakes.
- Main fuel shutoff valve closed.
- Main generator off line.
- OVERHEAT caution light.
- Throttle in OFF in flight.

Attitude Director Indicator (ADI) (Typical)

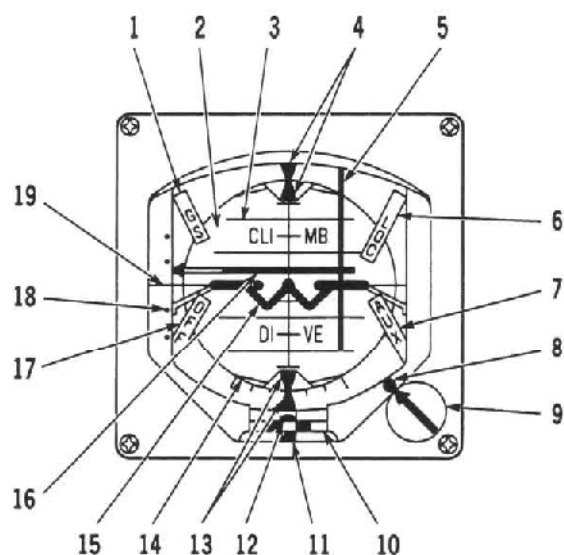


1. GS Warning Flag — Glide Slope Unreliable
2. Attitude Sphere
3. Pitch Scale
4. Upper Bank Index Pointer
5. Localizer Deviation Bar
6. LOC Warning Flag — Localizer Signal Unreliable
7. AUX Warning Flag — INS Navigation and Heading Unavailable
8. Pitch Trim Index
9. Pitch Trim Knob
10. Rate-of-Turn Scale
11. Rate-of-Turn Needle
12. Slip Indicator (Ball)
13. Lower Bank Index Pointer
14. Lower Bank Scale
15. Miniature Aircraft Symbol
16. Glide Slope Deviation Bar and Pointer
17. OFF Warning Flag — Attitude Sphere/INS Unreliable
18. Glide Slope Deviation Scale
19. Horizon Line

1F-16X-1-0013X®

Figure 1-75.

Horizontal Situation Indicator (HSI) (Typical)

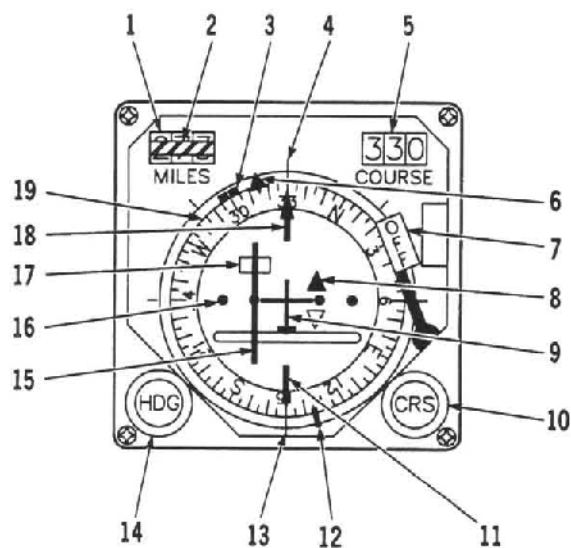

1. Range Indicator
2. Warning Flag — Range Indicator
3. Heading Reference Marker
4. Upper Lubber Line
5. Course Selector Window
6. Bearing Pointer
7. OFF Warning Flag — HSI Power
8. TO-FROM Indicator
9. Miniature Aircraft Symbol
10. CRS Set Knob
11. Course Arrow — Tail
12. Bearing Pointer — Tail
13. Lower Lubber Line
14. HDG Set Knob
15. Course Deviation Indicator
16. Course Deviation Scale
17. Warning Flag — Course Deviation
18. Course Arrow
19. Compass Card

1F-16X-1-0014X®

Figure 1-76.

F-16D AIRCRAFT

Only those items which are different, significant, or unique to the forward or rear cockpit are discussed in the following paragraphs.

ENGINE CONTROLS **DR**

Only a throttle, ENG CONT switch, and FUEL MASTER switch are provided.

Throttle **DR**

The throttle is limited in certain functions:

- Cannot be advanced from OFF to IDLE.
- Cannot be advanced from MIL to AB.
- Cannot be retarded from IDLE to OFF.
- Does not have a throttle friction control.

ENG CONT Switch **DR**

Refer to figure 1-3. The ENG CONT switch, located on the left console, is a two-position switch.

Functions are:

- SEC – Manually selects SEC (SEC caution light illuminates) regardless of forward cockpit ENG CONT switch position.
- NORM – (Guarded position) Returns control to forward cockpit switch position.

FUEL SYSTEM

Fuel Control Panel **DR**

Refer to figure 1-16. The fuel control panel, located on the left console, contains a guarded FUEL MASTER switch. The FUEL MASTER switches in both cockpits must be in the MASTER (on) position to permit fuel flow to the engine. Either switch when positioned to OFF shuts off all fuel flow to the engine.

SPEEDBRAKE SYSTEM

SPD BRK Switch **DR**

Refer to figure 1-9. The SPD BRK switch is spring-loaded to the off (center) position and must be held in either the open (aft) position or close (forward) position.

DRAG CHUTE SYSTEM

DRAG CHUTE Switch **DR**

Refer to figure 1-34. The DRAG CHUTE switch, located on the LG control panel, is a three-position guarded switch used to deploy and release the drag chute. Manually holding the DRAG CHUTE switch in REL prevents drag chute deployment when the **DF** switch is placed to DEPLOY.

Manually holding the DRAG CHUTE switch in REL after **DF** drag chute deployment (switch remaining in DEPLOY) allows the deployed drag chute to release if airspeed is above 60 knots.

Manually holding the DRAG CHUTE switch in DEPLOY prevents drag chute release when the **DF** switch is moved from DEPLOY to NORM/REL.

LANDING GEAR (LG) SYSTEM

DR All LG functions are duplicated except that the BRAKES channel, ANTI-SKID, and LANDING TAXI LIGHTS switches are not present. In addition, the DN LOCK REL button function is different.

DN LOCK REL Button **DR**

Refer to figure 1-30. The DN LOCK REL button, located on the LG control panel, when depressed, unlocks the LG handle electrically to allow movement to UP in case the left MLG WOW switch has failed to the ground position. The DN LOCK REL button has no mechanical unlock function.

FLIGHT CONTROL SYSTEM

Simultaneous inputs to the forward and aft sticks (or rudder pedals) are added together to position the flight control surfaces accordingly. Unintentional right roll inputs can occur as a result of leg/knee interference with the stick.

DR The flight controls are abbreviated and contain only the stick, rudder pedals, and warning, caution, and status lights. The FLCP and MANUAL TRIM panels are not available.

STICK CONTROL OPERATION

With the STICK CONTROL switch in FWD, the stick indicator displays the word FWD. Depressing the forward cockpit paddle switch locks out the rear cockpit stick, rudder, and MPO commands. The OVRD light in both cockpits illuminates indicating override is activated. Depressing the rear cockpit paddle switch has no effect on the forward cockpit controls.

With the STICK CONTROL switch in AFT, the stick indicator displays the word AFT. Depressing the rear cockpit paddle switch locks out the forward cockpit stick, rudder, and MPO commands and transfers control of NWS to the rear cockpit. The OVRD light in both cockpits illuminates, indicating override is activated. Depressing the forward cockpit paddle switch has no effect on the rear cockpit controls.

STICK CONTROL Switch **DF**

Refer to figure 1-11. The STICK CONTROL switch is located on the TEST switch panel.

Functions are:

- FWD – The aft cockpit flight control functions are locked out as long as the paddle switch is held depressed.
- AFT – The forward cockpit flight control functions are locked out, and NWS control is transferred to the rear cockpit as long as the paddle switch is held depressed.

Stick Indicator **DR**

Refer to figure 1-77. A three-position stick indicator, located on the instrument panel, indicates the position of the STICK CONTROL switch by displaying the word AFT or FWD as applicable. Diagonal stripes appear when power is removed or appear momentarily during switching.

Stick OVRD Lights **D**

Refer to figure 1-77. The stick OVRD lights, located on the forward and rear cockpit instrument panels, illuminate when the paddle switch is used to take control.

Stick Indicator and OVRD Light **D** (Typical)

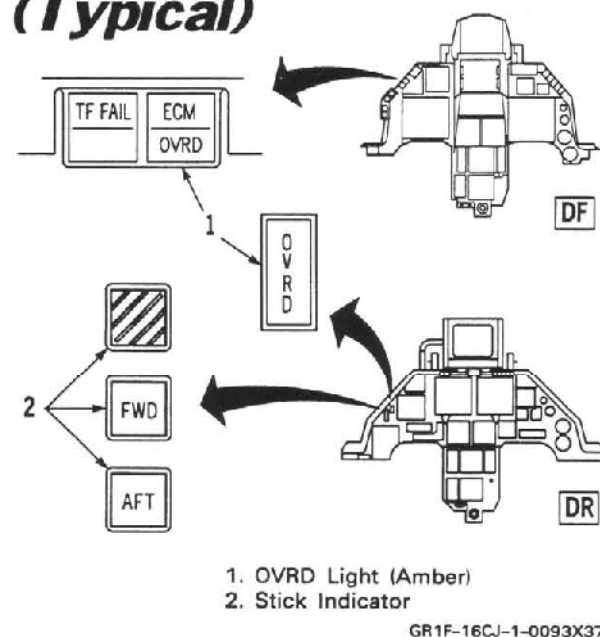


Figure 1-77.

ESCAPE SYSTEM **D**

EJECTION MODE SEL Handle **DR**

Refer to figure 1-55. The EJECTION MODE SEL handle is located on the right auxiliary console.

Functions are:

- NORM
 - Activation of ejection system from rear cockpit results in canopy jettison, then a .33-second delay followed by only rear seat being ejected. Activation of ejection system from forward cockpit following rear seat ejection results in forward seat ejection.
 - Activation of ejection system from forward cockpit results in canopy jettison, a .33-second delay, aft seat ejection, and a .4-second delay followed by forward seat ejection.
- AFT – Activation of ejection system from either cockpit results in canopy jettison, a .33-second delay, aft seat ejection, and a .4-second delay followed by forward seat ejection.

- **SOLO** – Activation of ejection system from forward cockpit results in canopy jettison, then a .33-second delay followed by only forward seat being ejected. Activation of ejection system from aft cockpit results in canopy jettison, then a .33-second delay followed by only aft seat being ejected. Simultaneous activation from forward and aft cockpits results in unsequenced ejections.

COMMUNICATIONS SYSTEM

Refer to figure 1-66. Identical audio control panels, with fully active switches, are located in both cockpits. The UHF, VHF, TACAN, and ILS can be enabled from either cockpit with the audio control panels but must be turned off in both cockpits to deactivate the equipment. Squelch functions only if squelch is enabled in both cockpits. Control of other functions is determined by the position of the **DF** CNI knob.

Functions are:

- **UFC** – Switches on the upfront controls are fully active in **DF** and **DR**. Control inputs can be made from either or both cockpits; however, only one variable (e.g., UHF frequency) can be selected or changed at one time. Only one DED, presented in both cockpits, can be selected at a time.
- **BACKUP** – **DR** No control is available for mode, code, channel, or frequency of the UHF, TACAN, or IFF. Audio control panels are not affected.

INSTR MODE SELECT PANEL **D**

Refer to figure 1-71. If the INSTR MODE knob is in the same position in both cockpits, the rear cockpit HSI course slaves to that selected in the front cockpit. **DR** The INSTR MODE select panel does not have an INSTR HDG knob.

FLIGHT INSTRUMENTS **DR**

An accelerometer is installed and the altimeter barometric pressure set knob is not connected to the CADAC.

Accelerometer **DR**

Refer to figure 1-78. The accelerometer is self-contained and mechanically indicates acceleration acting along the vertical axis of the aircraft. The accelerometer is graduated in g units and has three indicating pointers. The main pointer displays

instantaneous changes in acceleration. The positive and negative auxiliary pointers indicate the maximum positive and negative acceleration experienced. The auxiliary pointers retain their highest readings until the PUSH TO SET knob is depressed.

MULTIFUNCTION DISPLAY (MFD) **DR**

Refer to figure 1-3. The HUD CTVS video can be displayed on the right MFD by placing the VIDEO SEL switch to HUD.


THROTTLE AND STICK SWITCHES/CONTROLS **DR**

Refer to figure 1-79 for the switches/controls located on the throttle and stick.

ARMT CONSENT SWITCH **DR**

Refer to figure 1-3. The ARMT CONSENT switch, located on the instrument panel, is guarded in the ARMT CONSENT position. The switch is in series with the MASTER ARM switch in the forward cockpit and must be in the ARMT CONSENT position to enable the normal release of any store.

Accelerometer **DR** (Typical)

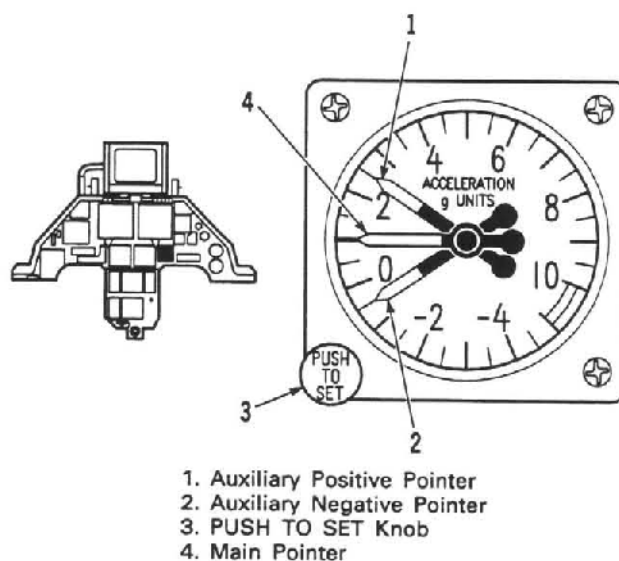

GR1F-16CJ-1-0094X370

Figure 1-78.

AFT SEAT HUD MONITOR (ASHM) DR

Refer to figure 1-80. The HUD CTVS video can be displayed on the ASHM or on the right MFD, depending on the position of the VIDEO SEL switch.

SERVICING DIAGRAM

Refer to figure 1-81 for servicing/specifications information.

Throttle and Stick

Switches/Controls

DR

SWITCH/CONTROL	STATUS
THROTTLE	
DOG FIGHT/Missile Override	Inactive/Inactive
SPD BRK	Active
*RDR CURSOR/ENABLE	Active/Active
*ANT ELEV	Active
*MAN RNG/UNCAGE	Active/Active
UHF/VHF/IFF	Active/Active/Inactive
STICK	
TRIM	Active
CAMERA/GUN	Active/Inactive
WPN REL	Active
*Target Management	Active
*Display Management	Active
NWS A/R DISC	Active/Active
MSL STEP	Active
Paddle	Active
Expand/FOV	Active
Countermeasures Management	Inactive

*Control gained by first upward activation of display management switch.

Figure 1-79.

Aft Seat HUD Monitor DR


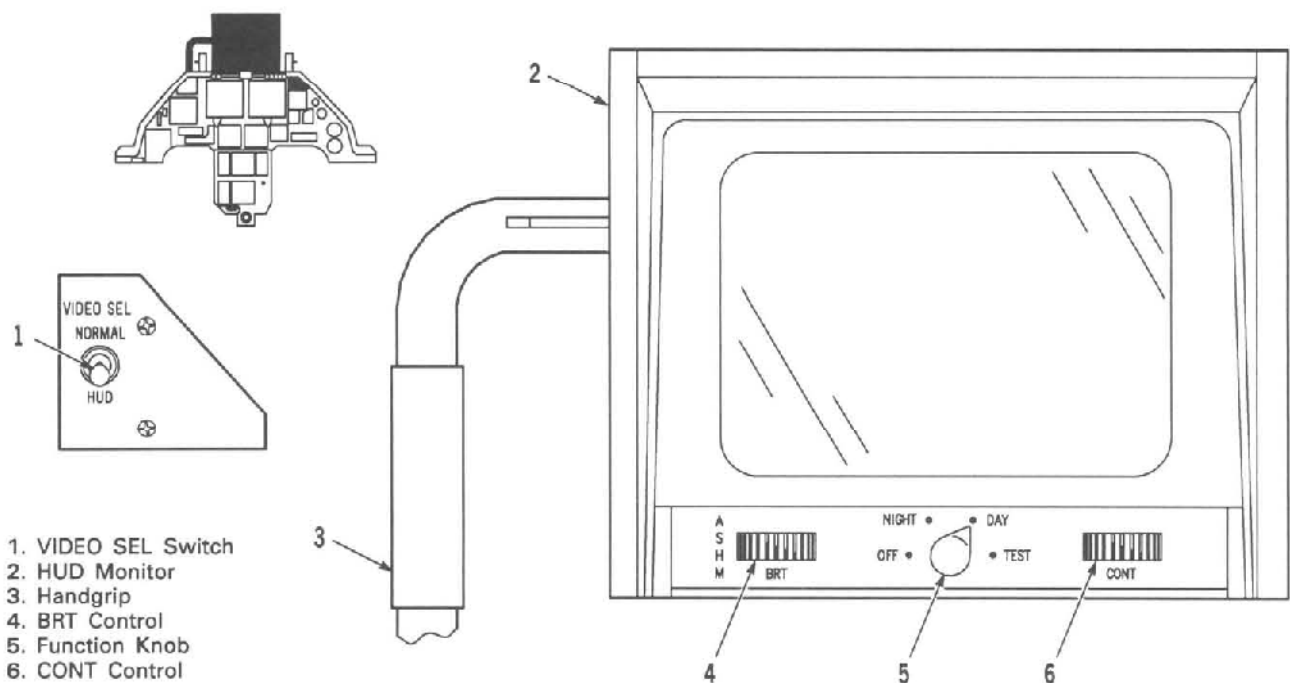


Figure 1-80.

Servicing Diagram (Typical)

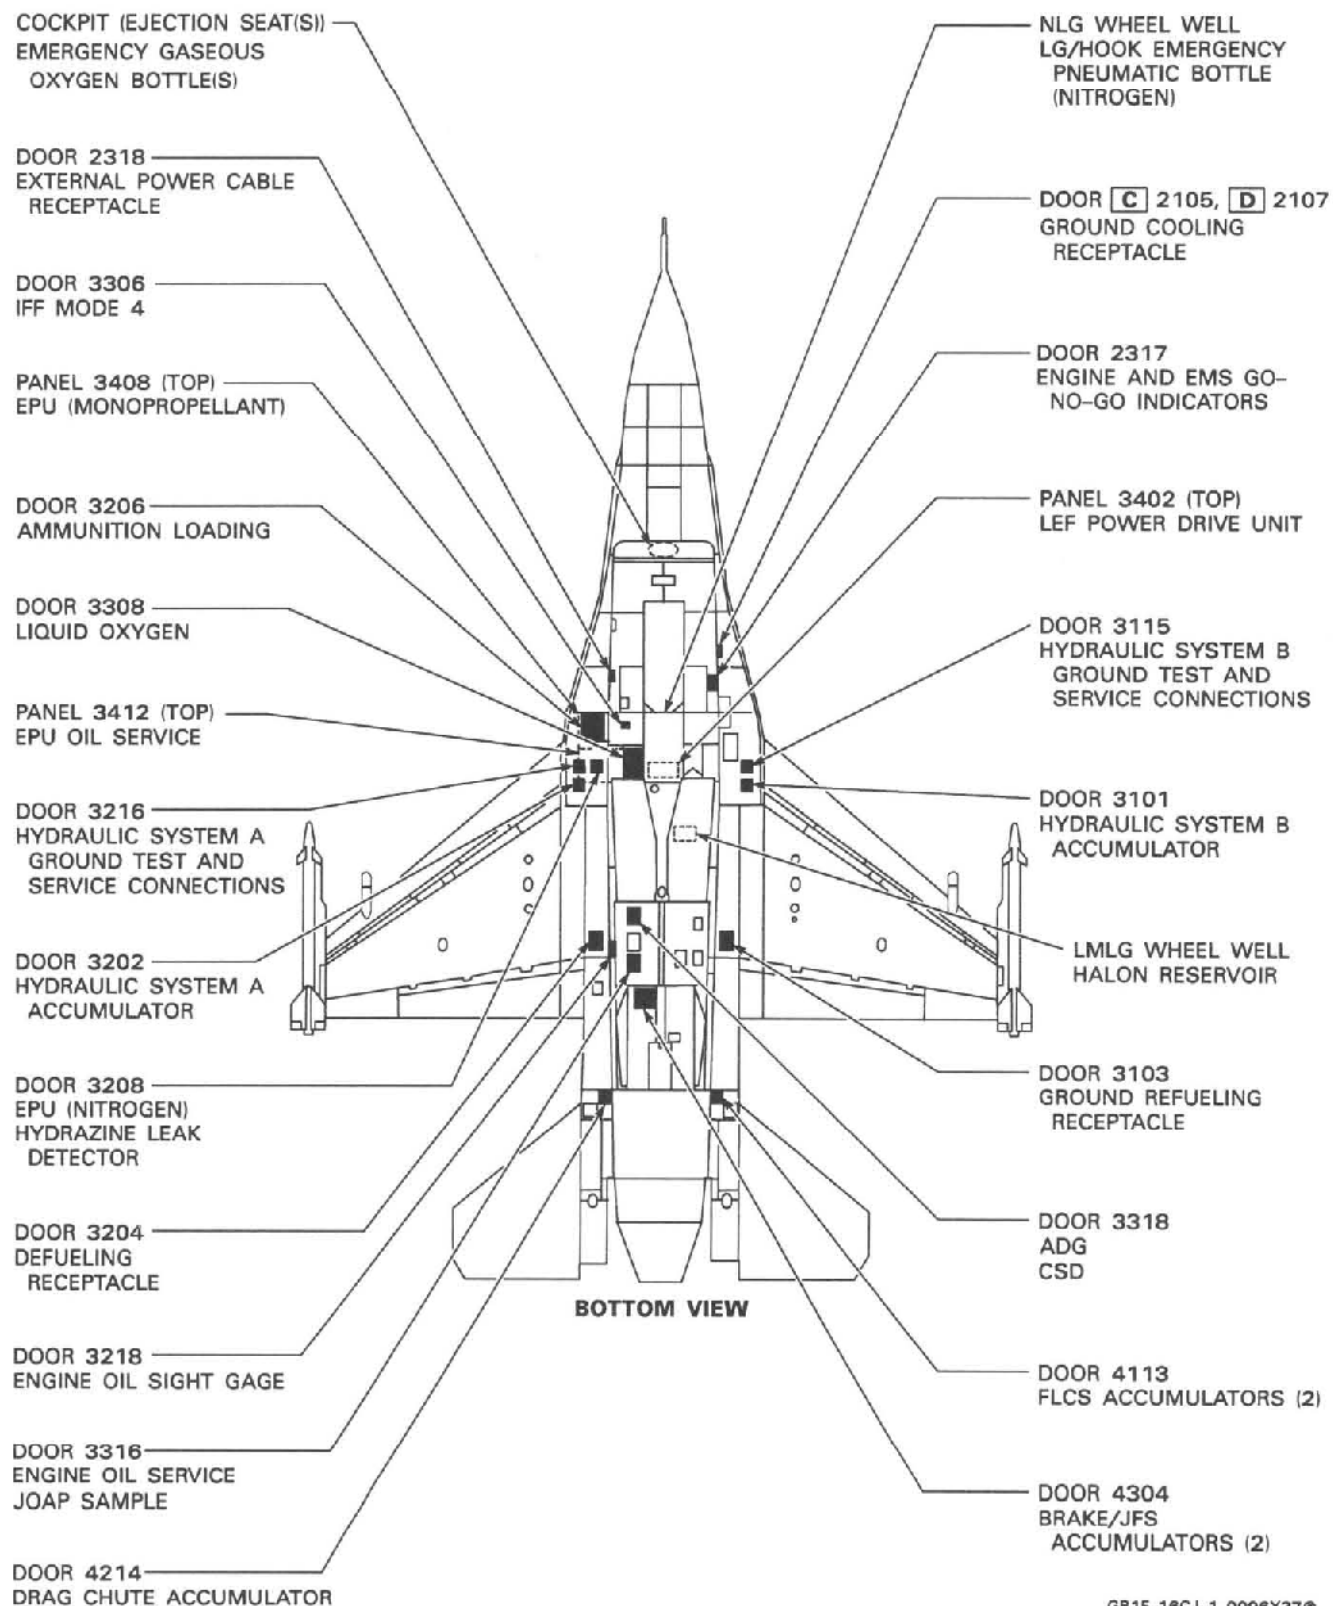

GR1F-16CJ-1-0096X37©

Figure 1-81. (Sheet 1)

Servicing Diagram (Typical)

SERVICEABLE ITEM		SPECIFICATIONS	
		USAF	NATO
FUEL	ENGINE/JFS	MIL-T-5624, JP-4 MIL-T-5624, JP-5 MIL-T-83133, JP-8 JET A, B (COMMERCIAL) JET A-1 (COMMERCIAL)	F-40 F-43 OR F-44 F-34 NONE F-35
OIL	ENGINE *	MIL-L-7808	0-148
	ADG/CSD/EPU	MIL-L-7808	
HYDRAULIC FLUID	HYDRAULIC SYSTEMS A AND B	MIL-H-5606 MIL-H-83282	H-515 H-537
OXYGEN	GASEOUS	MIL-O-27210, TYPE I	NONE
	LIQUID	MIL-O-27210, TYPE II	
EXTERNAL ELECTRICAL POWER	115 (± 15) VAC, 400 (± 30) HZ	A/M32A-60A	NONE
NITROGEN	GASEOUS	BB-N-441A, TYPE I, GRADE B	NONE
FUEL TANK INERTING AGENT (OPTIONAL)	LIQUID	HALON 1301	NONE
MONOPROPELLANT (EPU)	LIQUID	HYDRAZINE (70% N ₂ H ₄ , 30% H ₂ O)	NONE

*IF NECESSARY, ENGINE LUBRICATING OILS MIL-L-7808 (NATO CODE 0-148) AND MIL-L-23699 (NATO CODE 0-156) MAY BE MIXED. AT THE FIRST OPPORTUNITY THEREAFTER, THE OIL SHALL BE DRAINED AND FLUSHED, AND THE ENGINE SERVICED WITH THE PROPER LUBRICATING OIL AS SPECIFIED IN THE APPLICABLE ENGINE TECHNICAL ORDERS.

Figure 1-81. (Sheet 2)

SECTION II

NORMAL PROCEDURES

TABLE OF CONTENTS

	Page
Introduction	2-1
Flight Planning	2-1
Takeoff and Landing Data Card	2-1
Cockpit Designation Code	2-1
Weight and Balance	2-1
Preflight Check	2-1
Exterior Inspection	2-2
Cockpit Access	2-2
Before Entering Cockpit	2-2
Cockpit Interior Check	2-3
Left Console	2-4
Left Auxiliary Console	2-5
Instrument Panel	2-5
Right Auxiliary Console	2-5
Right Console	2-5
After Cockpit Check Is	
Complete - Verify	2-6
Before Starting Engine	2-7
Starting Engine	2-8
After Engine Start	2-10
Before Taxi	2-14
Taxi	2-15
Before Takeoff	2-15
Takeoff	2-17
Normal Takeoff	2-17
Takeoff With Asymmetric Stores	2-19
Climb	2-19
Climb/In-Flight/Operational Checks	2-19
Air Refueling Procedures	2-20
Descent/Before Landing	2-20
Landing	2-20
Normal Landing	2-20
Short Field Landing (Dry Runway)	2-23
Crosswind Landing	2-23
Touch-and-Go Landing	2-24
After Landing	2-24
Prior to Engine Shutdown	2-25
Engine Shutdown	2-26
Scramble	2-27
Preflight	2-27
Aircraft On Quick Response Status	2-27
Hot Refueling	2-28
Hot Refueling Precautions	2-28
Prior to Hot Pit Entry	2-28
Prior to Hot Refueling	2-28

During Hot Refueling	2-28
Hot Refueling Complete	2-29
Quick Turnaround	2-29
Prior to Engine Shutdown	2-29
Special Procedures	2-29
EPU Hydrazine Support at Non-F-16	
Bases	2-29
Supplemental Procedures	2-29
ILS Procedures	2-29
Exterior Inspection	2-29
Danger Areas	2-29
Turning Radius and Ground Clearance	2-29
G-Suit Hose Routing	2-29
Strange Field Procedures	2-29

INTRODUCTION

This section provides the actions required for normal operation of the aircraft. Amplification is included only when special considerations or techniques should be observed. A complete knowledge of Section III, EMERGENCY PROCEDURES, and Section V, OPERATING LIMITATIONS, is required prior to flight.

FLIGHT PLANNING

Refer to T.O. GR1F-16CJ-1-1.

TAKEOFF AND LANDING DATA CARD

A takeoff and landing data card is provided in the Flight Crew Checklist for recording computed data.

COCKPIT DESIGNATION CODE

An asterisk (*) preceding steps is used to highlight procedures for ☒ aircraft which apply to both cockpits.

WEIGHT AND BALANCE

For maximum GW limitations, refer to Section V, OPERATING LIMITATIONS. For weight and balance information, refer to the individual aircraft Form F (DD Form 365-4) and the Weight and Balance Handbook.

PREFLIGHT CHECK

Check AFTO Form 781 for aircraft release and stores status.

EXTERIOR INSPECTION

Refer to figure 2-4 for normal preflight inspection.

COCKPIT ACCESS

Refer to figure 2-1.

1. Canopy – Open by positioning external canopy switch to the up position.

WARNING

If winds exceed 30 knots, open the canopy only as far as needed to enter/exit the cockpit. Decreasing the canopy angle reduces the possibility that the canopy can be blown past full open.

2. Ladder – Position on cockpit sill.

CAUTION

Ⓢ A failure of the canopy actuator could allow the canopy to fall during transit. Do not position the ladder until the canopy motion has stopped.


NOTE

Ⓢ Cockpit access is gained by the use of two entrance ladders or moving one ladder as required.

BEFORE ENTERING COCKPIT

- *1. Ejection seat – Check.
 - Ejection safety lever – Safe (up).
 - Safety pins (2) – Removed (ejection safety lever and EMERGENCY MANUAL CHUTE handle).

Cockpit Access (Typical)

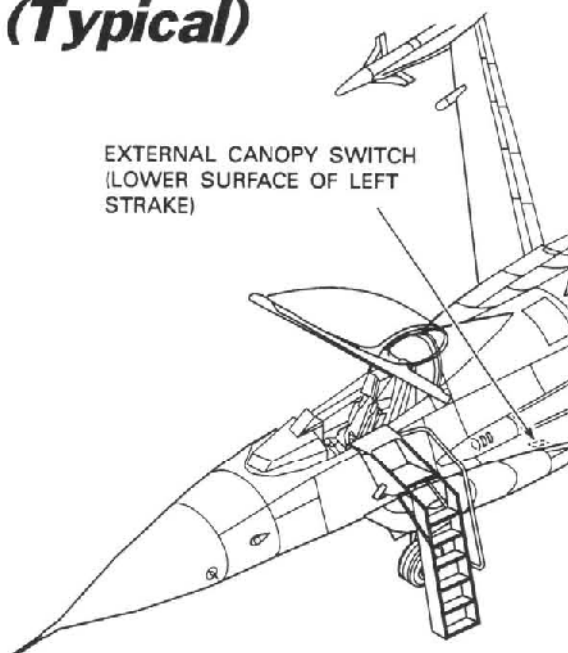

1F-16X-1-1045A ©

Figure 2-1.

- Survival KIT DEPLOYMENT switch – As desired.

WARNING

A Parachute Landing Fall (PLF) with the survival kit not deployed may result in injury.

- RADIO BEACON – As desired.
- Emergency oxygen bottle – 1800 psi minimum.
- Quick-disconnect (left side) – Connected.
- Recovery parachute – Free from damage and grease.
- Inertia reel straps retaining pin (yellow) – Visible in circular inspection hole.
- Parachute risers and SEAWARS – Free from damage and grease.

CAUTION

Rapidly pulling on the shoulder harness to check the locking mechanism may cause damage to the locking mechanism.

- Lanyards from canopy to seat – Check.
 - Emergency oxygen hose quick-disconnect – Connected.
 - Environmental sensor pitot tubes – Clear of obstructions and if flip-up pitot tubes are installed, safety pins (2) removed.
 - Quick-disconnect (right side) – Connected.
 - Electronic recovery sequencer battery indicator – White indication.
 - CANOPY JETTISON T-handle – Secure, safety pin removed.
 - Lapbelt retaining pins (yellow) – Protruding, both sides.
 - Lapbelts – Secure. (Pull up and forward, both sides.)
 - Survival kit straps – Secure. (Pull up and aft, both sides.)
2. MAIN PWR switch – OFF.
- DR** For solo flight:
- 3. Ejection seat – Safe, straps secure, pins removed.
 - 4. CANOPY JETTISON T-handle – Secure, safety pin removed.
 - 5. SPD BRK switch – Center.
 - 6. FUEL MASTER switch – MASTER (guard down).
 - 7. ENG CONT switch – NORM (guard down).

8. Audio panels – Set:

- COMM 1 mode knob – SQL.
- COMM 2 mode knob – SQL.
- All other knobs – CCW.

9. ALT GEAR handle – In.

10. ALT FLAPS switch – NORM.

11. GND JETT ENABLE switch – OFF.

12. DRAG CHUTE Switch – NORM.

13. HOOK switch – UP.

14. ARMT CONSENT switch – ARMT CONSENT (guard down).

15. EJECTION MODE SEL handle – SOLO.

16. Interior LIGHTING control panel – All knobs off.

17. OXYGEN REGULATOR – OFF and 100%.

18. Utility light – OFF and secured.

COCKPIT INTERIOR CHECK

The checklist steps are not arranged in a mandatory order.

*1. Loose or foreign objects – Check.

A thorough cockpit interior preflight check shall be accomplished prior to each flight with emphasis on loose or foreign objects that might cause injury to personnel or damage to the aircraft.

- *2. Harness and personal equipment – Fasten.
- Attach the parachute risers to the harness. Attach and adjust survival kit straps. Secure and adjust the lapbelt. After fastening lapbelt, hold right side of lapbelt buckle stationary and shake and push left side. Also insure that latching mechanism has reset back to its original position and is flush with buckle to insure a positive lock. Connect oxygen hose, g-suit hose, vest hose, and communication leads. Check operation of the shoulder harness locking mechanism.

WARNING

- A partially locked lapbelt may open during maneuvering flight or ejection sequence.
- Unobserved g-suit hose or vest hose disconnects can contribute to gray/blackout or loss of consciousness.
- Failure to adjust survival kit straps to achieve a snug fit between the pilot and seat pan lid may result in injury during ejection.
- Failure to adequately secure and tighten lapbelt may result in inability to reach and operate the MPO switch during out-of-control situations.

CAUTION

Do not adjust seat height with survival kit straps or lapbelt disconnected as damage to the ejection seat or stick may occur.

NOTE

- Refer to figure 2-7. The recommended routing of the g-suit hose is directly under the torso harness and aft of the survival kit strap to reduce the possibility of a g-suit hose disconnect. G-suit hose routing must provide sufficient slack to allow for maximum mobility since in-flight reconnect is extremely difficult.
 - Excess g-suit hose must be properly routed to prevent MANUAL TRIM panel interference during flight.
 - **[DR]** Incorrectly routed or unsecured g-suit hose may result in throttle interference or disconnected g-suit hose.
- *3. Rudder pedals – Adjust.
Adjust rudder pedals so that legs are flat on the seat cushion to prevent the right leg from hitting stick or injury during ejection.

Left Console

1. PROBE HEAT switch – OFF.
2. **[DF]** STICK CONTROL switch – As briefed when **[DR]** occupied; FWD for solo flight.
3. FLCS PWR TEST switch – NORM.
4. DEFOG lever – Midrange.
5. DIGITAL BACKUP switch – OFF.
- *6. ALT FLAPS switch – NORM.
7. LE FLAPS switch – AUTO.
8. BIT switch – OFF.
9. TRIM/AP DISC switch – NORM.
10. ROLL, YAW, and PITCH TRIM – Center.
- *11. FUEL MASTER switch – MASTER (guard down and **[C]** **[DF]** safety-wired).
12. TANK INERTING switch – OFF.
13. ENG FEED knob – NORM.
14. AIR REFUEL switch – CLOSE.
15. IFF MASTER knob – STBY.
16. CNI knob – BACKUP.
- *17. TACAN – As desired.
18. EXT LIGHTING control panel – As required.
19. MASTER light switch – NORM.
20. EPU switch – NORM (guard down).
21. MAIN PWR switch – OFF.
22. AVTR power switch – OFF.
23. AVTR DISPLAY SELECT knob – HUD.
24. ECM power – Off.
- *25. COMM 1 power knob – CW.
- *26. COMM 1 mode knob – SQL.

- *27. COMM 2 power knob – CW.
- *28. COMM 2 mode knob – SQL.
- *29. TACAN power knob – CW.
- 30. ☐ ☒ AB RESET switch – NORM.
- 31. ☐ ☒ ENG CONT switch – PRI (guard down).
- 32. ☒ ENG CONT switch – NORM (guard down).
- 33. JFS switch – OFF.
- 34. UHF radio backup control panel:
 - a. Function knob – BOTH.
 - b. Frequency – As desired.
- 35. Throttle – Verify freedom of motion, then OFF.
- *36. SPD BRK switch – Forward.
- *37. DOG FIGHT switch – Center.

Left Auxiliary Console

- *1. ALT GEAR handle – In.
- 2. CMDS switches (9) – OFF.
- 3. RF switch – NORM.
- 4. STORES CONFIG switch – As required.
- 5. LANDING TAXI LIGHTS switch – OFF.
- *6. LG handle – DN.
- *7. GND JETT ENABLE switch – OFF.
- 8. BRAKES channel switch – CHAN 1.
- 9. ANTI-SKID switch – ANTI-SKID.
- *10. EMER STORES JETTISON button – Cover intact.
- *11. HOOK switch – UP.

Instrument Panel

- 1. ROLL switch – ATT HOLD.
- 2. PITCH switch – A/P OFF.

- 3. MASTER ARM switch – OFF.
- 4. ☒ ARMT CONSENT switch – ARMT CONSENT (guard down).
- 5. LASER ARM switch – OFF.
- *6. DRAG CHUTE switch – NORM.
- *7. HUD/ASHM – Set.
- *8. Altimeter – Set.
- 9. FUEL QTY SEL knob – NORM.
- 10. EXT FUEL TRANS switch – NORM.

NOTE

If a wing transfer valve fails and WING FIRST is selected, fuel flows onto the ground from the overboard vent line under the left wing (outboard of the fuel pylon). Selecting NORM should stop the fuel spillage.

- *11. INSTR MODE knob – As desired.

Right Auxiliary Console

- *1. Clock – Set.
- 2. ☒ EJECTION MODE SEL handle – ☒ NORM or AFT (as briefed), **LESS ☒ AFT.**

WARNING

- SOLO position should not be selected with the rear seat occupied.
- ☒ Ejection initiated with the EJECTION MODE SEL handle in NORM may incapacitate the ☒ pilot at airspeeds greater than 180 knots. Use of the NORM position is therefore not recommended.

Right Console

- 1. SNSR PWR switches (4) – OFF.
- 2. HUD control panel – Set.
- 3. NUCLEAR CONSENT switch – OFF (guard down).

4. ZEROIZE switch – OFF.
- *5. Wristrest and armrest – As desired.
- *6. Interior LIGHTING control panel – As desired.
7. ☐ ☐ VOICE MESSAGE switch – VOICE MESSAGE.
If safety wire is broken, notify maintenance.
8. TEMP knob – AUTO.
9. AIR SOURCE knob – NORM.

CAUTION

If AIR SOURCE knob is in OFF or RAM, electronic equipment may be damaged.

10. AVIONICS POWER switches (8) – OFF.
11. ANTI ICE switch – AUTO/ON.

WARNING

If engine anti-ice is on or has been on, heat in the inlet strut may be sufficient to cause injury if touched.

CAUTION

If there is visible moisture and ambient temperature is 45°F (7°C) or less, place the ANTI ICE switch to ON.

12. IFF ANT SEL switch – NORM.
13. UHF ANT SEL switch – NORM.
- *14. Oxygen system – Check:
 - Pressure – Check 50-120 psi.
 - Mode lever – PBG/ON (as required).
 - Diluter lever – NORM.
 - EMER lever – NORM.

- FLOW indicator – Check.
- EMER lever – EMER.
Check for positive oxygen pressure and mask and hose/connector leakage.
- EMER lever – NORM.

AFTER COCKPIT CHECK IS COMPLETE – VERIFY

The following items are those important switches that, if not correctly positioned, could cause a safety hazard and/or improperly operated systems during engine start.

- *1. FUEL MASTER switch – MASTER (guard down and ☐ ☐ safety-wired).
2. ENG FEED knob – NORM.
3. EPU switch – NORM (guard down).
4. ☐ ☐ ENG CONT switch – PRI (guard down).
5. ☐ ENG CONT switch – NORM (guard down).
- *6. Throttle – OFF.
- *7. LG handle – DN.

WARNING

Insure that the LG handle is confirmed fully down. The LG handle can be in an intermediate position allowing LG extension and/or safe indications; however, the LG handle is not locked and LG retraction could occur during subsequent ground operations.

- *8. HOOK switch – UP.

WARNING

☐ If either HOOK switch is in DN, the hook extends when aircraft battery power is applied.

9. MASTER ARM switch – OFF.

10. AIR SOURCE knob – NORM.

*11. Loose or foreign objects – Check.

WARNING

Loose or foreign objects in the cockpit can cause entanglement or obstruction with critical controls (e.g., ejection handle, stick, rudder pedals, throttle, canopy handle, etc.).

BEFORE STARTING ENGINE

1. MAIN PWR switch – BATT.

CAUTION

To prevent possible depletion of battery power, do not allow MAIN PWR switch to remain in BATT or MAIN PWR for more than 5 minutes without engine running or external power applied.

• Verify FLCS RLY light on.

NOTE

The brakes are not available when the FLCS RLY light is on and the aircraft battery is the only operating power source.

2. FLCS PWR TEST switch – TEST and hold.
Activation of the FLCS PWR TEST switch with the MAIN PWR switch in BATT closes FLCS relays and allows verification of power output of the FLCC with the aircraft battery as the power source.

• Verify lights on:

• ACFT BATT TO FLCS.

• FLCS PMG.

• FLCS PWR (4).

• Verify FLCS RLY light off.

3. FLCS PWR TEST switch – Release.

4. MAIN PWR switch – MAIN PWR.

• Verify lights on:

• ELEC SYS.

• HYD/OIL PRESS.

• FLCS RLY.

• SEC.

• ENGINE.

CAUTION

Do not apply external electrical power for more than 30 minutes without cooling air; longer operation may damage electronic components which cannot be turned off. Prior to applying external power without cooling air, insure that all avionic equipment is off; UHF radio operation on backup control is permissible.

NOTE

If FLCS RLY light is off, cycle MAIN PWR switch to BATT and back to MAIN PWR to open FLCS relays.

5. EPU GEN and EPU PMG lights – Confirm off.

WARNING

If either light is illuminated, turn the MAIN PWR switch to OFF. Insure that the EPU safety pin remains installed and notify maintenance. (The EPU will activate using hydrazine if the EPU safety pin is removed.)

6. Communications – Established.
7. Canopy – As desired.

WARNING

Ⓒ A failure of the canopy actuator could allow the canopy to fall during transit. Keep hands and arms out of the path of canopy travel during opening or closing.

CAUTION

- To prevent possible engine damage, stow or secure loose cockpit items prior to engine start with the canopy not closed.
 - Ⓒ Ⓓ When lowering or raising the canopy handle, insure that the canopy switch is not bumped to the up (open) position before handle is completely locked or unlocked. If this occurs, hold the switch in the down (close) position as soon as possible to relieve the jammed condition and prevent canopy actuator motor burnout. If required, manually crank canopy toward the closed position to relieve the jammed condition. If possible, place MAIN PWR switch to OFF and have the aircraft battery disconnected by the ground crew. This action removes power from the canopy actuator.
8. Chocks in place, fireguard posted, and intake and other danger areas clear (ground crew).

STARTING ENGINE

Refer to figure 2-5 for danger areas. Moving the JFS switch to either start position closes the FLCS

relays. The FLCS RLY light goes off; the FLCS PMG light (and ACFT BATT TO FLCS light if engine is started on battery power) illuminates. Toe brakes also become functional (if engine is started on battery power).

The JFS RUN light comes on within 30 seconds; after the JFS RUN light illuminates, engine rpm starts to increase smoothly. The throttle should be advanced to IDLE after engine rpm reaches either 20 percent rpm (ambient temperature less than 90°F) or maximum motoring rpm (ambient temperature 90°F or greater). Engine light-off occurs within 10 seconds after throttle advance and is indicated by an airframe vibration and an increase in rpm followed by an increase in FTIT. Without external power connected, only the RPM and FTIT indicators function until the standby generator is on line.

The SEC caution light goes off at 20 percent rpm. At approximately 55 percent rpm, the JFS automatically shuts down. At approximately 60 percent rpm, the standby generator comes on line and the ENGINE warning light goes off. To insure the emergency buses are being powered by the standby generator, check for illumination of the SEAT NOT ARMED caution light and three green WHEELS down lights prior to the main generator coming on line. Five to ten seconds after the standby generator comes on line, the main generator comes on line and the standby generator goes off line.

FTIT increases smoothly at a rapid rate.

1. JFS switch – START 2.

NOTE

Abnormal rpm indications (i.e. instantaneous jumps) may indicate alternator failure and not rpm indicator malfunction. Abort the aircraft and notify maintenance.

2. Throttle – Advance to IDLE at either 20 percent rpm minimum (ambient temperature less than 90°F) or maximum motoring rpm (ambient temperature 90°F or greater).

CAUTION

If the FUEL MASTER switch is discovered in OFF during engine start (i.e., after the throttle is moved to IDLE), discontinue the start. Positioning the FUEL MASTER switch to MASTER with the throttle out of OFF may cause a hot start or tailpipe fire.

NOTE

- If the HYD/OIL PRESS warning light goes off and stays off prior to approximately 15 percent rpm, suspect failure of the engine oil pressure sensor and abort the aircraft. This check is not valid if less than 30 seconds elapse from movement of the MAIN PWR switch out of OFF until both hydraulic pressures are above 1000 psi (i.e., low oil pressure time delay has not expired; in which case, the HYD/OIL PRESS warning light goes off when hydraulic pressures exceed 1000 psi, but may reilluminate if the 30-second time delay expires while oil pressure is still low.
 - If the main and/or standby generator fails to come on, do not attempt reset. Although the generator(s) may reset, a problem may still exist. Notify maintenance.
 - If the FLCS RLY light remains on with the JFS switch in either start position, one or more FLCS relays did not latch closed. Latching may occur when the standby or main generator comes on line. If the FLCS RLY light goes off when either generator comes on line, notify maintenance of the occurrence after flight. If the FLCS RLY light remains on after the main generator is on line, notify maintenance.
3. SEC caution light – Off.
 4. ENGINE warning light – Off (approximately 60 percent rpm).

NOTE

In hot day conditions (temperature greater than 90°F (32°C)) the ENGINE warning light may not go off until idle speed is obtained (greater than 70 percent rpm).

*Engine at idle and check:

5. JFS switch – Confirm OFF.

CAUTION

If JFS switch does not automatically return to OFF, turn JFS off. Notify maintenance after flight.

6. HYD/OIL PRESS warning light – Off.
The HYD/OIL PRESS warning light may not go off until rpm is increased to 70 percent. If the warning light comes on again at idle, notify maintenance.
7. FUEL FLOW – 700-1700 gph.
8. OIL pressure – 15 psi (minimum).
9. NOZ POS – Greater than 94 percent.
10. RPM – 62-80 percent.
11. FTIT – 650°C or less.
12. HYD PRESS A & B – 2850-3250 psi.
13. Six fuel pump lights (ground crew) – On.

NOTE

FFP light may blink at idle rpm.

14. Main fuel shutoff valve (ground crew) – Check.

WARNING

Do not make stick inputs while ground crew is in proximity of control surface.

15. JFS doors (ground crew) – Verify closed.
16. Throttle cutoff release – Check.
Verify that the cutoff release does not remain in the actuated position by attempting to retard the throttle to OFF without depressing the cutoff release. If throttle moves to OFF, remain in OFF and notify maintenance.

NOTE

- Failure to perform this check after engine start can result in an undetected stuck throttle cutoff release, which may lead to an unintentional engine shutdown.
- Engine vibration/rumble may be sensed on the ground while accelerating or decelerating the engine, when transferring to SEC, or when stabilized at idle in either PRI or SEC. This vibration/rumble has no adverse effect on the engine or aircraft structure. The vibration/rumble should disappear when the throttle is advanced slightly (up to 5 percent rpm increase).

AFTER ENGINE START

1. TEST switch panel – Check:

- a. PROBE HEAT switch – PROBE HEAT.
PROBE HEAT caution light off. If the caution light illuminates, one or more probe heaters are inoperative or a monitoring system failure has occurred.
- b. PROBE HEAT switch – TEST.
PROBE HEAT caution light flashes 3-5 times per second. If the caution light does not illuminate or if it illuminates but does not flash, the probe heat monitoring system is inoperative.
- c. PROBE HEAT switch – OFF.
- d. FIRE & OHEAT DETECT button – Test.
- e. OXY QTY test switch – Test and check.
- f. MAL & IND LTS button – Test.

NOTE

- Proper VMS operation is verified by the presence of each word in priority sequence (i.e., PULLUP, ALTITUDE, WARNING, etc.). A brief LG warning horn is also heard prior to the WARNING and CAUTION words.
 - ☒ Only the LG warning horn and the warning and caution voice messages are heard when MAL & IND LTS test is initiated from the rear cockpit.
2. AVIONICS POWER panel – Set:
- a. FCC switch – FCC.
 - b. SMS switch – SMS.
 - c. MFD switch – MFD.
 - d. UFC switch – UFC.
 - e. GPS switch – GPS.
3. INS – Align.

NOTE

- Entry of alignment coordinates is required even if internal coordinates are exactly equal to parking spot location.
 - Failure to enter alignment coordinates flags the alignment as degraded (NAV RDY light does not flash).
4. SNSR PWR panel:
- a. LEFT HDPT switch – OFF, unless required.

WARNING

Select OFF unless TFR/FLIR operation is planned. With LEFT HDPT power on and the TFR in OFF/STBY, a failure in the WX mode circuitry can cause the TFR to operate in the WX mode. An unexpected fly-up may subsequently occur.

- b. RIGHT HDPT switch – As required.
- c. FCR switch – FCR.

CAUTION

In environments of high humidity, delay turning the FCR on for approximately 4 minutes. This action precludes damage to FCR caused by moisture in the ECS immediately after engine start.

- d. RDR ALT switch – RDR ALT.
- *5. HUD/ASHM – As desired.
6. CNI knob – UFC.

NOTE

If UFC battery failure occurs, UHF/VHF preset frequencies in the UFC revert to default values until entered manually or by the DTC.

- 7. MFL – Clear.

NOTE

Multiple nonresettable FLCS MFL's may occur during engine start and may be accompanied by a lack of control surface response to stick/rudder commands. These MFL's can occur if aircraft battery voltage is low or if a switching problem occurs when the JFS switch is moved out of OFF. If multiple FLCS MFL's remain after a FLCS reset:

116 Perform the following:

- DBU switch – BACKUP, then OFF.
Cycling the DBU switch with WOW reinitializes the FLCC and inhibits FLCS MFL reporting for 20 seconds.

If FLCS MFL's clear and do not recur after 20 seconds, maintenance action is not required.

LESS 116 Perform the following:

- DBU switch – BACKUP, then OFF.
- FLCS RESET switch – RESET.

If FLCS MFL's clear, maintenance action is not required.

If FLCS MFL's remain:

- FLCS BIT – Initiate and monitor.

If FLCS MFL's remain:

- Engine – Shut down, then restart to cycle power to the FLCC.

If FLCS MFL's clear following FLCS BIT or engine restart, notify maintenance of the occurrence after flight.

8. SEC – Check. May be delayed until the BEFORE TAKEOFF check.

- ENG CONT switch – SEC.
- SEC caution light – On.
- RPM – Stabilized.
RPM may drop up to 10 percent from PRI value before stabilizing. Stabilized SEC idle rpm may be up to 5 percent lower than that in PRI.
- Throttle – Snap to MIL and then snap to IDLE when rpm reaches 85 percent. Check

for normal indications and smooth operation.

- NOZ POS – 10 percent or less within 30 seconds after selecting SEC.
- ENG CONT switch – **C** **DF** PRI, **DR** NORM.
- SEC caution light – Off.
- NOZ POS – Greater than 94 percent.

9. Flight controls – Cycle.

NOTE

To assist in warming the hydraulic fluid and removing air from the hydraulic system, maximum stick and rudder pedal inputs should be made prior to running FLCS BIT.

10. FLCS BIT – Initiate and monitor.

Position BIT switch to BIT. The RUN light on FLCP illuminates. At successful completion of BIT (approximately 45 seconds), the RUN light goes off, the BIT switch returns to OFF, and the FAIL light and FLCS warning light remain off. A BIT pass message appears on the FLCS MFD page.

NOTE

- If the FLCS BIT reports a failure through the FLCS warning light and the FAIL light on the FLCP, the failure cannot be reset. The BIT must be reinitiated. In this case, the RUN light and the FAIL light are simultaneously illuminated for the first steps of the BIT, after which the FAIL light goes off unless BIT detects a subsequent failure.
- If the FCC is not turned on prior to FLCS BIT, an FLCS MUX DEGR message appears on the PFLD.
- Entering system altitude during FLCS BIT results in an incorrect system altitude.
- During FLCS BIT, the ECS air ejectors are turned off. This results in higher ECS component temperatures and may cause fumes in the cockpit that could be described as metallic odors. This situation is normal and does not require maintenance action.

11. ECM panel – As required.

12. SPD BRK switch – Cycle.

- *13. WHEELS down lights – Three green.
- *14. SAI – Set.
- 15. FUEL QTY SEL knob – Check.
 - TEST – FR, AL pointers indicate 2000 (± 100) pounds and totalizer indicates 6000 (± 100) pounds. FWD and AFT FUEL LOW caution lights illuminate.

The following values are based on JP-4 or JP-5/8:

- NORM – AL pointer indicates approximately 2675/2810 pounds. FR pointer indicates approximately 3100/3250 (D) 1800/1890) pounds.
- RSVR – Each reservoir indicates approximately 460/480 pounds.
- INT WING – Each wing indicates approximately 525/550 pounds.
- EXT WING – Each external wing tank indicates approximately 2300/2420 pounds (370-gallon fuel tank) or 3750/3925 pounds (600-gallon tank) (for full tanks).
- EXT CTR – FR pointer indicates approximately 1800/1890 pounds (for full tank). AL pointer drops to zero.

NOTE

The sum of the individual fuel tanks and the totalizer should agree within ± 100 pounds with only internal fuel or ± 300 pounds with external fuel.

- FUEL QTY SEL knob – As desired.
- 16. EPU FUEL quantity – 95-102 percent.
- 17. Avionics – Program as required and verify (manual or data transfer cartridge).
- SMS.



When AIM-9's are loaded, the SMS switch must be maintained in the SMS position while taxiing or airborne. If recycling of the SMS switch is required, power should not be off longer than 8 seconds at any one time.

- Communications.
- Steerpoints.
- Profile data (including bingo fuel).
- MFD master mode data.

- *18. MFD's – As desired.
- 19. VHF radio – As desired.

After FLCS BIT completed:

- *20. DBU – Check.
 - a. DIGITAL BACKUP switch – BACKUP.
Verify that DBU ON warning light illuminates.

NOTE

The AOA indicator displays the middle AOA value selected. The indication may change in gusty wind conditions.

- b. Operate controls – All surfaces respond normally.
- c. DIGITAL BACKUP switch – OFF.
Verify that DBU ON warning light goes off.
- 21. Trim – Check.
 - TRIM/AP DISC switch – DISC.
 - Stick TRIM button – Activate in roll and pitch.
 - No control surface motion.
 - No TRIM wheel or indicator motion.
 - TRIM/AP DISC switch – NORM.
 - Stick TRIM button – Check and center.
 - Control surface motion.
 - TRIM wheel and indicator motion.
 - Rudder trim check.
 - YAW TRIM knob – Check and center.

*22. **D** FLCS override – Check.

- **DF** STICK CONTROL – Selected cockpit.
- **DR** Stick indicator – As selected.
- Selected cockpit paddle switch – Depress.
- OVRD lights – On (both cockpits).
- Selected cockpit stick – Operative.
- Other cockpit stick – Inoperative.

*23. MPO – Check.

- Stick – Full forward and hold; note horizontal tail deflection.
- MPO switch – OVRD and hold.
 - Confirm that horizontal tail trailing edges move farther down.
- Stick and MPO switch – Release.
 - Confirm that the horizontal tail returns to its original position.

*24. Operate controls – All surfaces respond normally; no FLCS lights on.

*25. AR system (if required) – Check.

- AIR REFUEL switch – OPEN, RDY light on, DISC light off.

NOTE

If both the RDY and DISC lights are on, then one or more relays are failed. This condition must be corrected prior to AR.

- **D** A/R DISC button – Depressed. DISC light on, RDY light off; 3 seconds later, RDY light on, DISC light off.
- AIR REFUEL switch – CLOSE, RDY light off.

*26. Brakes – Check both channels; then return to CHAN 1.

- One brake pedal – Depress.
 - Confirm (ground crew) – Brake activates.
- Opposite brake pedal – Depress.
 - Confirm (ground crew) – Initial brake does not activate.
- Repeat above steps for opposite brake.

27. Anti-ice – Check.

- Insure that the engine is stabilized at idle rpm.
- ANTI ICE switch – OFF, then ON for 45 seconds.
- If ENG A/I FAIL PFL occurs:
 - Stabilize engine at 80 percent rpm.
 - ANTI ICE switch – OFF for 15 seconds, then note FTIT.
 - ANTI ICE switch – ON while monitoring FTIT.
 - If FTIT fails to increase a minimum of 10°C within 30 seconds, abort the aircraft if flight may encounter areas of known or suspected icing conditions.
- ANTI ICE switch – AUTO/ON.

28. EPU GEN and EPU PMG lights – Confirm off. If either light is illuminated, cycle the EPU switch to OFF, then back to NORM. If either light stays on, abort the aircraft.

29. EPU switch – OFF.

NOTE

To prevent inadvertently selecting ON, lift only the aft section of the split guard.

30. Ground safety pins (ground crew) – Remove.

31. EPU switch – NORM.
32. Intercom (ground crew) – Disconnect.
33. Avionic BIT's – As desired.
 - TACAN preflight check – Complete.
 - TACAN power knob – CW. (Allow 90 seconds for warmup.)
 - HSI CRS knob – Set COURSE 180.
 - INSTR MODE knob – TCN.
 - Select TACAN BIT on MFD test page.
 - HSI range and course warning flags – In view.
 - HSI bearing pointer may temporarily slew to 270 degrees.
 - HSI range and course warning flags – Out of view.
 - HSI range indicator – Indicates 000 (± 0.5) nm.
 - HSI bearing pointer – Indicates 180 (± 3) degrees.
 - HSI CDI – Center within $\pm 1/2$ dot.
 - HSI TO-FROM indicator – TO.

- 34. ☒ ☒ Seat – Adjust to design eye.

BEFORE TAXI

1. Canopy – Close and lock.
The canopy may be partially opened for taxiing if required for increased visibility.
2. HAVE QUICK radio – Set and check (if required).

Upfront controls:

- Select the UHF page on DED by depressing the COM 1 override button.
- CNI knob – BACKUP.
- Mode knob – PRESET.
- After the MWOD and current date (if required) are entered, select channel 20,

manually set 220.000 MHz, and depress the PRESET button (failure to do this renders the UHF radio inoperative).

- CNI knob – UFC.
- Update the TOD by positioning the DED asterisks around the UHF-TOD or HQ-TOD label and then depressing the ENTR or M-SEL button. Request a TOD transmission from another user. In either mode, the transmission must be received within 1 minute of depressing the ENTR or M-SEL button.
- Operating mode – UHF-TOD (normal) or HQ-TOD (AJ).
- Transmission status – MAIN or BOTH.
- Select an AJ net number with the manual frequency knob.
- Bandwidth – NB or WB.

Backup controls:

- CNI knob – BACKUP.
- Function knob – MAIN or BOTH.
- Mode knob – PRESET.
- After the MWOD and current date are entered, select channel 20, manually set 220.000 MHz, and depress the PRESET button (failure to do this renders the UHF radio inoperative).
- Enter the TOD by requesting a TOD transmission. To receive TOD update for the normal mode (UHF-TOD), position the A-3-2-T switch to T and then return to a normal channel in either manual frequency or preset channel mode. To receive TOD update for the AJ mode (HQ-TOD), rotate the A-3-2-T switch to T and then back to A. A TOD abbreviated time update can be received on the selected AJ net on which the TOD is being transmitted. In either mode, the transmission must be received within 1 minute of selecting T.
- Select an AJ net number with the manual frequency knobs.
- A-3-2-T knob – A.

- *3. Altimeter and altitude indications – Set and check.

Check that the altimeter readings in ELECT and PNEU are ± 75 feet of a known elevation and are $\times \pm 75$ feet of one another. Also check that the ELECT mode altimeter reading is $\times \pm 75$ feet of the altitude displayed in the HUD.

4. Exterior lights – As required.
5. INS knob – NAV.

WARNING

ATF or manual TF is prohibited following any INS alignment (including normal, stored heading, in flight, interrupted, AUTO NAV, and BATH) other than a full performance INS ground alignment with flashing RDY/ALIGN displayed.

6. Chocks (ground crew) – Remove.

WARNING

If the aircraft has flown in the past 2 hours, do not use the parking brake except for an emergency. (Does not apply if drag chute was used.) Parking brake use may cause residual heat damage to brakes and may increase the probability of a subsequent brake fire.

TAXI

Refer to figure 2-6 for turning radius and ground clearance.

- *1. Brakes and NWS – Check.

CAUTION

- To minimize heat buildup in the brake assemblies, do not ride the brakes to control taxi speed. Use one firm application of the toe brakes to slow the aircraft.
- Hydraulic fluid ignites at relatively low temperatures. If advised of a hydraulic leak around the brakes, request firefighting equipment and do not taxi.

NOTE

Constant rudder pedal pressure should not be required to maintain a straight ground track during taxi (based on level surface and no asymmetries or crosswind).

- *2. Heading – Check.
*3. Flight instruments – Check for proper operation.

BEFORE TAKEOFF

- *1. ALT FLAPS switch – NORM.
2. MANUAL TF FLYUP switch – ENABLE.
3. Trim – Check pitch and yaw trim centered and roll trim as required.

WARNING

Failure to center yaw trim may result in severe control difficulties during takeoff.

4. **C DF** ENG CONT switch – PRI (guard down).
5. **DR** ENG CONT switch – NORM (guard down).
6. Speedbrakes – Closed.
7. Canopy – Close, lock, light off.
8. IFF – Set and check.
9. External tanks (if installed) – Verify feeding.
If three tanks are installed, verify that the centerline tank is feeding. This action checks that pressurization is available to all tanks.
10. FUEL QTY SEL knob – NORM.

NOTE

The FUEL QTY SEL knob must be in NORM for operation of the automatic forward fuel transfer system, trapped fuel warning, and for the BINGO fuel warning computation to be based on fuselage fuel.

11. STORES CONFIG switch – As required.

- *12. GND JETT ENABLE switch – As required.

NOTE

Selecting ENABLE starts the DWAT 3-minute timer.

- *13. Harness, leads, and anti-g system – Check.

- OXYGEN mode lever – PBG.

- Anti-g system – Test.

Depress TEST button to check that g-suit inflates, comfort zippers are closed and remain closed, and hose remains connected and that pressure is supplied to mask, helmet bladder, and vest.

WARNING

Delayed or slow inflation of the g-suit could indicate impending anti-g system failure. Complete loss of g-protection could occur with no warning.

- OXYGEN mode lever – As required.

WARNING

- Failure to select PBG when PBG operation is desired can contribute to gray/blackout or loss of consciousness.
- Placing the OXYGEN mode lever to PBG without wearing the CRU-94/P harness-mounted connector can expose the pilot to injury producing levels of oxygen pressure should a failure occur within the oxygen regulator.

14. EPU – Check:

NOTE

- EPU may be checked anytime after engine start.
- EPU safety pin (ground crew) – Check removed.
- OXYGEN – 100%.
- Engine rpm – Increase 10 percent above normal idle.

CAUTION

Attempting EPU/GEN TEST at idle rpm results in abnormally low EPU run speed. Low EPU speed may cause electrical bus cycling and possible damage to electrical equipment. Indications may include blinking EPU GEN light or audible clicking of electrical contactors as the bus cycles. If electrical bus cycling is experienced, abort the aircraft and do not taxi.

- EPU/GEN TEST switch – EPU/GEN and hold. Check lights:

- EPU AIR light – On.
- EPU GEN and EPU PMG lights – Off (may come on momentarily at start of test).
- FLCS PWR lights – On.
- EPU run light – On for a minimum of 5 seconds.

NOTE

If EPU run light does not come on within 10 seconds after EPU/GEN is selected, release EPU/GEN TEST switch, advance the throttle to idle rpm plus 15 percent (90 percent rpm maximum), and reselect EPU/GEN. If the EPU run light does not illuminate within 10 seconds or if it cycles on and off, abort the aircraft.

- EPU/GEN TEST switch – OFF.
- Throttle – IDLE.
- Voltage transients may cause fault light indications. Reset CADC and AVIONICS FAULT caution lights as necessary and check MSL ALOW value. A power cycle of individual systems may also be required if MFL's occur and remain after the MFD TEST page is cleared.
- OXYGEN – NORMAL.
- EPU exhaust (ground crew) – Check for no airflow.

WARNING

- Airflow is indicative of a failed high-pressure bleed valve which could result in an EPU overspeed in flight. If airflow is detected, abort the aircraft.
 - If required to shut down and restart the engine after completing the EPU check or if the EPU safety pin is reinstalled for any reason, the EPU check must be reaccomplished prior to flight to insure proper EPU operation and closure of the high-pressure bleed valve.
15. FLIR – As required.
 16. TFR – As required.
 17. PROBE HEAT switch – PROBE HEAT.
Turn probe heat on at least 2 minutes prior to takeoff anytime icing of probes is possible. When probe icing is not suspected, delay selection of probe heat as long as possible prior to takeoff.

WARNING

- Probe internal icing must be suspected anytime the aircraft has been exposed to near or below freezing conditions on the ground. Internal icing may be difficult to see and may remain present even when current conditions do not appear conducive to ice formation.
 - AOA probes may become hot enough to shut off probe heaters and cause illumination of the PROBE HEAT caution light. Refer to CAUTION LIGHT ANALYSIS, Section III, to determine if the shutdown was due to overheat or system failure.
 - If probe heat is on or has been on, heat in probes may be sufficient to cause injury if touched.
- *18. Ejection safety lever – Arm (down).
 - *19. Flight controls – Cycle.

- *20. OIL pressure – Check psi.
- *21. All warning and caution lights – Check.
22. Adjustable sliding holder (when utility light is not in use) – **C DF** Full forward, rotated cw, and secured.

WARNING

Failure to properly secure utility light and adjustable sliding holder can result in stick interference.

23. TGP – Stow.

TAKEOFF**NORMAL TAKEOFF**

Refer to figure 2-2. When ready for takeoff:

- Advance throttle to approximately 90 percent rpm.
- Verify parking brake disengaged.
- Check engine instruments for normal indications.
- Release brakes prior to exceeding 90 percent rpm.
- Advance throttle to desired thrust.

NOTE

An engine runup check is not required if conditions require a rolling takeoff.

Maximum FTIT and rpm vary with temperature and pressure altitude but stabilize in 5-15 seconds.

Normal engine operation during an MIL takeoff is indicated by a exhaust nozzle position of 15 percent or less after 5 seconds at MIL.

Normal engine operation during an AB takeoff is indicated by the exhaust nozzle preopening up to 10 percent more than MIL exhaust nozzle position when AB is first selected. AB light-off should occur within 5 seconds (greater than 40°F) or 10 seconds (40°F or less) after AB selection and is indicated by increasing fuel flow and exhaust nozzle position.

NOTE

Spacing of less than 15 seconds between aircraft when AB is used by preceding aircraft increases the probability of an AB blowout or no light due to hot gas ingestion.


When airspeed is approximately 10 knots below computed takeoff speed for non-AB or 15 knots for AB, initiate rotation to establish takeoff attitude (8-12 degrees). Normally, do not apply aft stick at airspeed lower than 10-15 knots below computed takeoff speed. The aircraft will rotate below these airspeeds. Early rotation can lead to overrotation, skipping, wallowing due to early lift-off, and increased takeoff distance.

As aircraft lifts off, LEF's extend downward. Retract LG when safely airborne. Insure LG is up and locked before exceeding 300 knots. TEF's retract when the LG handle is raised.

CAUTION

- Since LG and TEF retraction occurs simultaneously, LG retraction should not be rushed after takeoff. The reduction in lift may cause the aircraft to descend and contact the runway.
- Due to low aft stick forces required for takeoff, use caution to avoid early rotation.
- If any FLCS PFL occurs during takeoff, a WOW switch problem may be indicated. If the fault clears, the mission may be continued. Notify maintenance of the occurrence after the flight.
- Insure that the LG handle is placed fully up. The handle can stop in an intermediate position which retracts the LG; however, the handle is not locked and may lower under high g conditions.

Normal Takeoff (Typical)

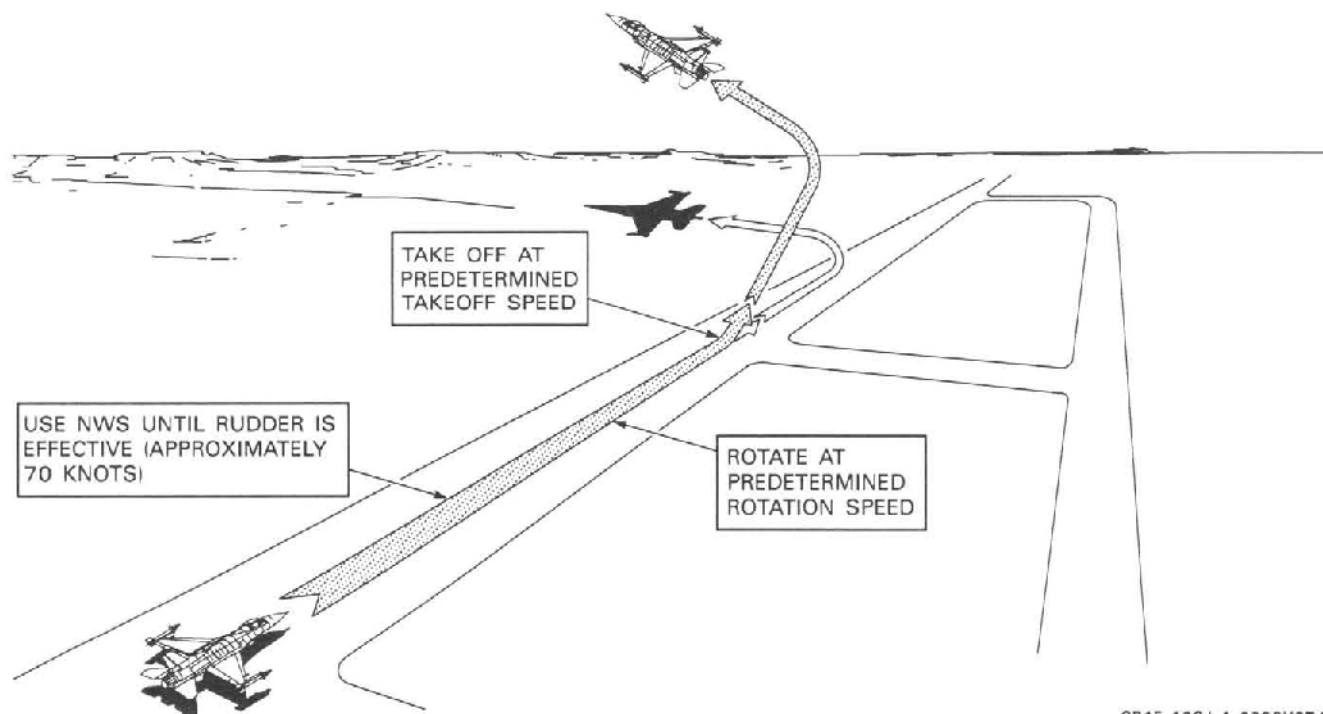

GR1F-16CJ-1-0098X37 ©

Figure 2-2.

TAKEOFF WITH ASYMMETRIC STORES

Roll trim should be set prior to takeoff with asymmetric stores to prevent wing drop. The amount of roll trim required for various asymmetric store weights is shown in T.O. GR1F-16CJ-1-1, Part 2.

NOTE

It is possible to exceed the roll trim authority of the aircraft for an onspeed takeoff with a net asymmetric (rolling) moment less than aircraft takeoff limits. Refer to ASYMMETRIC STORES LOADING, Section V.

When ARI activates after takeoff, roll trim for asymmetric stores causes a rudder input that can cause aircraft yaw away from the wing with the asymmetric store. This yaw is easily controllable by pilot rudder inputs.

CLIMB

The climb schedules are defined by airspeed/mach number or mach number only. When airspeed/mach number is shown, climb at the scheduled airspeed to the scheduled mach number, then maintain the mach number to the desired altitude. When starting a climb at an altitude above the airspeed/mach transition point, climb at the scheduled mach number.

The recommended MIL climb schedule to optimum cruise altitude is tabulated versus drag index in T.O. GR1F-16CJ-1-1, Part 3. For MIL, the schedule provides optimum range performance. The recommended MIL climb schedules to altitudes other than optimum cruise altitude are shown in T.O. GR1F-16CJ-1-1 and T.O. GR1F-16CJ-1CL-1.

The recommended MAX AB climb schedule is tabulated versus drag index in T.O. GR1F-16CJ-1-1, Part 3. The MAX AB climb schedule provides minimum time to climb performance.

CLIMB/IN-FLIGHT/OPERATIONAL CHECKS

At frequent intervals, check the aircraft systems, engine instruments, cockpit pressure, and oxygen flow indicator and system operation. Monitor fuel in each internal and external tank to verify that fuel is transferring properly by rotating the FUEL QTY SEL knob and checking that the sum of the pointers and totalizer agree and that fuel distribution is correct.

WARNING

Maximum fuel transfer rate is 18,000 pph from the 300-gallon fuel tank or 30,000 pph from the 370/600-gallon fuel tanks. Maintaining fuel flow above these values while the external tank(s) is feeding results in a decrease of internal fuel. Prolonged operation under these conditions may result in the rapid depletion of fuselage fuel and render fuel transfer by siphoning action inoperative. Without siphoning action, fuel transfer to the fuselage tanks is provided by the wing turbine pumps at a maximum rate of 6000 pph. A fuel flow rate greater than 6000 pph continues to deplete fuselage fuel. Under these conditions, the external fuel tank(s) may appear slow to feed and a fuel imbalance may result. Prolonged AB operation in a three tank configuration may result in engine flameout prior to depletion of external fuel.

1. Fuel - Check quantity/transfer/balance.
2. FUEL QTY SEL knob - NORM.

NOTE

The FUEL QTY SEL knob must be in NORM for operation of the automatic forward fuel transfer system, trapped fuel warning, and for the BINGO fuel warning computation to be based on fuselage fuel.

3. Oxygen system – Check.
4. Cockpit pressurization – Check.

WARNING

The CABIN PRESS caution light does not illuminate until cockpit pressure altitude is above 27,000 feet. At ambient altitudes where hypoxia is possible, do not remove the oxygen mask without first checking cockpit pressure altitude.

5. Engine instruments – Check.

AIR REFUELING PROCEDURES

Refer to T.O. 1-1C-1 for general AR procedures and to T.O. 1-1C-1-30 for specific AR procedures.

DESCENT/BEFORE LANDING

1. Fuel – Check quantity/transfer/balance.
2. Final approach airspeed – Compute.
3. DEFOG lever/cockpit heat – As required.
4. Landing light – On.
- *5. Altimeter and altitude indications – Check altimeter setting, ELECT versus PNEU mode altimeter readings, and ELECT mode altitude versus altitude displayed in HUD.
For subsonic flight below 20,000 feet MSL with vertical velocity less than 500 fpm, the difference between ELECT and PNEU mode altitudes should not exceed 270 feet and the difference between the ELECT mode altitude and the altitude displayed in the HUD should not exceed 75 feet.

WARNING

- An erroneous ELECT mode altitude can be displayed without a CADC caution light or a transfer to PNEU mode.
 - An erroneous altitude can be displayed in the HUD without a CADC caution light.
- *6. Attitude references – Check ADI/HUD/SAI.
 7. ANTI ICE switch – As required.
 8. TGP – Stow.

LANDING

NORMAL LANDING

Refer to figure 2-3. Fly initial at 300 knots. At the break, retard throttle and open speedbrakes as required. On downwind leg, when airspeed is below 300 knots, lower the LG. During base turn, recheck the LG down and slow to computed final approach airspeed to arrive on final at 11 or 13 degrees AOA. Check speedbrakes open and maintain computed final approach airspeed/AOA on final. Rate of descent decreases slightly when entering ground effect. Reduce thrust gradually to continue the descent while applying back stick to reduce sink rate to the minimum practical. Thrust can be reduced sooner during an 11-degree approach than during a 13-degree approach. In either case, maintain a maximum of 13 degrees AOA while reducing sink rate to the minimum practical.

WARNING

Insure that the LG handle is confirmed fully down. The LG handle can be in an intermediate position allowing LG extension and/or safe indications; however, the LG handle is not locked and LG retraction could occur during subsequent in-flight or ground operations.

CAUTION

- Failure to depress the LG handle down permission button prior to attempting to lower the LG may result in damage to the electrical solenoid.
- Failure to reduce sink rate, particularly at heavier GW's, may cause a firm landing and structural damage or failure of the LG.
- ☐ Use of the paddle switch may cause pitch and/or roll transients as control is switched from one cockpit to the other.
- Avoid landing directly on approach-end arresting cable to prevent possible cable strike damage to nozzle, speedbrakes, and ventral fins.
- Horizontal tail contact with the runway is possible if a large roll input is made at or near touchdown.
- Deploying the drag chute above 170 knots may result in loss of the chute canopy.
- Drag chute deployment below 90 knots may result in improper deployment and damage to the chute.

NOTE

- The HUD AOA bracket and AOA indicator display the correct AOA until NLG WOW. Therefore, these indications are valid references for aircraft attitude throughout two-point aerodynamic braking. After NLG WOW, the AOA indicator displays zero.
- The LG warning horn and the TO/LDG CONFIG warning light are inhibited at approach airspeed above 190 (± 4) knots.

- Aft CG approaches may be characterized by increased pitch sensitivity which will be most noticeable upon entering ground effect.

Deploy the drag chute (if desired) immediately after touchdown. The nose may pitch up or down when the chute is deployed, but the motion is easily controlled.

NOTE


- To deploy the drag chute after touchdown, lift the guard and switch in one single motion with the side of the index finger.
- When deploying the drag chute in a two-point aerodynamic braking attitude, the drag chute may contact the runway.

Use two-point aerodynamic braking until approximately 100 knots; then fly the nosewheel to runway. Maximum effective two-point aerodynamic braking is achieved at 13 degrees AOA. An AOA less than 11 degrees results in significantly reduced two-point aerodynamic braking. Although two-point aerodynamic braking is effective as low as 80 knots, runway length and condition should be used to determine when, after decelerating to 100 knots, to lower the nose to the three-point attitude.

CAUTION

- Do not touch down with brake pedals depressed. A failure in either the touchdown protection circuitry or an MLG WOW switch can result in locked wheels and blown MLG tires.
- Use a maximum of 13 degrees AOA for two-point aerodynamic braking. Nozzle, speedbrakes, and ventral fins may contact runway if 15-degree pitch angle is exceeded.
- During two-point aerodynamic braking, the speedbrakes (43 degrees or greater open) may contact the cable.

Normal Landing Pattern (Typical)

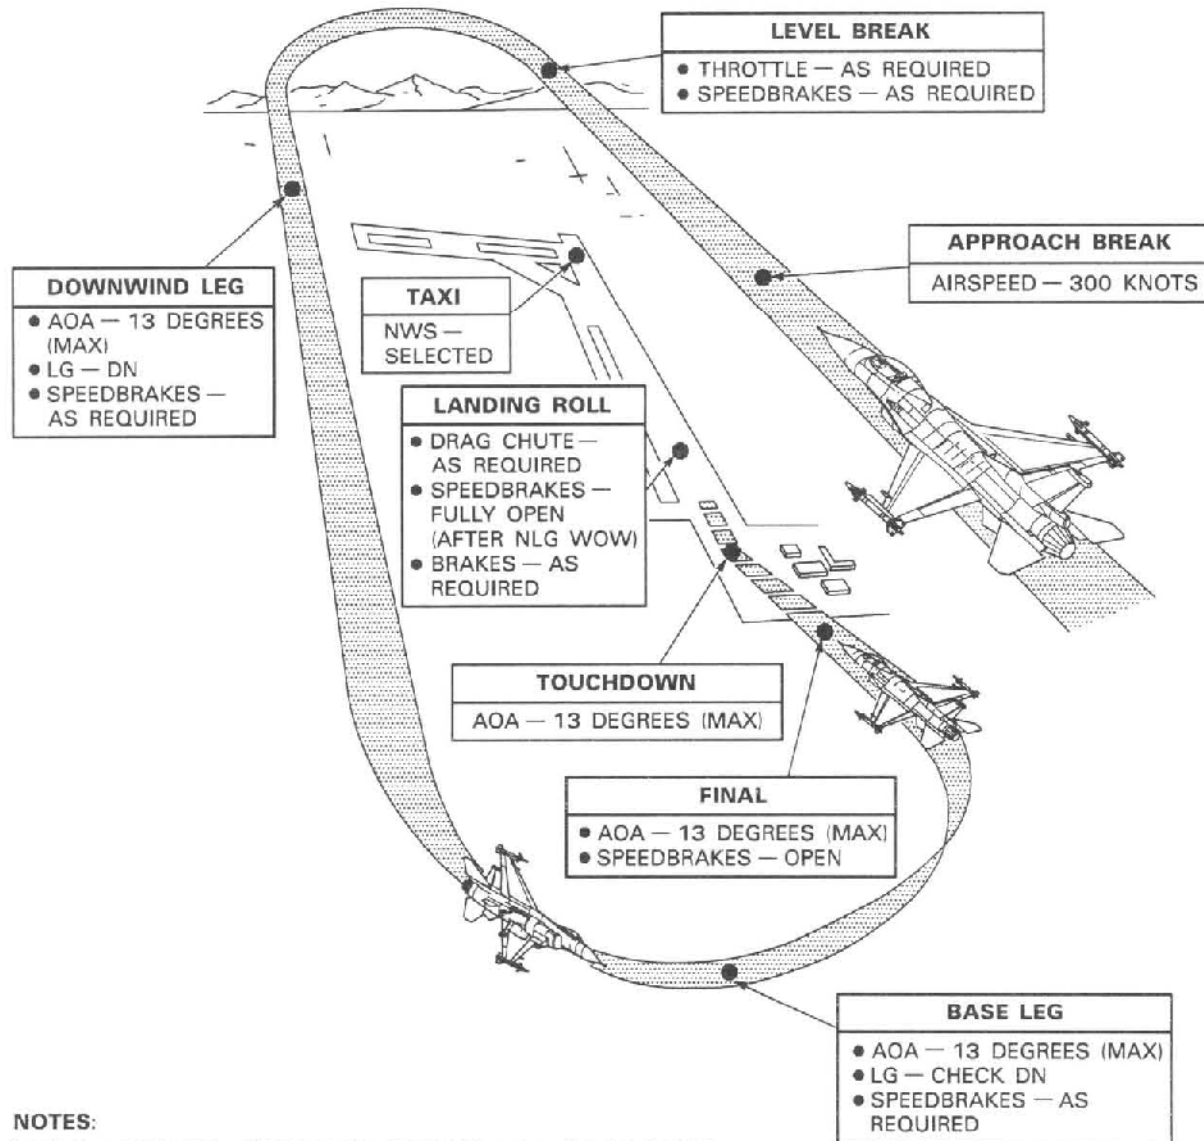

NOTES:

- FINAL APPROACH AIRSPEED/13 DEGREES AOA CROSS-CHECK.
 - **C** 136 KNOTS + 4 KNOTS PER 1000 POUNDS OF FUEL/STORE WEIGHTS. ADD 8 KNOTS FOR 11 DEGREES AOA APPROACH.
 - **D** 138 KNOTS + 4 KNOTS PER 1000 POUNDS OF FUEL/STORE WEIGHTS. ADD 8 KNOTS FOR 11 DEGREES AOA APPROACH.
- THE PRECEDING BASELINE AIRSPEEDS ARE BASED ON THE BASIC OPERATING WEIGHT FROM T.O. GR1F-16CJ-1-1 PLUS FULL AMMO. ACTUAL FINAL APPROACH AIRSPEED AT 11/13 DEGREES AOA MAY DIFFER BY +/-5 KNOTS DUE TO VARIATIONS IN AIRCRAFT CG.

GR1F-16CG-1-0099X37®

Figure 2-3.

NOTE

Rapid roll inputs or turbulence during landing may cause the TO/LDG CONFIG warning light to blink.

After the nosewheel is on the runway, open the speedbrakes fully and maintain full aft stick for maximum three-point aerodynamic braking and wheel braking effectiveness.

CAUTION

- Crossing an arresting cable in a three-point attitude above 90 knots groundspeed with a centerline store may cause cable strike.
- Do not move SPD BRK switch to open until the nosewheel is on runway as speedbrakes may contact runway.
- Until WOW, forward stick pressure in excess of approximately 2 pounds results in full trailing edge down deflection of the horizontal tails. This horizontal tail deflection reduces wheel braking effectiveness. At high speeds in the three-point attitude, forward stick results in excessive loads on the NLG which can lead to nose tire failure and possibly cause structural failure of the NLG.

Smoothly apply moderate to heavy braking to decelerate to taxi speed. Using less than moderate braking increases the likelihood of a hot brake(s). NWS should not be engaged above taxi speed unless required to prevent departure from prepared runway surface.

WARNING

NWS malfunctions at any speed may cause an abrupt turn, tire skidding or blowout, aircraft tipping, and/or departure from the prepared surface.

SHORT FIELD LANDING (DRY RUNWAY)**NOTE**

The following procedures should be used anytime stopping distance is critical, whether due to a long, fast, heavy weight, or short field landing.

When stopping distance is critical, a normal approach should be made. Select IDLE at or slightly before touchdown. Touch down as near as possible to the end of the runway at 13 degrees AOA. Deploy the drag chute immediately after touchdown. Two-point aerodynamic and wheel braking should be used with the nose held up at 13 degrees AOA until the nose falls. Pitch must be held at 13 degrees AOA if two-point aerodynamic braking is to be effective. Maximum effort braking is achieved by using the wheel brakes in conjunction with two-point aerodynamic braking. When the wheel brakes become effective, the nose automatically lowers. This occurs soon after brakes are applied. After the nosewheel is on the runway, maintain full aft stick, open the speedbrakes fully, and use maximum wheel braking (antiskid on).

For landing on icy/wet runways, refer to LANDING IN ICY OR WET CONDITIONS, Section VII.

CROSSWIND LANDING

The recommended technique for landing in a crosswind is to use a wing level crab through touchdown. At touchdown, the ARI switches out. Undesirable yaw transients may occur if roll control is being applied at this time. After touchdown, perform two-point aerodynamic braking using the rudder to maintain aircraft track down the runway and flaperon to prevent wing rise. In crosswinds, the aircraft may drift downwind due to side loads imposed by the crosswinds or travel upwind due to insufficient directional control inputs/availability. As the airspeed decreases, increasing amounts of rudder are required to maintain track. Maintain two-point aerodynamic braking until approximately 100 knots or until roll or directional control becomes a problem. As the pitch attitude decreases, the nose tends to align itself with the ground track.

Aft stick and fully opened speedbrakes reduce stopping distance. Apply brakes after nosewheel is on the runway; however, if stopping distance is a factor, refer to **SHORT FIELD LANDING**, this section. With all LG on the runway, maintain directional control with rudder, differential braking, and NWS if required.

During landing rollout, the main concerns are wing rise (roll control), weathervaning (directional control), and downwind drift. Wing rise is controlled by flaperon into the crosswind. Excessive flaperon deflection degrades directional control. Use rudder and differential braking to control ground track, especially on wet or icy runways. Engage NWS if required to maintain directional control and to prevent departure from the runway. Excessive differential braking may result in a hot brake condition. High rudder pedal force may result in a yaw transient when NWS is engaged. NLG strut compression is required to engage NWS but sustained forward stick may result in full horizontal tail deflection which decreases weight on the MLG and thus reduces wheel braking effectiveness. NWS engagement may be required with the drag chute deployed to control increased weathervaning tendencies. However, the nose up pull of the drag chute may prevent early NWS engagement.

WARNING

Be prepared to release the drag chute during the landing rollout if directional control or downwind drifting becomes a problem.

NOTE

Deploying the drag chute during two-point aerodynamic braking with a crosswind may complicate aircraft control.

TOUCH-AND-GO LANDING

Perform a normal approach and landing. After touchdown, maintain landing attitude, advance the throttle, close the speedbrakes, and perform a normal takeoff.

AFTER LANDING

WARNING

Do not use parking brake. Use only chocks, if available, or minimum possible toe brakes pressure to hold the aircraft stationary. Parking brake use may cause residual heat damage to brakes and may increase the probability of a subsequent brake fire.

NOTE

- Avoid heavy braking below 20 knots at light GW's. Heavy braking during these conditions may cause both MLG WOW switches to momentarily go to the air position, which causes the anti-skid system to deactivate the toe brakes. The WOW switches return to the ground position after 1-1.5 seconds, restoring braking capability. If heavy braking resumes, the cycle may be repeated.
 - ☒ NWS disengagements are possible when taxiing with CG near the in-flight aft limit.
1. **DRAG CHUTE** switch – NORM/REL as required.

NOTE

Turn aircraft into the wind prior to releasing drag chute.

2. **PROBE HEAT** switch – OFF.

WARNING

If probe heat is on or has been on, heat in probes may be sufficient to cause injury if touched.

CAUTION

Prolonged ground operation of probe heat may cause failure of AOA probe heaters.

3. ECM power – Off.
4. Speedbrakes – Close.
- *5. Ejection safety lever – Safe (up).
6. IFF MASTER knob – STBY.
7. IFF M-4 CODE switch – HOLD.
8. LANDING TAXI lights – As required.
9. ZEROIZE switch – As required.

NOTE

- If any FLCS single failures occurred while airborne, they are reported in the PFL 2 minutes after WOW. The FLCS FAULT caution light also illuminates.
 - If an FLCS SNGL FAIL PFL occurs and FLCS 049 and 070 MFL's are the only MFL's present on the MFD test page, perform up to three additional FLCS BIT's and MFL clear actions. If these FLCS MFL's clear, no writeup is required. If these FLCS MFL's do not clear, inform maintenance.
10. Canopy handle – Up.

NOTE

- Unlock the canopy to insure that the canopy seal is deflated before the canopy is opened.
 - If the canopy handle is placed to up within 2 minutes of WOW, an FDR 024 MFL is generated.
11. Armament switches – Off, safe, or normal.

PRIOR TO ENGINE SHUTDOWN**NOTE**

If a flight control related problem was experienced during the flight, coordinate with maintenance to determine if the contents of the FLCC fault history table are desired before shutdown of FLCS power.

1. EPU safety pin (ground crew) – In.

NOTE

Installation of the EPU safety pin should be delayed until after engine shutdown under the following conditions:

- The ground crew recovering the aircraft is not familiar with F-16 danger areas.
- The aircraft is being recovered by emergency response personnel (landing with activated EPU, hot brakes, etc.).

Place the EPU switch to OFF prior to engine shutdown if the EPU safety pin is not installed.

2. INS – Check.

- Steerpoint of current location – Select.
- INS miscellaneous data – Record.
- Locations 19 (RER), 20 (CEP), 62 (align events), 64 (NAV events), 66 (VX), and 67 (VY) – Record.

NOTE

Radial error rate (RER) greater than 3 nm/hour or either velocity (VX or VY) greater than 5 fps is considered out of tolerance.

3. MFL – Record (as required).
4. AVTR power switch – OFF.

NOTE

Place the AVTR power switch to OFF at least 15 seconds prior to engine shutdown to allow the tape to unthread.

5. CNI knob – BACKUP.
6. INS knob – OFF.

NOTE

Turn INS off at least 10 seconds prior to engine shutdown to insure that the INU has adequate time to complete its shutdown sequence.

7. Avionics – OFF:
 - HUD thumbwheels.
 - SNSR PWR switches.
 - AVIONICS POWER switches.

ENGINE SHUTDOWN

WARNING

A postshutdown engine tailpipe fire is possible. Ignition may be indicated by a mild bang, followed by smoke, fumes, or a small fire in the combustion/turbine area. Potentially hazardous inlet and exhaust areas should be avoided within 5 minutes after engine shutdown. This phenomenon does not cause damage to the engine or aircraft. If a postshutdown fire occurs, the engine may be motored with the JFS for approximately 1 minute to extinguish the fire. If motoring the JFS is not possible, the fire extinguishes on its own within a few minutes.

1. Throttle – OFF.

After main generator drops off line:

2. EPU GEN and EPU PMG lights – Confirm off.

WARNING

If either light is illuminated, turn the MAIN PWR switch to OFF. Insure that the EPU safety pin remains installed and notify maintenance.

3. MAIN PWR switch – OFF.

NOTE

Delay placing MAIN PWR switch to OFF until after engine rpm decreases through 20 percent. This delay should allow the exhaust nozzle to remain open and makes it easier for maintenance to accomplish the postflight inspection.

4. Oxygen hose, survival kit straps, lapbelt, g-suit hose, and vest hose – Disconnect, stow.
 - Stow oxygen connector in bracket on right sidewall. Insure oxygen hose does not protrude beyond console edge.
 - Stow lapbelt and survival kit straps on seat cushion.
 - Use both hands to disconnect g-suit hose to avoid excessive force on the hose-to-console connection.

CAUTION

- One-handed or brute force disconnects of the g-suit connection will cause internal damage to the hose at the hose-to-console connection.
- Failure to properly stow lapbelt, survival kit straps, oxygen connector, g-suit hose, and oxygen hose may cause damage to consoles and to the ejection seat during seat adjustment.

5. OXYGEN REGULATOR – OFF and 100%.

CAUTION

- Failure to position the oxygen regulator to OFF and 100% may result in particulate contamination of the regulator and subsequent damage.
- To avoid damage to the oxygen regulator, do not pull the knob on the end of the mode lever when moving the mode lever from ON to OFF.

6. Canopy – Open.

WARNING

- If winds exceed 30 knots, open the canopy only as far as needed to enter/exit the cockpit. Decreasing the canopy angle reduces the possibility that the canopy can be blown past full open.
-  A failure of the canopy actuator could allow the canopy to fall during transit. Keep hands and arms out of the path of canopy travel during opening or closing.

NOTE

If the internal canopy switch is left in the up position, the canopy automatically opens if closed from the outside.

SCRAMBLE**PREFLIGHT**

Perform the following preflight inspections prior to placing the aircraft on quick response status:

1. EXTERIOR INSPECTION.
2. BEFORE ENTERING COCKPIT.
3. COCKPIT INTERIOR CHECK.
4. BEFORE STARTING ENGINE.
5. STARTING ENGINE.
6. AFTER ENGINE START (include EPU check).
7. Aircraft cocked for scramble – Per local policies and directives.

AIRCRAFT ON QUICK RESPONSE STATUS

If the above actions were not completed prior to scramble, normal preflight procedures should be used.

1. FLCS power – Check.
With MAIN PWR switch in BATT, verify that FLCS power is good (FLCS PWR lights) with the aircraft battery.

2. MAIN PWR switch – MAIN PWR.
3. Engine – Start.
4. Canopy – Close and lock.
5. Instruments – Check.
6. SNSR PWR switches – As required.
7. AVIONICS POWER switches – As required.
8. INS knob – STOR HDG.

NOTE

Prior to aligning the INS using a stored heading alignment, accomplish a normal alignment, except turn the INS knob to OFF from NORM (prior to power being removed), and do not move the aircraft.

9. FLCS BIT – Accomplish.
10. MFD's – As desired.
11. SMS – As desired.
- *12. HUD/ASHM – As required.
13. INS knob – NAV.

WARNING

A full INS ground alignment or extended interrupted alignment (EIA) with a flashing RDY/ALIGN (status 10) display should be performed prior to flying any terrain following mission. If degraded alignment occurs, terrain following is prohibited.

NOTE

- When positioning the INS knob from STOR HDG to NAV, do not hesitate in NORM or the alignment will be lost.
- If time permits, the INS knob can be moved to NORM at anytime for a normal alignment.

14. EPU GEN and EPU PMG lights – Confirm off.

If either light is illuminated, cycle the EPU switch to OFF, then back to NORM. If either light stays on, abort the aircraft.

WARNING

If either light is illuminated, the EPU activates using hydrazine when the EPU safety pin is removed.

15. EPU – Check (if EPU safety pin was installed since last EPU check).

WARNING

If the EPU safety pin is reinstalled for any reason, the EPU check must be reaccomplished prior to flight to insure proper EPU operation.

16. Chocks and safety pins (ground crew) – Remove.
- *17. Brakes and NWS – Check.
- *18. Ejection safety lever – Armed (down).
- *19. Flight control surfaces – Cycle.
20. IFF – As required.

HOT REFUELING

HOT REFUELING PRECAUTIONS

Perform dearming prior to entry to the hot refueling pit. If suspected hot brakes or other unsafe condition exists, do not enter refueling area. Follow ground crew directions into the refueling area and establish communications with the ground crew. If a malfunction is suspected, stop refueling.

Hot refueling is prohibited with an activated EPU, hung ordnance, hot brakes, or fuel leakage in vicinity of AR receptacle during AR. Safety pins for stores and gun must be installed. In the refueling area, use minimum thrust for taxiing.

PRIOR TO HOT PIT ENTRY

1. AFTER LANDING checks – Complete.

2. AIR REFUEL switch – OPEN; RDY light on.

NOTE

- ☒ With the AR switch in OPEN, NWS can be engaged or disengaged from either cockpit regardless of the position of the STICK CONTROL switch and without using the paddle switch.
- With the AR switch in OPEN, the AR/NWS light remains off whenever NWS is engaged.

- *3. TACAN power knob – OFF.

- *4. GND JETT ENABLE switch – OFF.

PRIOR TO HOT REFUELING

Perform the following actions prior to refueling:

1. EPU safety pin (ground crew) – Installed.
- *2. Personal equipment leads (except oxygen and communication) – As desired.
3. Canopy – As desired.

CAUTION

Insure all cockpit items are secure prior to opening the canopy. With the canopy open, the engine is susceptible to FOD from loose cockpit items.

4. Brake and tire inspection (ground crew) – Complete.
5. Intercom with refueling supervisor – Established.

DURING HOT REFUELING

- *1. Be alert for visual or voice signals from refueling supervisor.
- *2. Terminate refueling if intercom contact is lost – Visual signal.
- *3. Ground control radio frequency – Monitor.
- *4. Insure hands are visible to ground crew.

HOT REFUELING COMPLETE

1. AIR REFUEL switch – CLOSE.
2. EPU GEN and EPU PMG lights – Confirm off.

WARNING

If either light is illuminated, the EPU activates using hydrazine when the EPU safety pin is removed.

3. EPU safety pin (ground crew) – Removed.
4. Intercom (refueling supervisor) – Disconnect.
5. Taxi clear of refueling area and configure aircraft as required.
6. EPU – Check.

QUICK TURNAROUND**PRIOR TO ENGINE SHUTDOWN**

1. AFTER LANDING checks – Complete.
2. PRIOR TO ENGINE SHUTDOWN checks – Complete.
3. Communication with ground crew – Establish (if required).
4. ENGINE SHUTDOWN checks – Complete.
5. Aircraft setup – IAW local procedures.

SPECIAL PROCEDURES**EPU HYDRAZINE SUPPORT AT NON-F-16 BASES**

At non-F-16 bases, the pilot is responsible for the aircraft. Response actions shall be limited to identification of a hydrazine or EPU problem, isolation, containment, and minimal dilution with water (1 part water to 1 part hydrazine). No major neutralization, maintenance, or hydrazine servicing capability is planned for transient bases. If a hydrazine leak or EPU incident occurs on a base where no disaster response force or bioenvironmental support is available, the pilot must insure that the aircraft is isolated and the leak contained. Refer to ACTIVATED EPU/HYDRAZINE LEAK, Section III.

SUPPLEMENTAL PROCEDURES**ILS PROCEDURES**

1. DED – Verify CNI display.
2. T-ILS button – Depress and release.
3. ILS frequency – Key in and ENTR.
4. DCS – Position asterisks about selectable items:
 - Key in and enter inbound localizer course. The inbound localizer course must be entered to obtain correct command steering.
 - Depress M-SEL button to deselect/select command steering; verify CMD STRG is highlighted, if selected.
5. HSI – Set inbound localizer course.
6. INSTR MODE knob – ILS/TCN or ILS/NAV. Verify proper indications/symbology on ADI, HSI, and HUD.

EXTERIOR INSPECTION

Refer to figure 2-4 for normal preflight inspection.

DANGER AREAS

Refer to figure 2-5.

TURNING RADIUS AND GROUND CLEARANCE

Refer to figure 2-6.

G-SUIT HOSE ROUTING


Refer to figure 2-7 for the recommended g-suit hose routing.

STRANGE FIELD PROCEDURES

Refer to Air Force/Command Guidance.

Exterior Inspection (Typical)

NOTE: Check aircraft for loose doors and fasteners, cracks, dents, leaks, and other discrepancies.

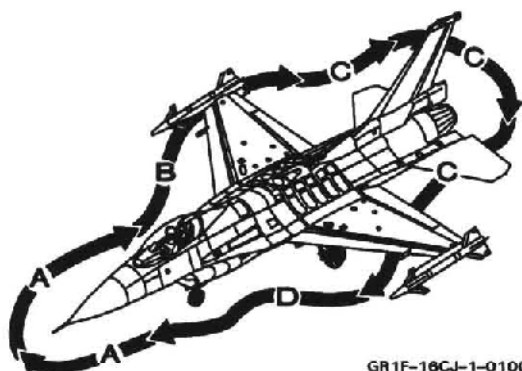

GR1F-16CJ-1-0100X37

NOSE - A

1. FORWARD FUSELAGE:
 - A. EXTERNAL CANOPY JETTISON D-HANDLES (2) - ACCESS DOORS CLOSED.
 - B. PITOT-STATIC PROBES (2) - COVERS REMOVED.
 - C. AOA PROBES (2) - COVERS REMOVED; SLOTS CLEAR; FREEDOM OF MOVEMENT CHECKED; ALIGNMENT CHECKED (ROTATE PROBES FULLY TOWARD FRONT OF AIRCRAFT (CCW ON THE LEFT; CW ON THE RIGHT) AND VERIFY BOTTOM SLOTS SLIGHTLY AFT OF 6 O'CLOCK AND TOP SLOTS FORWARD); SET IN NEUTRAL POSITION (BOTTOM SLOT AT 4 O'CLOCK ON THE RIGHT SIDE AND 8 O'CLOCK ON THE LEFT SIDE).
 - D. STATIC PORTS (2) - CONDITION.
 - E. RADOME - SECURE.
 - F. ENGINE INLET DUCT - CLEAR.
 - G. PODS AND PYLONS - SECURE (PREFLIGHT IAW T.O. GR1F-16CJ-34-1-1CL-1).
 - H. EPU FIRED INDICATOR - CHECK.
 - I. ECS RAM INLET DUCTS - CLEAR.

CENTER FUSELAGE & RIGHT WING - B

1. RIGHT MLG:
 - A. TIRE, WHEEL, AND STRUT - CONDITION.
 - B. UPLOCK ROLLER - CHECK.
 - C. DOOR AND LINKAGE - SECURE.
 - D. LG SAFETY PIN - INSTALLED.
2. RIGHT WING:
 - A. HYDRAZINE LEAK DETECTOR - CHECK.
 - B. EPU NITROGEN BOTTLE - CHARGED.
 - C. EPU OIL LEVEL - CHECK.
 - D. HYD SYS A QTY AND ACCUMULATOR - CHECK.

- E. GUN-RNDS COUNTER AND RNDS LIMIT - SET.
- F. EPU EXHAUST PORT - CONDITION.
- G. LEF - CONDITION.
- H. STORES AND PYLONS - SECURE (PREFLIGHT IAW T.O. GR1F-16CJ-34-1-1CL-1).
- I. NAV AND FORM LIGHTS - CONDITION.
- J. FLAPERON - CONDITION.

AFT FUSELAGE - C

1. TAIL:
 - A. ADG - CHECK.
 - B. CSD OIL LEVEL - CHECK.
 - C. BRAKE/JFS ACCUMULATORS - CHARGED.
 - D. HOOK - CONDITION AND PIN FREE TO MOVE.
 - E. DRAG CHUTE ACCUMULATOR - CHARGED.
 - F. VENTRAL FINS, SPEEDBRAKES, HORIZONTAL TAILS, AND RUDDER - CONDITION.
 - G. DRAG CHUTE HOUSING - CONDITION.
 - H. ENGINE EXHAUST AREA - CONDITION.
 - I. NAV AND FORM LIGHTS - CONDITION.
 - J. VERTICAL TAIL LIGHT - CONDITION.
 - K. FLCS ACCUMULATORS - CHARGED.
 - L. JFS DOORS - CLOSED.

LEFT WING & CENTER FUSELAGE - D


1. LEFT WING:
 - A. FLAPERON - CONDITION.
 - B. NAV AND FORM LIGHTS - CONDITION.
 - C. STORES AND PYLONS - SECURE (PREFLIGHT IAW T.O. GR1F-16CJ-34-1-1CL-1).
 - D. LEF - CONDITION.
 - E. FUEL VENT OUTLET - CLEAR.
 - F. HYD SYS B QTY AND ACCUMULATOR - CHECK.
2. LEFT MLG:
 - A. TIRE, WHEEL, AND STRUT - CONDITION.
 - B. UPLOCK ROLLER - CHECK.
 - C. DOOR AND LINKAGE - SECURE.
 - D. LG SAFETY PIN - INSTALLED.
 - E. LG PIN CONTAINER - CHECK CONDITION.
3. FUSELAGE:
 - A. GUN PORT - CONDITION.
 - B. IFF - CHECK.
 - C. AVTR - CHECK.
 - D. DOOR 2317, ENGINE AND EMS GO-NO-GO INDICATORS - CHECK.
4. UNDERSIDE:
 - A. NLG TIRE, WHEEL, AND STRUT - CONDITION.
 - B. NLG TORQUE ARMS - CONNECTED, PIN SECURE AND SAFETIED.
 - C. NLG DOOR AND LINKAGE - SECURE.
 - D. LANDING AND TAXI LIGHTS - CONDITION.
 - E. LG/HOOK EMERGENCY PNEUMATIC BOTTLE PRESSURE - WITHIN PLACARD LIMITS.

Figure 2-4.


Danger Areas

ENGINE F110-GE-129

ENGINE
ENGINE INLET DANGER AREA

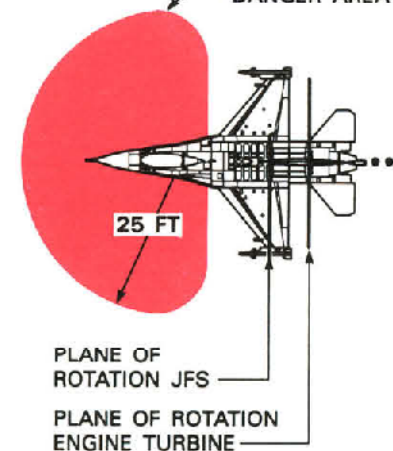


ENGINE INLET DANGER AREA

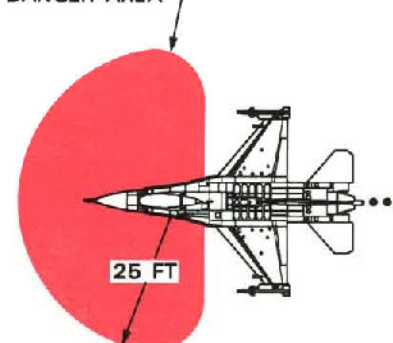


TIRES


WITH HOT BRAKES, AVOID INFLATED MLG TIRE SIDE AREA WITHIN 300 FEET FOR 45 MINUTES AFTER AIRCRAFT HAS STOPPED. IF REQUIRED, APPROACH FROM THE FRONT OR REAR FOR FIREFIGHTING PURPOSES ONLY.

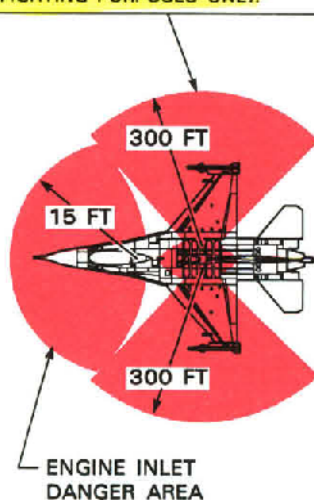


MAX AB THRUST

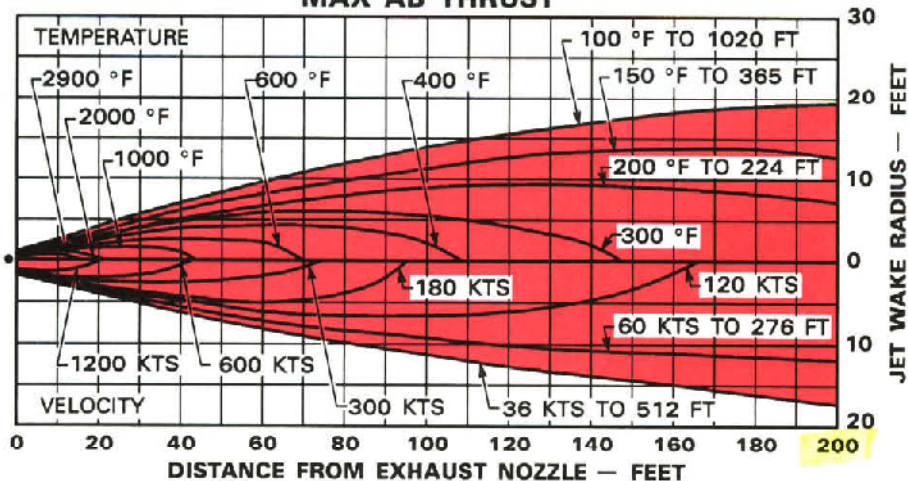

MIL THRUST

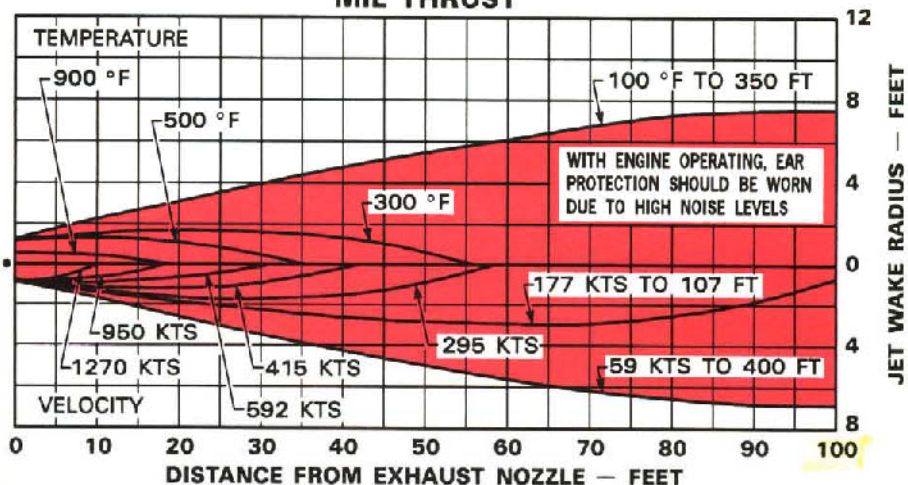

IDLE THRUST

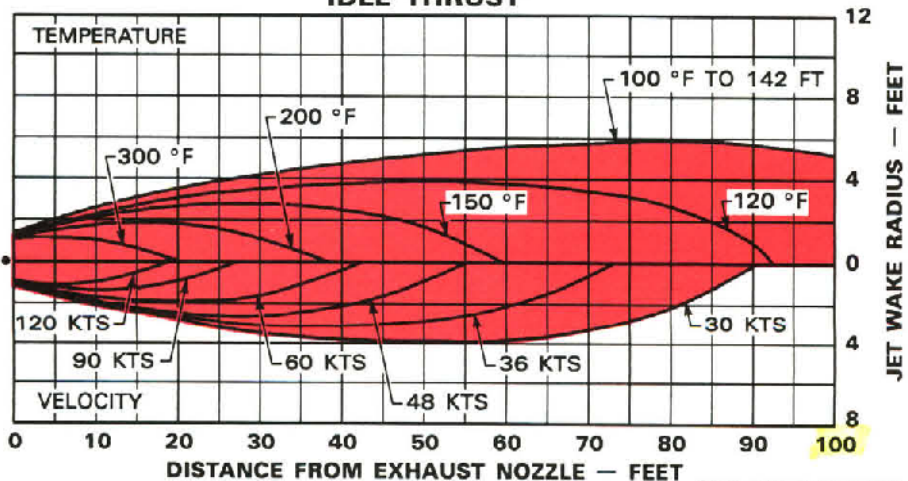

GR1F-16CJ-1-0101X37 ©

Figure 2-5. (Sheet 1)


Danger Areas

RADIATION AND TEMPERATURE

ENGINE F110-GE-129

NOTES:

- Distance from radar disc to forward tip of radome = 5 feet.
- ECM radiation is in a fan pattern fore and aft.

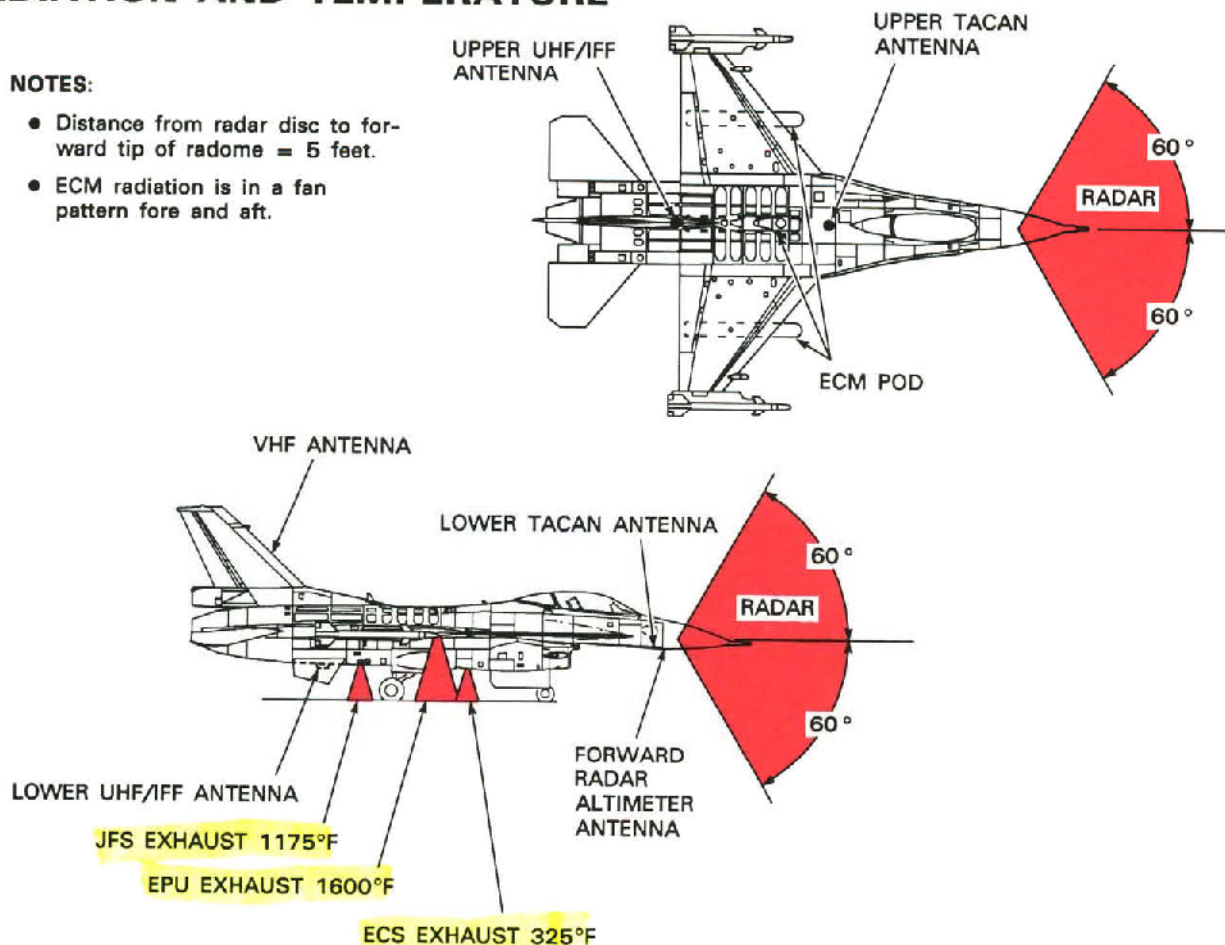

OPERATING TRANSMITTERS	MINIMUM SAFE DISTANCE FROM ANTENNAS IN FEET		
	VOLATILE FLUIDS	PERSONNEL	EED
UPPER AND LOWER UHF/IFF	—	1	—
UPPER AND LOWER TACAN	—	1	—
VHF	—	1	—
RADAR ALTIMETER	—	1	—
FIRE CONTROL RADAR	30	120	120
INTERNAL ECM	21	1.5	4
AN/ALQ-119	—	6	6
AN/ALQ-131	—	15	15
AN/ALQ-176	—	6	6
AN/ALQ-184	—	31	6
AN/ALQ-188	—	6	6
QRC-80-01	—	6	6

GR1F-16CJ-1-0102X37®


Figure 2-5. (Sheet 2)

Danger Areas


HAZARDOUS NOISE LEVEL AREAS

ENGINE F110-GE-129


MAX AB THRUST (ESTIMATED)

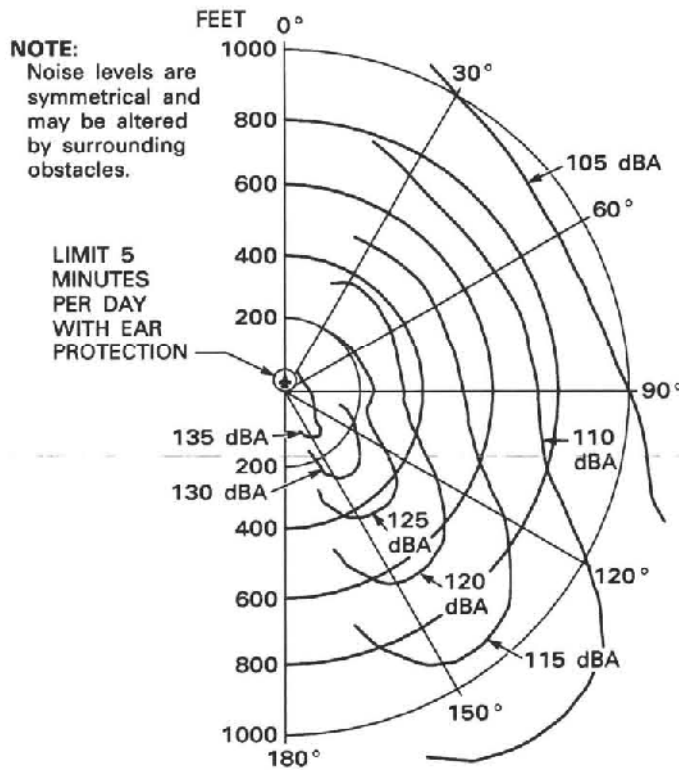


MIL THRUST (ESTIMATED)

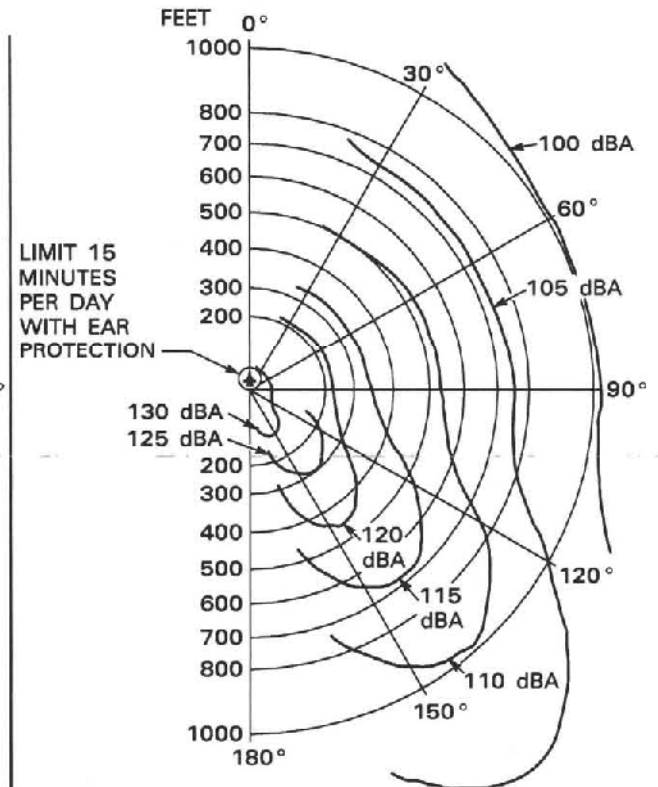

IDLE THRUST

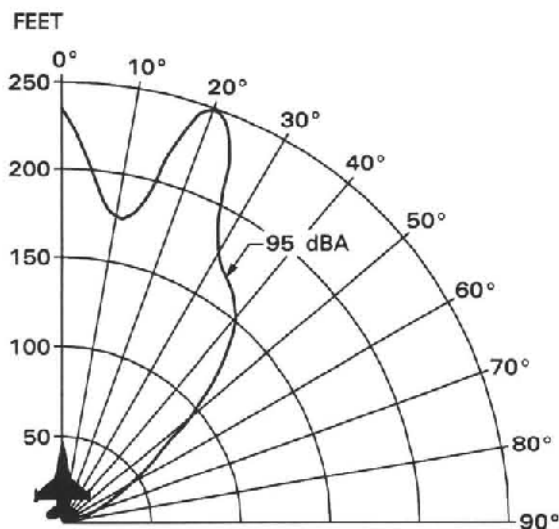

NOISE EXPOSURE LIMITS

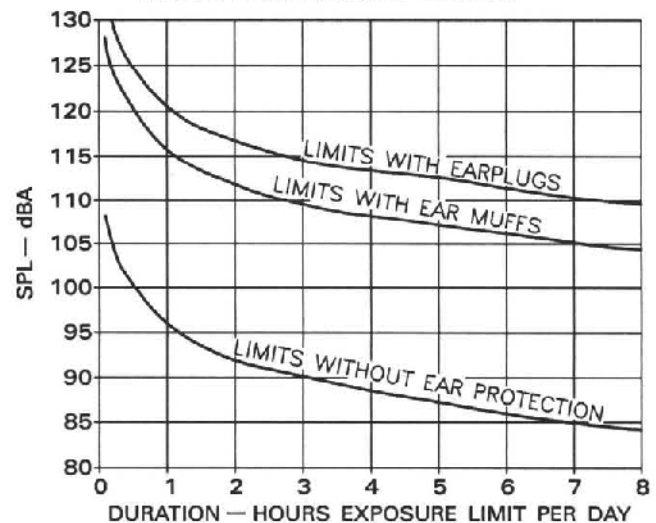


NOTES:

- Attenuation factors and exposure limits are for typical ear muffs and earplugs.
- SPL - Sound pressure level.
- dBA - Adjusted (human ear response) decibels.

1F-16X-1-4031X®

Figure 2-5. (Sheet 3)

Turning Radius and Ground Clearance

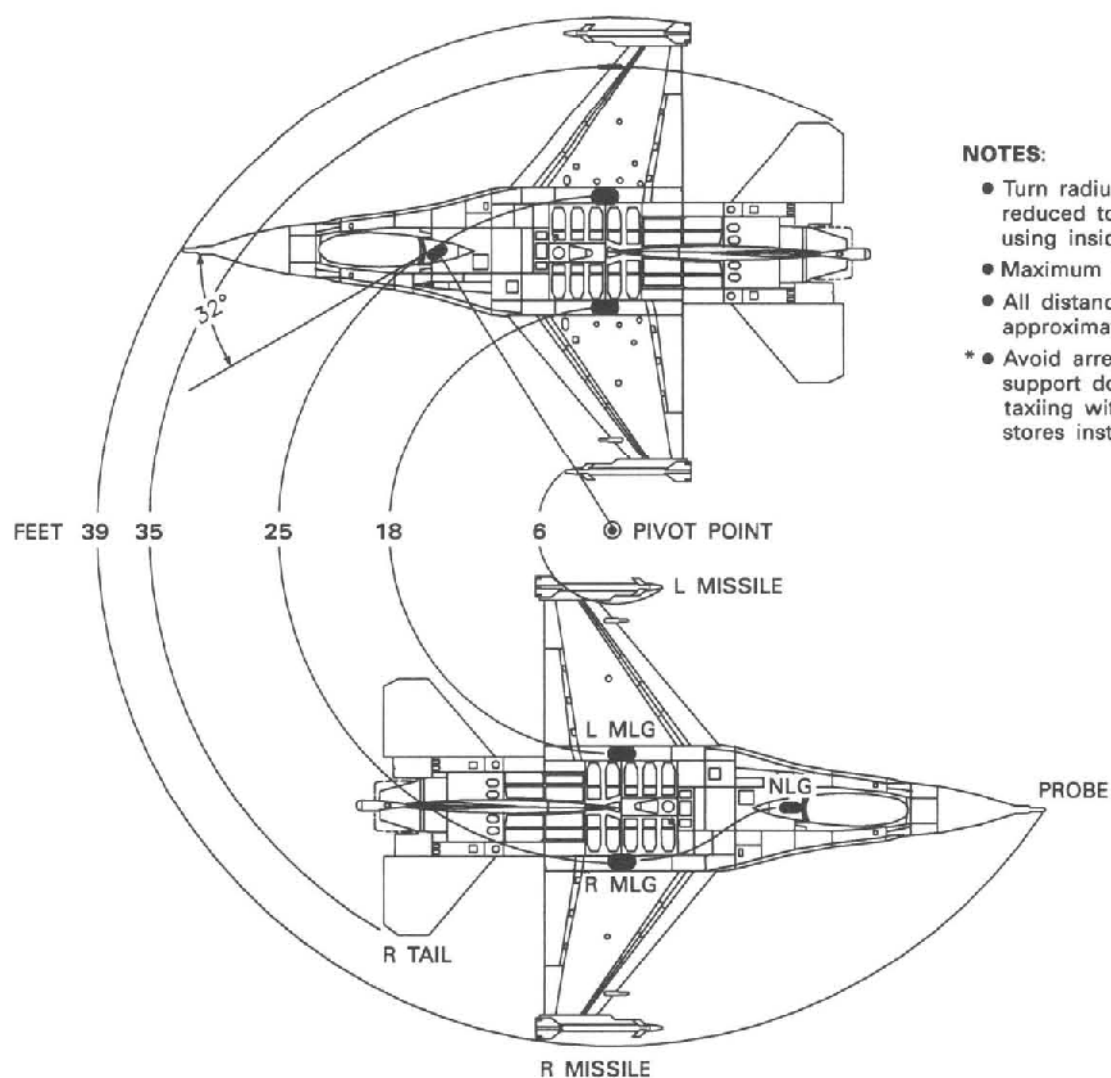


NOTES:

- Turn radius can be reduced to 38 feet by using inside brake.
- Maximum NWS deflection.
- All distances are approximate.
- * • Avoid arresting cable support donuts when taxiing with centerline stores installed.

WARNING


With large asymmetries, reduce taxi speed, avoid sharp turns and, when possible, turn toward heavy wing to prevent possible tipping.

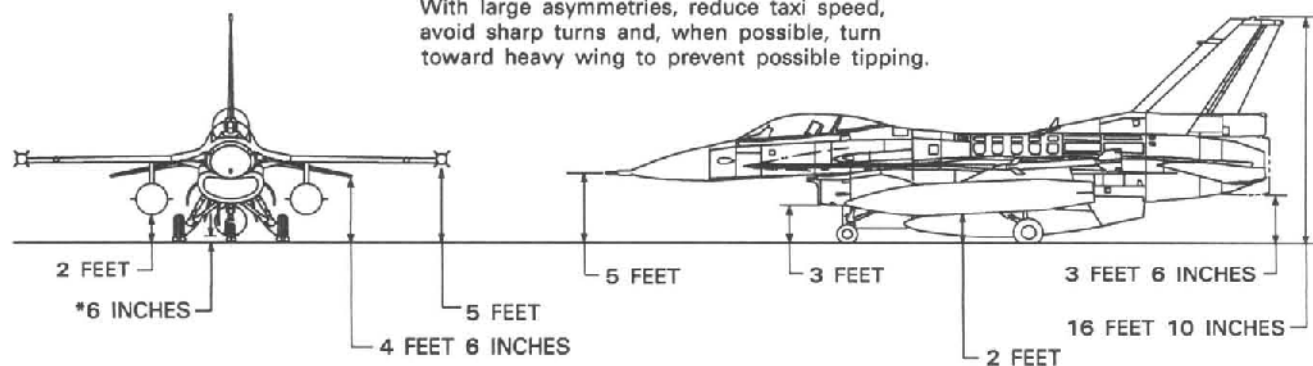

GR1F-16CJ-1-0104X37 ©

Figure 2-6.

G-Suit Hose Routing (Typical)

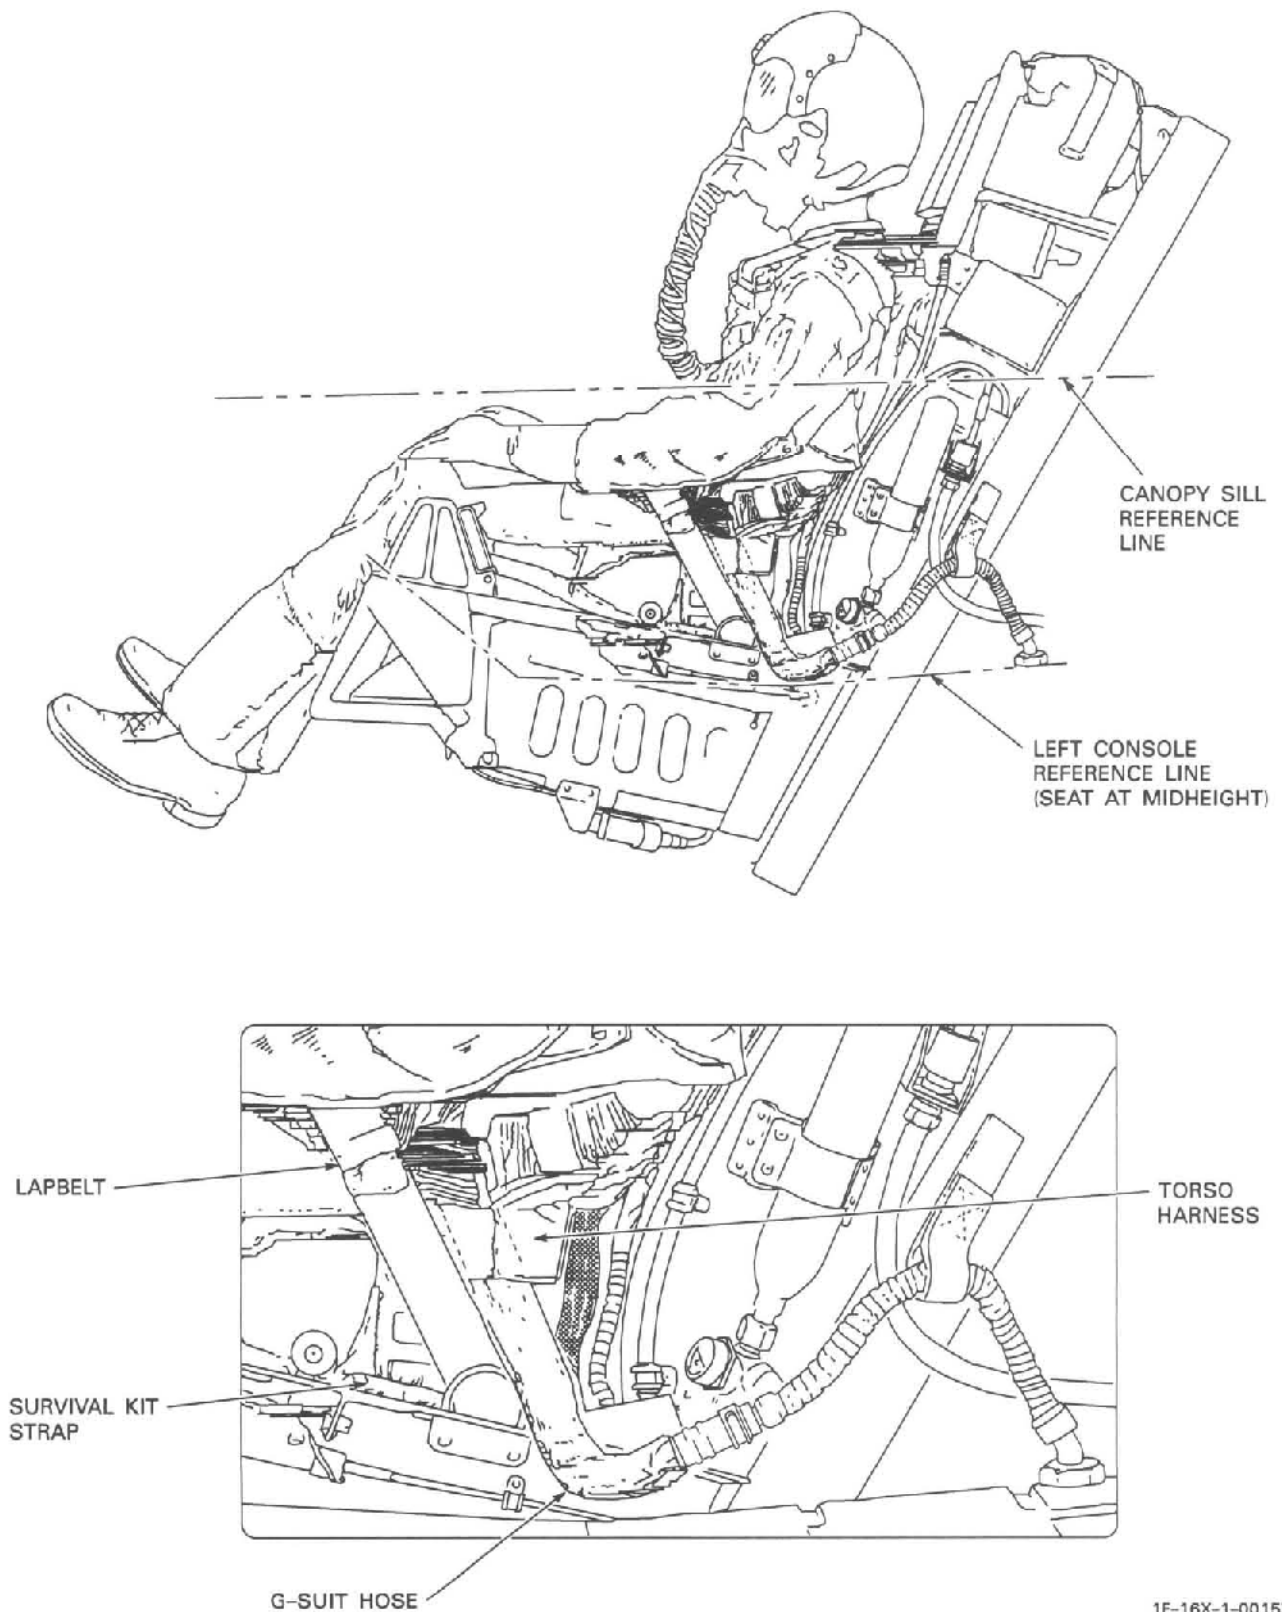

1F-16X-1-0015X®

Figure 2-7.

SECTION III

EMERGENCY PROCEDURES

TABLE OF CONTENTS	Page	Ejection	3-34
INTRODUCTION	3-2	Ejection (Immediate)	3-35
WARNING AND CAUTION LIGHT AND PILOT FAULT LIST ANALYSIS	3-3	Ejection (Time Permitting)	3-35
FORMAT	3-3	Failure of Canopy To Separate	3-36
GROUND EMERGENCIES	3-22	Ejection Seat Failure	3-36
Fire/Overheat/Fuel Leak (Ground)	3-22	Ditching	3-36
Hot Start (Ground)	3-22	Electrical System Failures	3-38
Hung Start/No Start	3-22	FLCS PMG Failure	3-38
Engine Autoacceleration (Ground)	3-22	Single Generator Failures (in Flight)	3-38
Antiskid Malfunction (Ground)	3-22	Main and Standby Generator Failure (in Flight)	3-39
Brake Failure	3-23	Main, Standby, and EPU Generator Failure	3-40
Hot Brakes	3-23	EPU Malfunctions	3-42
Main Generator Failure (Ground)	3-24	Uncommanded EPU Operation	3-42
Main and Standby Generator Failure (Ground)	3-24	Abnormal EPU Operation	3-42
Emergency Entrance and Crew Rescue ...	3-25	FLCS RLY Light	3-43
Emergency Ground Jettison	3-25	Partial Electrical Power Loss	3-43
Ground Egress	3-25	Aircraft Battery Failure	3-45
Hot Refueling Emergency	3-28	Emergency Power Distribution	3-45
Activated EPU/Hydrazine Leak	3-28	Engine Malfunctions	3-53
NWS Failure/Hardover	3-28	Engine Fire	3-53
TAKEOFF EMERGENCIES	3-28	OVERHEAT Caution Light	3-54
Delayed Rotation	3-28	Oil System Malfunction	3-54
Abort	3-29	ENGINE FAULT Caution Light	3-56
Engine Malfunction on Takeoff	3-30	SEC Caution Light	3-56
Engine Failure on Takeoff	3-30	FTIT Indicator Failure	3-57
AB Malfunction on Takeoff	3-30	Zero RPM/Erroneous RPM Indication	3-57
Low Thrust on Takeoff or at Low Altitude (Non-AB)	3-30	Abnormal Engine Response	3-57
Engine Fire on Takeoff	3-31	AB Blowout/Failure To Light	3-59
LG Fails To Retract	3-31	Engine Stalls	3-60
LG Handle Will Not Raise	3-31	AB-Associated Engine Stalls	3-60
Blown Tire on Takeoff	3-31	Non-AB Engine Stalls	3-60
IN-FLIGHT EMERGENCIES	3-32	Engine Stall Recovery	3-61
CANOPY Warning Light On	3-32	Inlet Buzz	3-61
Canopy Loss/Penetration in Flight	3-33	Bird Strike	3-61
Drag Chute Deployed in Flight	3-33	Engine Overspeed	3-61
Cockpit Pressure/Temperature Malfunction	3-33	Engine Failure or Flameout	3-61
EQUIP HOT Caution Light	3-34	Tower Shaft Failure	3-62
		Low Altitude Engine Failure or Flameout	3-62
		Airstarts	3-62
		High Altitude Airstart Considerations	3-67

Low Altitude Airstart	
Considerations	3-68
Airstart Procedures	3-68
Flameout Landing	3-70
Overhead Approach	3-71
Straight-In Approach	3-76
IMC Penetration	3-76
Landing Phase	3-76
After Touchdown	3-77
Flameout Landing Procedures	3-77
Jettison	3-78
Selective Jettison	3-78
Emergency Jettison	3-79
FLCS Failures	3-79
Air Data Malfunctions	3-80
AOA Malfunction	3-80
CADC Malfunction	3-81
Servo Malfunction	3-81
FLCS Electronic Malfunctions	3-82
FLCS Single Electronic Failure	3-82
FLCS Dual Electronic Failure	3-83
FLCS Temperature Malfunction	3-83
Autopilot Malfunctions	3-83
DBU ON Warning Light	3-84
TF FAIL Warning Light	3-84
LEF Malfunction (Symmetric)	3-85
LEF Malfunction (Asymmetric)	3-86
Trim Malfunction	3-87
Stick Interference	3-87
Fuel Malfunctions	3-88
Fuel Management System PFL	3-88
Fuel Leak	3-88
Fuel Low	3-89
Hot Fuel/Oil or Gravity Feed	3-89
Fuel Imbalance	3-90
Trapped External Fuel	3-91
Hydraulic Malfunctions	3-92
Single Hydraulic Failure	3-93
System A Failure	3-93
System B Failure	3-93
Dual Hydraulic Failure	3-94
System B and Generator Failure (PTO Shaft)	3-94
INS Failures	3-96
Total INS Failure	3-96
Out-of-Control Recovery	3-97
Oxygen Malfunction	3-98.1
PBG Malfunction	3-98.1
Smoke or Fumes	3-98.1

LANDING EMERGENCIES	3-99
Straight-in Landing	3-99
Simulated Flameout (SFO) Landing	3-99
Controllability Check	3-100
Cable Arrestment	3-101
Net Arrestment	3-102
Landing With A Blown Tire	3-102
Landing With A Blown Main Gear Tire	3-102
Landing With A Blown Nose Gear Tire	3-102.1
LG Extension Malfunctions	3-103
LG Handle Will Not Lower	3-103
LG Fails To Extend	3-103
Alternate LG Extension	3-104
Landing With LG Unsafe/Up	3-105
Antiskid Malfunction (Landing)	3-106
Asymmetric Stores (Landing)	3-106
NLG WOW Switch Failure	3-110
Drag Chute Failure	3-110

INTRODUCTION

This section covers the operation of the aircraft during emergency/abnormal conditions. It includes a discussion of problem indications and corrective actions as well as procedural steps when applicable. Adherence to these guidelines insures maximum safety for the pilot and/or aircraft. The situations covered are representative of the most probable malfunctions. However, multiple emergencies, adverse weather, or other factors may require modification of the recommended procedures. Only those steps required to correct or manage the problem should be accomplished. When dealing with emergency/abnormal conditions, it is essential to determine the most correct course of action by using sound judgment and a full understanding of the applicable system(s). When practical, other concerned agencies (i.e., flight lead, tower, etc.) should be advised of the problem and intended course of action.

When a voice WARNING or CAUTION message is heard, check cockpit indications; then refer to the appropriate emergency procedure for corrective action.

When structural damage or any other failure that may adversely affect aircraft handling characteristics is known or suspected, a controllability check should be performed.

Certain steps (e.g., MASTER CAUTION reset, ELEC CAUTION reset) are intentionally omitted from the numbered procedures. Pilots are expected to perform these actions without prompting, when warranted.

Three basic rules, which apply to all emergencies, are established:

1. MAINTAIN AIRCRAFT CONTROL.
2. ANALYZE THE SITUATION AND TAKE PROPER ACTION.
3. LAND AS THE SITUATION DICTATES.

The following information provides general landing guidance:

Land As Soon As Possible

An emergency will be declared. A landing should be accomplished at the nearest suitable airfield considering the severity of the emergency, weather conditions, airfield facilities, lighting, aircraft GW, and command guidance.

Land As Soon As Practical

Emergency conditions are less urgent and, although the flight is to be terminated, the degree of the emergency is such that an immediate landing at the nearest suitable airfield may not be necessary.

WARNING

- The canopy should remain closed during all emergencies that could result in a crash or fire such as crash landings, aborted takeoffs, and arrestments. The protection the canopy affords far outweighs the isolated risk of entrapment due to a canopy malfunction or overturn.
- Ejection is preferable to sliding into an arrestment cable with the NLG collapsed. The cable may slide up over the nose with unpredictable and potentially dangerous consequences to anyone in the cockpit(s).

- If it appears that the aircraft will depart a prepared surface above normal taxi speed during an aborted take-off or a landing and go-around is not possible, eject since breakup of cockpit structure may occur. Retracting the LG to prevent departure from a prepared surface is not recommended since the MLG will probably not retract symmetrically.
- If remaining with an aircraft that will depart a prepared surface, shut down the engine, if feasible. This action reduces the potential for fire, reduces engine damage, and permits EPU turnoff if an MLG WOW signal is lost.

WARNING AND CAUTION LIGHT AND PILOT FAULT LIST ANALYSIS


Refer to figures 3-1, 3-2, and 3-3 for analysis and amplification of warning and caution light and Pilot Fault List procedures. Fault trees show interrelationships with examples of problem events and corrective action.

FORMAT


The format of Emergency Procedures differs slightly between the Checklist and the Flight Manual. Procedures in the Checklist have been grouped by malfunction category (engine, electrical, etc.) to provide maximum in-flight utility. In the Flight Manual, procedures are listed by the phase of flight in which the emergency may occur. In the Checklist, some procedures are split into two independent side-by-side series of steps and are separated by a straight line; in the Flight Manual, these side-by-side steps appear in a continuous column and can be identified by repeat numbering of steps following conditional statements beginning with the word if. Amplification following procedural steps in the Flight Manual is repeated in the Checklist under the heading Inoperative Equipment, Other Indications, or Other Considerations. A thorough review of the layout and content of the Checklist and Flight Manual is recommended prior to in-flight use.

Warning Light Analysis

WARNING LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
ENG FIRE ENGINE	Engine compartment fire	Refer to ENGINE FIRE

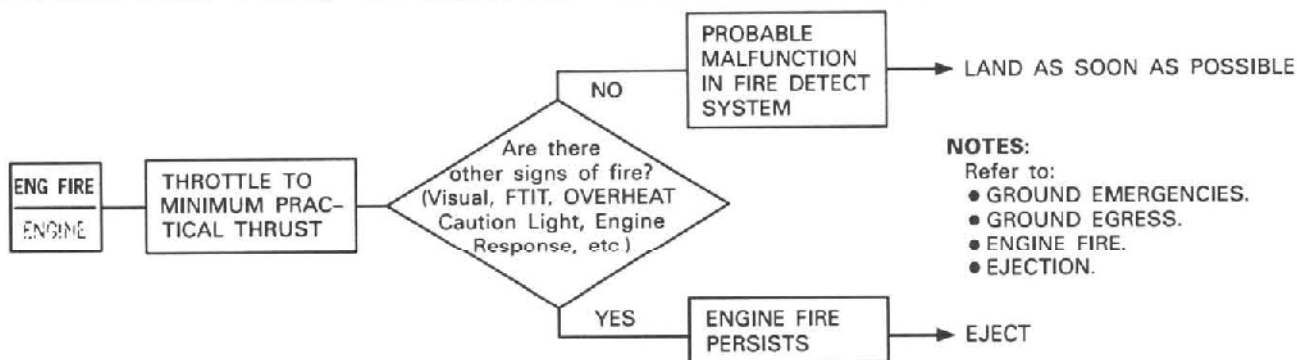

WARNING LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
TO/LDG CONFIG	Aircraft configuration wrong for takeoff or landing Any of the following: 1. LG not down and locked 2. TEF's not fully down	A. For in-flight LG problems, refer to LANDING EMERGENCIES B. If TEF's do not extend, execute land- ing using normal AOA (approximately 20 knots faster than normal)

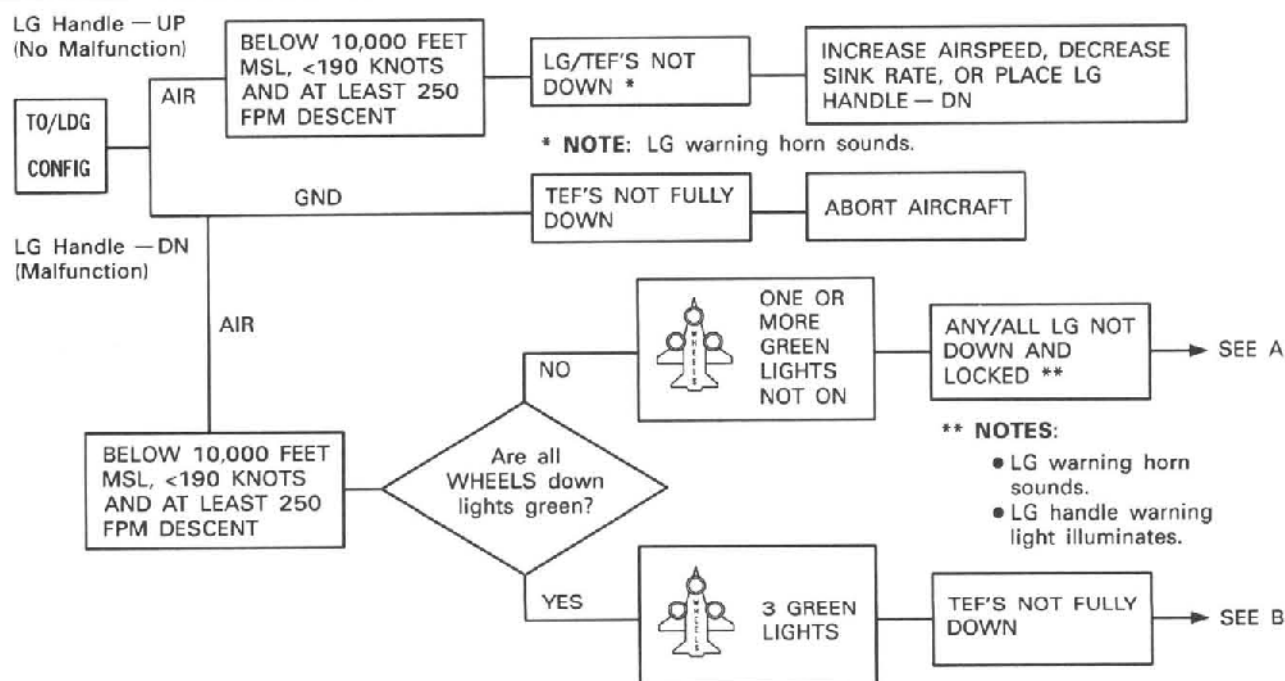

GR1F-16CJ-1-0106X37®

Figure 3-1. (Sheet 1)

WARNING LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
HYD/OIL PRESS	Low pressure in one or both hydraulic systems, low engine oil pressure, or low oil pressure switch failure	Check pressure indicators to determine system and condition
		Refer to: ● OIL SYSTEM MALFUNCTION ● HYDRAULIC MALFUNCTIONS


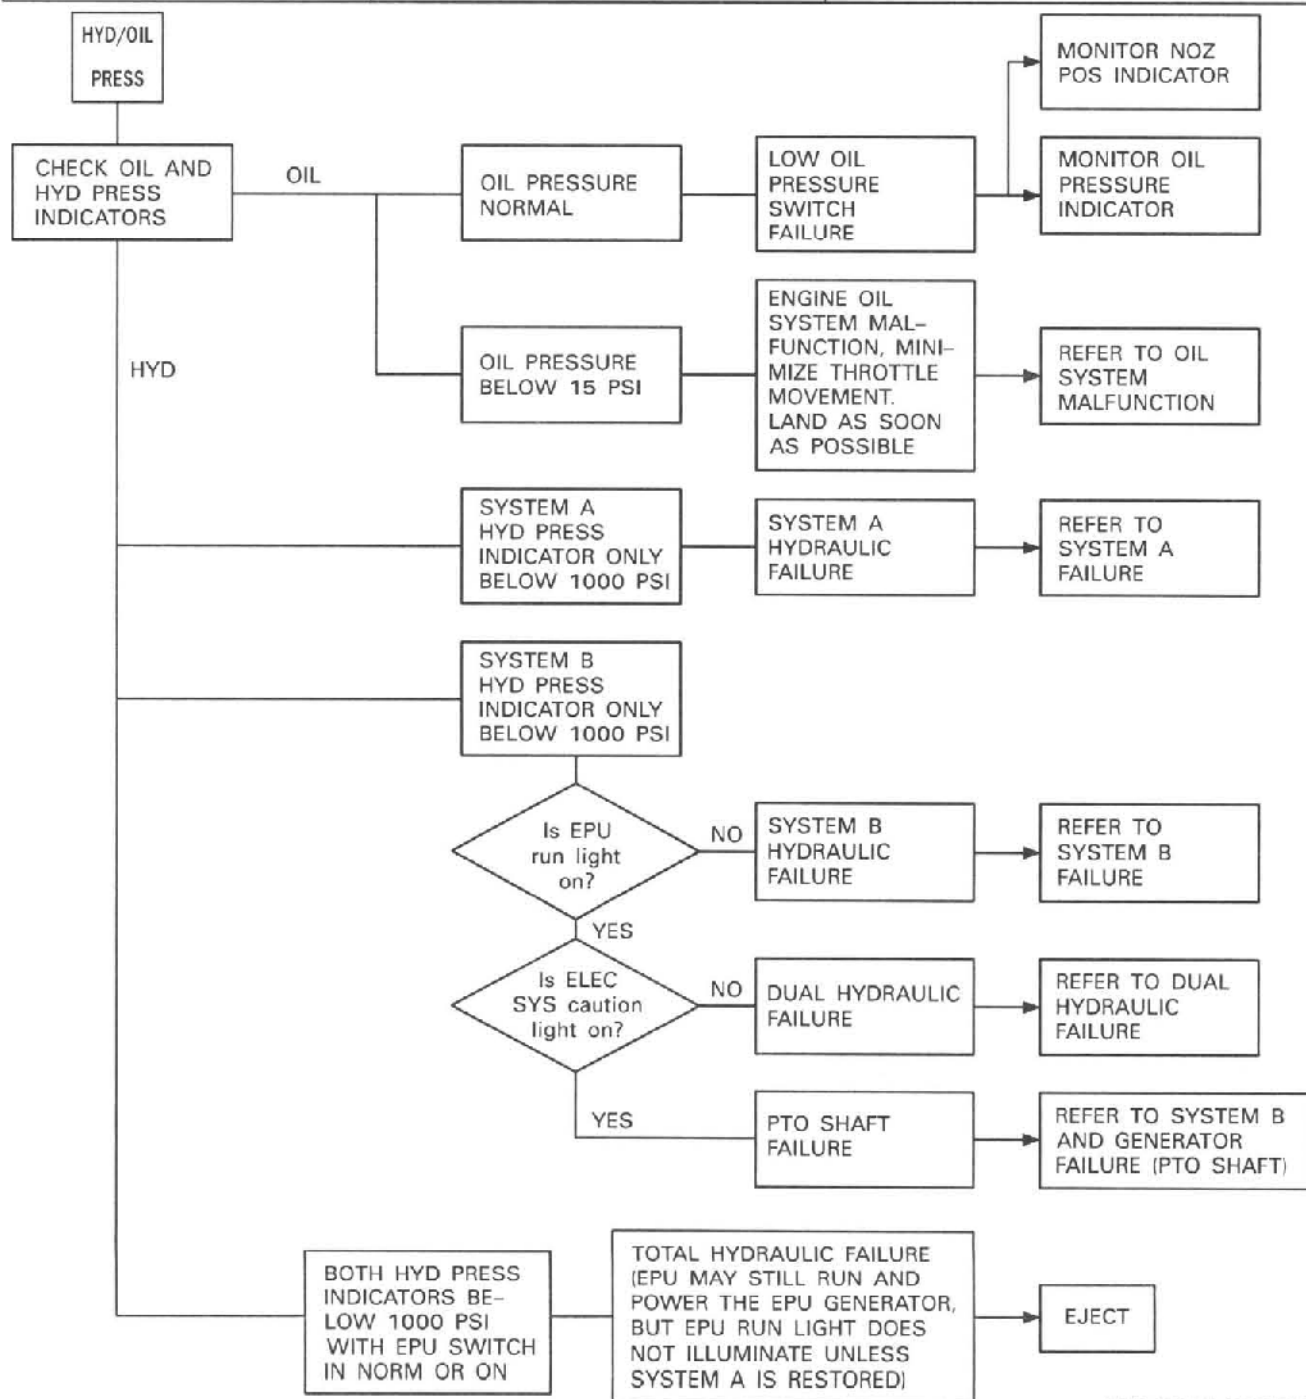



Figure 3-1. (Sheet 2)

Warning Light Analysis

WARNING LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
	Canopy hooks or lock not secure	A. • Push handle down farther into locked (outboard) position or if on the ground, inform maintenance • Refer to CANOPY LOSS/PENETRATION IN FLIGHT

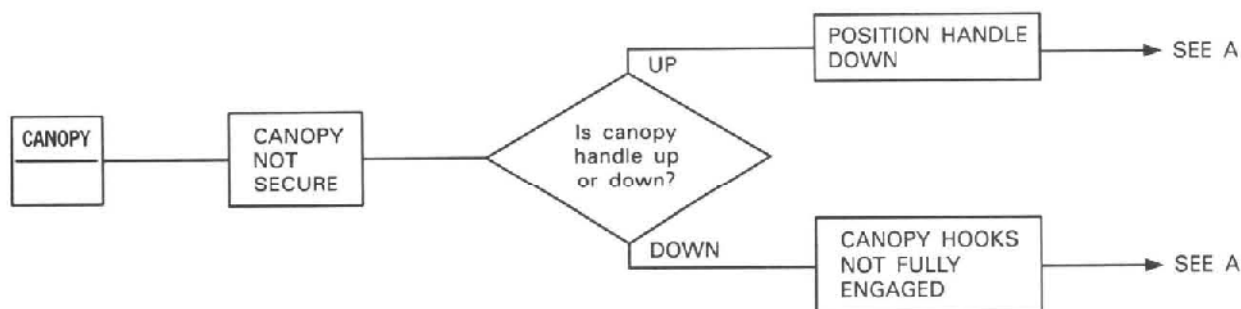

WARNING LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
	LG or LG door not in position commanded by LG handle	A. Refer to LG FAILS TO RETRACT B. Refer to LG FAILS TO EXTEND

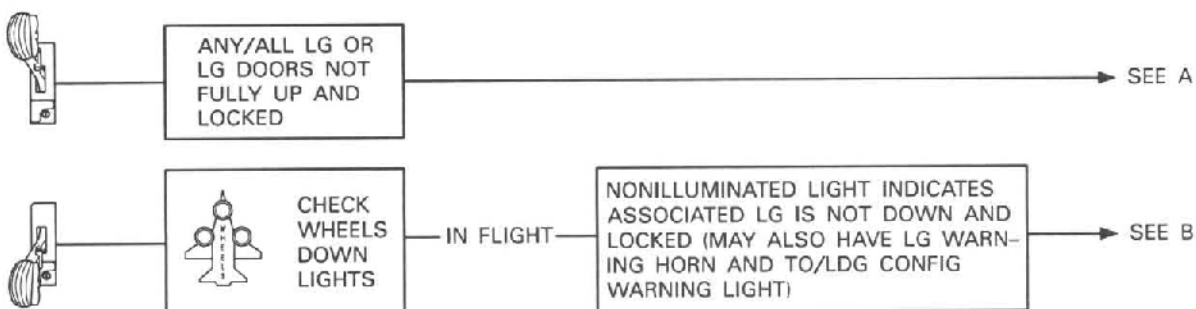

GR1F-16CJ-1-0108X37 ©

Figure 3-1. (Sheet 3)


Warning Light Analysis

WARNING LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
	TF system failure	Climb to a safe altitude. Refer to TF FAIL WARNING LIGHT
	One or more malfunctions	Note PFL(s) displayed and refer to PILOT FAULT LIST – FLCS
	FLCC operating with backup software program	Refer to DBU ON WARNING LIGHT
Flashing WARN symbol 	One or more red glareshield warning lights illuminated	Check for specific illuminated warning light
		Reset by toggling WARN RESET switch on ICP
Flashing TRP FUEL and FUEL warning symbols 	Trapped external fuel condition is detected	Reset FUEL by toggling WARN RESET switch on ICP
		Check fuel tank quantities and refer to TRAPPED EXTERNAL FUEL

Figure 3-1. (Sheet 4)

Warning Light Analysis

WARNING LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
ENG FIRE ENGINE Check rpm and FTIT indications	Engine flameout	A. Place throttle to OFF and initiate airstart. Refer to AIRSTARTS
	Engine alternator failure/malfunction	B. Refer to ZERO RPM/ERRONEOUS RPM INDICATION
	Engine overtemperature	C. Land as soon as possible
	Engine warning system failure or RPM/FTIT indicator failure	D. Land as soon as practical

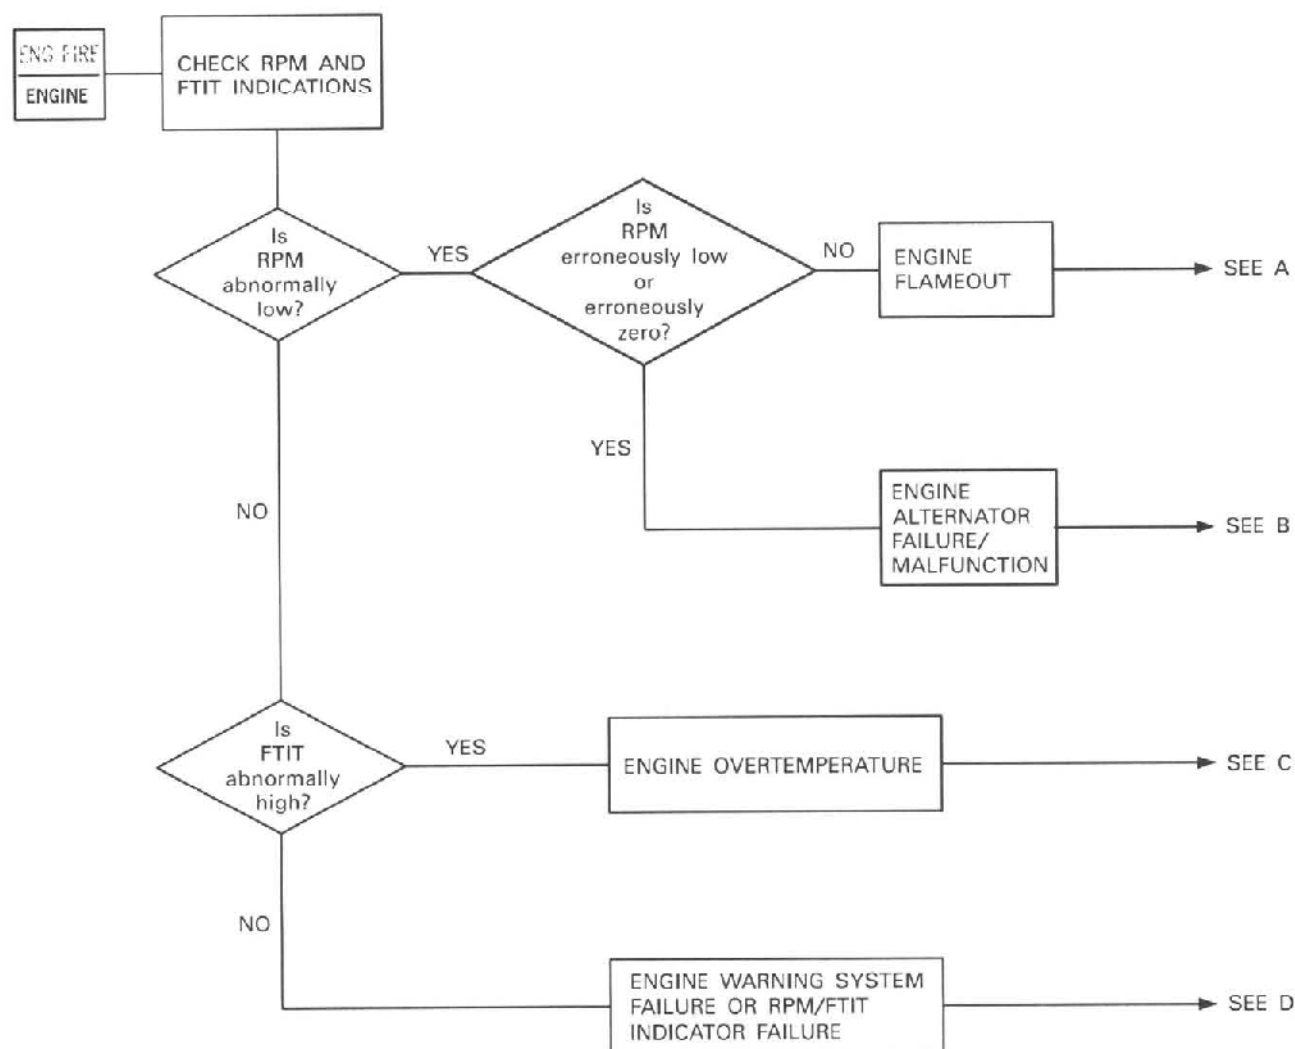

GR1F-16CJ-1-0109X37 ©

Figure 3-1. (Sheet 5)

Caution Light Analysis


CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
	One or more caution lights on	Check for specific caution light on caution light panel
	NOTE The MASTER CAUTION light does not illuminate for the IFF caution light.	Reset MASTER CAUTION light NOTE The MASTER CAUTION light does not reset when the ELEC SYS caution light is illuminated. The ELEC CAUTION RESET button must be depressed or the electrical malfunction cleared to extinguish ELEC SYS and MASTER CAUTION lights.

FLCS FAULT	ENGINE FAULT	AVIONICS FAULT	SEAT NOT ARMED
ELEC SYS	SEC	EQUIP HOT	NWS FAIL
PROBE HEAT	FUEL/OIL HOT	RADAR ALT	ANTI SKID
CADC	INLET ICING	IFF	HOOK
STORES CONFIG	OVERHEAT	NUCLEAR	OXY LOW
ATF NOT ENGAGED	EEC	_____	CABIN PRESS
FWD FUEL LOW	BUC	_____	_____
AFT FUEL LOW	_____	_____	_____

Figure 3-2. (Sheet 1)

Caution Light Analysis

CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
CADC	Malfunction of CADC or input(s) to it	A. Refer to CADC MALFUNCTION
CADC ENGINE FAULT	Loss of valid mach data to engine	B. Refer to CADC MALFUNCTION

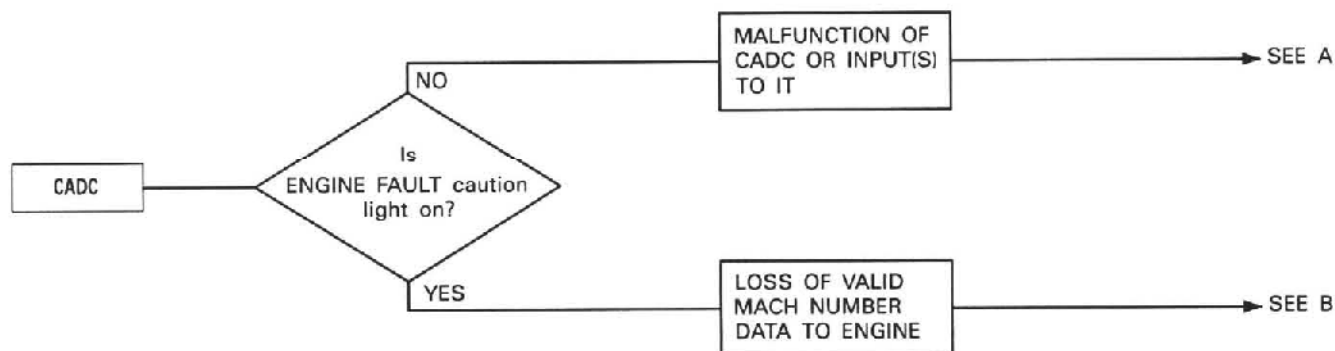

GR1F-16CJ-1-0110X37 ©

Figure 3-2. (Sheet 2)


Caution Light Analysis

CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
ELEC SYS	Failure(s) of electrical system	*Check ELEC control panel for illuminated light(s) and depress ELEC CAUTION RESET button
FLCS PMG light (in flight)	Failure of FLCS PMG	A. Refer to FLCS PMG FAILURE
STBY GEN light	Failure of standby generator	B. Refer to SINGLE GENERATOR FAILURES
MAIN GEN light	Failure of main generator	C. Refer to SINGLE GENERATOR FAILURES
STBY GEN and FLCS PMG lights	Failure of standby generator and FLCS PMG	D. Refer to SINGLE GENERATOR FAILURES
MAIN GEN, STBY GEN, EPU run, EPU AIR, and (possibly) EPU HYDRAZN lights	Failure of main and standby generators	E. Refer to MAIN AND STANDBY GENERATOR FAILURE
MAIN GEN, STBY GEN, EPU GEN, and EPU PMG lights on. EPU run light off	Failure of main, standby, and EPU generators	F. Refer to MAIN, STANDBY, AND EPU GENERATOR FAILURE
MAIN GEN, STBY GEN, EPU GEN, EPU PMG, FLCS PMG, and ACFT BATT TO FLCS and/or FLCS BATT lights on. EPU run light off	Failure of all generators	G. Refer to MAIN, STANDBY, AND EPU GENERATOR FAILURE
*ACFT BATT FAIL light or ACFT BATT FAIL and FLCS RLY lights	Failure of aircraft battery or battery charging system	H. Refer to AIRCRAFT BATTERY FAILURE
FLCS RLY light	Voltage on one or more of the four FLCC branches connected to the aircraft battery is inadequate (below 20V)	I. Refer to FLCS RLY LIGHT

NOTE:

*During ground operations after engine start, the ACFT BATT FAIL light (and possibly ELEC SYS caution light) may flicker on then off (duration of illumination is not long enough to activate the MASTER CAUTION light). This flickering is the result of a nuisance problem that does not require corrective action by maintenance and it should not occur in flight.

Caution Light Analysis

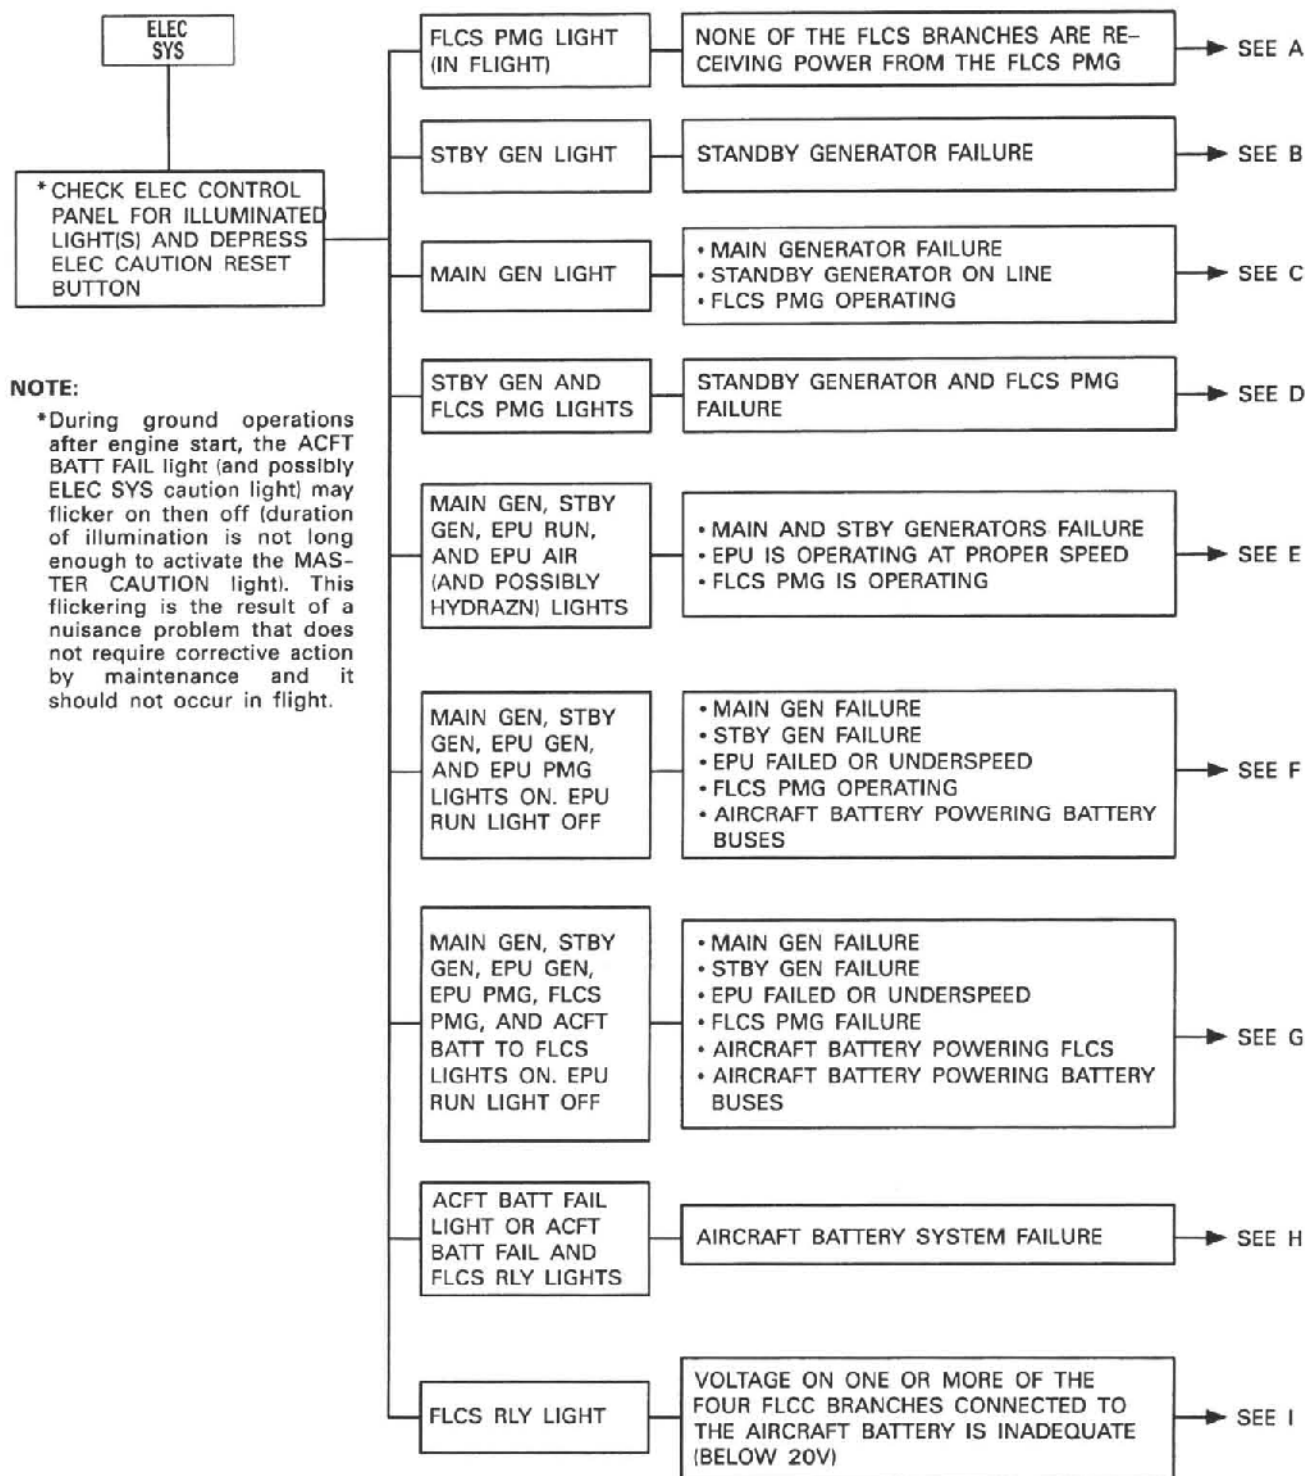

GR1F-16CJ-1-0111X37®

Figure 3-2. (Sheet 4)

Caution Light Analysis

CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
AVIONICS FAULT	Avionic fault(s) detected or MUX communication with FLCS or engine lost	Note PFL(s) displayed on PFLD. Depress C DF F-ACK, DR FAULT ACK button to acknowledge fault(s) and reset AVIONICS FAULT caution light. Perform fault recall(s) to determine if the failure condition still exists
SEAT NOT ARMED	Ejection safety lever up (system safe)	When desired, rotate ejection safety lever down (armed)
HOOK	Hook not up and locked	Normal landing, touchdown beyond approach end arresting gear
NWS FAIL	NWS system failure or loss of NWS electrical power	Normal landing, NWS is not available. Refer to NWS FAILURE/HARDOVER NOTES: 1. Does not illuminate for NWS failure due to hydraulic system B failure or NLG strut overextension. 2. Possible indication that AR door cannot be opened or closed.
EEC	Not used	None
BUC	Not used	None
FLCS FAULT	FLCS fault(s) detected	Note PFL(s) displayed and refer to PILOT FAULT LIST – FLCS
FUEL/OIL HOT	Temperature of fuel to engine excessive or engine oil temperature excessive.	Refer to HOT FUEL/OIL OR GRAVITY FEED
FWD FUEL LOW	Forward reservoir contains: C Less than 400 pounds of fuel D Less than 250 pounds of fuel	Refer to FUEL LOW
AFT FUEL LOW	Aft reservoir contains: C Less than 250 pounds of fuel D Less than 400 pounds of fuel	Refer to FUEL LOW
IFF	MODE 4 REPLY sw in OUT (backup mode only); zeroized or not coded; correct code not selected (A or B); code does not match code interrogation; or mode 4 inoperative; or RF sw in QUIET or SILENT	Advisory

Figure 3-2. (Sheet 5)


Caution Light Analysis

CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
INLET ICING	Ice accumulation detected or system malfunction	If in area of known or suspected icing conditions, position engine ANTI ICE switch to ON
NUCLEAR	Malfunction in nuclear control circuitry	Advisory
SEC	Engine operating in SEC	Refer to SEC CAUTION LIGHT
ENGINE FAULT	Engine fault(s) detected	Refer to ENGINE FAULT CAUTION LIGHT
STORES CONFIG	STORES CONFIG switch is in incorrect position or loading category in SMS software disagrees with actual GP/STORE/LINE loading category	Verify STORES CONFIG switch is in proper position for aircraft loading category. Refer to T.O. GR1F-16CJ-1-2
PROBE HEAT	Ground: Probe heater failure, monitoring system failure, or one/both AOA probe heaters have shut off to prevent overheat	Ground: Place PROBE HEAT switch to OFF for 1 minute (caution light goes off when OFF is selected); then reselect PROBE HEAT. If caution light comes on simultaneously with reselection of PROBE HEAT, a probe heater or monitoring system failure has occurred. If caution light does not come on when PROBE HEAT is reselected, one/both AOA probe heaters were shut off to prevent overheat
	In flight: Probe heater(s) or monitoring system failure	In flight: Place PROBE HEAT switch to PROBE HEAT, if required, and avoid areas of known or suspected icing conditions


Figure 3-2. (Sheet 6)

Caution Light Analysis

CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
CABIN PRESS	Cockpit pressure altitude above 27,000 feet	A. Refer to COCKPIT PRESSURE/TEMPERATURE MALFUNCTION

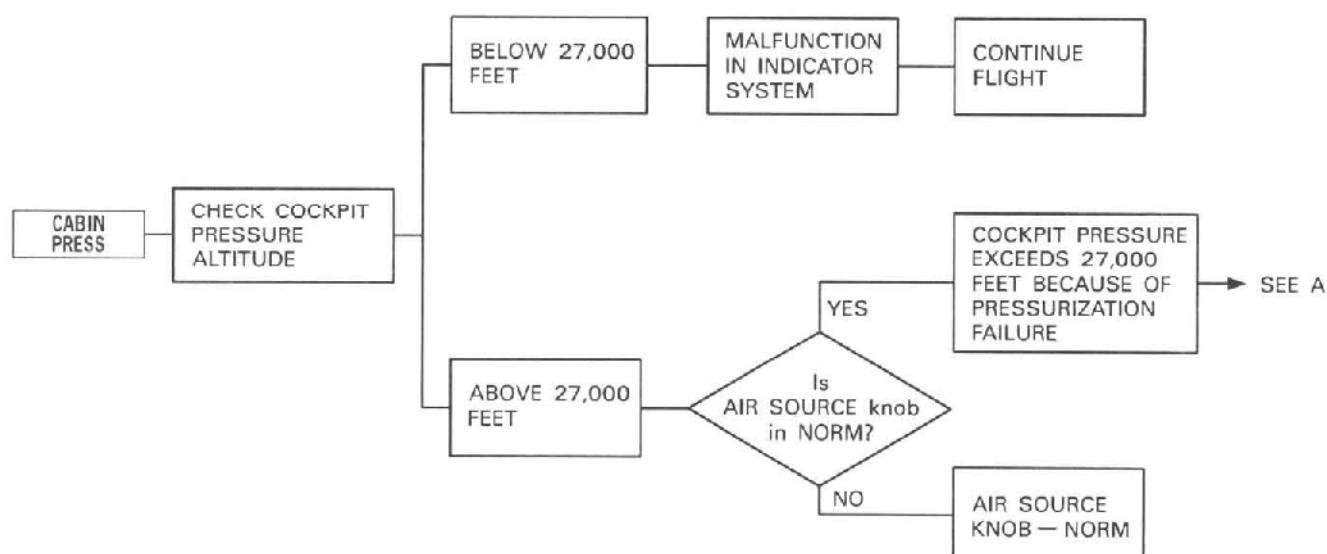

CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
EQUIP HOT	Avionic equipment cooling air temperature/pressure insufficient	A. Refer to EQUIP HOT CAUTION LIGHT

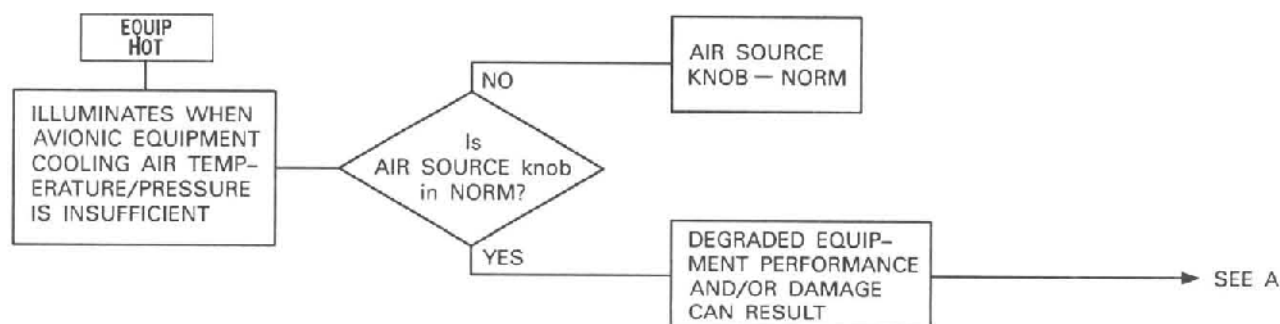


GR1F-16CJ-1-0112X37

Figure 3-2. (Sheet 7)

Caution Light Analysis


CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
OVERHEAT	Overheat condition in engine compartment, ECS or EPU bays, or MLG wheel wells	A. Refer to OVERHEAT CAUTION LIGHT

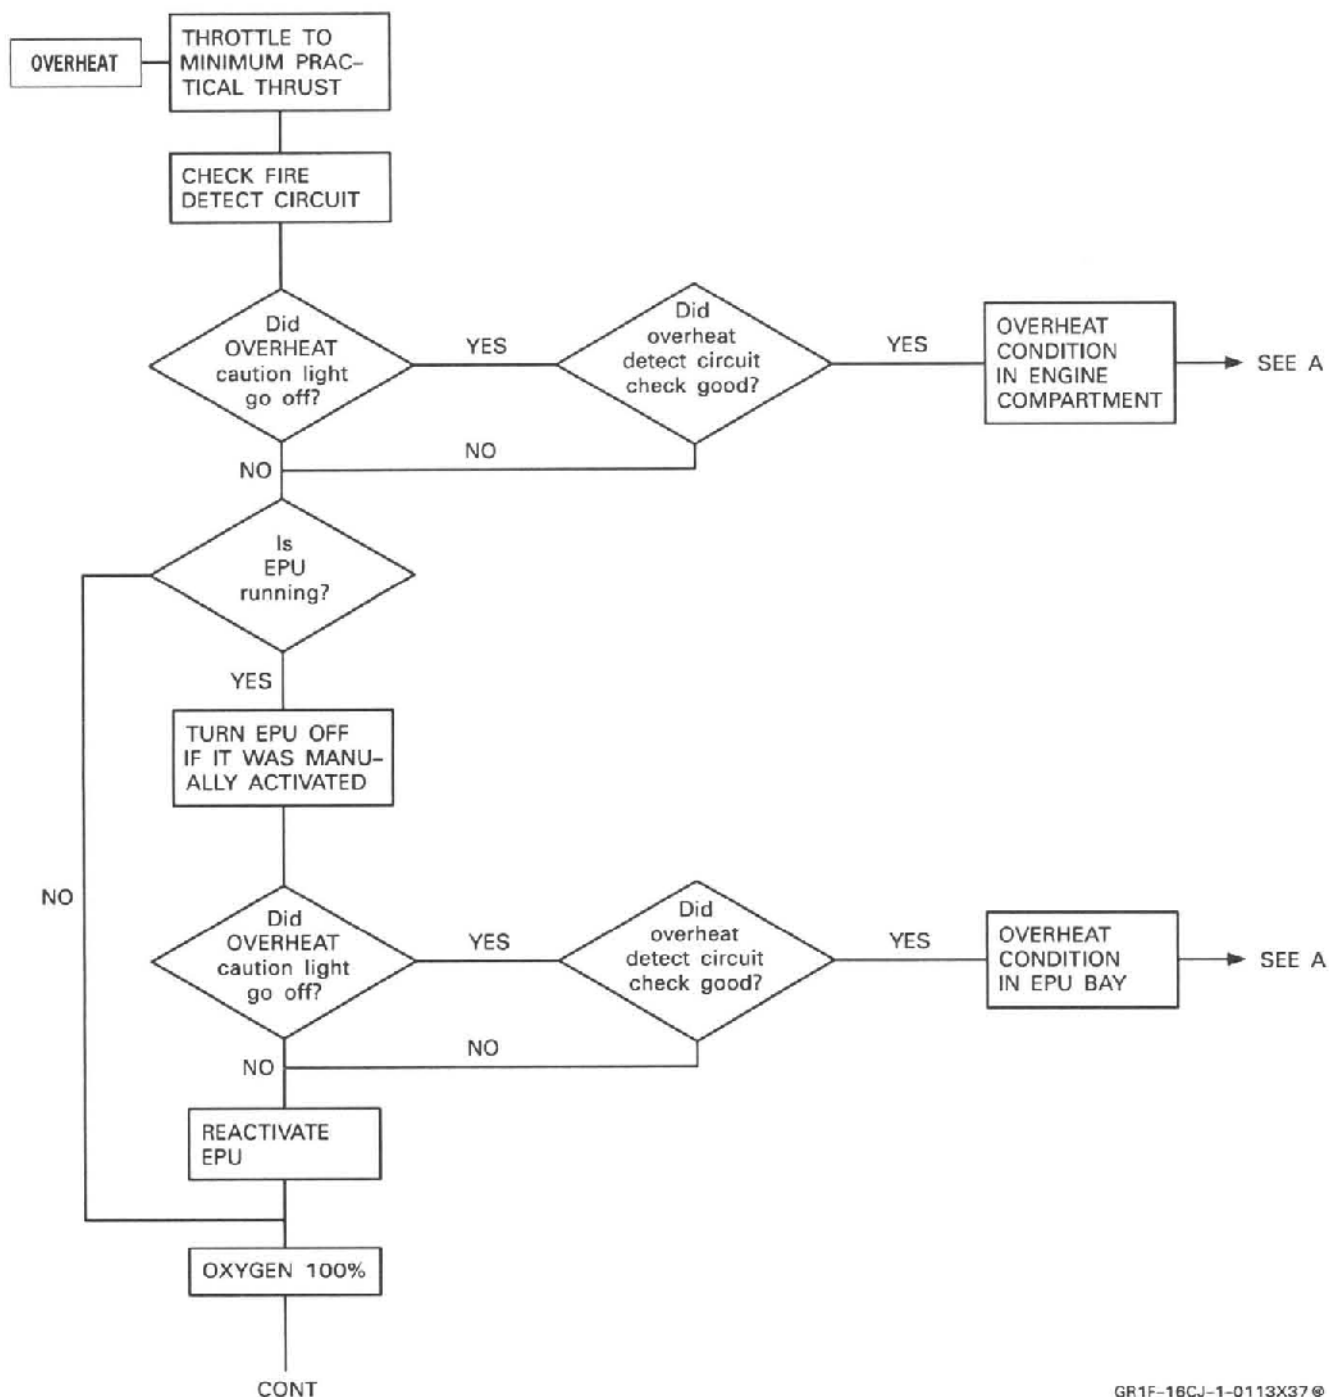

GR1F-16CJ-1-0113X37 ©

Figure 3-2. (Sheet 8)

Caution Light Analysis

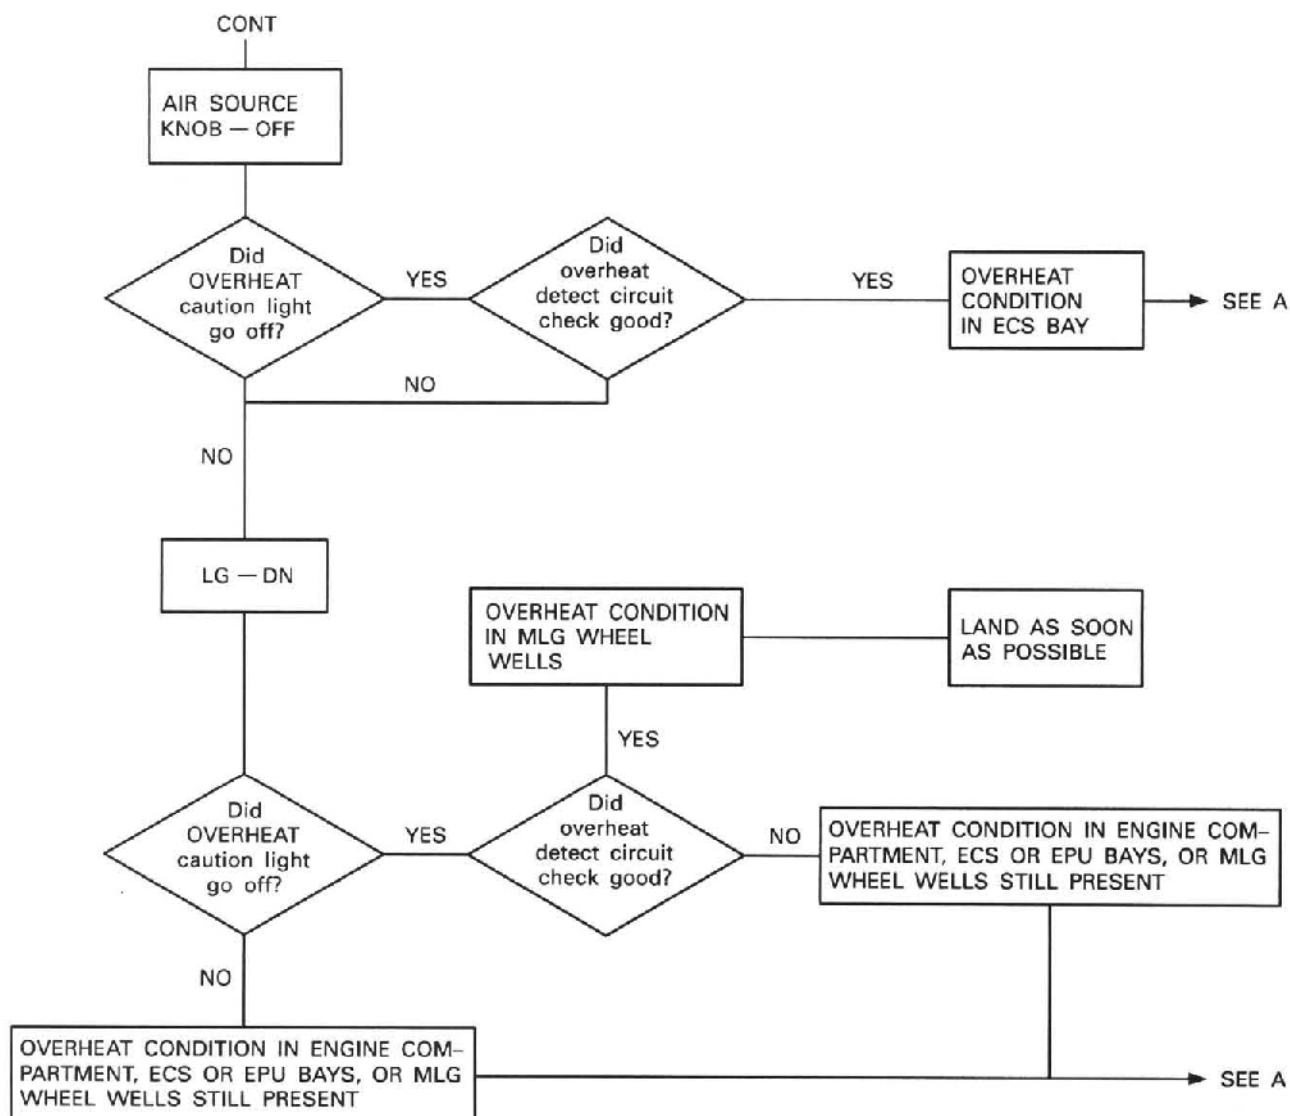


GR1F-16CJ-1-0114X37 ©


Figure 3-2. (Sheet 9)

Caution Light Analysis

CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
ANTI SKID	ANTI-SKID switch OFF or system malfunction	A. Refer to ANTISKID MALFUNCTION (GROUND) or ANTISKID MALFUNCTION (LANDING), as appropriate

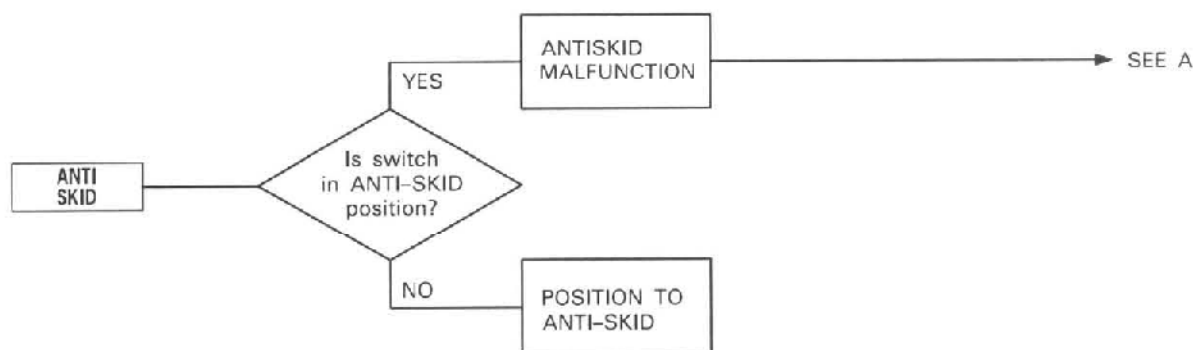

CAUTION LIGHT	CAUSE	CORRECTIVE ACTION/REMARKS
ATF NOT ENGAGED	NVP or FLCs cannot support ATF	If in ATF, climb to a safe altitude and verify: • AIR REFUEL switch CLOSE • ALT FLAPS switch NORM • TRIM/AP DISC switch NORM • No CADC failures NOTE: Deselect ATF until the cause of the caution light illumination can be determined.
RADAR ALT	Malfunction of radar altimeter	Move RDR ALT switch to OFF
OXY LOW	Oxygen pressure is below 42 psi or quantity is below 0.5 liter	A. Descend to 10,000 feet cockpit pressure altitude. Activate emergency oxygen if required

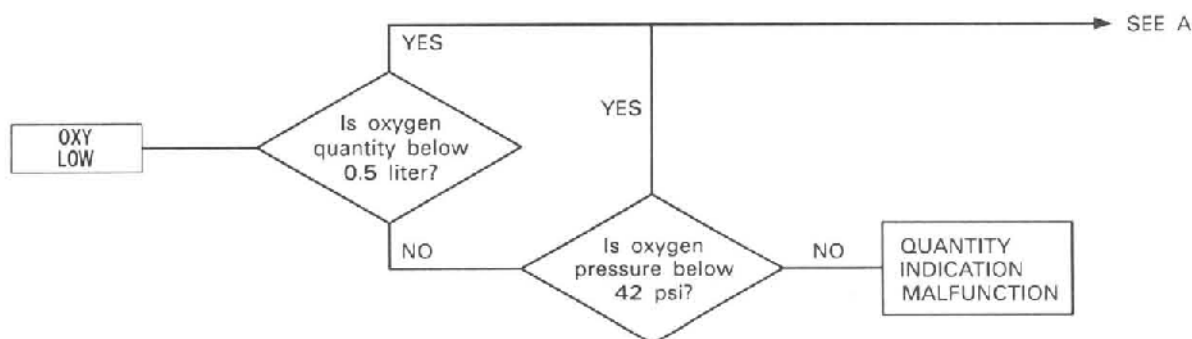

GR1F-16CJ-1-0115X37 ©

Figure 3-2. (Sheet 10)

Pilot Fault List – Engine

FAULT	CAUSE	CORRECTIVE ACTION/REMARKS
ENG LUBE LOW	Oil quantity below preset limit	Refer to OIL SYSTEM MALFUNCTION
ENG A/I FAIL	Engine anti-ice valve failed in closed position or indication malfunction	Avoid areas of known or suspected icing conditions
ENG MACH FAIL	The CADC supplied mach number is no longer available	Supersonic stall protection is inoperative. Do not retard throttle below MIL while supersonic. If CADC caution light is also on, refer to CADC MALFUNCTION
ENG BUS FAIL	Communication between engine and MUX bus lost	Illuminates AVIONICS FAULT caution light. Other engine PFL's cannot be displayed
ENG A/B FAIL	AB system failure detected	Land as soon as practical if fault does not clear. AB operation inhibited
ENG EMS FAIL	• Data transmission from DEC lost • BIT/self-test received from DEC indicates a failure • EMSC BIT/self-test detects a failure	Other PFL's either cannot be displayed or, if displayed, are not reliable
ENG HYB MODE	A PRI fuel flow scheduling problem was detected	Supersonic stall protection is inoperative. Do not retard throttle below MIL while supersonic. Thrust degradation may be noticed under certain flight conditions

NOTE:

A short duration fault condition may cause display of a PFL without illumination of the ENGINE FAULT caution light.

Pilot Fault List – FLCS

(FLCS warning light illuminated)

FAULT	CAUSE	CORRECTIVE ACTION/REMARKS
FLCS AOA WARN	Dual AOA failure	Refer to AOA MALFUNCTIONS
FLCS DUAL FAIL	Dual electronic, sensor, or power failure in one or more axes	Refer to FLCS DUAL ELECTRONIC FAILURE
FLCS LEF LOCK	LEF's are locked due to multiple failures, LE FLAPS switch position, or asymmetry	Refer to LEF MALFUNCTIONS
STBY GAIN	Dual air data failure	Refer to AIR DATA MALFUNCTIONS
FLCS BIT FAIL	FLCS BIT has detected a failure	Perform a second FLCS BIT. If fault does not clear, notify maintenance. Fault only occurs on ground

(TF FAIL warning light illuminated)

FAULT	CAUSE	CORRECTIVE ACTION/REMARKS
SWIM NVP FAIL	NVP data bad, AMUX wraparound failure, NVP self-mode failure, or cyclic test problem monitor failure	Refer to TF FAIL WARNING LIGHT
SWIM RALT FAIL	SDC monitor failure or CARA data bad	
SWIM SCP FAIL	Below set clearance failure	
SWIM ATTD FAIL	INS attitude estimator failure	
SWIM ATF FAIL	NVP ATF select failure	
SWIM VEL FAIL	GPS/INS failure	

Figure 3-3. (Sheet 2)

Pilot Fault List – FLCS

(FLCS FAULT caution light illuminated for all except FLCS BUS FAIL)

FAULT	CAUSE	CORRECTIVE ACTION/REMARKS
FLCS ADC FAIL	First failure of triplex air data input signal	Refer to AIR DATA MALFUNCTIONS
FLCS AOA FAIL	First failure of triplex AOA input signal	Refer to AOA MALFUNCTIONS
FLCS AOS FAIL	AOS feedback function is inoperative due to failure	Perform FLCS reset to attempt to clear fault; fault cannot be reset if INS or CADC is failed If fault does not clear, the autopilot cannot be engaged. Position the STORES CONFIG switch to CAT III if the aircraft is configured with a ③ GP/STORE/LINE loading. Refer to T.O. GR1F-16CJ-1-2 *
FLCS FLUP OFF	MANUAL TF FLYUP switch moved to DISABLE FLCS BIT detects MANUAL TF FLYUP switch in DISABLE	Position the MANUAL TF FLYUP switch as required. A FLCS reset extinguishes FLCS FAULT caution light Position MANUAL TF FLYUP switch to ENABLE. Rerun FLCS BIT
FLCS A/P DEGR	Autopilot operating outside of attitude limits or unable to hold commanded mode	Refer to AUTOPILOT MALFUNCTIONS
FLCS A/P FAIL	Autopilot has disconnected or cannot be engaged due to loss of needed data	Refer to AUTOPILOT MALFUNCTIONS
FLCS BUS FAIL	Communication lost between FLCC and MUX bus	Illuminates AVIONICS FAULT caution light. Other FLCS PFL's may not be displayed on the PFLD. Refer to FLCS page on MFD for FLCS PFL's
BRK PWR DEGR	Power supply failure detected in one or more branches	Refer to FLCS SINGLE ELECTRONIC FAILURE
FLCS CCM FAIL	Erroneous output command detected by CCM	Refer to FLCS SINGLE ELECTRONIC FAILURE
FLCS HOT TEMP	FLCC sensors detect two branches in excess of 75°C	Refer to FLCS TEMPERATURE MALFUNCTIONS
ISA ALL FAIL	Two or more ISA's have reported a first servo valve failure	Refer to SERVO MALFUNCTIONS
ISA LHT FAIL ISA RHT FAIL ISA LF FAIL ISA RF FAIL ISA RUD FAIL	Indicated ISA has reported a first servo valve failure	Refer to SERVO MALFUNCTIONS
FLCS SNGL FAIL	Indicates single electronic or sensor failure in one or more axes	Notify maintenance. Fault only occurs on ground
FLCS MUX DEGR	BIT detected degradation of FLCC MUX interface	FLCS reset will not clear fault. Perform a second FLCS BIT. If fault does not clear and no other faults are reported, the system redundancy is adequate for flight. Notify maintenance after flight. Fault only occurs on ground

NOTE:

*The potential for a departure from controlled flight is significantly increased if the AOS feedback function is inoperative and maneuvering with ③ GP/STORE/LINE loadings occurs with the STORES CONFIG switch in CAT I.

Figure 3-3. (Sheet 3)

GROUND EMERGENCIES

FIRE/OVERHEAT/FUEL LEAK (GROUND)

An engine or JFS fire/overheat can be detected by flames, smoke, explosion, signal from ground crew, or radio call. FTIT may exceed 935°C and, if ac power is available, ENG FIRE warning or OVERHEAT caution light may illuminate.

1. Throttle – OFF.
2. JFS switch – OFF.
3. FUEL MASTER switch – OFF.
4. ENG FEED knob – OFF (if external power applied).

If fire continues:

5. Abandon aircraft.

HOT START (GROUND)

Hot start – FTIT over 935°C. During engine start, if the FTIT increases through 750°C while engine rpm is less than 40 percent, a hot start can be anticipated.

1. Throttle – OFF.
2. FTIT indicator – Monitor.

If FTIT remains above 500°C:

3. JFS switch – START 2.
Motor engine with JFS until FTIT is below 200°C.

HUNG START/NO START

Hung start – RPM has stopped increasing below IDLE and FTIT is stabilized at less than 935°C.

No start – Light-off does not occur within 10 seconds.

1. Throttle – OFF. Notify maintenance.
2. JFS SW – OFF

ENGINE AUTOACCELERATION (GROUND)

If the engine autoaccelerates on the ground, primary consideration should be given to shutting the engine down as quickly as possible. With engine shut down, only the brake/JFS accumulators are available to supply hydraulic pressure for braking. Stop the aircraft by making one steady brake application. When the aircraft is fully stopped, have chocks installed or engage parking brake. Leave the battery on until chocks are installed.

1. Throttle – OFF.
2. FUEL MASTER switch – OFF.

ANTISKID MALFUNCTION (GROUND)

In case of an antiskid failure, the ANTI SKID caution light illuminates and the brake system automatically switches to pulsating pressure. In this mode, braking effectiveness is reduced approximately 50 percent; however, in most cases, braking effectiveness is as good as can be obtained with ANTI-SKID switch in OFF while avoiding wheel lockup and its associated risk of control difficulty. Short field landing distances are increased approximately 60 percent for dry runway and 25 percent for wet runway from those normally computed.

If the ANTI SKID caution light illuminates during taxi or during landing roll (with the ANTI-SKID switch in ANTI-SKID):

1. DRAG CHUTE switch – DEPLOY (if required).
2. Brakes – Apply as needed.

NOTE

- Maximum pedal pressure is required to obtain approximately 50 percent of normal braking force. If less than maximum pedal pressure is used, braking is extremely degraded.
 - The aircraft will oscillate due to pulsating brake pressure.
 - Changing brake channels will not restore normal braking since the same antiskid signal is used in both brake channels.
3. NWS – Engage (if required).
- If manual braking is desired or after aircraft is stopped:
4. ANTI-SKID switch – OFF.

CAUTION

No antiskid protection is available with the ANTI-SKID switch in OFF. Brakes should be applied with caution to avoid wheel lockup and blown tires.

NOTE

Below normal taxi speed, pulsating braking is only marginally effective. Stopping distance may be shortened with antiskid off.

BRAKE FAILURE

Malfunctions in systems which affect normal braking are described in the emergency procedure which addresses each specific system. One of the brake failure modes is the loss of one brake circuit. With this failure, both brakes are still available; however, significantly more pedal force than normal is required to achieve a specific braking effectiveness. Another failure mode is loss of brakes on one or both MLG. Changing brake channels may return the system to normal operation.

Turning the ANTI-SKID switch to OFF may also restore braking; however, the system reverts to manual control and antiskid protection is lost. (Status of the power source for toe brake transducers can be determined by testing the FLCS PWR lights on the TEST switch panel.) Release brake pedal pressure before changing channels or turning off the ANTI-SKID switch to avoid immediate brake lockup if braking returns. When moving the ANTI-SKID switch, be very careful not to select the PARKING BRAKE unless that is what is intended. If directional control is a problem (such as with one brake inoperative on landing roll), do not hesitate to use NWS. If conditions permit, consider a go-around if the brakes are found to be inoperative on landing. Lower hook if a cable is available. If normal brakes cannot be restored, do not hesitate to use the parking brake if a cable is not available. The lower the groundspeed, the less chance there is for aircraft damage when using the parking brake. If the aircraft is accelerating, use the parking brake early. It may be possible to cycle the parking brake on and off and stop the aircraft; however, regardless of technique, use of the parking brake may result in blown tires.

Another failure mode is a hydraulic leak in the brake itself, which might not be apparent until after two-point aerodynamic braking. In this case, if a cable is not available, the aircraft should be stopped using the good brake and NWS for directional control. Once the aircraft is stopped, do not engage the parking brake; use continuous pedal pressure on the good brake only. Failure to do so could deplete the hydraulic system and result in total brake failure prior to chock installation.

Accomplish as many steps as required:

NOTE

If conditions permit, consider a go-around if the brakes are found to be inoperative on landing. An approach-end cable arrestment is recommended.

1. BRAKES channel switch – Change channels.

CAUTION

Release brakes prior to changing brake channels or turning antiskid off.

2. ANTI-SKID switch – OFF.

CAUTION

Release brakes prior to changing brake channels or turning antiskid off.

3. NWS – Engage (if required).
4. HOOK switch – DN.

If arresting cable is not available or if at low groundspeed:

5. ANTI-SKID switch – Intermittent PARKING BRAKE, then ANTI-SKID.

CAUTION

If in a congested area, use the parking brake immediately to stop.

HOT BRAKES

The pilot has the responsibility to determine when a hot brake condition exists. The pilot evaluates the situation by analyzing the variables that influence brake temperature: GW, pressure altitude, OAT, speed at brake application, etc. Refer to T.O. GR1F-16CJ-1-1, PART 2, BRAKE ENERGY LIMITS – MAXIMUM EFFORT BRAKING. Observations by ground crewmembers should also be used as certain malfunctions that result in overheated brakes, such as dragging brakes, may not be readily apparent to the pilot. Perform hot brake procedures anytime hot brakes are suspected.

It is impossible for the ground crew to avoid the hot brake and engine intake danger areas while pinning the EPU or chocking the aircraft. Therefore, if conditions permit, the aircraft should be shut down without pinning the EPU or chocking the wheels.

Release brake pressure as soon as possible to minimize heat transfer between the brake surfaces and the wheel. This action also relieves hydraulic pressure to the brakes, which if leaking, could feed a hydraulic fire.

Perform the following after any event that may result in hot brakes:

1. Request firefighting equipment and proceed directly to the designated hot brake area or nearest area clear of other aircraft and personnel.

WARNING

- If a hot brake condition is a result of a dragging brake, taxiing the aircraft worsens the condition.
- Any leaking hydraulic fluid may be ignited by hot wheel and brake surfaces.
- Wheel fusible plugs may relieve tire pressure at anytime during the 15 minutes after brake application.
- With hot brakes, avoid inflated MLG tire side area within 300 feet for 45 minutes after aircraft has stopped. If required, approach from the front or rear for firefighting purposes only.

When in the hot brake area:

2. Align aircraft with nose into wind if possible.

WARNING

- Do not use the parking brake.
- If battery power is not available, toe brakes will be inoperative after engine shutdown.
- Do not turn MAIN PWR switch to OFF until the nosewheel is chocked.
- Attempt to park in a level area to minimize risk of aircraft rolling if the brakes should fail after shutdown.

CAUTION

Use only minimum possible toe brake pressure to hold aircraft stationary until engine is shut down and nose wheel is chocked.

3. EPU switch – OFF.
4. Throttle – OFF.
5. Nose wheel – Chocked.
6. MAIN PWR switch – OFF.
7. Exit toward the front of the aircraft.

If a brake fire occurs:

8. Go to GROUND EGRESS, this section.

MAIN GENERATOR FAILURE (GROUND)

If the main generator fails on the ground, the standby generator provides power for full normal braking (both channels) and NWS. Abort the aircraft. Taxiing is permissible.

MAIN AND STANDBY GENERATOR FAILURE (GROUND)

If the main and standby generators fail on the ground, the FLCS PMG and aircraft battery provide power for full normal braking (both channels). The EPU should activate and provide power for NWS.

Stop and engage the parking brake prior to attempting to reset the generators.

If main or standby generator resets and further taxiing is required, brakes should be checked carefully. Allow the aircraft to begin rolling slowly and check for normal braking. If normal braking is inoperative, immediately engage the parking brake.

If MAIN GEN and STBY GEN lights illuminate:

1. Stop the aircraft.
Turn EPU on, if required, to obtain NWS.
2. ANTI-SKID switch – PARKING BRAKE.
3. OXYGEN – 100%.

4. EPU switch – OFF.

CAUTION

If chocks are not installed, be prepared to immediately engage the parking brake if it disengages when the EPU is shut off.

If further taxiing is required:

5. **ELEC CAUTION RESET** button – Depress.
Toe brakes and parking brake are available with or without the EPU as long as the MAIN PWR switch is not moved to OFF.

CAUTION

If main or standby generator cannot be reset, NWS is inoperative unless the EPU is activated.

6. Refer to **ACTIVATED EPU/HYDRAZINE LEAK**, this section.

EMERGENCY ENTRANCE AND CREW RESCUE

Refer to figure 3-4 for emergency entrance and crew rescue procedures.

EMERGENCY GROUND JETTISON

Ground jettison of the 300-gallon, 370-gallon, or 600-gallon fuel tank(s) results in the tank(s) striking the ground before the pylon aft pivots release. The tank(s) will probably rotate horizontally and may strike the LG. Use **EMER STORES JETTISON** on the ground only as a last resort. Refer to **EMERGENCY JETTISON**, this section.

GROUND EGRESS

The order of accomplishment of ground egress steps depends on the nature of the emergency. For quickest ground egress (without jettisoning the canopy), place the canopy switch up and then prepare for exit while the canopy is opening. However, if fire or danger of explosion exists, accomplish steps necessary for egress prior to opening canopy to retain maximum protection until ready for exit. Disconnect parachute risers, lapbelt, survival kit, and g-suit. Oxygen and

communication leads are quick-disconnect. If required, the canopy can be jettisoned even after it has been partially or fully opened. If the canopy is restrained by debris or jammed by crash damage, attempted jettison may result in a portion of the canopy rocket exhaust entering the cockpit. This exhaust may present a heat and blast hazard in the cockpit; toxic gases are present and 100 percent oxygen should be used.

1. Throttle – OFF.
2. Ejection safety lever – Safe (up).
3. Harness and personal equipment – Release.
4. EPU switch – OFF (time permitting).

WARNING

Exit over the left side (conditions permitting) to avoid EPU exhaust gases.

5. Canopy – Open.

WARNING

- ☒ Consider canopy jettison so rear seat occupant can egress more rapidly.
- Opening the canopy with the **MANUAL CANOPY CONTROL** handcrank is extremely difficult. If immediate egress is required, the canopy should be jettisoned rather than opened with the handcrank.


If canopy does not raise:

6. OXYGEN – 100%.

WARNING

- If jettison is unsuccessful, heat, blast, and toxic gas from the rockets may enter the cockpit.
- To prevent the flow of oxygen into the cockpit after the oxygen hose is disconnected, do not select **EMER**.

Emergency Entrance and Crew Rescue (Typical)

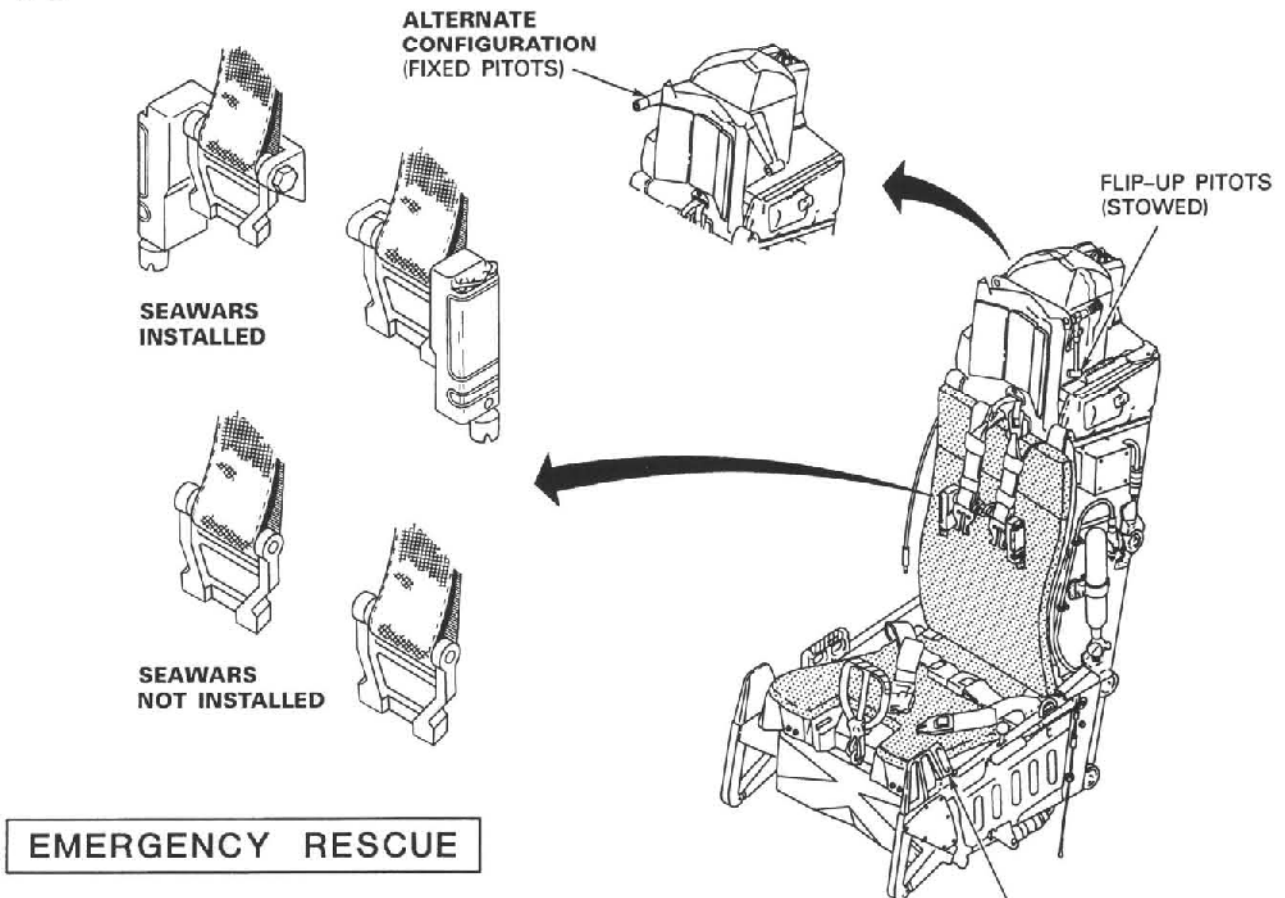


- 3.** Rotate ejection safety lever located on left of seat to full up (vertical) position.

WARNING

To prevent possible seat ejection during rescue, rotate ejection safety lever located on left of seat to full up (vertical) position.

- 4.** Disconnect crewmember from lapbelt, g-suit hose, survival kit straps, and parachute risers.

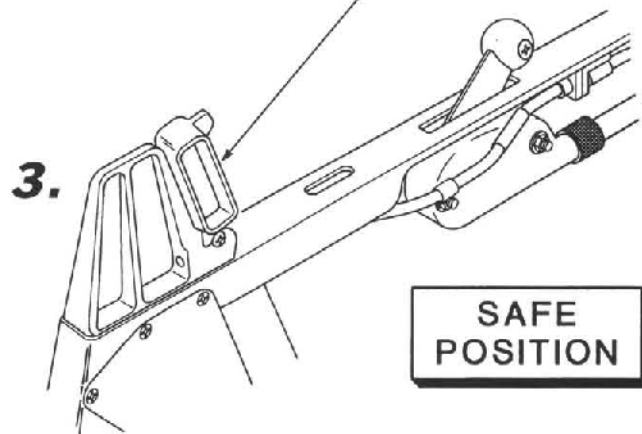

GR1F-16CJ-1-0117X37 ©

Figure 3-4. (Sheet 2)

7. Canopy – Jettison.

WARNING

Pulling the CANOPY JETTISON T-handle other than straight out may cause the handle to jam.

HOT REFUELING EMERGENCY

In the event of a fire or fuel leak/spill while refueling in hot pit area, refer to FIRE/OVERHEAT/FUEL LEAK (GROUND), this section. In the event of fire in the area of refueling operation (other than in the hot pit area), have the refueling operation discontinued and taxi clear.

ACTIVATED EPU/HYDRAZINE LEAK

If landing with an activated EPU or a hydrazine leak is detected while the engine is running:

Inform landing base of hydrazine leak or EPU operation and request bioenvironmental services support.

WARNING

Treat any leak as a hydrazine leak until investigation proves otherwise.

1. OXYGEN – 100%.

When on the ground:

2. AIR SOURCE knob – OFF (if required).
Consider turning the ECS off to prevent the possibility of hydrazine fumes or EPU exhaust gases entering the cockpit.

CAUTION

If AIR SOURCE knob is placed to OFF, also turn off nonessential avionic equipment as electronic equipment may be damaged.

3. Taxi to designated isolated parking area (if required) and park aircraft with left wing into wind if possible.

4. Insure all nonessential personnel are clear.
5. EPU switch – OFF.
6. Shut down the engine (after left main wheel is chocked).

NOTE

To prevent sitting in a sealed cockpit (hot) without ECS, consider waiting for ground crew to arrive with ladder and oxygen bottle prior to shutting down the engine.

NWS FAILURE/HARDOVER

NWS failure may be detected by the NWS FAIL caution light or uncommanded NWS inputs with no caution light. If NWS FAIL caution light is on, do not engage NWS. If the NLG strut is overextended, the NWS cannot engage. If the NLG strut overextends after NWS engagement, NWS becomes disengaged and the AR/NWS light goes off.

WARNING

NWS malfunctions at any speed may cause an abrupt turn, tire skidding or blowout, aircraft tipping, and/or departure from the prepared surface.

1. NWS – Disengage.
2. AR/NWS light – Verify off.
3. Rudder and brakes – As required.

TAKEOFF EMERGENCIES

DELAYED ROTATION

Several factors can cause the airspeed at which rotation occurs to be greater than that determined from T.O. GR1F-16CJ-1-1. As the weight of external stores carried increases, more nose down moment must be overcome to rotate for takeoff. Another factor is the application of roll stick force in addition to aft stick force. Applying a roll input reduces the maximum trailing edge up position for one horizontal tail and increased airspeed may be required to compensate. The last and most

significant factor is improper servicing of the nose gear strut. Improper servicing may not be detectable during preflight inspection and may cause rotation speed to increase by up to 15 knots. All of these factors combined may add up to 25 knots to the computed airspeed for rotation. If pre-takeoff flight control checks were normal and the engine is operating normally (acceleration check normal), the aircraft will rotate above computed rotation speed. Therefore, takeoff should not be aborted due to delayed rotation until at least takeoff speed is attained. Notify maintenance after flight if a significantly delayed rotation occurred.

ABORT

The decision to abort or continue takeoff depends on many factors. Considerations should include, but not be limited to, the following:

- Runway factors: Runway remaining, surface condition (wet, dry, etc.), type and/or number of barriers/cables available, obstructions alongside or at the departure end, wind direction and velocity, and weather and visibility.
- Aircraft factors: GW, stores, nature of the emergency, speed at decision point, and importance of becoming airborne.
- Stopping factors: Maximum antiskid braking, speedbrakes, aerodynamic braking, hook, and drag chute.

WARNING

Aborting takeoff at high speed with a blown tire may be more dangerous than continuing takeoff. For heavy GW takeoffs, an abort at high speed with a blown tire is extremely dangerous because braking and directional control are impaired.

CAUTION

- At high speed (prior to WOW), forward stick pressure in excess of approximately 2 pounds results in full trailing edge down deflection of the horizontal tails. This causes excessive loads on the NLG which can lead to nose tire failure and possible structural failure of the NLG.

- Failure to use full antiskid braking or applying brakes with engine above idle thrust significantly increases the wheel brake temperature and probability of a wheel brake fire.

Normally, with the short takeoff distances of the aircraft, abort is not a problem unless directional control is a factor (e.g., blown tire). An early decision to abort provides the most favorable circumstances. If there is any doubt about the ability to stop on the runway, lower the hook.

Consider aborting after becoming airborne only when sufficient runway is available and flight to a key position is not possible.

Aborts above 100 KCAS require diligent adherence to the procedures in this section for the abort to be successful. If aborting after rotation, retard throttle to IDLE and maintain two-point attitude while applying maximum wheel braking (maximum pedal pressure (antiskid on) consistent with maintaining directional control). When wheel brakes become effective, the nose automatically lowers. After the nosewheel is on the runway, use maximum effort braking (full aft stick, full open speedbrakes, and maximum wheel braking). If aborting before rotation, retard throttle to IDLE, maintain three-point attitude and apply maximum effort braking if stopping distance is critical. NWS should be engaged if directional control is a problem.

Consider following hot brake procedures after any abort. Taxiing after an abort will further increase brake temperature.

WARNING

- When braking absorbs a high amount of energy, do not shut down engine until firefighting equipment is available and do not use the parking brake.
- Hot wheels and brakes may ignite leaking hydraulic fluid. Wheel fusible plugs may relieve tire pressure within 15 minutes after stop.

1. Throttle – IDLE.

WARNING

When the throttle is retarded to IDLE from MAX AB, the thrust and rpm decay to idle can take up to 2-4 seconds. Do not mistake high thrust/rpm for failure of the engine to respond to the idle command. Engine shutdown from MAX AB may result in a tailpipe fire.

2. DRAG CHUTE switch – DEPLOY (if required).
3. Wheel brakes – Apply (as required).
4. HOOK switch – DN (if required).

- The hook should be lowered at least 1500 feet from the cable to allow adequate time for hook to stabilize and for full holddown force to be developed by the hook actuator.
- Refer to CABLE ARRESTMENT, this section.

WARNING

The hook may miss the cable if the aircraft is not slow enough to compress the MLG struts sufficiently to make WOW or if forward stick pressure is held.

If on fire:

5. Throttle – OFF.

NOTE

With engine shut down, NWS is lost and EPU does not activate automatically. After hydraulic pressure drops, braking is available using the brake/JFS accumulators only. Stop straight ahead and engage parking brake.

6. FUEL MASTER switch – OFF.

ENGINE MALFUNCTION ON TAKEOFF (6)

An engine malfunction on takeoff presents a demanding situation where critical actions must be accomplished quickly with little time for analysis. If takeoff is continued, a straight ahead climb is generally preferred over an immediate turn to low key. This action provides more favorable ejection parameters and an increase in analysis time. If necessary, use only shallow turns to avoid aggravating the situation. Jettison stores if required to reduce GW.

ENGINE FAILURE ON TAKEOFF

Engine failure shortly after lift-off may not permit time for analysis or corrective action. The primary concern should be to trade any excess airspeed for altitude and to eject prior to allowing a sink rate to develop. Jettisoning stores may aid in gaining altitude but must not delay the ejection decision. If the failure occurs later in the takeoff phase, time may be available for analysis or corrective action.

If conditions permit:

1. Abort.

If conditions do not permit an abort:

1. Zoom.
2. Stores – Jettison (if possible).
3. Eject.

AB MALFUNCTION ON TAKEOFF

An AB malfunction can be detected by a thrust loss and nozzle closure or failure of AB to light within allowed time or stalls accompanied by a loud bang or pop. An AB failure (other than a slow/no light) may indicate other engine problems. If possible, abort the takeoff. If takeoff is continued, the throttle should be retarded to MIL. If normal thrust is not available in MIL, refer to LOW THRUST ON TAKEOFF OR AT LOW ALTITUDE (NON-AB), this section. AB operation should not be reattempted unless required to sustain flight.

If decision is made to stop:

1. Abort.

If takeoff is continued:

1. Throttle – MIL.
2. Stores – Jettison (if required).

LOW THRUST ON TAKEOFF OR AT LOW ALTITUDE (NON-AB)

Low altitude, for engine malfunction purposes, is generally defined as 10,000 feet AGL or below.

Low thrust can be the result of DEC-related failures, the nozzle failing, or an rpm rollback. These situations may result in significant thrust loss and the inability to take off or maintain level flight. If low thrust occurs during takeoff and conditions permit, the takeoff should be aborted.

If the takeoff must be continued or in any critical phase of flight, when MIL thrust is insufficient, AB should be used. An automatic transfer to HYB or SEC may occur resulting in less than MIL thrust with no AB capability (SEC). An excessively open nozzle may reduce the chance for a successful AB light. If the AB does not light, the ENG CONT switch should be placed to SEC.

If an automatic transfer to SEC occurs or SEC is selected manually, resulting thrust is 70-95 percent of normal MIL thrust with no AB capability. If thrust is still low, consider jettisoning stores.

If on takeoff and the decision is made to stop:

1. Abort.

If takeoff is continued and/or thrust is insufficient:

1. Throttle – AB.
The chances for a successful AB light with the nozzle open more than 30 percent are reduced.

If thrust is still insufficient or AB does not light:

2. ENG CONT switch – SEC.

NOTE

In a partial thrust situation, thrust available may increase as altitude decreases. 250 knots approximates the airspeed at which thrust required for level flight is the lowest.

3. Stores – Jettison (if required).

ENGINE FIRE ON TAKEOFF

An engine fire may be indicated by the ENG FIRE warning and/or OVERHEAT caution lights, high FTIT, smoke, or fumes. Refer to ENGINE FIRE, this section.

LG FAILS TO RETRACT

If the LG handle warning light remains on after the LG handle is placed to UP, the LG or LG doors are not fully up and locked.

1. Airspeed – 300 knots maximum.
2. LG handle – DN.

If LG comes down normally:

3. GW – Reduce prior to landing.

If LG does not indicate down and locked:

CAUTION

Do not cycle LG handle. Damage to LG or LG doors may result.

4. Go to ALTERNATE LG EXTENSION, this section.

LG HANDLE WILL NOT RAISE

If the left MLG WOW switch fails to the ground position, the LG handle does not move out of the DN position. In addition, the TO/LDG CONFIG warning light and touchdown skid control system are affected. The LG handle may be raised by first depressing the LG handle downlock release button.

If conditions permit:

1. Airspeed – 300 knots maximum.
2. GW – Reduce prior to landing.

If LG must be raised:

1. LG handle DN LOCK REL button – Depress.
2. LG handle – UP.
TO/LDG CONFIG light is on if left MLG WOW switch has failed.

When desired:

3. LG handle – DN.

After touchdown:

4. Brakes – Apply after wheels spin up.

CAUTION

Touchdown antiskid protection may not be available. Landing with feet on the brake pedals may result in blown tire(s).

BLOWN TIRE ON TAKEOFF

Tire failure on takeoff is difficult to recognize and may not be noticed in the cockpit.

WARNING

Aborting takeoff at high speed with a blown tire may be more dangerous than continuing takeoff. For heavy weight takeoffs, an abort at high speed with a blown tire is extremely dangerous because braking and directional control are impaired.

NOTE

The decision to take off or abort depends on the speed at the time of the failure, GW, stopping distance required, and arresting gear availability.

If takeoff is continued, do not retract the LG, reduce GW if practical, and prepare to land as soon as practical.

Directional control during stopping is the primary concern when aborting with a blown tire. Heavy GW and high speed aborts place greater demands on the brakes and tires. This may cause damage to the NWS, wheels, and struts which may result in loss of directional control. In addition, heavy differential braking may result in MLG tire failure.

If aborting with a blown MLG tire, leave antiskid on to minimize possibility of skidding the good tire. If the wheel with the blown tire does not turn, the antiskid switches to the pulsating antiskid mode. Use roll control to relieve pressure on the blown tire and NWS to maintain directional control.

If aborting with a blown NLG tire, hold the nosewheel off the runway (if able) and use two-point aerodynamic braking until control effectiveness begins to decay. Lower the nosewheel to the runway and immediately engage NWS, if available, to maintain directional control. Use aft stick to reduce load on the NLG after brakes are applied. If NWS is not available, the aircraft tends to drift right. Attempt to move to the left side of the runway before rudder effectiveness is lost and maintain directional control with rudder and differential braking. Stop short of the departure-end arresting cable if possible. The small nosewheel rolling radius with the tire missing may allow the cable to pass over top of the nosewheel and cause NLG collapse.

WARNING

If a blown NLG tire occurred and NWS is not available, it may not be possible to prevent departure from the runway. A reverse castering effect may occur in which the nosewheel moves opposite to the rudder or differential braking input.

CAUTION

With a blown tire, avoid centerline lights as they may cause wheel damage and subsequent loss of directional control. Failure to use full aft stick with a blown NLG tire may lead to wheel failure and directional control problems.

Stop straight ahead and shut down the engine as soon as firefighting equipment is available. Do not attempt to taxi unless an emergency situation exists.

If takeoff is not feasible:

1. Abort.

If takeoff is continued:

1. LG – Do not retract.
2. Airspeed – 300 knots maximum.
3. Refer to LANDING WITH A BLOWN TIRE, this section.

IN-FLIGHT EMERGENCIES

When preparing to activate backup systems which rely on stored nitrogen pressure to function, consider the potential for time-related failures and do not activate the system earlier than required. For example, the hydrazine mode of the EPU requires nitrogen pressure to force hydrazine to the EPU. If a nitrogen leak exists, turning the EPU on early could lead to an inability of the EPU to function on hydrazine. Similarly, alternate LG and hook extension use stored nitrogen pressure. If alternate LG extension is used early and a nitrogen leak exists, hydraulic system B could subsequently fail. Such a leak could also result in insufficient pressure to maintain proper hook holddown force. Since nitrogen leaks are not apparent prior to system activation, consider their potential existence and activate the backup system when needed, but not excessively early.

CANOPY WARNING LIGHT ON

If CANOPY warning light illuminates:

1. Canopy handle – Push outboard.

If CANOPY warning light remains on:

2. Go to CANOPY LOSS/PENETRATION IN FLIGHT, this section.

CANOPY LOSS/PENETRATION IN FLIGHT

Canopy loss/penetration in flight results in disorientation and may result in structural damage caused by the canopy striking the aircraft. Due to the possibility of severe disorientation, vision loss, injury, or incapacitation at high airspeed, immediate ejection may be the only option. Slow to 180 knots or less and check for controllability. Wind blasts up to 180 knots can be coped with by leaning forward and down behind the glareshield and HUD.

WARNING

- Arms must be kept close to the body to avoid letting wind blast pull arms out of the cockpit.
- HUD glass disintegration can be expected following a medium to high energy bird strike with or without canopy penetration.

Wind buffet increases slightly with increased AOA. Therefore, if fuel is not critical, TEF's should be extended using the ALT FLAPS switch or by placing the LG handle to DN.

1. Airspeed – 180 knots maximum.
2. Seat – Full down.
3. ALT FLAPS switch – EXTEND.
4. Land as soon as possible.

DRAG CHUTE DEPLOYED IN FLIGHT

If the drag chute is deployed in flight below 190 knots:

NOTE

If the drag chute is deployed below approximately 190 knots, it does not break away from the aircraft.

1. DRAG CHUTE switch – REL.

If the drag chute does not release:

2. Throttle – MAX AB.

COCKPIT PRESSURE/TEMPERATURE MALFUNCTION

Loss of cockpit pressurization could be caused by canopy seal, air-conditioning system, or cockpit pressure regulator safety valve malfunctions or ECS shutdown or failure.

Certain ECS equipment malfunctions result in temporary shutdown of the ECS. These shutdowns are more prevalent at high altitude during low speed flight with high engine thrust settings. An ECS shutdown is characterized by an oily, smokey smell, followed by loss of cockpit noise and airflow and gradual loss of pressurization. These temporary shutdowns typically last from 20-45 seconds or, on occasion, up to 2 minutes. The EQUIP HOT caution light may illuminate if the shutdown lasts longer than 20 seconds.

WARNING

With the ECS shut down or the AIR SOURCE knob in OFF or RAM, the g-suit does not inflate and PBG is disabled.

Short duration (approximately 15 seconds) losses of cockpit airflow when operating above 35,000 feet MSL should not be confused with an ECS shutdown. These are the result of an automatic ECS cutback which is designed to prevent total system shutdown.

Most AUTO position temperature failures can be corrected by use of the MAN position.

If cockpit pressure altitude exceeds 27,000 feet, the CABIN PRESS caution light illuminates.

If the cockpit temperature is excessive and does not respond to AUTO or MAN temperature commands or cockpit pressure is lost, proceed as follows:

1. OXYGEN – 100%
2. Altitude – 25,000 feet maximum.
3. Airspeed – 500 knots maximum.
4. AIR SOURCE knob – OFF (10-15 seconds), then NORM.

If cockpit pressure is not regained but all other systems dependent on the ECS are operational:

- 5 Flight may be continued below 25,000 feet.

If ECS has failed or cockpit temperature control is not regained:

- 5 AIR SOURCE knob – OFF.
6. AIR SOURCE knob – RAM (after cockpit is depressurized).

NOTE

External fuel cannot be transferred in OFF or RAM. Consider jettisoning tank(s) to decrease drag if range is critical and ECS cannot be turned on for short periods of time to transfer fuel.

7. Nonessential electrical equipment – Off.

NOTE

If in VMC and the ADI and HSI are not required for flight, the INS should be considered nonessential.

8. Land as soon as practical.
9. Check for failed emergency dc bus(es). Refer to EMERGENCY POWER DISTRIBUTION, this section.

EQUIP HOT CAUTION LIGHT

If EQUIP HOT caution light illuminates:

NOTE

- Certain ECS equipment malfunctions result in temporary shutdown of the ECS and illumination of the EQUIP HOT caution light.
- An ECS shutdown and EQUIP HOT caution light illumination for up to 2 minutes can occur either during extended LG down flight between sea level and 7000 feet MSL or during operation above a line from 42,000 feet MSL at 0.2 mach to 50,000 feet MSL at 0.95 mach. These ECS shutdowns are normal, but may still require additional action if the EQUIP HOT light remains on for more than 1 minute.
- If cockpit temperature is excessive, refer to COCKPIT PRESSURE/TEMPERATURE MALFUNCTION, this section.

1. AIR SOURCE knob – Confirm in NORM if smoke or fumes are not present.
2. Throttle – 80 percent rpm minimum (in flight).

If EQUIP HOT caution light remains on after 1 minute:

3. Nonessential avionics – Off.

NOTE

If in VMC and the ADI and HSI are not required for flight, the INS should be considered nonessential.

4. Land as soon as practical.

EJECTION

Ejection should be accomplished at the lowest practical airspeed.

WARNING

- The minimum altitude obtained from EJECTION SEAT PERFORMANCE charts, Section I, does not include any allowance for pilot decision making, changing flight conditions, or hand movement from the stick and/or throttle to the ejection handle. Therefore, minimum altitude for ejection decision could be significantly higher.
- When in a spin/deep stall or other uncontrolled flight, eject at least 6000 feet AGL whenever possible. This is the minimum altitude to initiate ejection with minimal risk of injury under the most adverse conditions. The decision to eject must have been made prior to this altitude. Delaying ejection below this altitude may result in serious injury or death.
- Under controlled flight conditions, eject at least 2000 feet AGL whenever possible. If below 2000 feet AGL, attempt to gain altitude if airspeed permits. Do not delay ejection below 2000 feet AGL for any reason which may commit you to unsafe ejection.
- Failure to monitor sink rate and height above terrain while performing an airstart or applying low thrust recovery procedures can result in an ejection outside the ejection seat performance envelope.
- The ACES II ejection seat was designed for body weights in the 140 to 211 pound range. There are additional ejection injury risks associated with body weights outside this range.
 - For body weights less than 140 pounds, limb flailing, less seat stability, and more severe drogue chute opening shock (ejection modes 2 and 3) are concerns. The risk of injury associated with limb flailing and drogue chute opening shock increases for ejection above 420 knots. This injury risk also increases as body weight decreases below 140 pounds.

- For body weights greater than 211 pounds, limb flailing, seat structural failure, and parachute landings are concerns. The risk of injury from limb flailing is high for ejection above 400 knots. The seat leg braces frequently deform during ejections above 500 knots; this deformation has led to seat side panel failures (and unsuccessful ejections) during 600 knot ejection tests. The risk of injury during parachute landing is three times the average. These injury risks also increase as body weight increases above 211 pounds.

- Wind blast exerts medium force on the body up to 450 knots, severe forces causing flailing and skin injuries between 450-600 knots, and excessive force above 600 knots.
- During high altitude ejections (mode 3), automatic pilot/seat separation and recovery parachute deployment occur between 16,000-14,500 feet MSL. If high terrain is a factor, manual seat separation procedures must be used to bypass the automatic sequence.

To eject, grasp ejection handle using a two-handed grip with thumb and at least two fingers of each hand. Pull up on handle and continue holding until pilot/seat separation. The ejection handle does not separate from the seat.

Refer to figure 3-5 for manual seat separation and manual survival equipment deployment.

Ejection (Immediate)

1. Ejection handle – Pull.

Ejection (Time Permitting)

If time permits, descend to avoid the hazards of high altitude ejection. Stow all loose equipment and direct the aircraft away from populated areas. Sit with head against headrest, buttocks against back of seat, and feet on rudder pedals.

1. IFF MASTER knob – EMER.
2. Loose equipment and checklist – Stow.
3. Lapbelt and helmet chin strap – Tighten.

4. Night vision devices – Remove (if appropriate).

WARNING

Failure to remove night vision goggles (NVG) prior to ejection may cause serious injury. If unable to remove NVG, a proper ejection body position (head back against the seat headrest) reduces the chance of injury from the NVG.

5. Visor – Down.
6. Throttle – IDLE.
Slow to lowest practical airspeed.
7. Assume ejection position.
8. Ejection handle – Pull.

Failure of Canopy To Separate

If canopy fails to separate, remain in position for ejection while keeping arms inboard and perform the following:

WARNING

If canopy is jettisoned or manually released/opened after pulling the ejection handle, the ejection seat functions immediately after canopy separation. Be prepared to immediately put arm back in ejection position when the canopy starts to separate.

1. Canopy – Open normally.
2. Canopy – Jettison.

WARNING

Pulling the CANOPY JETTISON T-handle other than straight out may cause the handle to jam.

3. MANUAL CANOPY CONTROL handcrank – Push in and rotate ccw.

WARNING

Use of the CANOPY JETTISON T-handle or MANUAL CANOPY CONTROL handcrank may result in serious injury. To minimize chances of injury, immediately release the handle when the canopy starts to separate.

Ejection Seat Failure

If the ejection seat fails to function after the ejection handle is pulled and the canopy has separated from the aircraft, there are no provisions designed into the escape system for manual bailout.

DITCHING

Ditch the aircraft only as a last resort. All attempts to eject should be accomplished prior to ditching.


Manual Survival Equipment Deployment/ Manual Seat Separation

SURVIVAL EQUIPMENT (TYPICAL)

- A. IF EMERGENCY OXYGEN FAILS TO ACTIVATE AUTOMATICALLY UPON EJECTION, PULL THE EMERGENCY OXYGEN GREEN RING LOCATED NEAR THE LEFT HIP.
- B. AFTER RECOVERY PARACHUTE ASSEMBLY DEPLOYMENT, RAISE VISOR AND DISCARD OXYGEN MASK. IF SURVIVAL KIT DOES NOT DEPLOY AUTOMATICALLY, GRASP KIT RIPCORD HANDLE WITH RIGHT HAND AND PULL. KIT RIPCORD HANDLE IS LOCATED NEAR RIGHT HIP.
- C. LIFERAFT INFLATION IS INITIATED WHEN THE DROP LINE/LANYARD IS FULLY EXTENDED AFTER SURVIVAL KIT DEPLOYMENT. CHECK LIFERAFT AND IF NOT INFLATED, SNATCH PULL DROP LINE/LANYARD TO INFLATE.

NOTE

If the survival kit is deployed after landing in water, a snatch pull on the drop line/lanyard (near CO₂ bottle) is required to inflate the liferaft.

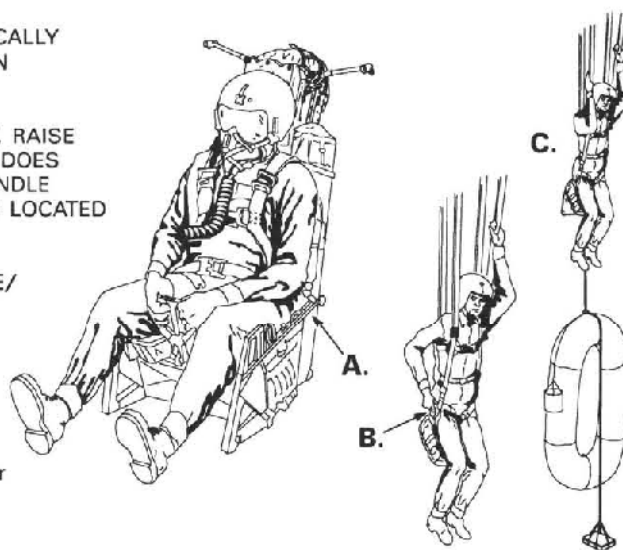

MANUAL SEAT SEPARATION

TO PERFORM MANUAL SEAT SEPARATION AND DEPLOY THE RECOVERY PARACHUTE ASSEMBLY, PULL THE EMERGENCY MANUAL CHUTE HANDLE.

WARNING

- After ejection, the EMERGENCY MANUAL CHUTE handle should only be used if the automatic sequence has failed or if high terrain is a factor. Pilot/seat separation in modes 1 and 2 should occur rapidly after pulling the ejection handle. If the pilot has time to realize seat separation has not taken place, a failure has probably occurred and manual seat separation should be performed. In mode 3, pilot/seat separation occurs between 16,000–14,500 feet MSL. If automatic pilot/seat separation does not occur in this altitude range or if high terrain is a factor, manual seat separation must be performed.
- Failure to fully pull the EMERGENCY MANUAL CHUTE handle may result in ballistically deploying the recovery parachute assembly without releasing the lapbelt and inertia reel straps and unlatching the seat pan lid.
- Do not attempt to open the lapbelt. If the lapbelt is opened, the seat will partially fall away, but the parachute risers remain attached to the inertia reel straps. The only way to separate from the seat is to pull the EMERGENCY MANUAL CHUTE handle at least 6 inches.



1F-16X-1-2023X ©

Figure 3-5.

ELECTRICAL SYSTEM FAILURES

Electrical system failures are indicated by illumination of the ELEC SYS caution light and one or more ELEC control panel lights (in any combination). After accomplishing the appropriate emergency procedures, refer to EMERGENCY POWER DISTRIBUTION, this section, to determine inoperative equipment for any remaining ELEC control panel lights.

FLCS PMG Failure

If all four branches of the FLCS PMG fail in flight, the FLCS PMG light illuminates. The converter/regulator automatically selects the power source with the highest voltage from the available alternate sources. Other FLCS power sources are the main generator, the standby generator, the EPU generator, the EPU PMG, and the aircraft battery.

If FLCS PMG light illuminates:

1. Land as soon as practical.

Single Generator Failures (in Flight)

A single generator failure is indicated by illumination of either the MAIN GEN or STBY GEN light. A mechanical failure which affects the standby generator may also affect the FLCS PMG causing illumination of both the STBY GEN and FLCS PMG lights. Actions required in this circumstance are the same as those for illumination of the MAIN GEN or STBY GEN light; thus, this failure is also categorized as a single generator failure.

Illumination of the MAIN GEN light indicates that one or both nonessential ac buses are not being powered by the main generator. The light may illuminate if the main generator fails, if a main power contactor trips off one or both nonessential ac buses, or if a shorting failure of an overcurrent sensing contactor (OCSC) occurs. Refer to PARTIAL ELECTRICAL POWER LOSS, this section, for discussion of OCSC failures. In all cases, the standby generator should automatically come on line to power the essential and emergency buses which are not being powered by the main generator. The nonessential dc bus is not powered. The main generator may be reset by depressing the ELEC CAUTION RESET button or cycling the MAIN PWR switch; however, moving the switch out of MAIN PWR removes standby generator power and causes the EPU to

activate. A reset attempt should not be made if the MAIN GEN light was preceded by flashing of the HUD and MFD's (these are two cockpit indications of degraded power associated with a shorting failure of an OCSC). Refer to EMERGENCY POWER DISTRIBUTION, this section, for a list of inoperative equipment if the main generator is/does not reset.

Illumination of the STBY GEN light indicates that standby generator power is not available for the essential and emergency buses. The STBY GEN light illuminates for standby generator system failure or for failure of the essential bus relay(s). No bus loses power if the STBY GEN light illuminates when the main generator is still on line. The standby generator may only be reset by depressing the ELEC CAUTION RESET button.

Illumination of both STBY GEN and FLCS PMG lights indicates that standby generator and FLCS PMG power is not available. If the main generator is on line, no buses lose power and the EPU does not automatically activate.

NOTE

- With standby generator failure and the MAL & IND LTS switch in DIM, the ELEC SYS caution light may not appear to illuminate when the MASTER CAUTION and STBY GEN lights illuminate.
- The VHF radio is not powered when the main generator is off line.

If MAIN GEN light illuminates after off/on cycling of HUD and MFD's:

1. ELEC CAUTION RESET button – Do not depress.

If MAIN GEN light illuminates without off/on cycling of HUD and MFD's or if STBY GEN or STBY GEN and FLCS PMG lights illuminate:

2. ELEC CAUTION RESET button – Depress.
This action may reset the main or standby generator. Cycling the MAIN PWR switch may also reset the main generator; however, this action momentarily removes standby generator power and activates the EPU.
3. Land as soon as practical.

Main and Standby Generator Failure (in Flight)

Illumination of the MAIN GEN and STBY GEN lights indicates that power is lost from at least one nonessential ac bus and that the standby generator also failed. The EPU should start automatically at the time of the second failure as indicated by the EPU AIR and EPU run lights. Additional lights, such as HYDRAZN, AVIONICS FAULT, and ENGINE FAULT, may also illuminate. If both generators fail, power to all essential and non-essential buses (ac and dc) is lost. Refer to EMERGENCY POWER DISTRIBUTION, this section, for list of inoperative equipment. The EPU generator powers the emergency ac and dc buses and both battery buses. Depressing the ELEC CAUTION RESET button may reset the main and/or standby generator.

NOTE

The VHF radio is not powered when the EPU is running or the main generator is off line.

If MAIN GEN and STBY GEN lights illuminate:

1. EPU switch – ON (if EPU run light is off).
2. ELEC CAUTION RESET button – Depress.
This action may reset the main and/or standby generator. The MAIN PWR switch may also be cycled to reset the main generator.

If MAIN GEN or STBY GEN light goes off:

3. EPU switch – OFF, then NORM.
4. ADI – Check for presence of OFF and/or AUX warning flags.
If warning flag(s) is in view, refer to TOTAL INS FAILURE, this section.

WARNING

If only AUX flag is in view, pitch and roll attitude information is likely to be erroneous due to INS autorestart in the attitude mode when other than straight and level, unaccelerated flight conditions existed.

5. Land as soon as practical.
6. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

If MAIN GEN and STBY GEN lights remain on:

3. ADI – Check for presence of OFF and/or AUX warning flags.
If warning flag(s) is in view, refer to TOTAL INS FAILURE, this section.

WARNING

If only AUX flag is in view, pitch and roll attitude information is likely to be erroneous due to INS autorestart in the attitude mode when other than straight and level, unaccelerated flight conditions existed.

4. Land as soon as possible.
5. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.
6. If hydrazine depletes or EPU run light goes off at low thrust – Go to ABNORMAL EPU OPERATION, this section.

After landing and aircraft is stopped:

7. Chocks – Installed (or parking brake engaged).
8. EPU switch – OFF.

CAUTION

If chocks are not installed, be prepared to immediately engage the parking brake if it disengages when the EPU is shut off.

9. MAIN PWR switch – MAIN PWR (until chocks are installed).

Main, Standby, and EPU Generator Failure

A main, standby, and EPU generator failure is indicated by illumination of the MAIN GEN and STBY GEN lights without an EPU run light. Other indications include loss of all avionics, ADI OFF and AUX warning flags, and uncontrollable cold airflow into the cockpit or reduced airflow to the cockpit if the water separator coalescer freezes up. The caution lights which illuminate for a failure of just the main and standby generators (e.g., AVIONICS FAULT, ENGINE FAULT) do not illuminate. Refer to EMERGENCY POWER DISTRIBUTION, this section, for a list of inoperative equipment. The primary concerns during multiple generator failures are maintaining power to the FLCS and maintaining/regaining power to the emergency buses.

The EPU generator may be inoperative for several reasons, two of which may be remedied from the cockpit. If the EPU AIR light is off, the EPU may not have received an automatic start command; manually turning the EPU on may correct this failure. If the EPU GEN, EPU AIR, and HYDRAZN lights are illuminated but the EPU run light is off, the EPU may be underspeeding. If the EPU PMG light is on or blinking, EPU speed is very slow. The underspeed could be caused by failure of hydrazine to power the EPU in conjunction with a low thrust setting and may be corrected by advancing the throttle. If the EPU generator operates, refer to MAIN AND STANDBY GENERATOR FAILURE (IN FLIGHT), this section.

If the EPU generator is still inoperative and the main and standby generators do not reset, power cannot be restored to the emergency buses. The aircraft battery supplies power to battery buses No. 1 and No. 2. As long as the ACFT BATT TO FLCS light remains off, the EPU PMG and/or FLCS PMG is supplying adequate FLCS power. The primary concern is aircraft battery life for communications, brakes, and hook. UHF communications are available on the frequency in use at power loss with UFC selected. BACKUP must be selected if a frequency change is desired.

If the FLCS PMG light illuminates when the MAIN GEN, STBY GEN, and EPU GEN lights are on, there are two possible sources of FLCS power (EPU PMG and aircraft battery). If the EPU PMG and ACFT BATT TO FLCS lights are off, the EPU PMG is supplying power to the FLCS whether the EPU run light is on or off.

If the ACFT BATT TO FLCS light is on, the aircraft battery is supplying power to the FLCS. The aircraft battery supplies power for FLCS operation for 3-14

minutes (depending on state of battery charge) after total generator failure. As the aircraft battery depletes, the flight controls either become unresponsive or uncommanded maneuvers occur.

WARNING

Imminent loss of electrical power to the FLCS is indicated by increasingly degraded flight control response and uncommanded motions. Total loss of FLCS power results in a pitching motion and complete loss of control. At high airspeeds, the pitching motion could be excessive and interfere with the ability to eject.

NOTE

If total loss of FLCS power occurs in the landing configuration and near final approach airspeed, the pitching motion is gradual and in the noseup direction for all configurations.

The ACFT BATT FAIL light indicates battery voltage less than 20 volts. Brake operation is doubtful during total generator failure with the ACFT BATT FAIL light on. As aircraft battery voltage continues to decrease, the capability to operate the brakes, lower the hook, and deploy the drag chute is lost. Lower the hook early since significantly higher battery voltage is required to lower the hook than is required to keep it fully extended. Once lowered, the hook remains full down well past the point at which the brakes are lost. An approach-end arrestment is recommended, if conditions permit, because it is difficult to ascertain brake operation. Relative intensity of the warning and caution lights is not a positive indication of battery voltage level.

If MAIN GEN, STBY GEN, and EPU GEN lights illuminate:

1. AOA - 12 degrees maximum (200 knots minimum).

WARNING

LEF's are inoperative and departure susceptibility may be increased. Near 1g flight, 200 knots should keep AOA less than 12 degrees. Limit rolling maneuvers to a maximum bank angle change of 90 degrees and avoid rapid roll rates.

2. EPU switch – ON (if EPU run light is off).
3. Climb if necessary.
4. Throttle – As required to extinguish the HYDRAZN light.

If EPU GEN light goes off:

5. Go to MAIN AND STANDBY GENERATOR FAILURE (IN FLIGHT), this section.

If EPU GEN light is still on:

6. ELEC CAUTION RESET button – Depress.
This action may reset the main and/or standby generator.

If both MAIN GEN and STBY GEN lights remain on:

7. MAIN PWR switch – BATT, then MAIN PWR.
This action may reset the main generator.

If either MAIN GEN or STBY GEN light goes off:

8. EPU switch – OFF, then NORM.
9. Land as soon as possible.
10. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

If MAIN GEN, STBY GEN, and EPU GEN lights all remain on or all come on again:

WARNING

- Plan to land within 30 minutes to insure adequate electrical power for communications, brakes, hook, and drag chute.
- If the FLCS PMG and EPU PMG lights are on in combination with the ACFT BATT TO FLCS light, the aircraft battery is powering the FLCS. With the aircraft battery powering the FLCS in addition to the battery buses, approximately 3-14 minutes flight time is available.
- When the FLCS is powered by the aircraft battery, remain alert for degraded flight controls. At the first indication of degraded response, reduce airspeed and climb to safe ejection altitude. Eject prior to complete loss of control.

8. HOOK switch – DN.
9. CNI knob – BACKUP.
10. Minimize UHF transmissions.

If conditions permit:

11. Land as soon as possible.
Fly airspeed for 11 degrees AOA approach using fuel state when power was lost.
12. LG handle – DN. (Use DN LOCK REL button.)

WARNING

If LG handle does not lower, select BRAKES CHAN 2 and position ALT FLAPS switch to EXTEND.

13. ALT GEAR handle – Pull (190 knots maximum).
WHEELS down lights and TO/LDG CONFIG warning light function are inoperative. Monitor LG handle warning light to verify that LG is down and locked.

CAUTION

- NWS is not available following alternate LG extension.
 - Do not depress the ALT GEAR reset button while pulling the ALT GEAR handle. This action may preclude successful LG extension.
 - Pulling the ALT GEAR handle with normal system B hydraulic pressure may result in system B hydraulic failure within 15 minutes.
14. Consider an approach-end arrestment, if conditions permit. (Refer to CABLE ARRESTMENT, this section.)
 15. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.
- After landing:
16. Stop straight ahead and have chocks installed (or engage parking brake).
 17. MAIN PWR switch – MAIN PWR (until chocks are installed).

EPU Malfunctions**UNCOMMANDED EPU OPERATION**

Failures can occur which allow engine bleed air to spin the EPU turbine even though the EPU has not been commanded on. This may not be apparent if the thrust level and amount of bleed air are such that the EPU is turning above or below the speed range which turns on the EPU run light. During uncommanded EPU operation on bleed air, EPU speed varies directly with throttle position. High thrust settings are likely to result in EPU failure.

The EPU may also activate for reasons not apparent to the pilot. Although this is not an EPU malfunction, it may be interpreted as uncommanded EPU operation.

If uncommanded EPU operation on bleed air is suspected:

NOTE

The nonessential dc buses and essential dc bus may lose power. If so, this results in loss of power to fuel boost and transfer pumps, VHF radio, CARA, ECM, and FCR and power for normal weapon arming/release including selective jettison.

1. Throttle - Minimum practical thrust.
2. Stores - Jettison (if required).
Only if required to maintain low thrust.
3. Land as soon as possible.

If EPU is running with normal indications:

NOTE

- The nonessential dc buses and essential dc bus lose power. This results in loss of power to fuel boost and transfer pumps, VHF radio, CARA, ECM, and FCR and power for normal weapon arming/release including selective jettison.
- If the affected systems are required for the safe recovery of the aircraft, consider delaying/terminating EPU operation until the systems are no longer required.

4. EPU - Leave running.
5. Land as soon as possible.

6. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

ABNORMAL EPU OPERATION

Abnormal EPU operation after a normal start command is indicated by one or more of the following: EPU run light flashes, indicating EPU operation in tertiary speed control mode; EPU run light does not come on or goes off after initial illumination, indicating sustained underspeed or overspeed operation; EPU HYDRAZN light does not go off or EPU fuel quantity continues to deplete when the throttle is advanced to assure adequate bleed air, indicating an EPU bleed air or fuel control system problem.

When tertiary speed control is functioning, the EPU run light alternately cycles on and off (one to three times per second) as a function of EPU speed fluctuating between the normal and slightly above normal speed ranges. The MASTER CAUTION and the EPU HYDRAZN lights may illuminate. Hydrazine use occurs regardless of available engine bleed air. The hydrazine supply depletes in approximately 10 minutes. After hydrazine depletion, the EPU continues to operate with available bleed air on tertiary speed control.

If tertiary speed control cannot control EPU speed (constant overspeed), total EPU failure is imminent. Excessive voltage generated by the EPU generator or its PMG is regulated by the converter/regulators before going to the FLCC. Other electrical and avionic equipment may be damaged by the overvoltage condition. When EPU failure occurs, FLCS power is provided by the FLCS PMG, main generator, standby generator, or the aircraft battery (whichever has the higher voltage).

Under some failure conditions, hydrazine may not be available to the EPU or it may continue to deplete even with adequate bleed air. If a hydrazine malfunction or depletion occurs, landing must be accomplished using an engine thrust setting sufficient to maintain an adequate bleed air supply to the EPU. Failure to maintain minimum engine rpm can result in hydraulic pressure fluctuations or electrical bus cycling. Advance throttle as required to maintain adequate bleed air supply. (If the EPU is the sole source of hydraulic pressure, the throttle should be set so as to keep the EPU run light on during mild flight control inputs.) This action may result in a thrust level that is higher than required for a normal straight-in approach. Fully open speedbrakes or a shallower than normal approach may be required. A straight-in approach followed by an approach-end arrestment is recommended.

If EPU was turned on for an ACFT BATT FAIL or an FLCS RLY light:

1. EPU switch – OFF, then NORM.
2. Land as soon as possible.
3. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

If EPU was activated for other reasons:

1. Throttle – As required (82-90 percent rpm).
Keep thrust high enough to assure adequate bleed air if EPU fuel usage continues above 90 percent rpm or if EPU run light is flashing. If EPU fuel is depleted or if EPU run light goes off at low thrust, set throttle to keep EPU run light on.
2. EPU FUEL quantity – Monitor.
3. Land as soon as possible.
Make an approach-end arrestment, if practical, if EPU fuel depletes before landing or if EPU run light goes off at low thrust settings. Refer to CABLE ARRESTMENT, this section.

WARNING

If PTO shaft or both hydraulic systems are failed, underspeed of the EPU results in loss of control. Do not retard throttle completely to IDLE until after touchdown.

CAUTION

If EPU underspeeds, electrical bus cycling may affect brake operation. For a missed engagement, attempt CHAN 1 then CHAN 2 brakes. If no braking is available, consider going around for another engagement or making a departure-end arrestment. The parking brake still operates.

4. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

FLCS RLY Light

Illumination of the FLCS RLY light indicates that voltage on one or more of the four FLCC branches

connected to the aircraft battery is inadequate (below 20V). Therefore, should main generator, standby generator, and FLCS PMG power be lost (engine shutdown, PTO shaft failure, ADG failure), power would not be available to one or more FLCS branches until the EPU is on line. The EPU must be turned on if the FLCS RLY light cannot be extinguished.

1. FLCS PWR TEST switch – TEST, momentarily.

If FLCS RLY light goes off:

2. Land as soon as practical.

If FLCS RLY light remains on:

2. EPU switch – ON.

NOTE

- The nonessential dc buses and essential dc bus lose power. This results in loss of power to fuel boost and transfer pumps, VHF radio, CARA, ECM, and FCR and power for normal weapon arming/release including selective jettison.
- If the affected systems are required for the safe recovery of the aircraft, consider delaying/terminating EPU operation until the systems are no longer required.

3. Land as soon as practical.
4. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

If EPU runs abnormally:

3. EPU switch – OFF, then NORM.
4. Land as soon as possible.

Partial Electrical Power Loss

Loss of power to several systems or indicators without any indications on the ELEC control panel may be due to loss of one or more ac or dc buses. Refer to EMERGENCY POWER DISTRIBUTION, this section, to determine the affected equipment and electrical buses.

A failed overcurrent sensing contactor (OCSC) may be the cause of the partial power loss. If the OCSC failure involves electrical shorting, power from the main generator is degraded while the short is present. An obvious effect of this degraded power is loss of the HUD and MFD's. If the short quickly burns itself open, only the system(s) which receives power through the failed OCSC is lost. Power to the nonessential ac No. 1, emergency ac No. 1, emergency dc No. 1, and nonessential dc buses goes through one OCSC. Failure of this OCSC results in a loss of power to many items, including the FCC, FCR, CADC, stick trim, TACAN, VHF radio, DED, FUEL FLOW indicator, primary instrument and console lights, VVI, and AOA indicator. Failure effects for the other OCSC's are limited to individual store stations, the FCR, or the nacelle ac buses. If the short persists for 2-3 seconds, the main generator goes off line and power is removed from all eight overcurrent sensing contactors. The standby generator should automatically come on line to power the essential, emergency, and battery buses.

OCSC's can also fail open without electrical shorting. These failures do not result in degraded power from the main generator but do cause loss of power to the buses/items protected by the OCSC.

The ELEC CAUTION RESET button can be used to reset a failed open OCSC; however, the OCSC may not remain reset if the fault persists. The ELEC CAUTION RESET button should not be depressed if the partial power loss was preceded by flashing of the HUD and MFD's (these are two cockpit indications of degraded power associated with a shorting failure of an OCSC).

The buses with a resettable overcurrent sensing contactor are nonessential ac bus No. 1 and the nacelle nonessential ac bus.

The items with a nonresettable overcurrent sensing contactor are the radar ac bus; stations 3, 5, and 7; and left and right inlet stations.

If partial electrical power loss exists after off/on cycling of the HUD and MFD's:

1. ELEC CAUTION RESET button - Do not depress.

If partial electrical power loss exists and off/on cycling of the HUD and MFD's did not occur:

2. ELEC CAUTION RESET button - Depress.
The failed open OCSC may reset.

If power is not restored:

3. Determine the power status of electrical buses.

Refer to EMERGENCY POWER DISTRIBUTION, this section, to determine the power status of individual buses.

NOTE

Determining the status of the battery buses is critical for a safe recovery of the aircraft.

If one or both emergency ac buses are not powered:

4. EPU switch - ON.

NOTE

- The nonessential dc buses and essential dc bus lose power. This results in loss of power to fuel boost and transfer pumps, VHF radio, CARA, ECM, and FCR and power for normal weapon arming/release including selective jet-tison.

- If the affected systems are required for the safe recovery of the aircraft, consider delaying/terminating EPU operation until the systems are no longer required.

If the battery buses are not powered:

5. Consider a net arrestment, refer to NET ARRESTMENT, this section.

If net arrestment is not available:

6. Consider a gear up landing, refer to LANDING WITH LG UNSAFE/UP, this section.

If power to the battery buses is lost after the landing gear has been extended, the landing gear cannot be raised.

7. Refer to EMERGENCY POWER DISTRIBUTION, this section.

8. Land as soon as possible.

If EPU was activated:

9. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

Aircraft Battery Failure

Aircraft battery system failure is indicated by the ELEC SYS and ACFT BATT FAIL lights. The FLCS RLY light also illuminates if the failure involves low battery voltage. If the battery fails and both main and standby generators subsequently drop off line, power is not available to activate the EPU. If the battery fails and subsequent loss of main generator, standby generator, and FLCS PMG power occurs (e.g., engine shutdown, PTO shaft failure, ADG failure), power is not available to activate the EPU or control the aircraft. Thus, it is necessary to turn the EPU on after battery failure is indicated. The ACFT BATT FAIL light illuminates only for low battery voltage while in flight (approximately 20 volts). If a battery charger failure occurs in flight and is still present after landing, the ACFT BATT FAIL light illuminates 60 seconds after WOW.

CAUTION

If the aircraft battery fails (and EPU is off), do not taxi except to clear runway. Subsequent loss of the main and standby generators results in loss of all braking, NWS, hook, radios, and drag chute.

1. EPU switch – ON.

NOTE

- The nonessential dc buses and essential dc bus lose power. This results in loss of power to fuel boost and transfer pumps, VHF radio, CARA, ECM, and FCR and power for normal weapon arming/release including selective jet-tison.

- If the affected systems are required for the safe recovery of the aircraft, consider delaying/terminating EPU operation until the systems are no longer required.
- If both radios become inoperative after an aircraft battery failure indication, refer to PARTIAL ELECTRICAL POWER LOSS, this section.
- The ACFT BATT FAIL light may subsequently extinguish. This should not be interpreted to mean that the battery has recharged. It may indicate that the battery voltage is so low that the light cannot remain illuminated.

2. Land as soon as practical.
3. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

If EPU runs abnormally:

4. EPU switch – OFF, then NORM.
5. Land as soon as possible.
6. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

Prior to shutdown:

7. Loose items – Secure.
8. Canopy – Open.

Emergency Power Distribution

Refer to figure 3-6.

Emergency Power Distribution

MAIN GENERATOR FAILED

SYSTEM	INOPERATIVE EQUIPMENT	BUS ASSIGNMENT			
		NONESS AC		NACELLE NONESS DC	
		NO. 1	NO. 2	NO. 1	NO. 2
ENGINE	EMSC				X
NAV/COMM	VHF Radio			*	
FUEL	Pumps 1, 2, 4 & 5		X	*	
	FUEL/OIL HOT Caution Light (oil hot signal)				X
STORES MGT	AIM-120	***			
	Stations 3, 5 & 7 – EO, Radar-Guided Weapons, ECM Pods	**			
	Stations 4 & 6 – EO, Radar-Guided Weapons		X		
AVIONICS	DTU		X		
	FCC	X			
	FCR	Radar		*	
	GPS	X			
	TWS	X		X	
LIGHTS	Flood Console		X		
	Flood Instrument		X		
	Formation		X		
	Taxi		X		
OTHER	ECM Control			*	
	Halon Heater		X		
	Inlet Strut Heater		X		
	INS Heater	X			
	Nacelle Ejector Shutoff				X
	Seat Adjustment	X			
	Total Temperature Probe Heater	X			
NOTE: Equipment on nonessential ac bus No. 1 or nonessential ac bus No. 2 may be functional with MAIN GEN light on (bus contactor failure).					

*Aft equipment bay nonessential dc bus.

**Overcurrent sensing contactors.

***Nacelle nonessential ac bus.

Figure 3-6. (Sheet 1)

Emergency Power Distribution

MAIN AND STANDBY GENERATORS FAILED

(All equipment from sheet 1 plus the following:)

SYSTEM	INOPERATIVE EQUIPMENT	BUS ASSIGNMENT	
		ESS AC	ESS DC
FUEL	Pump 3	X	X
	Tank Inerting		X
STORES MGT	AIM-9	*	
	Arm and Release Power – Stations 1 Thru 9		X
AVIONICS	Radar Altimeter		X
	MFD's	X	
	PFLD	*	
OTHER	Air Data Probe Heater (fuselage)	*	
	Battery Charger	X	
NOTE: Equipment on this sheet may operate if MAIN GEN light was caused by bus contactor failure at nonessential bus No. 1.			

*Nacelle essential ac bus.

Figure 3-6. (Sheet 2)

Emergency Power Distribution

MAIN, STANDBY, AND EPU GENERATORS FAILED

(All equipment from sheets 1 and 2 plus the following:)

SYSTEM	INOPERATIVE EQUIPMENT	BUS ASSIGNMENT			
		EMER AC		EMER DC	
		NO. 1	NO. 2	NO. 1	NO. 2
ENGINE	Engine ANTI ICE Switch				X
	ENGINE FAULT Caution Light				X
	Engine Ice Detector		X		
	Fire/Overheat Detect and Test		X		
	HYD PRESS Indicators		X		
	Low Energy Ignition Power	X			
	NOZ POS Indicator		X		
	OIL Pressure Indicator		X		
FLIGHT INSTRUMENT	ADI		X		
	Altimeter (ELECT)	X			
	AOA Indexer			X	
	AOA Indicator	X			
	HSI		X		
	Turn Needle			X	
	INSTR MODE Select Switch			X	
	VVI	X			
FUEL	Automatic Forward Fuel Transfer				X
	FUEL FLOW Indicator	X			
	FUEL LOW Caution Lights			X	
	FUEL Quantity Indicator		X		
FLIGHT CONTROLS	Autopilot				X
	DBU ON Warning Light (branches A & B)			X	
	DBU ON Warning Light (branches C & D)				X
	[C] [DF] FLCS FAULT Caution Light (branches A & B)			X	
	[DR] FLCS FAULT Caution Light (branches C & D)				X
	FLCS RESET Switch (branches A & B)			X	
	FLCS RESET Switch (branches C & D)				X
	FLCS Power Source (branches A & B)			X	
	FLCS Power Source (branches C & D)				X
	FLCS Warning Light (branches A & B)			X	
	FLCS Warning Light (branches C & D)				X

Figure 3-6. (Sheet 3)

Emergency Power Distribution

MAIN, STANDBY, AND EPU GENERATORS FAILED – CONT

(All equipment from sheets 1, 2, and 3 plus the following:)

SYSTEM	INOPERATIVE EQUIPMENT	BUS ASSIGNMENT			
		EMER AC		EMER DC	
		NO. 1	NO. 2	NO. 1	NO. 2
FLIGHT CONTROLS (cont)	LEF's	X			
	Speedbrakes			X	
	Stick Trim			X	
NAV/COMM	IFF		X	X	
	INS	X		X	
	ILS				X
	TACAN		X	X	
STORES MGT	☒ ALT REL Button			X	
	CIU*			X	X
	Chaff Dispenser				X
	Gun		X		X
	EMER JETT Button*			X	X
	MASTER ARM Switch			X	
	MSL STEP Switch			X	
	NUCLEAR CONSENT Switch				X
	STORES CONFIG Caution Light				X
	☒ ☒ WPN REL Button				X
	☒ WPN REL Button			X	
AVIONICS	CADC	X			
	CADC Caution Light			X	
	DED		X		
	DEEU		X		X
	HUD				X
	HUD/CTVS		X		
	ICP/IKP				X
	MFD Video Control				X
LIGHTS	ANTICOLLISION Strobe		X		
	AR (flood)		X		
	AR (slipway)				X
	Landing		X		
	LANDING/TAXI/External Switches				X

*Indicates redundancy.

Figure 3-6. (Sheet 4)

Emergency Power Distribution

MAIN, STANDBY, AND EPU GENERATORS FAILED – CONT

(All equipment from sheets 1, 2, 3, and 4 plus the following)

SYSTEM	INOPERATIVE EQUIPMENT	BUS ASSIGNMENT			
		EMER AC		EMER DC	
		NO. 1	NO. 2	NO. 1	NO. 2
LIGHTS (cont)	MAL & IND LTS TEST/BRT DIM			X	
	POSITION		X		
	PRIMARY CONSOLES	X			
	PRIMARY INST PNL	X			
LG/NWS/ BRAKES	LG Hydraulic Isolation				X
	LG Sequence (doors)				X
	LG UP-DN Command				X
	NWS			X	
	WHEELS Down Lights			X	
OTHER	Air Data Probe Heater (nose)	X			
	AOA Probe Heaters	X			
	AR System			X	
	AVTR/CTVS				X
	CABIN PRESS Caution Light				X
	CAMERA/GUN Trigger				X
	Cockpit Pressure Dump Capability				X
	Cockpit Temperature Control			X	
	Engine Bleed Air Valves (close capability)				X
	EQUIP HOT Caution Light				X
	INLET ICING Caution Light				X
	☒ ☒ LIQUID OXYGEN Quantity Indicator		X		
	OXY LOW Caution Light				X
	Probe Heat Monitor			X	
	PROBE HEAT Switch			X	
	SEAT NOT ARMED Caution Light				X

Figure 3-6. (Sheet 5)

Emergency Power Distribution

OPERATING EQUIPMENT – MAIN, STANDBY, AND EPU GENERATORS FAILED

SYSTEM	OPERATING EQUIPMENT	BUS ASSIGNMENT	
		BATTERY NO. 1	BATTERY NO. 2
ENGINE	Electrical Throttle Position		X
	PRI (no supersonic stall protection)*		
	PRI/SEC Transfer Circuit*		
INSTRUMENTS	Airspeed/Mach Indicator*		
	Altimeter (PNEU)*		
	FTIT Indicator	X	
	RPM Indicator	X	
	SAI		X
FUEL	External Fuel Transfer*		
	FUEL MASTER Switch		X
	FFP*		
FLIGHT CONTROLS	Functional (except LEF's, speedbrakes, autopilot, and stick trim)*		
NAV/COMM	Intercom	X	
	Magnetic Compass*		
	UHF Radio	X	
LIGHTS	Spotlights	X	
	Utility Light	X	
LG/NWS/ BRAKES	Alternate LG Extension*		
	Antiskid/Channel 1 Brakes	X	
	Antiskid/Channel 2 Brakes		X
	LG Uplock/Downlock	X	
	MLG WOW (branches A & B)	X	
	MLG WOW (branches C & D)		X
	NLG WOW (branches A & B)	X	
	NLG WOW (branches C & D)		X
	Parking Brake		X

* Indicates items that do not require power through the battery buses.

Figure 3-6. (Sheet 6)

Emergency Power Distribution

OPERATING EQUIPMENT – MAIN, STANDBY, AND EPU GENERATORS
FAILED – CONT


SYSTEM	OPERATING EQUIPMENT	BUS ASSIGNMENT	
		BATTERY NO. 1	BATTERY NO. 2
WARNING LIGHTS	CANOPY	X	
	ENGINE	X	
	HYD/OIL PRESS	X	
	LG Warning (handle)		X
CAUTION LIGHTS	ANTI SKID		X
	ELEC SYS		X
	HOOK		X
	MASTER CAUTION	X	
	SEC		X
OTHER	Canopy Activation*		
	Drag Chute	X	
	EPU	X	X
	Hook		X
	JFS	X	
	MAIN PWR Switch		X
	VMS	X	

*Indicates items that do not require power through the battery buses.

Figure 3-6. (Sheet 7)

Emergency Power Distribution

PARTIAL ELECTRICAL POWER LOSS

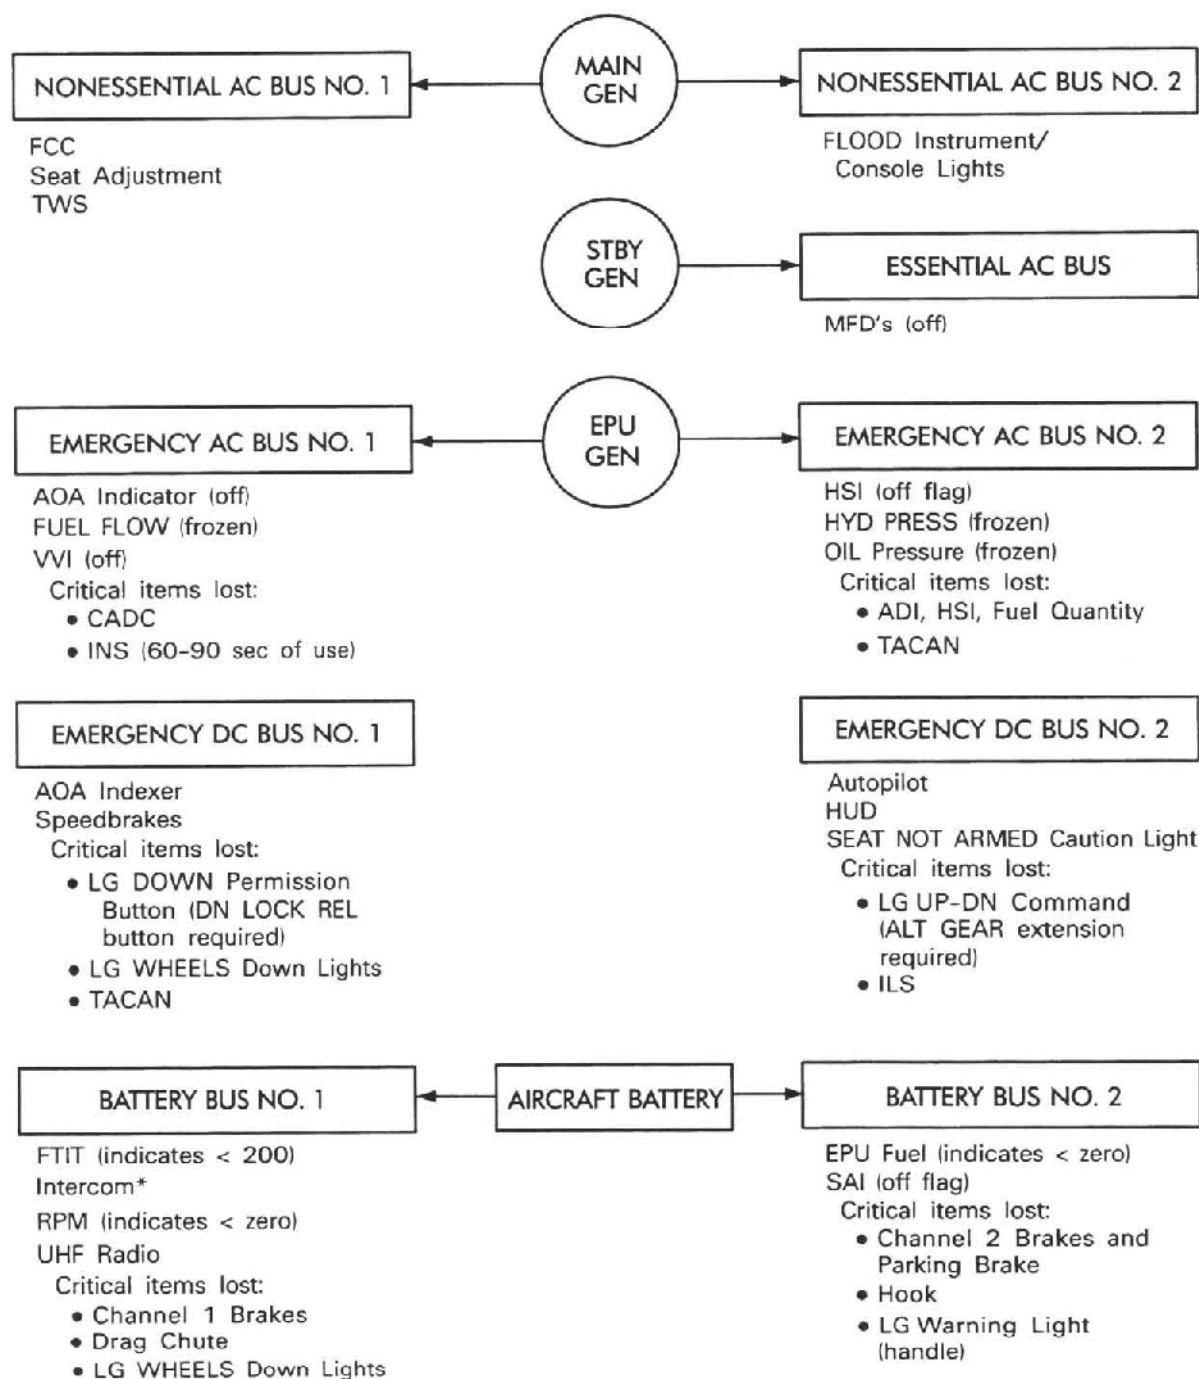

*VHF radio is also inoperative because the ability to key either radio is lost.

1F-16CJ-1-2130X ©

Figure 3-6. (Sheet 8)

ENGINE MALFUNCTIONS

The EMS compares expected versus actual engine operation. The purpose of the EMS MFL is to provide maintenance personnel with an early indication of an engine condition which requires correction. No action is required for an engine MFL at anytime during a flight.

Low altitude, for engine malfunction purposes, is generally defined as 10,000 feet AGL or below. If an engine malfunction is suspected, the initial reaction should be to trade excess airspeed for altitude. Unless a suitable airfield is within gliding distance, turns should be avoided as they decrease the amount of time/altitude available to successfully recover engine performance or prepare for ejection. Optimizing the exchange of airspeed for altitude must be a priority action for any engine malfunction. Above 310 knots, more time is available by performing a zoom climb using a 3g pullup to 30-degree climb until approaching the desired airspeed (use approximately 50 knots lead point) and then initiating a zero-g pushover. Below 310 knots and above the minimum recommended ejection altitude, more time is available by performing a constant altitude deceleration to the desired airspeed. If below the minimum recommended ejection altitude and below 310 knots, primary concern should be to trade excess airspeed for altitude in preparation for ejection. If appropriate, jettison stores as soon as possible.

For any situation where automatic activation of the EPU is relied upon, verify that the EPU run light is on to insure that the EPU has started. If the EPU run light is off, position the EPU switch to ON.

SEC is a highly reliable backup engine operating mode. However, in certain circumstances the engine may malfunction in SEC following an auto transfer, or continue to malfunction in SEC following a manual transfer. Returning to PRI may result in proper engine response, due to either the resetting of internal hydromechanical control pressures or to the resetting of digital engine control logic.

Idle thrust in SEC during ground operation is approximately twice that in PRI. After landing in SEC, consider minimizing taxi distance and consider following HOT BRAKES procedures, this section.

Engine Fire

Generally, the first indication of fire in the engine compartment is the ENG FIRE warning light. Abnormal fuel indications (quantity/flow) may also be present. FTIT probably will not be higher than normal. Explosions, vibrations, or engine instrument fluctuations are usually indicative of a serious engine problem; engine failure may be imminent. Immediate action should be taken to reduce thrust to the

minimum practical level after attaining safe ejection parameters. If within gliding distance of a suitable runway, consider shutting the engine down. Sufficient time should exist to analyze the situation and make an ejection versus land decision. The ejection decision should be based on visual and/or cockpit indications that the fire is persisting. Cockpit indications include continued illumination of the ENG FIRE warning light and subsequent FLCS malfunctions/degraded flight controls or subsequent loss of either hydraulic system.

Fires can also occur in the nozzle area when using AB. These fires are the result of portions of the nozzle failing which allows the AB plume to burn through the nozzle. Ventilation should inhibit forward movement of the fire into and through the engine bay. Since these fires are aft of the detection circuit, the ENG FIRE warning light will not illuminate. Additionally, the nozzle position indications are normal, and there are no vibrations or instrument fluctuations. In most cases, these AB-related nozzle fires are detected by someone outside the aircraft (wingman, tower, etc.). When operating in AB and a fire is reported at the rear of the aircraft, retard throttle below AB immediately. This action should extinguish a nozzle fire within approximately 30-45 seconds and minimize damage to the aircraft skin, speedbrakes, nozzle, and flight controls; however, nozzle damage may result in a noticeable thrust loss.

If on takeoff and the conditions permit:

1. Abort.

If takeoff is continued:

1. Climb.
Maintain takeoff thrust until minimum recommended ejection altitude is attained and then throttle to minimum practical.

2. Stores – Jettison (if required).

At a safe altitude:

3. Throttle – Minimum practical.
If fire occurred in AB, ENG FIRE warning light may not illuminate. Fire should extinguish after throttle is retarded; however, nozzle damage may result in lower than normal thrust.

If ENG FIRE warning light goes off:

4. FIRE & OHEAT DETECT button – Depress.
Determine if fire detection circuit is functional.

If fire persists:

5. Eject.

If fire indications cease:

5. Land as soon as possible.

OVERHEAT Caution Light

Detection of an overheat condition in the engine compartment, ECS bay, MLG wheel wells, or EPU bay illuminates the OVERHEAT caution light. Accomplish as many of the following as required to extinguish the light. If the light goes off, verify the integrity of the detection circuit by depressing the FIRE & OHEAT DETECT button and land as soon as possible.

If OVERHEAT caution light illuminates:

1. Throttle – Minimum practical.
2. FIRE & OHEAT DETECT button – Depress. Determine if fire detection circuit is functional.

If OVERHEAT caution light remains on (or detect circuit checks bad) and EPU is running:

3. EPU switch – OFF (if feasible).
If the EPU was manually turned on, consider turning it off to determine if it is the source of the overheat condition. If the OVERHEAT caution light remains on, the EPU should be turned back on.

If OVERHEAT caution light remains on (or detect circuit checks bad):

4. OXYGEN – 100%.
5. AIR SOURCE knob – OFF.
External fuel cannot be transferred in OFF or RAM. Consider jettisoning tanks to decrease drag if range is critical and the ECS cannot be turned on for short periods of time to transfer fuel.

WARNING

With the ECS shut down or the AIR SOURCE knob in OFF or RAM, the g-suit does not inflate and PBG is disabled.

6. Descend to below 25,000 feet and reduce airspeed to below 500 knots.

When airspeed is reduced and cockpit is depressurized:

7. AIR SOURCE knob – RAM (below 25,000 feet).

External fuel cannot be transferred in OFF or RAM. Consider jettisoning tanks to decrease drag if range is critical and the ECS cannot be turned on for short periods of time to transfer fuel.

WARNING

With the ECS shut down or the AIR SOURCE knob in OFF or RAM, the g-suit does not inflate and PBG is disabled.

8. Nonessential electrical equipment – Off.

NOTE

If in VMC and the ADI and HSI are not required for flight, the INS should be considered nonessential.

If OVERHEAT caution light still remains on (or detect circuit checks bad):

9. TANK INERTING switch – TANK INERTING even if Halon is not available.
10. LG handle – DN (300 knots/0.65 mach maximum).
11. Land as soon as possible.

Oil System Malfunction

An oil system malfunction may be indicated by the EMS, the OIL pressure indicator, the NOZ POS indicator, and the HYD/OIL PRESS warning light.

An oil system malfunction is characterized by a pressure (including fluctuations) below 15 psi at IDLE or 25 psi at MIL, pressure above 65 psi at any throttle setting, pressure fluctuations greater than ± 5 psi, or continuous presence of the ENG LUBE LOW PFL.

Engine oil level decreasing below approximately 40 percent of normal capacity for 15 seconds results in activation of an ENG LUBE LOW PFL. Further oil level decrease may cause the exhaust nozzle to fail to an aerodynamically balanced position and there may be a decrease in thrust and a larger than normal NOZ POS indication. The HYD/OIL PRESS warning light may not illuminate until most of the usable oil is lost.

NOTE

An ENG LUBE LOW PFL can occur as the result of sustained longitudinal acceleration during takeoff or during other maneuvering.

High airspeeds (especially at low altitude), high throttle settings, and/or throttle movements are undesirable when oil pressure is abnormally low.

Initial reaction to an oil system malfunction at low altitude should be to gain altitude and, if oil pressure is low, reduce airspeed. If oil pressure is 10 psi or above, consider using MIL or AB thrust to quickly attain desired cruise altitude. If oil pressure is below 10 psi, increase altitude and reduce airspeed by performing a fixed throttle climb. If the altitude gained is insufficient for a safe cruise, a slow throttle advance followed by a slow throttle reduction, when at a sufficient cruise altitude, may be performed. Do not make subsequent throttle movements unless required to sustain flight.

Anticipate engine seizure approximately 5 minutes after oil pressure drops below 10 psi. Use minimal throttle movement and reduced thrust settings to maximize time. Minimize maneuvering to minimize loads. Plan an approach which allows a flameout landing from any position should engine seize. Refer to SIMULATED FLAMEOUT (SFO) LANDING and FLAMEOUT LANDING, this section.

The EPU should be manually activated if engine seizure is anticipated (i.e., oil pressure decreases below 10 psi); otherwise, if the EPU does not start automatically when the engine seizes, the short time remaining before loss of control may be inadequate for recognition of the EPU failure and corrective action. Monitor hydrazine use after activating the EPU. If consumption rate is too high, cycle EPU switch to OFF, then NORM to conserve hydrazine. Be prepared to place the EPU switch back to ON if the engine seizes.

If an oil system malfunction is suspected:

1. Range - Maximize.

If oil pressure is 10 psi or above and the nearest suitable airfield is not within gliding distance, consider using MIL or AB thrust to quickly gain altitude and/or decrease distance to the nearest suitable airfield. If oil pressure is below 10 psi, attain desired cruise conditions using minimum throttle movement and then slowly retard to the minimum setting required.

CAUTION

● When oil pressure is below 10 psi, throttle movement, high throttle settings, or high airspeeds may accelerate or cause engine seizure.

● Do not start the JFS if engine seizure has occurred or is anticipated. Starting the JFS may result in no brake/JFS accumulator pressure for the brakes.

2. Plan to land at the nearest suitable airfield.

If oil pressure is low (with or without an ENG LUBE LOW PFL):

3. Stores - Jettison (if required).

4. EPU switch - ON, if oil pressure decreases below 10 psi.

Monitor hydrazine use. If consumption rate is too high, cycle EPU switch to OFF, then NORM to conserve hydrazine. Be prepared to place EPU switch back to ON if the engine seizes.

5. Land as soon as possible.

Plan to fly an SFO. Refer to SIMULATED FLAMEOUT (SFO) LANDING and FLAMEOUT LANDING, this section.

6. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

If oil pressure is fluctuating or high (without an ENG LUBE LOW PFL):

3. Land as soon as practical at the nearest suitable airfield.

If oil pressure is normal and ENG LUBE LOW PFL occurred:

3. ☐ **DF** F-ACK, ☐ **DR** FAULT ACK button - Depress to acknowledge fault.

4. Turn toward the nearest suitable airfield.

5. Maintain straight, level, and unaccelerated flight for 15 seconds.

6. ☐ **DF** F-ACK, ☐ **DR** FAULT ACK button - Depress for fault recall.

Presence of an ENG LUBE LOW PFL after 15 seconds of straight, level, and unaccelerated flight is a valid indication of low oil quantity.

If ENG LUBE LOW PFL was not present during fault recall:

7. Land as soon as practical at the nearest suitable airfield.

If ENG LUBE LOW PFL was present during fault recall or recurs after fault recall:

8. Stores – Jettison (if required).
9. EPU switch – ON, if oil pressure decreases below 10 psi.
Monitor hydrazine use. If consumption rate is too high, cycle EPU switch to OFF, then NORM to conserve hydrazine. Be prepared to place EPU switch back to ON if the engine seizes.
10. Land as soon as possible.
Plan to fly an SFO. Refer to SIMULATED FLAMEOUT (SFO) LANDING and FLAME-OUT LANDING, this section.
11. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

ENGINE FAULT Caution Light

Illumination of the ENGINE FAULT caution light indicates that an engine PFL item was detected.

If ENGINE FAULT caution light illuminates:

1. PFLD – Note PFL(s) displayed.
2. **[C] [DF]** F-ACK, **[DR]** FAULT ACK button – Depress to acknowledge fault.
3. Refer to PILOT FAULT LIST – ENGINE, this section.
4. **[C] [DF]** F-ACK, **[DR]** FAULT ACK button – Depress to perform fault recall.
The failure condition no longer exists if the PFL is not present during the fault recall.

SEC Caution Light

Illumination of the SEC caution light indicates that the engine is operating in SEC. If the ENG CONT switch is in **[C] [DF]** PRI, **[DR]** NORM and the SEC

caution light illuminates, an automatic transfer to SEC has likely occurred. Normal SEC operation is characterized by the SEC caution light, a fixed closed exhaust nozzle, and AB unavailable. The ENG CONT switch does not have to be positioned to SEC.

NOTE

If the rpm indication is also zero, the engine alternator has failed.

There are no throttle restrictions while operating subsonic in SEC. If supersonic when transfer to SEC occurs, the throttle must remain at MIL or above until subsonic.

The thrust level at MIL, while operating in SEC, is 70-95 percent of that provided (for the same throttle position and flight condition) in PRI. During landing in SEC, idle thrust is higher than normal because the nozzle is closed.

A throttle cable internal failure or a throttle linkage disconnect results in an automatic transfer to SEC; however, control of the engine with a failed throttle cable or linkage disconnect is not possible in SEC. In SEC, a throttle cable internal failure is characterized by a possible rpm increase but no decrease with throttle movements; a linkage disconnect results in no response to throttle movements. In this situation, control of the engine at idle and above can be regained in PRI by cycling the ENG CONT switch to SEC, then back to **[C] [DF]** PRI, **[DR]** NORM. The engine logic for this failure is such that the engine remains in PRI after cycling the ENG CONT switch. After landing, shutdown of the engine must be accomplished either with the FUEL MASTER switch or maintenance personnel action to position the MEC throttle input shaft to off.

If SEC caution light illuminates when supersonic:

1. Throttle – Do not retard below MIL until subsonic.

CAUTION

Retarding throttle below MIL while supersonic may induce inlet buzz which produces severe cockpit vibration and probable engine stalls.

When subsonic or if SEC caution light illuminates when subsonic:

2. Throttle – Verify engine responds to throttle movement; set as desired.
AB operation is inhibited and exhaust nozzle is closed.

If the engine is operating normally in SEC:

3. ENG CONT switch – Do not cycle.
The switch may remain in PRI or may be placed to SEC. If the switch is placed to SEC, do not place switch back to PRI.

WARNING

Cycling the ENG CONT switch in an attempt to regain PRI may result in reoccurrence of the original malfunction or a more severe condition.

4. Land as soon as practical.
During landing in SEC, idle thrust is higher than normal.

If the engine is operating abnormally in SEC:

WARNING

Failure to monitor sink rate and height above terrain while applying low thrust recovery procedures can result in ejection outside ejection seat performance envelope.

3. ENG CONT switch – Position to SEC, then back to **C** **DF** PRI, **DR** NORM.
4. Airspeed – 250 knots (If thrust is too low to sustain level flight).
5. Land as soon as possible.

NOTE

A broken throttle cable or throttle linkage disconnect causes a transfer to SEC and abnormal engine response in SEC. Reselecting PRI restores normal engine operation for flight; however, engine shutdown after flight requires either use of the FUEL MASTER switch or maintenance personnel action to position the MEC throttle input shaft to off.

FTIT Indicator Failure

The engine does not use FTIT as a control parameter. However, routine missions should not be continued since FTIT cannot be monitored.

Zero RPM/Erroneous RPM Indication

If the RPM indicator fails to zero or displays erroneous RPM indication, it indicates either a malfunction within the indicator itself or within the engine alternator. Total alternator failure also causes an automatic transfer to SEC. The ENGINE warning light also illuminates for engine alternator or RPM indicator failure. Engine transfer to SEC due to certain partial or total alternator failures, results in loss of most engine fault reporting. Partial alternator failure may not result in automatic transfer to SEC. If the engine does not transfer to SEC, fault reporting continues. Partial alternator failure may also result in transfer to hybrid operation with AB operation inhibited. In this case, ENG HYB MODE and ENG A/B FAIL PFL's occur. Routine missions should not be continued without a functional RPM indicator.

If SEC caution light is illuminated:

1. Go to SEC CAUTION LIGHT, this section.

If SEC caution light is not illuminated:

1. Land as soon as practical.

Abnormal Engine Response

Refer to LOW THRUST ON TAKEOFF OR AT LOW ALTITUDE (NON-AB), this section, if appropriate.

If thrust is too low to sustain level flight, turn immediately toward the nearest suitable runway and establish 250 knots airspeed. Consider jettisoning stores to increase flying time available to complete actions designed to restore usable thrust and improve range in the event those actions are unsuccessful.

NOTE

In a partial thrust situation, thrust available may increase as altitude decreases. 250 knots approximates the airspeed at which thrust required for level flight is the lowest.

Abnormal engine response is varied and generally indicated by abnormal thrust in relation to throttle position, engine oscillations, a complete lack of engine response to throttle movement, autoaccelerations/decelerations, exhaust nozzle failure, or insufficient thrust. A PRI malfunction can cause these abnormal engine responses as well as overtemperature or overspeed indications. During AB operation, if engine anomalies occur in region 1, the throttle should be moved out of the AB range and AB should not be selected again for the remainder of the flight.

Exhaust nozzle control or oil system malfunctions can result in the nozzle being too far open, too far closed, or unstable. Insufficient thrust may result if the nozzle is more open than normal. SEC should be selected and, if the nozzle goes fully closed, engine operation should be continued in SEC. If the nozzle does not close in SEC, the ENG CONT switch should be moved back to **C** **DF** PRI, **DR** NORM as more thrust results and AB light-off may be attainable at lower altitudes. AB should only be used when required to sustain flight.

If the exhaust nozzle is positioned more closed than normal, thrust is adequate, but engine stall may occur if AB is selected. Automatic transfer to SEC should occur for most exhaust nozzle malfunctions.

NOTE

Certain PRI malfunctions may not result in an autotransfer to SEC. If the engine operates abnormally, do not rely upon an autotransfer to SEC. Timely selection of SEC may preclude further engine problems.

If thrust is still insufficient to make a safe landing after selecting SEC or abnormal engine response is still present, reattempt PRI.

If the throttle is stuck and thrust is suitable for sustained flight, attempts to free the throttle should be delayed until within gliding distance of a suitable landing field. If throttle is stuck in AB, placing the ENG CONT switch to SEC terminates AB and provides SEC MIL thrust. If throttle is stuck or otherwise prevented from normal movement, control might be regained by depressing the cutoff release, rotating the throttle outboard, and applying necessary force.

If thrust is too high to permit a safe landing, use excess thrust to climb and maneuver toward the nearest suitable airfield. Once high key for a flameout landing is assured, follow procedures as outlined in FLAMEOUT LANDING, this section. Activate the JFS and EPU and then shut down the engine as soon as landing is assured (normally high key) by placing the throttle to OFF or, if necessary, by placing the FUEL MASTER switch to OFF.

If abnormal engine response occurs:

WARNING

- Failure to monitor sink rate and height above terrain while applying low thrust recovery procedures can result in an ejection outside ejection seat performance envelope.
- If the throttle is stuck and thrust is suitable for sustained flight, attempts to free the throttle should be delayed until within gliding distance of a suitable landing field.

If in AB or if supersonic:

1. Throttle – Retard to MIL.

CAUTION

Retarding throttle below MIL while supersonic may induce inlet buzz which produces severe cockpit vibration and probable engine stalls.

If subsonic or problem still exists:

2. ENG CONT switch – SEC.

NOTE

Transfer to SEC may be accomplished while supersonic if the throttle remains at MIL.

When subsonic or if SEC caution light illuminates when subsonic:

2. Throttle – Verify engine responds to throttle movement; set as desired.
AB operation is inhibited and exhaust nozzle is closed.

If the engine is operating normally in SEC:

3. ENG CONT switch – Do not cycle.
The switch may remain in PRI or may be placed to SEC. If the switch is placed to SEC, do not place switch back to PRI.

WARNING

Cycling the ENG CONT switch in an attempt to regain PRI may result in reoccurrence of the original malfunction or a more severe condition.

4. Land as soon as practical.
During landing in SEC, idle thrust is higher than normal.

If the engine is operating abnormally in SEC:

WARNING

Failure to monitor sink rate and height above terrain while applying low thrust recovery procedures can result in ejection outside ejection seat performance envelope.

3. ENG CONT switch – Position to SEC, then back to **C** **DF** PRI, **DR** NORM.
4. Airspeed – 250 knots (If thrust is too low to sustain level flight).
5. Land as soon as possible.

NOTE

A broken throttle cable or throttle linkage disconnect causes a transfer to SEC and abnormal engine response in SEC. Reselecting PRI restores normal engine operation for flight; however, engine shutdown after flight requires either use of the FUEL MASTER switch or maintenance personnel action to position the MEC throttle input shaft to off.

FTIT Indicator Failure

The engine does not use FTIT as a control parameter. However, routine missions should not be continued since FTIT cannot be monitored.

Zero RPM/Erroneous RPM Indication

If the RPM indicator fails to zero or displays erroneous RPM indication, it indicates either a malfunction within the indicator itself or within the engine alternator. Total alternator failure also causes an automatic transfer to SEC. The ENGINE warning light also illuminates for engine alternator or RPM indicator failure. Engine transfer to SEC due to certain partial or total alternator failures, results in loss of most engine fault reporting. Partial alternator failure may not result in automatic transfer to SEC. If the engine does not transfer to SEC, fault reporting continues. Partial alternator failure may also result in transfer to hybrid operation with AB operation inhibited. In this case, ENG HYB MODE and ENG A/B FAIL PFL's occur. Routine missions should not be continued without a functional RPM indicator.

If SEC caution light is illuminated:

1. Go to SEC CAUTION LIGHT, this section.

If SEC caution light is not illuminated:

1. Land as soon as practical.

Abnormal Engine Response

Refer to LOW THRUST ON TAKEOFF OR AT LOW ALTITUDE (NON-AB), this section, if appropriate.

If thrust is too low to sustain level flight, turn immediately toward the nearest suitable runway and establish 250 knots airspeed. Consider jettisoning stores to increase flying time available to complete actions designed to restore usable thrust and improve range in the event those actions are unsuccessful.

NOTE

In a partial thrust situation, thrust available may increase as altitude decreases. 250 knots approximates the airspeed at which thrust required for level flight is the lowest.

Abnormal engine response is varied and generally indicated by abnormal thrust in relation to throttle position, engine oscillations (either continuous, momentary, or recurring), a complete lack of engine response to throttle movement, autoacceleration/deceleration, exhaust nozzle failure, or insufficient thrust. A PRI malfunction can cause these abnormal engine responses as well as overtemperature or overspeed indications. During AB operation, if engine anomalies occur in region 1, the throttle should be moved out of the AB range and AB should not be selected again for the remainder of the flight.

Exhaust nozzle control or oil system malfunctions can result in the nozzle being too far open, too far closed, or unstable. Insufficient thrust may result if the nozzle is more open than normal. SEC should be selected and, if the nozzle goes fully closed, engine operation should be continued in SEC. If the nozzle does not close in SEC, the ENG CONT switch should be moved back to **C** **DF** PRI, **DR** NORM as more thrust results and AB light-off may be attainable at lower altitudes. AB should only be used when required to sustain flight.

If the exhaust nozzle is positioned more closed than normal, thrust is adequate, but engine stall may occur if AB is selected. Automatic transfer to SEC should occur for most exhaust nozzle malfunctions.

NOTE

Certain PRI malfunctions may not result in an autotransfer to SEC. If the engine operates abnormally, do not rely upon an autotransfer to SEC. Timely selection of SEC may preclude further engine problems.

If thrust is still insufficient to make a safe landing after selecting SEC or abnormal engine response is still present, reattempt PRI.

If the throttle is stuck and thrust is suitable for sustained flight, attempts to free the throttle should be delayed until within gliding distance of a suitable landing field. If throttle is stuck in AB, placing the ENG CONT switch to SEC terminates AB and provides SEC MIL thrust. If throttle is stuck or otherwise prevented from normal movement, control might be regained by depressing the cutoff release, rotating the throttle outboard, and applying necessary force.

If thrust is too high to permit a safe landing, use excess thrust to climb and maneuver toward the nearest suitable airfield. Once high key for a flameout landing is assured, follow procedures as outlined in FLAMEOUT LANDING, this section. Activate the JFS and EPU and then shut down the engine as soon as landing is assured (normally high key) by placing the throttle to OFF or, if necessary, by placing the FUEL MASTER switch to OFF.

If abnormal engine response occurs:

WARNING

- Failure to monitor sink rate and height above terrain while applying low thrust recovery procedures can result in an ejection outside ejection seat performance envelope.
- If the throttle is stuck and thrust is suitable for sustained flight, attempts to free the throttle should be delayed until within gliding distance of a suitable landing field.

If in AB or if supersonic:

1. Throttle – Retard to MIL.

CAUTION

Retarding throttle below MIL while supersonic may induce inlet buzz which produces severe cockpit vibration and probable engine stalls.

If subsonic or problem still exists:

2. ENG CONT switch – SEC.

NOTE

Transfer to SEC may be accomplished while supersonic if the throttle remains at MIL.

3. Airspeed – 250 knots (if thrust is too low to sustain level flight).
4. Throttle – Verify engine responds to throttle movement; set as desired.
AB operation is inhibited and exhaust nozzle is closed.

If a safe landing can be made with the current thrust:

5. Land as soon as practical.
During landing in SEC, idle thrust is higher than normal.

If thrust is insufficient to make a safe landing or abnormal engine response is still present:

5. ENG CONT switch – **C** **DF** PRI, **DR** NORM.

NOTE

If the exhaust nozzle is failed open, additional thrust to sustain flight may be attained by selecting AB at low altitudes.

6. Land as soon as possible.

If thrust is too high to permit a safe landing:

NOTE

If throttle is stuck, control might be regained by depressing the cutoff release, rotating the throttle outboard, and applying necessary force.

5. Plan a flameout landing. Refer to FLAMEOUT LANDING, this section.

WARNING

Do not start the JFS if engine seizure has occurred or is anticipated or if engine failure is a result of fuel starvation. Starting the JFS may result in no brake/JFS accumulator pressure for the brakes.

When landing is assured (normally high key):

WARNING

Delaying engine shutdown can result in a long, fast landing. Wheel braking is less effective due to lack of WOW and there is an increased probability of a missed cable engagement.

6. Throttle – OFF.
If throttle is stuck or engine does not respond, shut down the engine with the FUEL MASTER switch. At MIL, the engine flames out in approximately 6 seconds. At IDLE, the engine flames out in approximately 45 seconds.
7. HOOK switch – DN (if required).

WARNING

The hook may miss the cable if the aircraft is not slow enough to compress the MLG struts sufficiently to make WOW or if forward stick pressure is held.

AB Blowout/Failure To Light

AB blowouts are characterized by a thrust loss, a fuel flow decrease, and nozzle closure. The DEC attempts to relight the AB as long as the throttle remains in AB.

Refer to Figure 1-10. If AB is selected in region 1 and fails to light within 10 seconds or if the AB blows out in any region, retard throttle out of AB. AB operation should not be reattempted for the remainder of the flight.

AB operation in region 2 may include AB no lights or delayed lights if unfavorable AB light-off conditions exist. If these are encountered, the throttle may be left in AB. If the throttle is retarded, an AB light may be attempted.

ENGINE STALLS

The three primary causes of a stall are inlet flow distortion, AB instabilities, and hardware malfunctions. During normal aircraft operation, inlet flow distortion severe enough to cause engine stall is not expected. However, under some departure conditions, inlet flow distortion may induce engine stalls. Hardware-associated stalls may result from a failed nozzle, control system malfunctions, or FOD.

The first indication of a stall at high thrust settings may be a loud bang or pop. At lower thrust settings, the first indication may be loss of thrust, lack of throttle response, or decreasing rpm. The throttle should be retarded at the first indication of a stall. Engine stalls are divided into two types: AB-associated engine stalls and non-AB engine stalls.

AB-Associated Engine Stalls

Types of AB-associated engine stalls are:

- AB initiation – Stall at AB light-off.
- AB sequencing – Stall during AB sequencing as the AB fuel flow increases with the throttle in AB.
- AB cancellation – Stall during throttle retard from AB.
- AB blowout/relight – Stall occurs during relight after a blowout in stabilized AB. May be preceded by AB rumble.

AB-associated engine stalls are normally accompanied by a loud bang or pop and a possible fireball from the engine exhaust and occasionally the engine inlet. These characteristics could be mistaken for an aircraft fire. Whenever a stall occurs while operating in AB, the throttle should be snapped out of AB to MIL. This usually clears the stall and restores normal operation. The stalls may continue at MIL and are characterized by bangs or pops of lower intensity than AB stalls. If stall condition persists, refer to NON-AB ENGINE STALLS, this section.

CAUTION

If an AB-associated engine stall occurs below 30,000 feet MSL or while supersonic, IGV system damage may occur. Throttle movements after the stall clears should not be rapid.

FTIT fluctuation and decreasing rpm will probably accompany stalls. The throttle should be retarded to IDLE if the stall continues for a few seconds. The engine may continue to stall at IDLE but may not be audible, particularly at high altitudes. The engine instruments should be monitored for indications of stall. FTIT may rise while rpm decreases.

If the engine stalls at low altitude, an immediate climb should be initiated. Retarding the throttle to MIL may clear the stall. If engine response at low altitude is not sufficient to maintain or gain altitude and a suitable field is not immediately available, ejection may be required.

Non-AB Engine Stalls

Non-AB engine stalls may occur if the control system is malfunctioning, particularly during throttle transients. Non-AB engine stalls are often a symptom of a serious engine problem. Non-AB engine stalls may be inaudible; the first indication may be a lack of engine response to throttle movement which may be difficult to differentiate from abnormal engine response. However, non-AB engine stalls may be characterized by bangs, pops, low intensity engine rumble or vibration, and/or erratic orange-yellow flame from the engine exhaust.

This exhaust flame could be mistaken for an engine fire. FTIT fluctuation and decreasing rpm will probably accompany stalls. If a stall is confirmed, the throttle should be immediately retarded to IDLE. The engine may continue to stall at IDLE but the stall may not be audible, particularly at high altitudes. The engine instruments should be monitored for indications of stall. FTIT may increase while rpm decreases. If the stall continues, place ENG CONT switch to SEC. If the engine recovers, throttle movements should be minimized and made slowly until landing is assured.

If stall continues, initiate airstart. Refer to AIRSTARTS, this section. When trying to clear a stall with an airstart, the throttle should be maintained in OFF for a few seconds to allow the stall to clear. If the stall continues after the airstart, the engine may have a serious hardware problem. The focus should shift to using available thrust to land at the nearest divert field.

Engine Stall Recovery

If an AB stall(s) occurs:

1. Throttle – Snap to MIL.

3. Airspeed – 250 knots (if thrust is too low to sustain level flight).

4. Throttle – Verify engine responds to throttle movement; set as desired.

AB operation is inhibited and exhaust nozzle is closed.

If a safe landing can be made with the current thrust:

5. Land as soon as practical.
During landing in SEC, idle thrust is higher than normal.

If thrust is insufficient to make a safe landing or abnormal engine response is still present:

5. ENG CONT switch – **C** **DF** PRI, **DR** NORM.

NOTE

If the exhaust nozzle is failed open, additional thrust to sustain flight may be attained by selecting AB at low altitudes.

6. Land as soon as possible.

If thrust is too high to permit a safe landing:

NOTE

If throttle is stuck, control might be regained by depressing the cutoff release, rotating the throttle outboard, and applying necessary force.

5. Plan a flameout landing. Refer to FLAMEOUT LANDING, this section.

WARNING

Do not start the JFS if engine seizure has occurred or is anticipated or if engine failure is a result of fuel starvation. Starting the JFS may result in no brake/JFS accumulator pressure for the brakes.

When landing is assured (normally high key):

WARNING

Delaying engine shutdown can result in a long, fast landing. Wheel braking is less effective due to lack of WOW and there is an increased probability of a missed cable engagement.

6. Throttle – OFF.

If throttle is stuck or engine does not respond, shut down the engine with the FUEL MASTER switch. At MIL, the engine flames out in approximately 6 seconds. At IDLE, the engine flames out in approximately 45 seconds.

7. HOOK switch – DN (if required).

WARNING

The hook may miss the cable if the aircraft is not slow enough to compress the MLG struts sufficiently to make WOW or if forward stick pressure is held.

AB Blowout/Failure To Light

AB blowouts are characterized by a thrust loss, a fuel flow decrease, and nozzle closure. The DEC attempts to relight the AB as long as the throttle remains in AB.

Refer to Figure 1-10. If AB is selected in region 1 and fails to light within 10 seconds or if the AB blows out in any region, retard throttle out of AB. AB operation should not be reattempted for the remainder of the flight.

AB operation in region 2 may include AB no lights or delayed lights if unfavorable AB light-off conditions exist. If these are encountered, the throttle may be left in AB. If the throttle is retarded, an AB light may be attempted.

ENGINE STALLS

The three primary causes of a stall are inlet flow distortion, AB instabilities, and hardware malfunctions. During normal aircraft operation, inlet flow distortion severe enough to cause engine stall is not expected. However, under some departure conditions, inlet flow distortion may induce engine stalls. Hardware-associated stalls may result from a failed nozzle, control system malfunctions, or FOD.

The first indication of a stall at high thrust settings may be a loud bang or pop. At lower thrust settings, the first indication may be loss of thrust, lack of throttle response, or decreasing rpm. The throttle should be retarded at the first indication of a stall. Engine stalls are divided into two types: AB-associated engine stalls and non-AB engine stalls.

AB-Associated Engine Stalls

Types of AB-associated engine stalls are:

- AB initiation – Stall at AB light-off.
- AB sequencing – Stall during AB sequencing as the AB fuel flow increases with the throttle in AB.
- AB cancellation – Stall during throttle retard from AB.
- AB blowout/relight – Stall occurs during relight after a blowout in stabilized AB. May be preceded by AB rumble.

AB-associated engine stalls are normally accompanied by a loud bang or pop and a possible fireball from the engine exhaust and occasionally the engine inlet. These characteristics could be mistaken for an aircraft fire. Whenever a stall occurs while operating in AB, the throttle should be snapped out of AB to MIL. This usually clears the stall and restores normal operation. The stalls may continue at MIL and are characterized by bangs or pops of lower intensity than AB stalls. If stall condition persists, refer to NON-AB ENGINE STALLS, this section.

CAUTION

If an AB-associated engine stall occurs below 30,000 feet MSL or while supersonic, IGV system damage may occur. Throttle movements after the stall clears should not be rapid.

FTIT fluctuation and decreasing rpm will probably accompany stalls. The throttle should be retarded to IDLE if the stall continues for a few seconds. The engine may continue to stall at IDLE but may not be audible, particularly at high altitudes. The engine instruments should be monitored for indications of stall. FTIT may rise while rpm decreases.

If the engine stalls at low altitude, an immediate climb should be initiated. Retarding the throttle to MIL may clear the stall. If engine response at low altitude is not sufficient to maintain or gain altitude and a suitable field is not immediately available, ejection may be required.

Non-AB Engine Stalls

Non-AB engine stalls may occur if the control system is malfunctioning, particularly during throttle transients. Non-AB engine stalls are often a symptom of a serious engine problem. Non-AB engine stalls may be inaudible; the first indication may be a lack of engine response to throttle movement which may be difficult to differentiate from abnormal engine response. However, non-AB engine stalls may be characterized by bangs, pops, low intensity engine rumble or vibration, and/or erratic orange-yellow flame from the engine exhaust.

This exhaust flame could be mistaken for an engine fire. FTIT fluctuation and decreasing rpm will probably accompany stalls. If a stall is confirmed, the throttle should be immediately retarded to IDLE. The engine may continue to stall at IDLE but the stall may not be audible, particularly at high altitudes. The engine instruments should be monitored for indications of stall. FTIT may increase while rpm decreases. If the stall continues, place ENG CONT switch to SEC. If the engine recovers, throttle movements should be minimized and made slowly until landing is assured.

If stall continues, initiate airstart. Refer to AIRSTARTS, this section. When trying to clear a stall with an airstart, the throttle should be maintained in OFF for a few seconds to allow the stall to clear. If the stall continues after the airstart, the engine may have a serious hardware problem. The focus should shift to using available thrust to land at the nearest divert field.

WARNING

Prolonged engine operation with FTIT in excess of 980°C can result in significant engine damage and may cause a nonrecoverable engine failure.

If AB stalls do not clear or stall(s) occurs below AB:

NOTE

Non-AB stalls may be inaudible.

2. Throttle – IDLE.

If stalls continue:

3. ENG CONT switch – SEC.

If stalls continue:

4. Throttle – OFF for a few seconds, then initiate airstart. Refer to AIRSTART PROCEDURES, this section.

NOTE

For serious hardware problems, the engine may operate normally at idle rpm but exhibit stall/vibration conditions at thrust settings above idle rpm. Attempting additional airstarts will not clear the condition. Use the highest thrust setting below the stall/vibration condition to sustain flight.

If stall(s) clears:

5. Throttle – MIL or below. Minimize throttle movements and make necessary movements slowly.

NOTE

If stall(s) occurred in AB at 30,000 feet MSL or above and while subsonic, the engine is safe to operate in the IDLE to MIL range provided no other abnormal engine indications are observed.

If stall(s) occurred at MIL or below, or in AB below 30,000 feet MSL or while supersonic:

6. Land as soon as possible.

INLET BUZZ

Inlet buzz occurs at supersonic airspeeds if an engine control system failure or a CADC mach signal failure results in insufficient airflow or if the throttle is retarded below MIL while operating in HYB or SEC. Inlet buzz causes moderate to severe vibration within the cockpit and may result in multiple engine stalls.

If inlet buzz occurs, do not move the throttle until subsonic. Decrease airspeed to subsonic as quickly as possible by opening the speedbrakes and increasing g. If engine stalls occur and persist, the throttle should be retarded to IDLE when subsonic. If the stalls do not clear, retard the throttle to OFF for a few seconds, then advance to midrange. Refer to AIRSTART PROCEDURES, this section.

BIRD STRIKE

In the event of a bird strike or suspected bird strike, AB should be used only if absolutely necessary. It is possible to lodge bird remains in the AB system such that liner damage and subsequent duct burn-through occurs if AB is used. There is no concern of liner damage during any non-AB operation. Refer to ABNORMAL ENGINE RESPONSE, this section, if appropriate.

ENGINE OVERSPEED

An overspeed occurs when engine rpm exceeds 109.5 percent. If an overspeed condition occurs, an MFL is recorded and the engine control attempts to reduce rpm below maximum limit. However, if the DEC malfunctions and engine rpm reaches 113 percent, the overspeed protection in the MEC closes the overspeed fuel shutoff valve resulting in a flameout. To restore fuel, retard the throttle to OFF then advance to midrange. Refer to AIRSTART PROCEDURES, this section.

ENGINE FAILURE OR FLAMEOUT

If the engine flames out, fuel starvation or mechanical failure has occurred.

A flameout is indicated by a decrease in FTIT and engine rpm decaying below in-flight idle (approximately 70 percent rpm). Loss of thrust and lack of response to throttle movement confirm the flameout.

The ENGINE warning light illuminates when engine rpm is below 60 percent. Additionally, the MAIN GEN and STBY GEN lights illuminate below 50 percent rpm and the EPU should start running. Do not mistake a loss of ECS noise as an engine flameout.

A flameout indicates an engine control failure, fuel starvation, fuel system malfunction, or fuel cutoff due to engine overspeed protection. If the engine flames out, two features may instantly restart the engine. There is an autorelight feature and the capability to automatically transfer to SEC if certain faults are detected in PRI. If these features work, the restart may take place instantly and the flameout may not be noticeable (except for the illumination of the SEC caution light). In this situation, remain in SEC. (Refer to SEC CAUTION LIGHT, this section.)

If the flameout progresses to the point that it is noticeable, retard the throttle to OFF, then advance to midrange. Refer to AIRSTART PROCEDURES, this section.

Tower Shaft Failure

Failure of the engine tower shaft or its associated geartrain results in engine flameout due to fuel starvation. A restart is not possible; primary emphasis should be on a flameout landing. If unable to make a flameout landing, refer to EJECTION (TIME PERMITTING), this section. Because tower shaft failure results in the loss of rotation to the engine-driven gearbox and ADG, the initial symptoms are similar to main fuel pump failure. The primary differences are that the rpm indication drops immediately to zero and ENGINE warning light and the SEC caution light illuminate since the engine alternator is no longer providing power to the DEC.

The JFS should be started immediately upon entering the JFS envelope to conserve EPU fuel. The JFS drives the ADG and the engine gearbox which restores rotation to both hydraulic pumps and provides a reduced FLCS PMG output. Depending on JFS performance and load, rpm may even be high enough to restore standby generator power; however, main generator power may cycle on and off. Without the load of the engine, the JFS produces a 30-55 percent rpm indication, which is the speed of the engine gearbox and not the actual engine rpm. The true engine rpm is unknown.

Low Altitude Engine Failure or Flameout

Refer to figures 3-7 and 3-8. Initial reaction to any malfunction at low altitude should be to trade excess airspeed for altitude. Higher altitude translates directly to either additional time to achieve an airstart or to additional glide range to reach a suitable landing field. Above 310 knots, more time is available by performing a zoom climb using a 3g pullup to 30-degree climb until approaching the desired airspeed (use approximately 50 knots lead point) and then initiating a zero-g pushover. Below 310 knots, more time is available by performing a constant altitude deceleration to the desired airspeed; if required, climb to achieve minimum recommended ejection altitude.

If the zoom results in an altitude below 4000 feet AGL, there may be insufficient time to achieve an airstart prior to reaching minimum recommended ejection altitude. In that case, primary consideration should be given to preparing for ejection; do not delay ejection below 2000 feet AGL.

If low altitude engine failure or flameout occurs:

1. Zoom.
2. Stores – Jettison (if required).
If stores jettison is attempted after main and standby generators drop off line but before EPU generator comes on line (up to 2 seconds delay), stores will not jettison.
3. Perform airstart (if altitude permits). Refer to AIRSTART PROCEDURES, this section.

WARNING

Below 4000 feet AGL, there may be insufficient time to perform an airstart prior to minimum recommended ejection altitude.

AIRSTARTS

Refer to figure 3-9. Airstarting the engine does not require exact airspeeds or rpm ranges, but there are key events in the airstart sequence that must be performed in a timely manner in order to have the best chance for an airstart. The key events are initiating the airstart while engine rpm is still high, selecting SEC if there is no light-off prior to rpm decaying below 50 percent in PRI (or immediately when below 10,000

Engine Stall Recovery

If an AB stall(s) occurs:

1. Throttle – Snap to MIL.

If AB stalls do not clear or stall(s) occurs below AB:

NOTE

Non-AB stalls may be inaudible.

2. Throttle – IDLE.

If stalls continue:

3. ENG CONT switch – SEC.

If stalls continue:

4. Throttle – OFF for a few seconds, then initiate airstart. Refer to AIRSTART PROCEDURES, this section.

NOTE

For serious hardware problems, the engine may operate normally at idle rpm but exhibit stall/vibration conditions at thrust settings above idle rpm. Attempting additional airstarts will not clear the condition. Use the highest thrust setting below the stall/vibration condition to sustain flight.

If stall(s) clears:

5. Throttle – MIL or below. Minimize throttle movements and make necessary movements slowly.

NOTE

If stall(s) occurred in AB at 30,000 feet MSL or above and while subsonic, the engine is safe to operate in the IDLE to MIL range provided no other abnormal engine indications are observed.

If stall(s) occurred at MIL or below, or in AB below 30,000 feet MSL or while supersonic:

6. Land as soon as possible.

INLET BUZZ

Inlet buzz occurs at supersonic airspeeds if an engine control system failure or a CADC mach signal failure results in insufficient airflow or if the throttle is retarded below MIL while operating in HYB or SEC. Inlet buzz causes moderate to severe vibration within the cockpit and may result in multiple engine stalls.

If inlet buzz occurs, do not move the throttle until subsonic. Decrease airspeed to subsonic as quickly as possible by opening the speedbrakes and increasing g. If engine stalls occur and persist, the throttle should be retarded to IDLE when subsonic. If the stalls do not clear, retard the throttle to OFF for a few seconds, then advance to midrange. Refer to AIRSTART PROCEDURES, this section.

BIRD STRIKE

In the event of a bird strike or suspected bird strike, AB should be used only if absolutely necessary. It is possible to lodge bird remains in the AB system such that liner damage and subsequent duct burn-through occurs if AB is used. There is no concern of liner damage during any non-AB operation. Refer to ABNORMAL ENGINE RESPONSE, this section, if appropriate.

ENGINE OVERSPEED

An overspeed occurs when engine rpm exceeds 109.5 percent. If an overspeed condition occurs, an MFL is recorded and the engine control attempts to reduce rpm below maximum limit. However, if the DEC malfunctions and engine rpm reaches 113 percent, the overspeed protection in the MEC closes the overspeed fuel shutoff valve resulting in a flameout. To restore fuel, retard the throttle to OFF then advance to midrange. Refer to AIRSTART PROCEDURES, this section.

ENGINE FAILURE OR FLAMEOUT

If the engine flames out, fuel starvation or mechanical failure has occurred.

A flameout is indicated by a decrease in FTIT and engine rpm decaying below in-flight idle (approximately 70 percent rpm). Loss of thrust and lack of response to throttle movement confirm the flameout.

The ENGINE warning light illuminates when engine rpm is below 60 percent. Additionally, the MAIN GEN and STBY GEN lights illuminate below 50 percent rpm and the EPU should start running. Do not mistake a loss of ECS noise as an engine flameout.

A flameout indicates an engine control failure, fuel starvation, fuel system malfunction, or fuel cutoff due to engine overspeed protection. If the engine flames out, two features may instantly restart the engine. There is an autorelight feature and the capability to automatically transfer to SEC if certain faults are detected in PRI. If these features work, the restart may take place instantly and the flameout may not be noticeable (except for the illumination of the SEC caution light). In this situation, remain in SEC. (Refer to SEC CAUTION LIGHT, this section.)

If the flameout progresses to the point that it is noticeable, retard the throttle to OFF, then advance to midrange. Refer to AIRSTART PROCEDURES, this section.

Tower Shaft Failure

Failure of the engine tower shaft or its associated geartrain results in engine flameout due to fuel starvation. A restart is not possible; primary emphasis should be on a flameout landing. If unable to make a flameout landing, refer to EJECTION (TIME PERMITTING), this section. Because tower shaft failure results in the loss of rotation to the engine-driven gearbox and ADG, the initial symptoms are similar to main fuel pump failure. The primary differences are that the rpm indication drops immediately to zero and ENGINE warning light and the SEC caution light illuminate since the engine alternator is no longer providing power to the DEC.

The JFS should be started immediately upon entering the JFS envelope to conserve EPU fuel. The JFS drives the ADG and the engine gearbox which restores rotation to both hydraulic pumps and provides a reduced FLCS PMG output. Depending on JFS performance and load, rpm may even be high enough to restore standby generator power; however, main generator power may cycle on and off. Without the load of the engine, the JFS produces a 30-55 percent rpm indication, which is the speed of the engine gearbox and not the actual engine rpm. The true engine rpm is unknown.

Low Altitude Engine Failure or Flameout

Refer to figures 3-7 and 3-8. Initial reaction to any malfunction at low altitude should be to trade excess airspeed for altitude. Higher altitude translates directly to either additional time to achieve an

airstart or to additional glide range to reach a suitable landing field. Above 310 knots, more time is available by performing a zoom climb using a 3g pullup to 30-degree climb until approaching the desired airspeed (use approximately 50 knots lead point) and then initiating a zero-g pushover. Below 310 knots, more time is available by performing a constant altitude deceleration to the desired airspeed; if required, climb to achieve minimum recommended ejection altitude.

If the zoom results in an altitude below 4000 feet AGL, there may be insufficient time to achieve an airstart prior to reaching minimum recommended ejection altitude. In that case, primary consideration should be given to preparing for ejection; do not delay ejection below 2000 feet AGL.

If low altitude engine failure or flameout occurs:

1. Zoom.
2. Stores – Jettison (if required).
If stores jettison is attempted after main and standby generators drop off line but before EPU generator powers the SMS (approximately 5 seconds delay), stores will not jettison.
3. Perform airstart (if altitude permits). Refer to AIRSTART PROCEDURES, this section.

NOTE

Visually confirm the stores have jettisoned and jettison again if required.

WARNING

Below 4000 feet AGL, there may be insufficient time to perform an airstart prior to minimum recommended ejection altitude.

AIRSTARTS

Refer to figure 3-9. Airstarting the engine does not require exact airspeeds or rpm ranges, but there are key events in the airstart sequence that must be performed in a timely manner in order to have the best chance for an airstart. The key events are initiating the airstart while engine rpm is still high, selecting SEC if there is no light-off prior to rpm decaying below 50 percent in PRI (or immediately when below 10,000 feet AGL), and preserving engine rpm prior to light-off.

Low Altitude Zoom Capability

DATA BASIS ESTIMATED

ENGINE F110-GE-129

CONFIGURATION:


- GW = 23,000-25,000 LB
- DI = 0-50
- LG - UP

CONDITIONS:

- WINDMILLING OR SEIZED ENGINE
- 30-DEGREE CLIMB MAINTAINED TO 170/250 KIAS

3G PULLUP TO 30°
ZOOM CLIMB TO
ACHIEVE:

--- 250 KIAS
— 170 KIAS

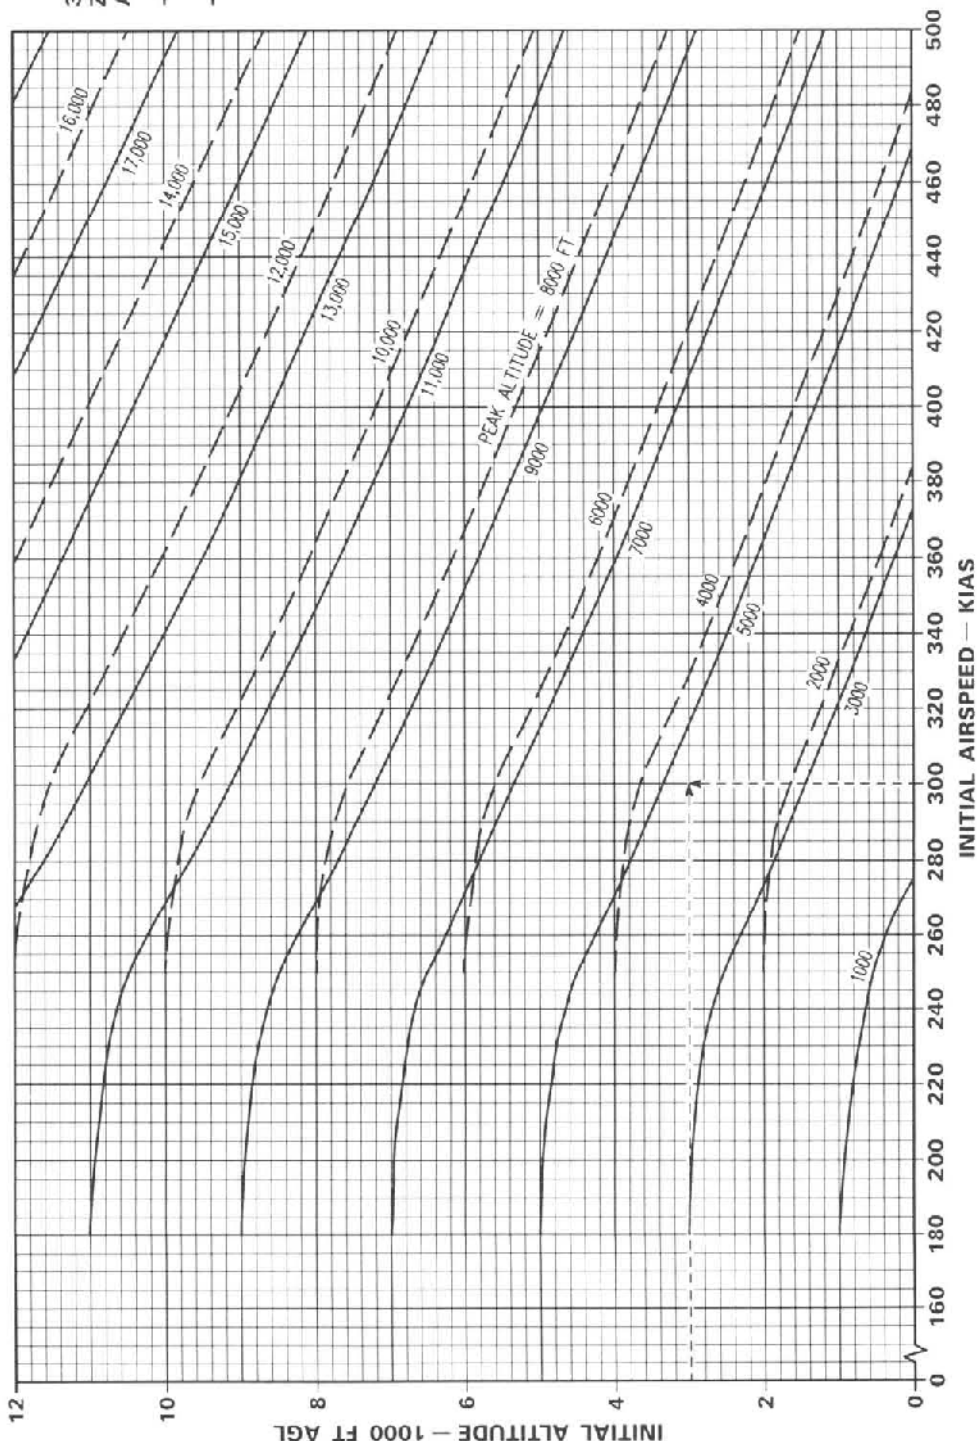

1F-16X-1-4025X ©

Figure 3-7.

Low Altitude Airstart Capability

DATA BASIS ESTIMATED


ENGINE F110-GE-129

CONFIGURATION:

- GW = 23,000-25,000 LB
- DI = 0-50
- LG — UP

CONDITIONS:

- 30° DIVE TO DESCENT KIAS OR 3G PULLUP TO 30° ZOOM CLIMB INITIATED FROM THE AIRSPEED/ALTITUDE EXISTING AT FIRST RECOGNITION OF ENGINE FAILURE
- AIRSTART INITIATED AT START OF DIVE OR ZOOM BY CYCLING THROTTLE TO OFF AND THEN MIDRANGE
- 45 SECONDS ASSUMED AFTER THROTTLE ADVANCE TO ACHIEVE USABLE THRUST (ASSUMES AIRSTART INITIATION AT 25 PERCENT RPM)
- DESCENT AIRSPEED IS 170 KIAS (SEC) (JFS RUN LIGHT ON)

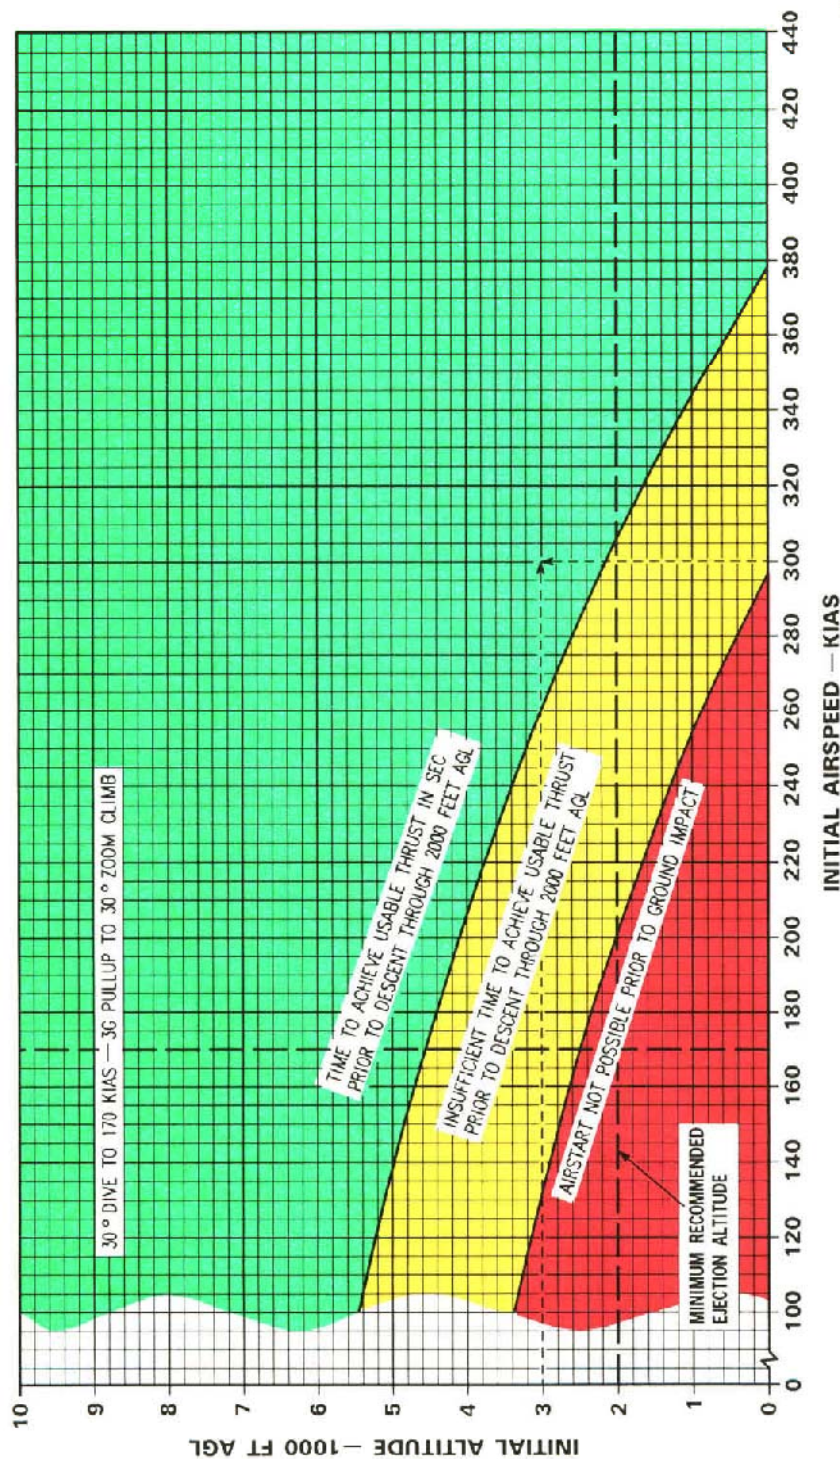

GR1F-16CJ-1-0120A37 ©


Figure 3-8.

Engine RPM and FTIT Response During Spooldown and Airstart

ENGINE F110-GE-129

CONDITIONS:

- DRAG INDEX = 0
- GW = 26,000 LB
- KIAS = 250
- NO WIND

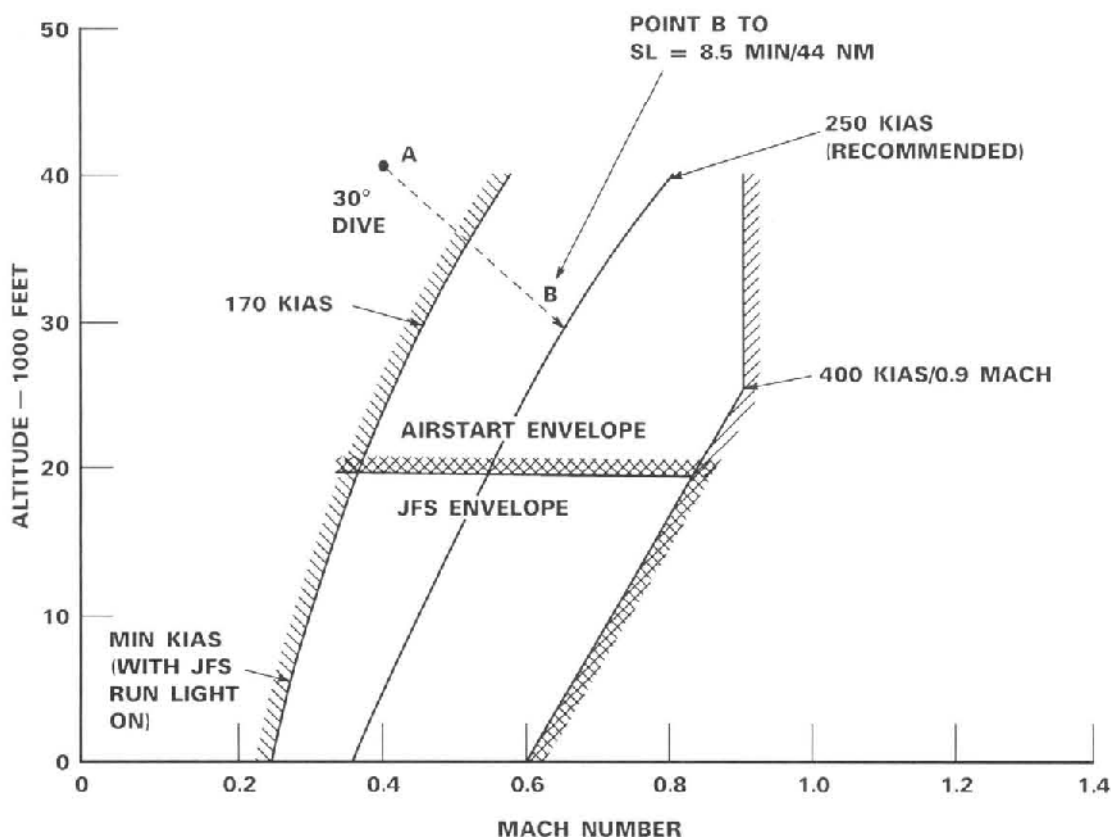
**OPTIMUM FLIGHT PATH DURING AN AIRSTART (TYPICAL)**

Engine out descent flight path maintains the aircraft in the required airstart envelope. A 30-degree dive to descent KIAS is used to approach the airstart envelope (Point A to B).

Airstart is enhanced by increased airspeed, altitudes below 30,000 feet, and light-off at highest possible engine rpm.

1F-16X-1-4024-1A ©

Figure 3-9. (Sheet 1)

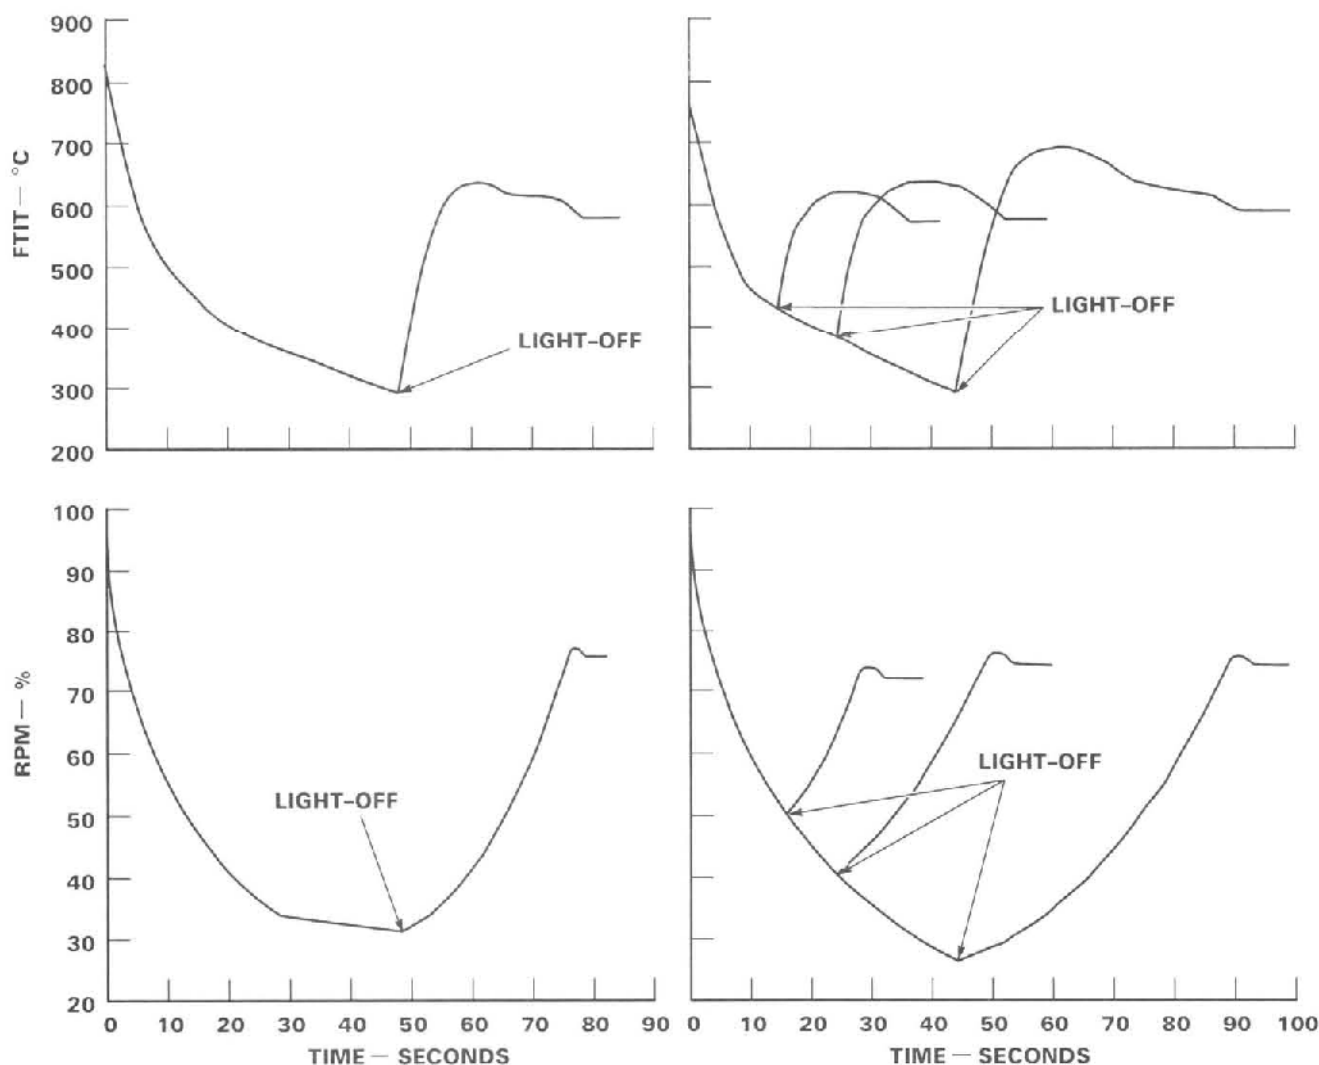

RATE OF ENGINE RPM AND FTIT DECAY AND RECOVERY FOR JFS-ASSISTED AIRSTART AT 20,000 FEET.

Following the rapid FTIT rise and peak after light-off, FTIT slowly decreases approximately 50°C.

Airstarts initiated between 25-50 percent engine rpm are slow to light-off and may take up to 90 seconds to regain usable thrust.

RATE OF ENGINE RPM AND FTIT DECAY AND RECOVERY FOR SPOOLDOWN AIRSTARTS AT 25,000 FEET.

Following the rapid FTIT rise and peak after light-off, FTIT slowly decreases approximately 50°C.

Airstarts initiated between 25-50 percent engine rpm are slow to light-off and may take up to 90 seconds to regain usable thrust.

1F-16X-1 4024 2X©

Figure 3-9. (Sheet 2)

feet AGL), and preserving engine rpm prior to light-off. Factors such as altitude, airspeed, weather, etc., must be considered in determining whether to try an airstart, to accomplish a flameout landing, or to eject. Jettisoning stores reduces altitude loss during an airstart and improves glide ratio during flameout landing. If gliding distance is not a factor, maintain 250 knots or more in order to reduce rpm rate of decay until the JFS can be started. The engine can be airstarted with airspeeds from 170-400 knots/0.9 mach; however, 250 knots provides the best tradeoff of altitude loss, range, and airflow for the engine.

In flight, the throttle must be retarded to OFF then back to the operating range for only four reasons: to reset the overspeed protection logic, to clear a stall, to begin the airstart procedure, or to terminate a hot/hung start. Exact throttle position is not important for an airstart, so any position between IDLE and MAX AB is acceptable; however, the midrange position is preferred because of possible throttle misrigging at IDLE or possible engine overspeed shutdown at MIL or above.

Once the throttle is retarded to OFF and then back to the normal operating range, do not retard the throttle to OFF again during the airstart unless a hot/hung start occurs. Unnecessarily retarding the throttle to OFF terminates any start attempt which may be in progress.

A successful restart depends on many variables: cause of flameout, type of fuel, altitude, airspeed, and engine rpm when the airstart is attempted. High engine rpm is the most important variable and provides the best chance of a successful restart. Therefore, do not delay the initiation of an airstart in an attempt to reach a particular flight condition. Initiate the airstart as soon as it becomes apparent that engine rpm has decayed below in-flight idle (approximately 70 percent rpm) or illumination of the ENGINE warning light, engine instrument indications, and no response to throttle movement confirm a flameout. The best conditions for airstart are below 30,000 feet MSL, at 250 knots or more, and with high engine rpm.

At medium and high altitudes, the airstart attempt should be started in the engine control mode selected by the DEC. The DEC contains diagnostic logic

designed to identify PRI engine control failures and may automatically transfer to SEC. If there is no indication of a light-off before rpm decays below 50 percent, place ENG CONT switch to SEC (even if the SEC caution light is on) and continue the airstart attempt. At low altitude (below 10,000 feet AGL), SEC should be selected as soon as possible after initiating the airstart.

Of equal importance to selecting SEC when required is preserving engine rpm. The JFS should be started as soon as the aircraft is in the JFS envelope. The advantage of using the JFS to assist the airstart is that once the JFS RUN light is on, airspeed can be reduced. Under normal conditions the JFS will motor the engine at a minimum of 25 percent.

An airstart can be rapid if light-off occurs above 60 percent rpm. Airstarts initiated between 50-25 percent engine rpm are slow to light off and may take up to 90 seconds to regain usable thrust. If altitude is available, increasing airspeed can assist engine acceleration and decrease the time to regain usable thrust once a light-off is achieved. As long as engine rpm continues to increase, this condition should not be considered as a hung/no start. Spooldown airstarts initiated below 25 percent rpm have been successful during flight tests, but spool up to usable thrust may take more time than is available. Keep engine rpm at 25 percent or above during spooldown airstarts, if possible.

Following the rapid FTIT rise and peak of a light-off, FTIT slowly decreases approximately 50°C. Therefore, do not confuse a drop in FTIT as an unsuccessful airstart unless accompanied by decreasing rpm as well.

High Altitude Airstart Considerations

As altitude is increased above 30,000 feet MSL, the probability of a successful airstart can be improved by attempting the airstart as soon as possible (before rpm decays below approximately 50 percent) and by quickly descending to altitudes below 30,000 feet MSL after the airstart is initiated. Airspeeds above 250 knots (400 knots/0.9 mach maximum) should be considered as a means to reduce altitude and increase the probability of a successful airstart. Spooldown airstarts can be achieved with rpm as low as 25 percent, but not at all airspeeds and altitudes.

At high altitudes, dive as required to maintain speed in the 250-400 knot/0.9 mach range. Unless an airstart is obviously impossible (total lack of fuel, tower shaft failure, engine seizure, etc.), do not become tempted to establish a maximum range or maximum endurance glide. The first consideration should be an immediate spooldown airstart attempt even if the engine fails for no apparent reason. If a spooldown airstart is not successful before reaching 20,000 feet MSL, a JFS-assisted airstart should be attempted. When below 20,000 feet MSL, turn JFS on. Activating the JFS above 20,000 feet MSL is prohibited since successful JFS start/motoring of engine is unlikely and the brake/JFS accumulators will be depleted. If the JFS RUN light is on, airspeed may be reduced to achieve maximum range or maximum endurance (200 or 170 knots, respectively, plus 5 knots per 1000 pounds of fuel/store weights over ☒ 1000, ☐ zero pounds). Time constraints due to EPU fuel consumption must also be considered. A maximum range or maximum endurance glide from above approximately 35,000 feet MSL may exhaust EPU fuel prior to landing. (Refer to T.O. GR1F-16CJ-1-1, figure B6-3.) With the JFS running, EPU fuel consumption is also reduced.

Low Altitude Airstart Considerations

Initiate the airstart as soon as possible. After initiating a zoom climb and jettisoning stores (if required), retard the throttle to OFF then advance the throttle to the normal operating range. Place the ENG CONT switch to SEC and turn on the JFS (START 2) to assist the airstart.

Following a zoom climb, plan to arrive at 250 knots until the JFS RUN light is on; airspeed may then be reduced to achieve maximum range or maximum endurance (200 or 170 knots, respectively, plus 5 knots per 1000 pounds of fuel/store weights over ☒ 1000, ☐ zero pounds). If a higher airspeed is maintained or an attempt is made to gain airspeed to delay the rpm decay, available time may be reduced to the point that an airstart is not possible.

During any low altitude airstart attempt, constantly evaluate altitude above the ground relative to airstart success. Do not delay ejection below 2000 feet AGL unless the engine is producing thrust capable of maintaining level flight or safely controlling the sink rate or unless a flameout landing can be accomplished.

Airstart Procedures

To begin the airstart sequence, retard the throttle to OFF; then immediately advance the throttle back into the normal operating range, preferably midrange.

NOTE

If the throttle is retarded to OFF to clear a stall, it should be maintained in OFF for a few seconds to allow the stall to clear.

After throttle advance, monitor for signs of a light-off before rpm decays below 50 percent (characterized by a rapid rise in FTIT accompanied by a slow increase in rpm). If rpm and FTIT continue to decay after rpm drops below 50 percent, place the ENG CONT switch to SEC (even if the SEC caution light is illuminated).

If a hot/hung start occurs, retard the throttle to OFF and allow the FTIT to drop to below 700°C before advancing the throttle. Increasing the airspeed (maximum of 400 knots/0.9 mach) should help the next airstart to be cooler. If the condition persists, retard the throttle to OFF, place the ENG CONT switch to SEC, and allow the FTIT to decrease below 700°C before advancing the throttle.

After entering the JFS envelope, start the JFS to assist in preserving rpm. With the JFS RUN light on, airspeed may be reduced to achieve maximum range/endurance.

If the JFS stops running or fails to run within 30 seconds, do not reattempt a JFS start until the brake/JFS accumulators have had time to recharge. Allow 1 minute of engine rotation (either windmilling or JFS-assisted) at 12 percent rpm or above to insure that the brake/JFS accumulators are fully recharged. Recharging begins 3-4 seconds before the JFS RUN light illuminates or 30 seconds after selecting a start position (in the event of a JFS failure to run). Recharging occurs regardless of JFS switch position.

In the event of a JFS shutdown, the JFS switch does not relatch in either start position while the JFS is spooling down. Spooldown from full governed speed takes approximately 17 seconds. The JFS switch must be cycled to OFF and then START 2 to reinitiate a JFS start. It is possible to complete the spooldown before the brake/JFS accumulators are recharged if the JFS ran for only a short time.

It is possible the engine may not respond properly to throttle movement following an otherwise successful airstart. If this occurs or if thrust is insufficient to ensure a safe landing, refer to ABNORMAL ENGINE RESPONSE, this section.

Oil pressure is directly related to rpm. Do not confuse a low oil pressure indication due to windmilling rpm as an oil system malfunction.

Factors such as altitude, airspeed, weather, etc., must be considered in determining whether to try an airstart, to accomplish a flameout landing, or to eject. Jettisoning stores reduces altitude loss during an airstart and improves glide ratio during flameout landing. If gliding distance is not a factor, maintain 250 knots or more in order to reduce rpm rate of decay until the JFS can be started. The engine can be airstarted with airspeeds from 170-400 knots/0.9 mach; however, 250 knots provides the best tradeoff of altitude loss, range, and airflow for the engine.

In flight, the throttle must be retarded to OFF then back to the operating range for only four reasons: to reset the overspeed protection logic, to clear a stall, to begin the airstart procedure, or to terminate a hot/hung start. Exact throttle position is not important for an airstart, so any position between IDLE and MAX AB is acceptable; however, the midrange position is preferred because of possible throttle misrigging at IDLE or possible engine overspeed shutdown at MIL or above.

Once the throttle is retarded to OFF and then back to the normal operating range, do not retard the throttle to OFF again during the airstart unless a hot/hung start occurs. Unnecessarily retarding the throttle to OFF terminates any start attempt which may be in progress.

A successful restart depends on many variables: cause of flameout, type of fuel, altitude, airspeed, and engine rpm when the airstart is attempted. High engine rpm is the most important variable and provides the best chance of a successful restart. Therefore, do not delay the initiation of an airstart in an attempt to reach a particular flight condition. Initiate the airstart as soon as it becomes apparent that engine rpm has decayed below in-flight idle (approximately 70 percent rpm) or illumination of the ENGINE warning light, engine instrument indications, and no response to throttle movement confirm a flameout. The best conditions for airstart are below 30,000 feet MSL, at 250 knots or more, and with high engine rpm.

At medium and high altitudes, the airstart attempt should be started in the engine control mode selected by the DEC. The DEC contains diagnostic logic designed to identify PRI engine control failures and may automatically transfer to SEC. If there is no indication of a light-off before rpm decays below 50 percent, place ENG CONT switch to SEC (even if the SEC caution light is on) and continue the airstart attempt. At low altitude (below 10,000 feet AGL), SEC should be selected as soon as possible after initiating the airstart.

Of equal importance to selecting SEC when required is preserving engine rpm. The JFS should be started as soon as the aircraft is in the JFS envelope. The advantage of using the JFS to assist the airstart is that once the JFS RUN light is on, airspeed can be reduced. Under normal conditions the JFS will motor the engine at a minimum of 25 percent.

An airstart can be rapid if light-off occurs above 60 percent rpm. Airstarts initiated between 50-25 percent engine rpm are slow to light off and may take up to 90 seconds to regain usable thrust. If altitude is available, increasing airspeed can assist engine acceleration and decrease the time to regain usable thrust once a light-off is achieved. As long as engine rpm continues to increase, this condition should not be considered as a hung/no start. Spooldown airstarts initiated below 25 percent rpm have been successful during flight tests, but spool up to usable thrust may take more time than is available. Keep engine rpm at 25 percent or above during spooldown airstarts, if possible.

Following the rapid FTIT rise and peak of a light-off, FTIT slowly decreases approximately 50°C. Therefore, do not confuse a drop in FTIT as an unsuccessful airstart unless accompanied by decreasing rpm as well.

High Altitude Airstart Considerations

As altitude is increased above 30,000 feet MSL, the probability of a successful airstart can be improved by attempting the airstart as soon as possible (before rpm decays below approximately 50 percent) and by quickly descending to altitudes below 30,000 feet MSL after the airstart is initiated. Airspeeds above 250 knots (400 knots/0.9 mach maximum) should be considered as a means to reduce altitude and increase the probability of a successful airstart. Spooldown airstarts can be achieved with rpm as low as 25 percent, but not at all airspeeds and altitudes.

At high altitudes, dive as required to maintain speed in the 250-400 knot/0.9 mach range. Unless an airstart is obviously impossible (total lack of fuel, tower shaft failure, engine seizure, etc.), do not become tempted to establish a maximum range or maximum endurance glide. The first consideration should be an immediate spooldown airstart attempt even if the engine fails for no apparent reason. If a spooldown airstart is not successful before reaching 20,000 feet MSL, a JFS-assisted airstart should be attempted. When below 20,000 feet MSL, turn JFS on. Activating the JFS above 20,000 feet MSL is prohibited since successful JFS start/motoring of engine is unlikely and the brake/JFS accumulators will be depleted. If the JFS RUN light is on, airspeed may be reduced to achieve maximum range or maximum endurance (200 or 170 knots, respectively, plus 5 knots per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds). Time constraints due to EPU fuel consumption must also be considered. A maximum range or maximum endurance glide from above approximately 35,000 feet MSL may exhaust EPU fuel prior to landing. (Refer to T.O. GR1F-16CJ-1-1, figure B6-3.) With the JFS running, EPU fuel consumption is also reduced.

Low Altitude Airstart Considerations

Initiate the airstart as soon as possible. After initiating a zoom climb and jettisoning stores (if required), retard the throttle to OFF then advance the throttle to the normal operating range. Place the ENG CONT switch to SEC and turn on the JFS (START 2) to assist the airstart.

Following a zoom climb, plan to arrive at 250 knots until the JFS RUN light is on; airspeed may then be reduced to achieve maximum range or maximum endurance (200 or 170 knots, respectively, plus 5 knots per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds). If a higher airspeed is maintained or an attempt is made to gain airspeed to delay the rpm decay, available time may be reduced to the point that an airstart is not possible.

During any low altitude airstart attempt, constantly evaluate altitude above the ground relative to airstart success. Do not delay ejection below 2000 feet AGL unless the engine is producing thrust capable of maintaining level flight or safely controlling the sink rate or unless a flameout landing can be accomplished.

Airstart Procedures

To begin the airstart sequence, retard the throttle to OFF; then immediately advance the throttle back into the normal operating range, preferably midrange.

NOTE

If the throttle is retarded to OFF to clear a stall, it should be maintained in OFF for a few seconds to allow the stall to clear.

After throttle advance, monitor for signs of a light-off before rpm decays below 50 percent (characterized by a rapid rise in FTIT accompanied by a slow increase in rpm). If rpm and FTIT continue to decay after rpm drops below 50 percent, place the ENG CONT switch to SEC (even if the SEC caution light is illuminated).

If a hot/hung start occurs, retard the throttle to OFF and allow the FTIT to drop to below 700°C before advancing the throttle. Increasing the airspeed (maximum of 400 knots/0.9 mach) should help the next airstart to be cooler. If the condition persists, retard the throttle to OFF, place the ENG CONT switch to SEC, and allow the FTIT to decrease below 700°C before advancing the throttle.

After entering the JFS envelope, start the JFS to assist in preserving rpm. With the JFS RUN light on, airspeed may be reduced to achieve maximum range/endurance.

If the JFS stops running or fails to run within 30 seconds, do not reattempt a JFS start until the brake/JFS accumulators have had time to recharge. Allow 1 minute of engine rotation (either windmilling or JFS-assisted) at 12 percent rpm or above to insure that the brake/JFS accumulators are fully recharged. Recharging begins 3-4 seconds before the JFS RUN light illuminates or 30 seconds after selecting a start position (in the event of a JFS failure to run). Recharging occurs regardless of JFS switch position.

In the event of a JFS shutdown, the JFS switch does not relatch in either start position while the JFS is spooling down. Spooldown from full governed speed takes approximately 17 seconds. The JFS switch must be cycled to OFF and then START 2 to reinitiate a JFS start. It is possible to complete the spooldown before the brake/JFS accumulators are recharged if the JFS ran for only a short time.

It is possible the engine may not respond properly to throttle movement following an otherwise successful airstart. If this occurs or if thrust is insufficient to ensure a safe landing, refer to ABNORMAL ENGINE RESPONSE, this section.

When the airstart is completed and usable thrust is regained, turn the JFS off. Reset the main generator using the ELEC CAUTION RESET button and verify MAIN GEN and STBY GEN lights are off. Cycle the EPU switch to OFF and then back to NORM.

NOTE

The VHF radio is not powered when the EPU is running.

To accomplish an airstart:

1. Throttle – OFF, then midrange.

CAUTION

- FTIT should decrease rapidly when throttle is OFF. If FTIT does not decrease rapidly, verify that the throttle is OFF.
- Do not mistake a rapid initial FTIT rise during an airstart as an indication of a hot start. Typically, airstarts are characterized by rapidly increasing FTIT with a slow increase in rpm.

If a relight does not occur before rpm decays below 50 percent or if below 10,000 feet AGL:

2. ENG CONT switch – SEC (even if SEC caution light is on).
3. Airspeed – Attain approximately 250 knots or establish maximum range or endurance airspeed (200 or 170 knots, respectively, plus 5 knots per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds) with JFS RUN light on.

Above 30,000 feet MSL, airspeeds in the 250-400 knot/0.9 mach range should be considered to reduce altitude and increase the probability of a successful airstart.

NOTE

If maximum gliding range is not a factor, consider maintaining 250 knots or more above 10,000 feet AGL to provide best restart conditions (in case of JFS failure). Below 10,000 feet AGL with the JFS RUN light on, maintain maximum range or maximum endurance airspeed.

4. JFS switch – START 2 below 20,000 feet MSL and below 400 knots.

NOTE

- If the JFS switch is erroneously placed to START 1, leave it there.
- If the JFS RUN light does not illuminate or goes off once illuminated, place the JFS switch to OFF and reattempt START 2 when the brake/JFS accumulators are recharged. The JFS switch does not relatch in either start position while the JFS is spooling down.

If engine rpm rolls back or hangs below in-flight idle (approximately 70 percent) and FTIT exceeds 935°C:

5. Throttle – OFF, then midrange.
Allow FTIT to drop below 700°C before advancing the throttle.
6. Airspeed – Increase (400 knots/0.9 mach maximum).

If hung start/hot start persists:

7. Throttle – OFF.
8. ENG CONT switch – SEC.

NOTE

The proximity of the ENG CONT switch to the JFS switch makes the JFS switch susceptible to being bumped to OFF when selecting SEC.

9. Throttle – Midrange.
Allow FTIT to drop below 700°C before advancing the throttle.

If engine does not respond normally after airstart is completed:

10. Refer to ABNORMAL ENGINE RESPONSE, this section.

If engine responds normally:

10. JFS switch – OFF.
11. ELEC CAUTION RESET button – Depress.
Verify MAIN GEN and STBY GEN lights are off.
12. EPU switch – OFF, then NORM.

13. ADI - Check for presence of OFF and/or AUX warning flags.

If warning flag(s) is in view, refer to TOTAL INS FAILURE, this section.

WARNING

If only AUX flag is in view, pitch and roll attitude information is likely to be erroneous due to INS autorestart in the attitude mode when other than straight and level, unaccelerated flight conditions existed.

14. Land as soon as possible.
15. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

FLAMEOUT LANDING

The decision to eject or make a flameout landing rests with the pilot. Considerations for attempting a flameout landing must include:

- Nature of the emergency.
- Weather conditions.
- Day or night.
- Proximity of a suitable landing runway.
- Proficiency in performing simulated flameout (SFO) landings.

Due to the capabilities of the ejection seat, the entire approach is within the ejection envelope; however, ejection should not be delayed in an attempt to salvage a questionable approach. When performing a flameout landing, the aircraft can safely stop (dry runway without arresting gear) in approximately twice the computed ground roll distance (8000-foot minimum runway length recommended), assuming a touchdown no more than 1/3 of the way down the runway at 11-13 degrees AOA.

To perform a flameout landing, turn immediately toward the desired runway. Jettison stores and establish maximum range airspeed. Maximum range airspeed may be less than the minimum airstart airspeed. If range to the desired runway is critical, the decision to attempt an airstart or a flameout landing rests with the pilot.

NOTE

- During an airstart attempt, do not slow below the minimum airstart airspeed.
- If the engine is still running, but thrust is insufficient to sustain level flight, treat it as a flameout situation.

Maximum range airspeed varies only with GW and is not affected by drag index. Maximum range airspeed is 200 knots for a GW of 20,000 pounds and increases 5 knots per 1000 pounds of actual GW above 20,000 pounds. For most circumstances, sufficient accuracy is obtained by adding 5 knots per 1000 pounds of fuel/store weights over **C** 1000, **D** zero pounds.

NOTE

- This formula is based on the average aircraft operating weight. Refer to T.O. GR1F-16CJ-1-1, PART 1, DRAG INDEXES AND WEIGHTS - BASIC AIRCRAFT. If range to desired runway is critical, maximum range airspeed may be calculated using actual GW in excess of 20,000 pounds.
- For a 10,000-foot descent (LG up), each 10 knots above or below maximum range airspeed decreases glide range up to 1/4 nm.

The maximum range airspeed equates to approximately 7 degrees AOA (any GW or drag index) and provides a glide ratio of approximately 7 nm per 5000 feet AGL (a no wind condition). Retaining stores or flying into a headwind decreases glide range significantly.

The EPU should be on and, if aircraft fuel is available, the JFS should be started using START 2 when below 20,000 feet MSL and below 400 knots unless the engine is either seized or anticipated to seize. The EPU should provide a minimum operation of 10 minutes (HYDRAZN light on) with normal flight control demands before EPU fuel depletion. Operating time can be extended to as much as 15 minutes if the JFS is running and flight control inputs are minimized.

If expected time to landing exceeds expected EPU operating time and excess energy is available, a steeper/faster descent may be flown. The JFS also provides hydraulic pressure for normal braking and NWS after landing.

When the airstart is completed and usable thrust is regained, turn the JFS off. Reset the main generator using the ELEC CAUTION RESET button and verify MAIN GEN and STBY GEN lights are off. Cycle the EPU switch to OFF and then back to NORM.

NOTE

The VHF radio is not powered when the EPU is running.

To accomplish an airstart:

1. Throttle – OFF, then midrange.

CAUTION

- FTIT should decrease rapidly when throttle is OFF. If FTIT does not decrease rapidly, verify that the throttle is OFF.
- Do not mistake a rapid initial FTIT rise during an airstart as an indication of a hot start. Typically, airstarts are characterized by rapidly increasing FTIT with a slow increase in rpm.

If a relight does not occur before rpm decays below 50 percent or if below 10,000 feet AGL:

2. ENG CONT switch – SEC (even if SEC caution light is on).
3. Airspeed – Attain approximately 250 knots or establish maximum range or endurance airspeed (200 or 170 knots, respectively, plus 5 knots per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds) with JFS RUN light on.

Above 30,000 feet MSL, airspeeds in the 250-400 knot/0.9 mach range should be considered to reduce altitude and increase the probability of a successful airstart.

NOTE

If maximum gliding range is not a factor, consider maintaining 250 knots or more above 10,000 feet AGL to provide best restart conditions (in case of JFS failure). Below 10,000 feet AGL with the JFS RUN light on, maintain maximum range or maximum endurance airspeed.

4. JFS switch – START 2 below 20,000 feet MSL and below 400 knots.

NOTE

- If the JFS switch is erroneously placed to START 1, leave it there.
- If the JFS RUN light does not illuminate or goes off once illuminated, place the JFS switch to OFF and reattempt START 2 when the brake/JFS accumulators are recharged. The JFS switch does not relatch in either start position while the JFS is spooling down.

If engine rpm rolls back or hangs below in-flight idle (approximately 70 percent) and FTIT exceeds 935°C:

5. Throttle – OFF, then midrange.
Allow FTIT to drop below 700°C before advancing the throttle.
6. Airspeed – Increase (400 knots/0.9 mach maximum).

If hung start/hot start persists:

7. Throttle – OFF.
8. ENG CONT switch – SEC, if in PRI; PRI, if in SEC.

NOTE

- In certain circumstances, the engine may malfunction in SEC. Returning to PRI may result in attaining usable thrust.
 - The proximity of the ENG CONT switch to the JFS switch makes the JFS switch susceptible to being bumped to OFF when selecting SEC.
9. Throttle – Midrange.
Allow FTIT to drop below 700°C before advancing the throttle.
- If engine does not respond normally after airstart is completed:
10. ENG CONT switch – SEC.
 11. Airspeed – 250 knots (if thrust is too low to sustain level flight).
 12. Throttle – Verify engine responds to throttle movement; set as desired.

If engine does not respond normally after an airstart is complete in SEC, if thrust is still insufficient to make a safe landing, or abnormal engine response is still present:

13. ENG CONT switch – **C** **DF** PRI, **DR** NORM.

If engine responds normally:

14. JFS switch – OFF.
15. ELEC CAUTION RESET button – Depress.
Verify MAIN GEN and STBY GEN lights are off.
16. EPU switch – OFF, then NORM.
17. ADI – Check for presence of OFF and/or AUX warning flags.
If warning flag(s) is in view, refer to TOTAL INS FAILURE, this section.

WARNING

If only AUX flag is in view, pitch and roll attitude information is likely to be erroneous due to INS autorestart in the attitude mode when other than straight and level, unaccelerated flight conditions existed.

18. Land as soon as possible.
19. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

FLAMEOUT LANDING

The decision to eject or make a flameout landing rests with the pilot. Considerations for attempting a flameout landing must include:

- Nature of the emergency.
- Weather conditions.
- Day or night.
- Proximity of a suitable landing runway.
- Proficiency in performing simulated flameout (SFO) landings.

Due to the capabilities of the ejection seat, the entire approach is within the ejection envelope; however, ejection should not be delayed in an attempt to salvage a questionable approach. When performing a flameout landing, the aircraft can safely stop (dry runway without arresting gear) in approximately twice the computed ground roll distance (8000-foot minimum runway length recommended), assuming a touchdown no more than 1/3 of the way down the runway at 11-13 degrees AOA.

To perform a flameout landing, turn immediately toward the desired runway. Jettison stores and establish maximum range airspeed. Maximum range airspeed may be less than the minimum airstart airspeed. If range to the desired runway is critical, the decision to attempt an airstart or a flameout landing rests with the pilot.

NOTE

- During an airstart attempt, do not slow below the minimum airstart airspeed.
- If the engine is still running, but thrust is insufficient to sustain level flight, treat it as a flameout situation.

Maximum range airspeed varies only with GW and is not affected by drag index. Maximum range airspeed is 200 knots for a GW of 20,000 pounds and increases 5 knots per 1000 pounds of actual GW above 20,000 pounds. For most circumstances, sufficient accuracy is obtained by adding 5 knots per 1000 pounds of fuel/store weights over **C** 1000, **D** zero pounds.

NOTE

- This formula is based on the average aircraft operating weight. Refer to T.O. GR1F-16CJ-1-1, PART 1, DRAG INDEXES AND WEIGHTS – BASIC AIRCRAFT. If range to desired runway is critical, maximum range airspeed may be calculated using actual GW in excess of 20,000 pounds.
- For a 10,000-foot descent (LG up), each 10 knots above or below maximum range airspeed decreases glide range up to 1/4 nm.

The maximum range airspeed equates to approximately 7 degrees AOA (any GW or drag index) and provides a glide ratio of approximately 7 nm per 5000 feet AGL (a no wind condition). Retaining stores or flying into a headwind decreases glide range significantly.

The EPU should be on and, if aircraft fuel is available, the JFS should be started using START 2 when below 20,000 feet MSL and below 400 knots unless the engine is either seized or anticipated to seize. The EPU should provide a minimum operation

of 10 minutes (HYDRAZN light on) with normal flight control demands before EPU fuel depletion. Operating time can be extended to as much as 15 minutes if the JFS is running and flight control inputs are minimized.

If expected time to landing exceeds expected EPU operating time and excess energy is available, a steeper/faster descent may be flown. The JFS also provides hydraulic pressure for normal braking and NWS after landing.

(

(

(

(

(

(

(

(

(

(

(

When bleed air is no longer available to operate the EPU, confirm that the EPU is operating on hydrazine (EPU run and HYDRAZN lights on) since the JFS alone does not provide adequate hydraulic pressure to land the aircraft. If the EPU is inoperative, maneuver the aircraft as necessary on JFS-assisted hydraulic pressure to a more favorable ejection envelope and initiate ejection.

There are two basic types of flameout landing patterns: the overhead approach (figure 3-10) or the straight-in approach (figure 3-11). The overhead approach is preferred as it affords the most opportunities to properly manage available energy while providing the best visual cues for pattern corrections. The overhead approach may be entered at any position, provided the proper altitude for that point in the pattern can be obtained. The main concern is to reach high key, low key, or base key at or above the recommended minimum key altitudes. A straight-in approach is an alternate approach when the overhead approach cannot be attained. For both approaches, the initial aimpoint should be approximately 1/3 of the way down the runway.

Overhead Approach

Refer to figure 3-10. Plan to arrive over the landing runway (high key) at 7000-10,000 feet AGL. The high key position may be approached from any direction.

The recommended key altitudes are based on flying a 360-degree descending turn from high key with the LG down. The altitudes vary with GW and with additional drag due to stores. The recommended high key altitude is 7000 feet AGL plus 500 feet per 1000 pounds of fuel/store weights over **C** 1000, **D** zero pounds. The recommended low key altitude is 3000 feet AGL plus 250 feet per 1000 pounds of fuel/store weights over **C** 1000, **D** zero pounds. These formulas include compensation for stores drag effects; thus, no additional correction is required.

If altitude will be significantly higher at high key, some form of altitude dissipating maneuver such as a dive, gentle S-turns, or a 360-degree descending turn should be used. Speedbrakes also may be used to lose excess altitude. However, if the speedbrakes are not closed when a satisfactory flightpath is reached, the added drag may preclude a successful flameout approach.

After departing high key, all attention should be directed toward a successful landing. If actual altitude at high key was below the recommended altitude, fly maximum range airspeed with the LG up until a satisfactory flightpath is reached and then lower the LG. Optimum LG down airspeed is 10 knots less than maximum range (LG up) airspeed. Minimum LG down airspeed is 20 knots less than maximum range (LG up) airspeed and provides sufficient maneuverability to arrest the high sink rate associated with a flameout approach. Optimum angle of bank is 50 degrees with the LG up and 55 degrees with the LG down. Bank angles more than 10 degrees above/below optimum result in a significant increase in altitude loss per degree of turn and may preclude a successful flameout approach.

NOTE

- Delaying LG extension until low key allows successful completion of the overhead approach from as low as 1500 feet below the recommended high key altitude.
- Altitude loss for a 360-degree descending turn with the LG down increases up to 500 feet for every 10 knots above optimum LG down airspeed.
- Altitude loss for a 360-degree descending turn with the LG down increases up to 500 feet for each 5 degrees above/below the optimum bank angle.

The ground track of a flameout/SFO overhead approach is approximately the same as that of a normal overhead approach except the final approach is approximately 3/4 nm long. Avoid rapid flight control inputs which use excessive EPU fuel and may exceed the emergency hydraulic pump capability.

WARNING


If EPU fuel quantity is below 25 percent at high key (20 percent with the JFS running), a flameout landing should not be attempted since adequate hydraulic pressure may not be available through the landing.

Flameout Landing Pattern (Typical)


(OVERHEAD APPROACH)

NOTES:

1. Jettison stores (if required).
2. Maximum range (LG up) airspeed is 200 knots. Optimum airspeed (LG down) is 190 knots. Minimum LG down airspeed is 180 knots. Increase airspeeds by 5 knots per 1000 pounds of fuel/store weights over **C** 1000, **D** zero pounds.
3. Maximum range (LG up) airspeed equates to approximately 7 degrees AOA (any GW or drag index) and provides a glide ratio of approximately 7 nm per 5000 feet AGL. If stores are retained, glide ratio decreases.
4. Altitudes:
 - High Key — 7000–10,000 feet AGL
Recommended altitude is 7000 feet AGL plus 500 feet per 1000 pounds of fuel/store weights over **C** 1000, **D** zero pounds.
 - Low Key — 3000–5000 feet AGL
Recommended altitude is 3000 feet AGL plus 250 feet per 1000 pounds of fuel/store weights over **C** 1000, **D** zero pounds.
 - Base Key — 2000 feet AGL minimum
5. Optimum bank angles are 50 degrees (LG up) and 55 degrees (LG down) for least altitude lost per degree of turn.

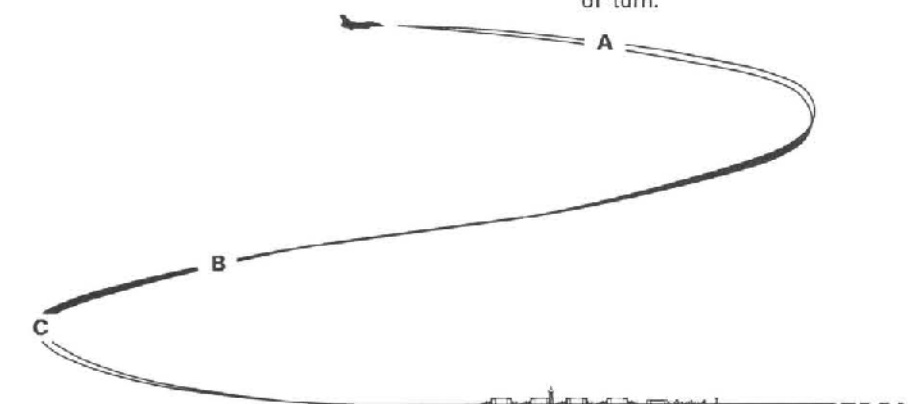

- A. HIGH KEY** — Above a point approximately 1/3 of the way down the runway
- B. LOW KEY** — Abeam point of rollout on final
- C. BASE KEY** — Midpoint of turn from downwind to final

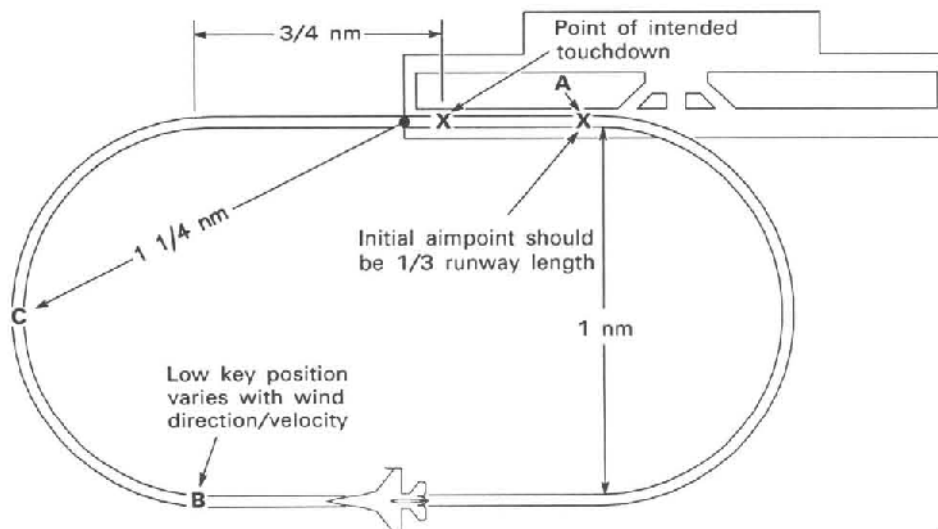

GR1F-16CJ-1-0123X37®

Figure 3-10. (Sheet 1)

Flameout Landing Pattern (Typical)


(OVERHEAD APPROACH)

NOTES:

6. With FCC off, HUD continues to compute flight-path marker and to position scales for use during flameout approach.
7. Frost or condensation on the canopy could restrict visibility during flameout approach. Place AIR SOURCE knob to RAM and place DEFOG lever forward below 25,000 feet MSL.
8. Time constraints due to EPU fuel consumption must be considered as well as distance to be covered. To estimate required EPU fuel for a nonstandard approach, use 15 percent per minute as a basis for computation.
9. Starting JFS reduces load on EPU, conserves EPU fuel, and partially restores hydraulic system B.
10. If alternate LG extension is used, the NLG may not indicate down and locked until airspeed is reduced below 190 knots.

WARNING

- The JFS alone does not provide adequate hydraulic pressure to land the aircraft.
- Do not allow airspeed to decrease below minimum LG down airspeed.
- Eject if it becomes obvious that a safe landing cannot be made. Ejection can be accomplished at any point in the pattern; however, do not delay ejection below 2000 feet AGL in an attempt to salvage a questionable approach.

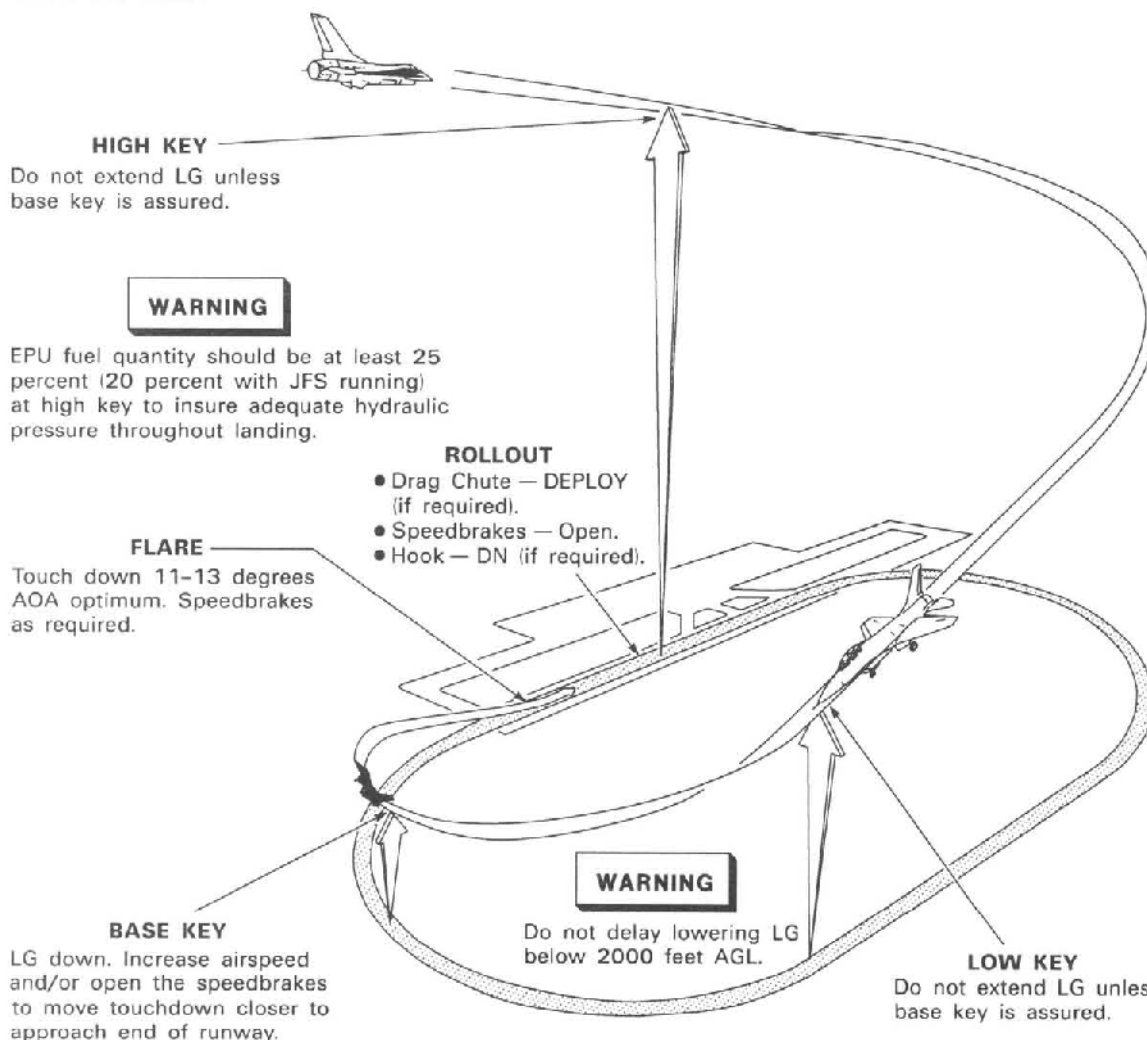

GR1F-16CJ-1-0124X37©

Figure 3-10. (Sheet 2)

Flameout Landing Pattern (Typical)

(STRAIGHT-IN APPROACH)

NOTES:


1. Jettison stores (if required).
2. Maximum range (LG up) airspeed is 200 knots. Optimum airspeed (LG down) is 190 knots. Minimum LG down airspeed is 180 knots. Increase airspeeds by 5 knots per 1000 pounds of fuel/store weights over **C** 1000, **D** zero pounds.
3. Maximum range (LG up) airspeed equates to approximately 7 degrees AOA (any GW or drag index) and provides a glide ratio of approximately 7 nm for each 5000 feet AGL. If stores are retained, glide ratio decreases.
4. Minimum altitudes are based on an LG up glide at maximum range airspeed to 2000 feet AGL followed by an LG down glide at optimum LG down airspeed to the runway for a drag index of 100.
5. After lowering LG, glide range decreases by approximately 30 percent. Airspeed greater than optimum LG down airspeed significantly increases energy loss rate and decreases glide range.
6. With FCC off, HUD continues to compute flight-path marker and to position scales for use during flameout approach.
7. Frost or condensation on the canopy could restrict visibility during flameout approach. Place AIR SOURCE knob to RAM and place DEFOG lever forward below 25,000 feet MSL.
8. Time constraints due to EPU fuel consumption must be considered as well as distance to be covered. To estimate required EPU fuel for a nonstandard approach, use 15 percent per minute as a basis for computation.
9. Starting JFS reduces load on EPU, conserves EPU fuel, and partially restores hydraulic system B.
10. If alternate LG extension is used, the NLG may not indicate down and locked until airspeed is reduced below 190 knots.

ROLLOUT

- Drag Chute — DEPLOY (if required).
- Speedbrakes — Open.
- Hook — DN (if required).

FLARE

Touch down 11–13 degrees AOA optimum. Speedbrakes as required.

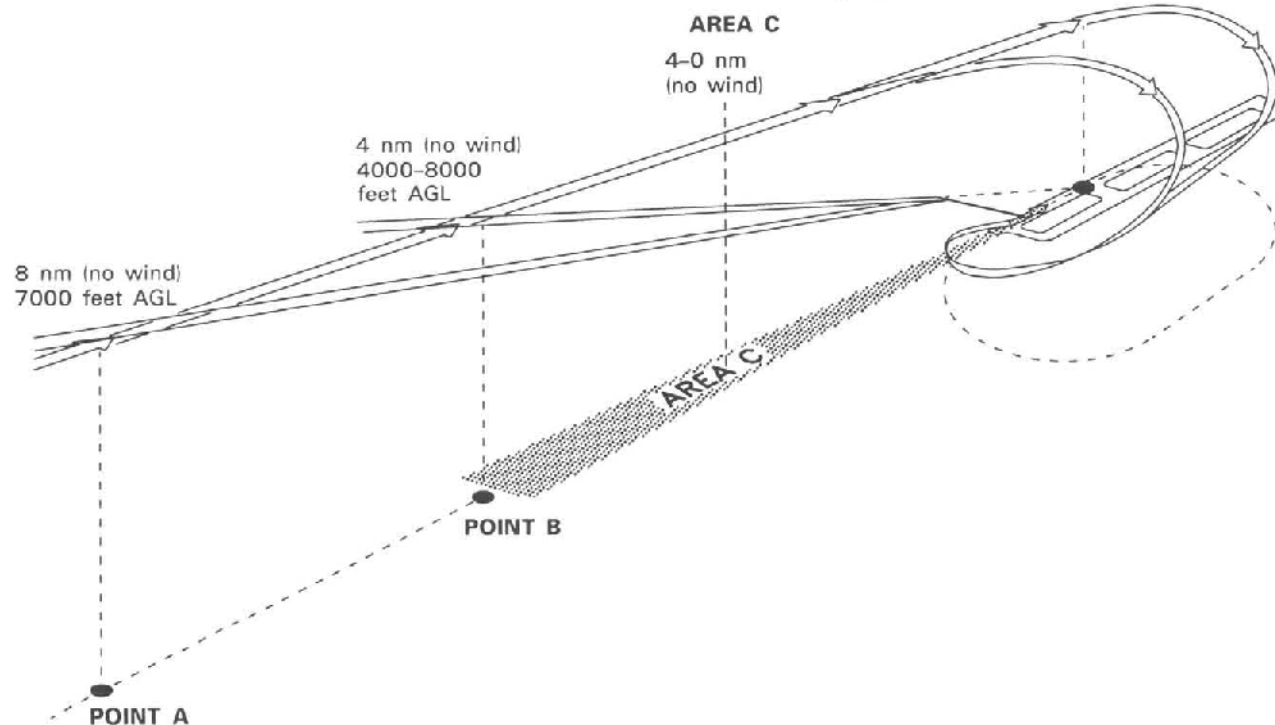

GR1F-16CJ-1 0125X37®


Figure 3-11. (Sheet 1)

Flameout Landing Pattern (Typical)

(STRAIGHT-IN APPROACH)

WARNING

- Do not allow airspeed to decrease below minimum LG down airspeed.
- If the aimpoint on the runway moves up in the field of view while maintaining maximum range (LG up) airspeed, the runway probably cannot be reached. This path corresponds to a glide angle of about 7 degrees between the horizon and the aimpoint.
- The JFS alone does not provide adequate hydraulic pressure to land the aircraft.
- EPU fuel quantity (points A, B₁, and B₂) should be sufficient to insure adequate hydraulic pressure through landing.
- Eject if it becomes obvious that a safe landing cannot be made. Ejection can be accomplished at any point in the approach; however, do not delay ejection below 2000 feet AGL in an attempt to salvage a questionable approach.

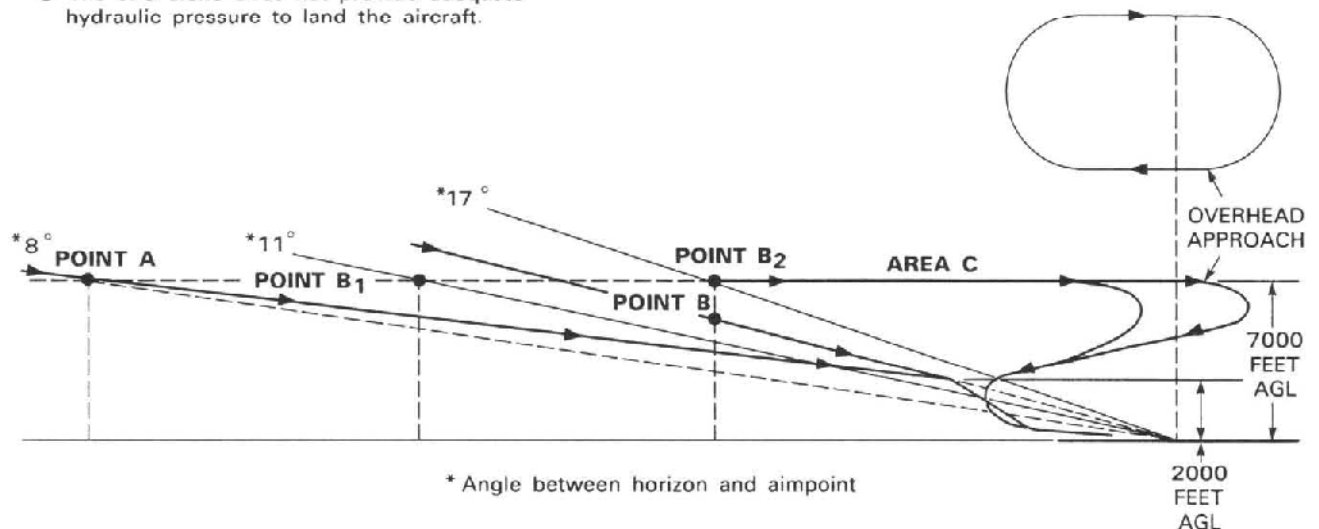

POINT A

8 nm (no wind), 7000 feet AGL, continue glide until initial aimpoint is 11–17 degrees below horizon. Then lower LG and establish optimum LG down airspeed. As a guide, no wind minimum EPU fuel is 45 percent (40 percent with JFS running).

POINT B

4 nm (no wind), 4000–8000 feet AGL, airspeed and LG as required. As a guide, no wind minimum EPU fuel is:

POINT B₁

6 nm — 35 percent (30 percent with JFS running).

POINT B₂

4 nm — 25 percent (20 percent with JFS running).

AREA C

4 – 0 nm (no wind), initial aimpoint is more than 17 degrees below horizon (under nose of aircraft and not visible). Normal straight-in approach is not feasible.

Options are:

- Delay LG lowering. Plan an overhead approach from a high key altitude but below the normal recommended altitude.
- Delay LG lowering. Plan a modified flightpath to low key.
- Lower LG, open speedbrakes, and dive and maneuver aircraft to intercept a point on the normal straight-in glidepath.

WARNING

Do not delay lowering LG below 2000 feet AGL.

GR1F-16CJ-1-0126X37®

Figure 3-11. (Sheet 2)

Straight-In Approach

Refer to figure 3-11. If one of the overhead approach key positions cannot be reached, a straight-in approach may be flown. The clean glide at maximum range airspeed should be continued until the initial aimpoint is 11-17 degrees below the horizon; then the LG should be lowered. Seventeen degrees is below the forward field of view. A good visual reference for 15 degrees is when the initial aimpoint is at the bottom of the HUD (just above the radome). Optimum LG down airspeed is 10 knots less than maximum range (LG up) airspeed. Minimum LG down airspeed is 20 knots less than maximum range (LG up) airspeed and provides sufficient maneuverability to arrest the high sink rate associated with a flameout approach.

NOTE

For a 10,000-foot descent (LG down), each 10 knots above optimum LG down airspeed decreases glide range up to 1/2 nm.

IMC Penetration (22)

Should IMC be encountered during a flameout approach to the intended runway and no alternate runway is available, an alternate descent/penetration may be flown which should allow maneuvering airspeed after penetrating the undercast.

WARNING

IMC penetration should not be attempted unless present position is known and navigation can be performed throughout the descent, and high terrain or other hazards are not a factor.

The stores should be jettisoned and the aircraft glided at maximum range airspeed until a 1:1 ratio between altitude in thousands of feet and range to the runway (e.g., 20,000 feet AGL at 20 nm, 15,000 feet AGL at 15 nm, etc.) is attained. The descent angle should then be increased and airspeed allowed to increase to maintain the 1:1 ratio. This equates to a 9-10 degree descent angle. This 1:1 glide ratio must be maintained until sufficient airspeed is attained to maneuver after penetrating the undercast.

NOTE

A 90 degree level turn at 50 degrees bank angle with the LG and speedbrakes retracted will dissipate 65-85 knots. A 180 degree turn will dissipate 145-250 knots. Airspeed dissipation increases with increasing GW and DI. A glide angle at a 1:1 ratio begun from maximum range airspeed will result in an airspeed of 260-320 knots after a 10,000-foot descent. Higher airspeed at the start of the glide, additional descent altitude, heavier gross weight, or lower drag index will result in higher airspeed at the completion of the glide.

At 3000 feet AGL, the aircraft should be 3 nm from the touchdown point. If the runway is not in sight by base key altitude, the aircraft may be zoomed for a controlled ejection. When VMC is attained and the runway is in sight, the aircraft should be glided to an attainable key position for an overhead approach or to a straight-in approach and the LG should be lowered. Excess airspeed above optimum LG down airspeed not required to maneuver to the flameout landing approach should be dissipated by use of speedbrakes or early LG extension.

Landing Phase

The LG should be lowered no later than 2000 feet AGL to allow adequate time for alternate LG extension. Establish a glidepath to achieve the initial aimpoint while maintaining optimum LG down airspeed. Once wings level on final approach, be aware of the tendency to slow below minimum LG down airspeed.

WARNING

Do not attempt to stretch a glide by allowing the airspeed to decrease below minimum LG down airspeed. A slower airspeed decreases the maneuverability available to arrest the high sink rate associated with the flameout approach and may preclude a successful flameout landing.

Once landing is assured, the recommended procedure is to shift the aimpoint from 1/3 of the way down the runway to a position short of the intended touchdown point. Speedbrakes may be used to help control airspeed. The higher the airspeed, the shorter the aimpoint should be to allow for additional float (from flare to touchdown). The aircraft is easiest to control in the flare if the flare is begun between optimum and minimum LG down airspeeds. The point at which the flare is begun depends upon airspeed, sink rate, and glide angle. The flare should be started high enough

to allow a smooth gradual reduction in glide angle but not so high as to run out of airspeed prior to touchdown. Under a no wind condition, the aircraft floats 3000-4000 feet after beginning the flare, if the flare is begun at the optimum LG down airspeed. Once the sink rate is arrested, attempt to slow to a normal touchdown airspeed and AOA. If excess airspeed exists after arresting the sink rate, the best method to slow the aircraft is to stay airborne until normal touchdown airspeed is reached.

After Touchdown

After touchdown from a flameout landing, use a normal or short field stopping technique as required by the stopping distance available. If the JFS and EPU are running, normal braking and NWS are available (NWS is inoperative if the LG was lowered with the alternate LG system). If the JFS is not running, only the brake/JFS accumulators are available to supply hydraulic pressure for braking. Stop the aircraft by making one steady brake application just short of antiskid cycling. If there is any doubt about stopping on the remaining runway, lower the hook. When the aircraft is fully stopped, have chocks installed or engage parking brake. Leave the battery on line until chocks are installed. If JFS START 2 was attempted but was unsuccessful, no braking is available for stopping or directional control unless the brake/JFS accumulators are recharged. Use flaperons and rudder as required to maintain directional control. As the aircraft slows below 70 knots, directional control is reduced and the aircraft may drift right.

Flameout Landing Procedures

If the engine has flamed out or if flameout is imminent, turn toward a suitable runway and accomplish either an overhead approach or a straight-in approach, as appropriate.

• Altitudes (overhead approach):

- High key – 7000-10,000 feet AGL.
Recommended altitude is 7000 feet AGL plus 500 feet per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds.

- Low key – 3000-5000 feet AGL.
Recommended altitude is 3000 feet AGL plus 250 feet per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds.

- Base key – 2000 feet AGL minimum.

• Altitudes (straight-in approach):

- 8 nm – 7000 feet AGL minimum.
The minimum altitude is based on an LG up glide at maximum range airspeed to 2000 feet AGL followed by an LG down glide at optimum LG down airspeed to the runway for a drag index of 100. A lower drag index slightly reduces the minimum altitude required. A higher drag index slightly increases the minimum altitude required.

- 4 nm – 4000-8000 feet AGL.

Delay lowering the LG until the initial aimpoint is 11-17 degrees below the horizon.

WARNING

- Do not delay lowering LG below 2000 feet AGL.
- Eject if a safe landing cannot be made. Ejection can be accomplished at any point in the pattern but do not delay ejection below 2000 feet AGL in an attempt to salvage a questionable approach.

1. Stores – Jettison (if required).
2. Airspeed – 200 knots.
Increase airspeed 5 knots per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds. This airspeed equates to approximately 7 degrees AOA.

NOTE

During an airstart attempt, do not slow below the minimum airstart airspeed.

3. EPU switch – ON.

NOTE

The VHF radio is not powered by the EPU.

4. JFS switch – START 2 below 20,000 feet MSL and below 400 knots.

WARNING

- EPU fuel quantity should be at least 25 percent (20 percent with JFS running) at high key for an overhead approach or 45 percent (40 percent with JFS running) at 8 nm for a straight-in approach to insure adequate hydraulic pressure through landing.
- The JFS alone does not provide adequate hydraulic pressure to land the aircraft.

WARNING

Do not start the JFS if engine seizure has occurred or is anticipated or if engine failure is a result of fuel starvation. Starting the JFS may result in no brake/JFS accumulator pressure for the brakes.

NOTE

- If engine is not operating, consider placing the FUEL MASTER switch to OFF if a fuel leak exists. This action may conserve fuel for the JFS.
 - If the JFS is erroneously placed to START 1, leave it there.
 - If the JFS RUN light does not illuminate or goes off once illuminated, place the JFS switch to OFF and reattempt START 2 when the brake/JFS accumulators are recharged. The JFS switch does not relatch in either start position while the JFS is spooling down.
5. AIR SOURCE knob – RAM (below 25,000 feet MSL).
 6. DEFOG lever – Forward.
 7. LG handle – DN.

WARNING

Do not delay lowering LG below 2000 feet AGL.

8. ALT GEAR handle – Pull (if required).

NOTE

The NLG may not indicate down and locked until airspeed is reduced below 190 knots.

9. Airspeed – 190 knots optimum in pattern. Increase airspeed by 5 knots per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds.

WARNING

Do not allow airspeed to decrease below 180 knots plus 5 knots per 1000 pounds of fuel/store weights over ☐ 1000, ☐ zero pounds.

After touchdown:

10. DRAG CHUTE switch – DEPLOY (if required).
11. HOOK switch – DN (if required).

If brake/JFS accumulator braking is used:

12. Stop straight ahead and engage parking brake.

CAUTION

- Brakes should be applied in a single, moderate, and steady application without cycling the antiskid.
 - Brake pedal deflection of 1/16 inch activates the brakes and bleeds the brake/JFS accumulators. To avoid brake activation and loss of accumulator fluid, do not rest feet on the brake pedals.
 - Do not attempt to taxi clear of the runway. Loss of brake/JFS accumulator pressure results in the inability to stop or steer the aircraft.
13. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

JETTISON**Selective Jettison**

Selective jettison is used to release selected store(s) (except air-to-air missiles) or suspension equipment in an unarmed or unguided condition.

1. GND JETT ENABLE switch – ENABLE (if LG is down).
2. MASTER ARM switch – MASTER ARM.
3. ☐ ARMT CONSENT switch – On.

4. SMS switch – SMS.
5. DOG FIGHT switch – Center.
6. MFD – SMS format.
☐ Store and station selections can be made from either cockpit.
7. S-J OSB (MFD) – Depress.
8. S-J PAGE (MFD) – Select stores desired for jettison.

CAUTION

- Jettison of an inboard shoulder-mounted store from a TER at station 4 or 6 with the MLG down may result in LG and store(s) collision. To avoid this, select RACK for jettison instead of WPN.
- Jettison of external wing fuel tanks with stores/suspension equipment at stations 3 and/or 7 with MLG down may result in LG and external wing fuel tank collision.
- Failure to load the actual stores configuration into SMS inventory could cause damage to the aircraft by inhibiting the selective jettison release time delay used to insure safe 370/600-gallon fuel tank separation when a store is present at station 3 or 7.
- Selective jettison airspeed/mach limits in T.O. GR1F-16CJ-1-2 are only valid for:
 - Selective jettison of one store type at a time.
 - Selective jettison from nonadjacent stations.

If simultaneous selective jettison of either more than one store type or from adjacent stations is required, adhere to emergency jettison airspeed/mach limits.

NOTE

- Weapon(s) and/or rack(s) to be jettisoned is highlighted.
- When 300-gallon and 370/600-gallon fuel tanks are carried simultaneously, the 300-gallon fuel tank must be separated prior to the 370/600-gallon fuel tanks.

9. WPN REL or ☒ ALT REL button – Depress.

NOTE

When jettisoning tanks from stations 4 and 6, hold release button depressed for 1 second.

Emergency Jettison

Emergency jettison is a one-step operation which clears all expendable stores and racks except air-to-air missiles. All weapons are released in an unarmed or unguided condition. If the SMS is off, depressing the EMER STORES JETTISON button supplies electrical power to the SMS. In addition, while the button is depressed, the SMS enters the E-J mode. When the button is released, the avionic system returns to the previous operating mode. Emergency jettison is not available unless the main, standby, or EPU generator is operating.

1. GND JETT ENABLE switch – ENABLE (if required).
 Use EMER STORES JETTISON on the ground only as a last resort.
2. EMER STORES JETTISON button – Depress (1 second).

NOTE

If the initial actuation of the EMER STORES JETTISON button fails to jettison all aircraft stores, subsequent attempts may successfully release the remaining stores.

FLCS FAILURES

Significant FLCS failures, except for reversion to DBU, cause one or more PFL's to be displayed. Warning level failures also trigger the FLCS warning light; this light goes off only if the failure resets. Caution level failures (except FLCS BUS FAIL) also trigger the FLCS FAULT caution light; this light goes off if the failure resets or when the fault is acknowledged. Refer to PILOT FAULT LIST – FLCS, this section, for PFL list.

The FLCS emergency procedures are based on the following recommended sequence of pilot actions:

- Note PFL(s) displayed.
- Acknowledge fault.
- Refer to PILOT FAULT LIST – FLCS, this section.

- Refer to appropriate FLCS emergency procedure.
- Perform FLCS reset, if so directed in the emergency procedure.
- Perform fault recall.

Certain MUX bus communication failures may result in the inability to display FLCS PFL's on the PFLD. If this occurs, PFL's may be observed on the FLCS page of the MFD.

Manual selection of DBU to attempt correction of a perceived FLCS failure is not recommended.

WARNING

Do not select DBU if the FLCS warning light is on since doing so allows failed signals which were previously voted out to be used.

Air Data Malfunctions

A single failure in the air data system (static/impact pressure) is indicated by the FLCS FAULT caution light and an FLCS ADC FAIL PFL. No degradation of aircraft performance should be noticed.

Contamination of the pitot probe can cause blockage of the passage which provides total pressure signals. This causes erroneously low airspeed indications in the HUD and on the airspeed/mach indicator with an FLCS ADC FAIL PFL at approximately 300 knots. An erroneously low airspeed value is used for FLCS gain scheduling which may result in pitch oscillations.

If erroneously low airspeed indications are present both in the HUD and on the airspeed/mach indicator during takeoff, consider aborting. If takeoff is continued, maintain airspeed below 210 knots (Cat I) or 275 knots (Cat III) (use INS groundspeed or wingman indications to determine airspeed) and land as soon as practical. Pitch oscillations may be experienced at higher speeds. If oscillations are encountered, minimize stick commands and slow to less than 210 knots (Cat I) 275 knots (Cat III).

A dual failure of static or impact pressure systems is indicated by the FLCS warning light and a STBY GAIN PFL. The FLCS ADC FAIL PFL is still present since the first failure is still active. In standby gains, the FLCS has transitioned to a fixed set of control gains which are optimized for sea level and 600 knots

(LG handle in UP) and sea level and 230 knots (LG handle in DN). The LEF's are at zero degrees with the LG handle up and ALT FLAPS switch in NORM, and are at 15 degrees down with the LG handle down or the ALT FLAPS switch in EXTEND.

An FLCS reset can always be attempted for a first air data failure. If the first air data failure does not reset, and a second failure occurs (engaging standby gains), the first failure is latched and will not reset. However, the second failure is allowed to be reset and standby gains can be exited if the reset is successful.

Flying qualities in standby gains are degraded. Airspeed should be maintained subsonic and less than 650 knots. AOA should be maintained less than 12 degrees. Since the gains are optimized for 600 knots at sea level, airspeed should be maintained greater than 240 knots until the LG is lowered.

If FLCS ADC FAIL PFL occurs:

If BRK PWR DEGR PFL is also present, refer to FLCS SINGLE ELECTRONIC FAILURE, this section.

1. Establish 1g flight.
2. FLCS RESET switch – RESET.

If failure indications go off:

3. Continue normal operation.

If failure indications remain on:

3. Land as soon as practical.

If STBY GAIN PFL occurs:

1. Establish 1g flight with maximum of 12 degrees AOA.
Airspeed 240-650 knots with LG up.
2. FLCS RESET switch – RESET.
3. Land as soon as practical.
Do not slow below 240 knots with LG up if STBY GAIN PFL is still present.

AOA Malfunction

A single failure in the AOA system is indicated by illumination of the FLCS FAULT caution light and an FLCS AOA FAIL PFL. No degradation in aircraft handling characteristics should be encountered. The first AOA failure signal defaults to 11 degrees to prevent hardover commands if two AOA inputs fail at the upper AOA limit.

A dual AOA failure illuminates the FLCS warning light and triggers an FLCS AOA WARN PFL. The FLCS system code and FLCS AOA FAIL PFL are still present since the first failure is still active. With a dual AOA failure, the FLCC selects the mid AOA value among the remaining good signal, 11 degrees, and the failed signal. Aircraft handling characteristics may be degraded somewhat in the cruise configuration, but should be adequate for landing since the first AOA failure defaulted to 11 degrees.

FLCS RESET may be attempted for any AOA failure. If the first failure does not reset and a second failure occurs, the first failure is latched and cannot be reset.

If FLCS AOA FAIL PFL occurs:

If BRK PWR DEGR PFL is also present, refer to FLCS SINGLE ELECTRONIC FAILURE, this section.

1. Establish 1g flight.
2. FLCS RESET switch – RESET.

If failure indications go off:

3. Continue normal operation.

If failure indications remain on:

3. Land as soon as practical.
Do not exceed 11 degrees AOA during approach, landing, or two-point aerodynamic braking.

If FLCS AOA WARN PFL occurs:

1. Establish 1g flight.
2. FLCS RESET switch – RESET.

If FLCS warning light goes off:

3. Land as soon as practical.
Do not exceed 11 degrees AOA during approach, landing, or two-point aerodynamic braking.

If FLCS warning light remains on:

3. Land as soon as possible.
Do not exceed 11 degrees AOA during approach, landing, or two-point aerodynamic braking.

CADC Malfunction

A failure of any of the CADC electrical inputs (AOA, total temperature, altimeter barometric reference, etc.) or a detected failure internal to the CADC causes illumination of the CADC caution light. If the CADC caution light does not reset, systems dependent on CADC information should be checked for proper operation.

CAUTION

Retarding the throttle below MIL while supersonic may induce inlet buzz which produces severe cockpit vibration and probable engine stalls.

NOTE

If a CADC malfunction occurs, the FLCC AOS feedback function may deactivate.

If CADC caution light illuminates:

1. FLCS RESET switch – RESET.

If CADC caution light goes off:

2. Check for an ENG MACH FAIL PFL.

If ENG MACH FAIL PFL is still present:

3. Continue flight and observe throttle limitation, if supersonic. Refer to PILOT FAULT LIST – ENGINE, this section.

If CADC caution light remains on:

2. AOA – Cross-check with airspeed.
Use AOA indications with caution.
3. Land as soon as practical.
Final approach airspeed $\square$ 136, $\square$ 138 plus 4 knots/1000 pounds of fuel/store weights equates to 13 degrees AOA (add 8 knots for 11 degrees AOA).

Servo Malfunction

An initial servo malfunction results in illumination of the FLCS FAULT caution light and an ISA LHT/RHT/LF/RF/RUD FAIL PFL for the applicable ISA. A failure of the second servo in the same ISA

results in a repeat of the PFL. Multiple servo malfunctions involving more than one ISA cause an ISA ALL FAIL PFL. Servo failures are reset by placing the FLCS RESET switch to RESET. No degradation in flying qualities is expected if the servo does not reset.

Hydraulic failures or momentary drops in hydraulic pressure (e.g., wake turbulence encounter, air in hydraulic system) also illuminate the FLCS FAULT caution light and cause an ISA ALL FAIL PFL.

1. Airspeed – 400 knots maximum (subsonic).

If hydraulic failure is confirmed:

2. Go to SINGLE/DUAL HYDRAULIC FAILURE, this section.

If hydraulic pressures are normal:

3. FLCS RESET switch – RESET.

If failure indications go off:

4. Continue normal operation.

If failure indications remain on:

4. Land as soon as practical.

FLCS Electronic Malfunctions

Only two single electronic failures are reported in flight. These are a branch power supply failure (BRK PWR DEGR PFL) and a coil current monitor (CCM) detected failure (FLCS CCM FAIL PFL). All other single electronic failures (rate gyro and accelerometer failures, stick sensor failures, single axis failures, and single branch failures) are reported 2 minutes after WOW as an FLCS SNGL FAIL PFL. A momentary, mild transient might be felt when a single electronic failure occurs. Even though display of a single failure is not always provided in flight, a single FLCS failure can be reset.

If a branch fails due to a branch power supply problem, BRK PWR DEGR PFL is displayed. If power fails in branch A, B, or C, then one AOA and one air data input are also failed. This condition is displayed by FLCS AOA FAIL and FLCS ADC FAIL PFL's in addition to the BRK PWR DEGR PFL. A single branch power supply failure may also cause FLCS dual fail indications if the ADV MODE switch is not in the depressed position. This dual failure can be reset as long as the ADV MODE switch is in the depressed position prior to reset. Anytime BRK PWR DEGR occurs, FLCS power supply status should be checked by placing the FLCS PWR TEST switch to the TEST position. If any one of the four FLCS PWR indicator lights does not illuminate, then that branch is not powered and the indicated toe brake in the indicated channel is inoperative.

If the CCM detects an erroneous output command from one of the three servo amplifiers which drive the three ISA servo valves, a backup servo amplifier is energized. FLCS CCM FAIL PFL is then displayed. An FLCS reset may bring the tripped amplifier back on line.

If a dual electronic failure occurs (i.e., two pitch rate gyros, two roll stick sensors, or two power supplies), the FLCS warning light illuminates and an FLCS DUAL FAIL PFL occurs. A reset of a dual failure may be attempted. However, reset is only possible back to the single failure condition, since the single failure is latched if it still existed at the time of the second failure. Branch power status should again be checked with the FLCS PWR TEST switch.

It is possible to receive FLCS dual fail indications following a single failure of the ADV MODE switch when attempting/during ATF operations. The dual-redundant switch has two outputs, each of which are split for use by the four-channel FLCS. If one side of the switch fails, the FLCS warning light illuminates and an FLCS DUAL FAIL PFL occurs. This dual failure can be reset as long as the ADV MODE switch is disengaged prior to reset.

LESS 116 Vibrations associated with gun firing may cause either a single failure or a dual failure of a FLCS accelerometer to be declared. These failure declarations occur during gun firing because the four outputs of the accelerometer do not always compare within present software tolerances.

FLCS SINGLE ELECTRONIC FAILURE

If BRK PWR DEGR or FLCS CCM FAIL PFL occurs:

1. Establish 1g flight and airspeed less than 400 knots (subsonic).
2. FLCS RESET switch – RESET.

If failure indications go off:

3. Continue normal operation.

If failure indications remain on:

3. FLCS PWR TEST switch – TEST.
Observe FLCS PWR lights and determine brake and brake channel affected. If branch A, B, or C FLCS PWR light fails to illuminate, use a maximum of 11 degrees AOA for approach, landing, and two-point aerodynamic braking.
4. BRAKES channel switch – Change channels (if required).
5. Land as soon as practical.

FLCS DUAL ELECTRONIC FAILURE

If FLCS DUAL FAIL PFL occurs:

1. Establish 1g flight and airspeed less than 400 knots (subsonic).
2. ADV MODE switch – Depress.
The ATF NOT ENGAGED caution light may illuminate shortly after depressing the ADV MODE switch.
3. FLCS RESET switch – RESET.
Reset may clear the FLCS warning light; however, the single failure is still present.

If FLCS warning light goes off and no FLCS PFL's are present:

4. Continue normal operation, but do not use ADV MODE switch.

If FLCS warning light goes off and an FLCS PFL is still present:

4. FLCS PWR TEST switch – TEST.
Observe FLCS PWR lights and determine brake and brake channel affected. If branch A, B, or C FLCS PWR light fails to illuminate, use a maximum of 11 degrees AOA for approach, landing, and two-point aerodynamic braking.
5. Land as soon as practical.

If FLCS warning light remains on:

4. FLCS PWR TEST switch – TEST.
Observe FLCS PWR lights and determine brake and brake channel affected. If branch A, B, or C FLCS PWR light fails to illuminate, use a maximum of 11 degrees AOA for approach, landing, and two-point aerodynamic braking.
5. BRAKES channel switch – Change channels (if required).
6. Land as soon as possible.

NOTE

- No significant flying qualities degradation should occur; however, with an FLCS dual failure, the FLCS has no redundancy.
- Two minutes after WOW, the FLCS FAULT caution light illuminates and an FLCS SNGL FAIL PFL occurs.

FLCS Temperature Malfunction

If sensors in any two branches of the FLCC detect temperatures in excess of 75°C, the FLCS FAULT caution light illuminates and the FLCS HOT TEMP PFL is displayed.

If an FLCS HOT TEMP PFL occurs:

1. Airspeed – 400 knots maximum (subsonic).
2. Altitude – 25,000 feet MSL maximum.
If possible, descend below 15,000 feet MSL.
3. AIR SOURCE knob – RAM.

WARNING

With the ECS shut down or the AIR SOURCE knob in OFF or RAM, the g-suit does not inflate and PBG is disabled.

NOTE

External fuel cannot be transferred in OFF or RAM. Consider jettisoning tanks to decrease drag if range is critical and ECS cannot be turned on for short periods of time to transfer fuel.

If failure indications go off:

It may take up to 15 minutes for ram-air cooling to extinguish the light.

4. Land as soon as practical.

If failure indications remain on:

5. Land as soon as possible.

Autopilot Malfunctions

If the autopilot fails to receive needed data or AOA exceeds 15 degrees, the FLCS FAULT caution light illuminates, the FLCS A/P FAIL PFL is displayed, and the autopilot automatically disengages. If engagement is attempted with a failure or degradation, or AOA above 15 degrees the autopilot does not engage and FLCS A/P FAIL PFL occurs. If ATF is engaged or if engagement is attempted, this failure also causes the ATF NOT ENGAGED caution light to illuminate.

If FLCS A/P FAIL PFL occurs:

1. Establish 1g flight.
Below 15 degrees AOA.
2. FLCS RESET switch – RESET.

If PFL clears:

3. Continue normal operation.

If PFL remains, autopilot cannot be engaged.

The FLCS FAULT caution light and the FLCS A/P DEGR PFL are displayed during non-TF operations if the autopilot is engaged but is not providing the selected function.

The PFL occurs under the following conditions:

- Attitude hold modes – After 12 seconds of operation outside of attitude limits with no stick input.
- Roll attitude hold mode – After 12 seconds of operation with the autopilot roll command at its maximum authority.
- Pitch attitude and altitude hold modes – After 5 seconds of operation with the autopilot pitch command at its maximum authority, no stick inputs, and aircraft not correcting back to referenced altitude/attitude.

If FLCS A/P DEGR PFL occurs:

1. Maneuver aircraft into autopilot envelope.
2. FLCS RESET switch – RESET.

If PFL clears:

3. Continue normal operation.

If PFL remains:

3. Disengage autopilot.

DBU ON Warning Light

DBU is entered automatically by detection of a primary software fault. Such a fault is assumed to exist if power is lost in three branches, if three processors fail, or if a three-branch combination of power and processor failures occur. If automatic DBU engagement occurs, toe brake operation may be affected.

Due to the simplicity of the DBU, fault tolerance is reduced and detailed FLCS failure information is not provided. DBU is intended as a backup mode that provides a transition to cruise flight and a return to base capability in the event that a software fault has been encountered within the FLCC.

To transfer back to primary mode after an automatic transfer to DBU, the DIGITAL BACKUP switch must be cycled to BACKUP and then back to OFF. Pitch transients are possible due to horizontal tail position changes when the DIGITAL BACKUP switch is cycled back to OFF. These transients can be minimized by stabilizing at 1g prior to reselecting OFF. If ATF was engaged prior to automatic DBU engagement, a 3g incremental nonroll-to-wings level fly-up is present. Depressing the paddle switch interrupts the fly-up command. Placing the DIGITAL

BACKUP switch to BACKUP cancels the fly-up command.

If DBU ON warning light illuminates:

1. Establish 1g flight.
Do not use abrupt control inputs or make rudder inputs during rolls.
2. Airspeed – 500 knots/0.9 mach maximum.
If possible, slow to 300 knots.
3. DIGITAL BACKUP switch – Cycle to BACK-UP, then back to OFF.

If DBU ON warning light goes off:

Verify that DBU is no longer present on the FLCS page of the MFD.

4. FLCS RESET switch – RESET (if required).
5. Land as soon as practical.
Do not exceed 500 knots/0.9 mach.

If DBU ON warning light remains on:

4. DIGITAL BACKUP switch – BACKUP.
5. Airspeed – 500 knots/0.9 mach maximum.
If possible, slow to 300 knots. Avoid abrupt control inputs. Restrict bank angle changes to less than 90 degrees.
6. Controllability – Check.
Lower LG at safe altitude and check handling qualities at 11-13 degrees AOA. A mild noseup transient of approximately 2 degrees occurs if LG is lowered below 200 knots.
7. FLCS PWR TEST switch – TEST.
Observe FLCS PWR lights and determine brake and brake channel affected. If branch A, B, or C FLCS PWR light fails to illuminate, use a maximum of 11 degrees AOA for approach, landing, and two-point aerodynamic braking.
8. Land as soon as possible.
Plan a straight-in approach.

TF FAIL Warning Light

The TF FAIL warning light illuminates when a TF malfunction is detected by the NVP or when SWIM failures are detected by the FLCS.

If TF FAIL warning light illuminates:

1. Altitude – As required.
Climb to minimum enroute altitude (MEA) or depart low altitude environment, if required.
2. Paddle switch – Depress (if required).
This action interrupts the fly-up in ATF or manual TF (if enabled).

3. PFLD – Check.
If a SWIM PFL is displayed, the TF malfunction was detected by one or more SWIM monitors.
4. CARA, INS, and FCC – Check for proper operation.

If SWIM ATF FAIL, SWIM NVP FAIL, SWIM RALT FAIL, or SWIM SCP FAIL PFL is displayed:

5. Paddle switch – Release.

NOTE

If the malfunction was detected by SWIM and this malfunction is no longer present, releasing the paddle switch resets the SWIM monitors, cancels the fly-up, and extinguishes the TF FAIL warning light.

If SWIM ATF FAIL, SWIM NVP FAIL, SWIM RALT FAIL, or SWIM SCP FAIL PFL does not clear or recurs:

6. Discontinue TF operations.

If SWIM ATTD FAIL or SWIM VEL FAIL PFL is displayed:

5. Paddle switch – Release.
6. Discontinue TF operations.

WARNING

Further TF operations should not be attempted after the occurrence of a SWIM ATTD FAIL or SWIM VEL FAIL PFL.

If no SWIM PFL was present (NVP malfunction):

5. Paddle switch – Release.
6. Perform TFR BIT.

If NVP malfunction still exists:

7. Discontinue TF operations.

LEF Malfunction (Symmetric)

A symmetric LEF malfunction may be indicated by an FLCS warning light and an FLCS LEF LOCK PFL. These indicate that one or both of the LEF branches have malfunctioned, that the asymmetry

brakes have been activated, or that the LEF have been manually locked.

LEF's will stop and remain fixed in position when an FLCS LEF LOCK PFL occurs. LEF should remain symmetrical (within 10 degrees).

Certain LEF malfunctions do not activate the FLCS LEF LOCK PFL. The presence of higher than normal buffet levels during maneuvering flight and reduced directional stability in the high AOA region are indications that the LEF have failed to schedule properly.

If an FLCS LEF LOCK PFL occurs or a malfunction is suspected (without an FLCS LEF LOCK PFL):

1. AOA – 12 degrees maximum.

WARNING

Exceeding 12 degrees AOA reduces departure resistance. Limit rolling maneuvers to a maximum bank angle change of 90 degrees and avoid rapid roll rates.

2. FLCS RESET switch – RESET.

If FLCS warning light resets:

3. Continue flight.

If the FLCS warning light does not reset or a malfunction is suspected (without an FLCS LEF LOCK PFL):

4. Airspeed – Decelerate to subsonic flight if supersonic.
5. LE FLAPS switch – LOCK (after LG is down).
Lock LEF's in landing configuration at final approach airspeed at a safe altitude. This makes final approach and landing as normal as possible and protects against uncommanded LEF excursions close to the ground.
6. Land as soon as practical.
With the LEF at or near full up, there are no unique control inputs required. A small increase in airspeed may be noted compared to a normal landing approach at 11 degrees AOA. With the LEF at or near full down, the aircraft may tend to float in ground effect and a slight forward stick force may be required.

During engine shutdown:

7. MAIN PWR switch – Do not place to OFF until engine rpm has reached zero.

CAUTION

Placing MAIN PWR switch to OFF before hydraulic pressure is lost may cause damage to two LEF shafts.

LEF Malfunction (Asymmetric)

The most likely cause of asymmetric LEF's is a mechanical disconnect in one of the LEF drive trains accompanied by a failure of the asymmetry brake. This failure may not activate the FLCS LEF LOCK PFL or illuminate the FLCS warning light. The first indication of an asymmetry is an uncommanded roll. The failed LEF may be as much as 90 degrees up or down. Adequate roll control is available below 10 degrees AOA at subsonic speeds. Use lateral stick for roll control. Use roll trim to reduce lateral stick force as required. Do not attempt to achieve coordinated flight. Avoid using rudder except to reduce sideslip when stores are jettisoned or to aid in maintaining desired ground track during the final part of landing approach. Do not use rudder trim. If the yaw is away from the failed LEF (i.e., nose left yaw with right LEF failed up), rudder inputs to reduce resulting sideslip actually aggravate the situation by increasing roll control requirements. Accepting some sideslip reduces roll control requirements. To prevent excessive sideslip, maintain AOA as low as practical. Banked flight reduces the amount of heading change due to sideslip-induced heading drift. Lock the good LEF as close to symmetrical as possible to aid in roll control and to prevent transients caused by automatic scheduling. Monitor fuel consumption since significantly higher thrust is required to compensate for the increased drag.

Selectively jettison stores to reduce asymmetry and sideslip and reduce fuel weight as necessary to reduce approach speed. Perform a controllability check. The aircraft tends to roll into the wing with the least lift (i.e., the heavy wing). If the LEF is failed up, lift on that wing is less. If the LEF is failed down, lift on that wing is more or less depending on the failed LEF position and the position at which the other LEF is locked. If there is a significant crosswind, diminish crosswind effects, if possible, by landing with the heavy wing upwind.

Fly a shallow, straight-in approach at approximately 8 degrees AOA (fly no lower than 6 degrees AOA) with minimum roundout for touchdown. Immediately prior to touchdown, use rudder as required to align

the aircraft with the runway. Reduce the rate of descent somewhat prior to touchdown, as required, but do not flare or raise the nose above 10 degrees AOA because available roll control is reduced and heading drift will increase as AOA increases. Lower the nose immediately after touchdown. Directional control should not be a problem.

If LEF asymmetry occurs:

1. AOA – 6-10 degrees.

WARNING

- Exceeding 10 degrees AOA may result in insufficient roll authority. Limit rolling maneuvers to gentle roll in with a maximum bank angle of 30 degrees.
 - Flying a fast approach (lower than 6 degrees AOA) presents additional control difficulties caused by a change in the path of the disturbed airflow coming off the failed LEF.
2. Lateral stick/roll trim – As required.

WARNING

Minimize rudder inputs. Use rudder as required to reduce sideslip when jettisoning stores or to aid in maintaining desired ground track during the final part of landing approach. Do not use rudder trim.

3. LE FLAPS switch – LOCK.
Lock operating LEF as near symmetrical as possible.
4. Stores – Jettison (if required).
Consider selective jettison of stores from the heavy wing as a means to reduce roll control requirements. Refer to SELECTIVE JETTISON, this section.
5. Fuel weight – Reduce (if feasible/required).

CAUTION

Reduce fuel weight if fatigue is not a factor. Fuel flow is significantly higher with an LEF failed full up or down and must be considered during recovery.

6. Controllability – Check.
Lower LG at a safe altitude and check handling qualities at 6-8 degrees AOA.
7. Land as soon as practical.

WARNING

- Prior to landing with a significant asymmetric LEF condition, consider aircraft configuration, pilot experience level, pilot arm fatigue, airfield facilities, weather, winds, and light conditions (day/night). If conditions are not favorable, a controlled ejection is recommended.
 - If crosswind component is greater than 10 knots, choose a runway, if possible, which allows landing with the heavy wing upwind. Fly a shallow, straight-in approach at approximately 8 degrees AOA (fly no lower than 6 degrees AOA) with minimum roundout for touchdown. Use rudder, as required, to align aircraft with the runway immediately prior to touchdown.
8. Stick – Lower the nose immediately after touchdown.

CAUTION

Until WOW, forward stick pressure in excess of approximately 2 pounds results in full trailing edge down deflection of the horizontal tails with reduced directional control and wheel braking effectiveness.

If departure-end arrestment is required:

9. HOOK switch – DN.

Trim Malfunction

Trim malfunction is detected by an increase in stick pressure required to maintain the desired attitude or by a lack of response to stick trim inputs.

1. TRIM/AP DISC switch – DISC, then NORM.

If normal operation is not restored:

2. TRIM/AP DISC switch – DISC.
Autopilot cannot be engaged.
3. ROLL and PITCH TRIM wheels – As required.

Stick Interference**WARNING**

Prior to any ejection seat movement, clear the area around the stick.

Stick interference can occur at anytime for a number of reasons. Known hazards include intentional or unintentional input by the passenger/pilot not in control, the utility light/adjustable sliding holder, or the right lapbelt buckle.

Contact between the right leg/knee and the stick can result in an unintentional right roll command. The resulting right roll may be perceived as a flight control problem especially in the [D] aircraft when a passenger/pilot not in control unknowingly interferes with the stick. The probability of interference is increased with feet on the floor versus feet on the rudder pedals, bulky personal equipment, or g-suit inflation.

WARNING

[D] The passenger/pilot not in control must take care not to interfere with the stick as a result of leg/knee movement or g-suit inflation. If stick interference is suspected, the pilot in control should depress the paddle switch to eliminate undesired inputs.

Contact between the utility light/adjustable sliding holder and the stick can result in unintentional stick commands. Unintentional stick commands may be perceived as a flight control problem. If uncommanded stick inputs are encountered, check for interference between the stick and utility light/adjustable sliding holder.

WARNING

Failure to properly secure utility light/adjustable sliding holder can result in stick interference. The adjustable sliding holder may become loose and come in contact with the stick. [D] If stick interference is confirmed, undesired inputs may be eliminated by placing the STICK CONTROL switch to the appropriate position and depressing the paddle switch.

If the seat is moved after an object (especially the right lapbelt buckle) becomes lodged between the seat and stick, unintended stick inputs can occur. Reversing the direction of the initial seat movement should correct the situation.

WARNING

- The lapbelt should remain fastened at all times. If the lapbelt is opened in flight, caution must be taken to insure the right lapbelt buckle does not become lodged between the ejection seat and stick.
- Do not move the seat with the lapbelt disconnected.

FUEL MALFUNCTIONS

Fuel Management System PFL

An FMS FAIL PFL indicates that the fuel reference voltage supplied to the FCC is out of tolerance. Fuel system effects associated with the PFL range from degraded FCC fuel computations (e.g., BINGO fuel) to degradation/failure of the fuel quantity indicating system. If an FMS FAIL PFL occurs, monitor the FUEL quantity indicator for proper operation.

Fuel Leak

A fuel leak may first be noticed by visual means, fuel imbalance, an unexpected FWD or AFT FUEL LOW caution light, or an unusually high fuel flow indication. Monitor the totalizer to determine whether or not a leak exists.

If a fuel leak is suspected (indicated by abnormally high fuel flow, by totalizer decreasing at abnormal rate, or by visual means):

1. Range – Maximize.
If a suitable landing field is not within gliding distance, consider increasing airspeed and altitude (without the use of AB) to maximize range by using fuel which would otherwise be lost.

WARNING

Avoid negative g flight when either reservoir is not full.

If fuel flow is abnormally high:

2. ENG FEED knob – OFF.
Leak is in the engine feed line or engine components.
3. Land as soon as possible.
Consider stores jettison if range is critical. Consider an SFO. Refer to SIMULATED FLAMEOUT (SFO) LANDING, this section.

If fuel flow is normal:

2. ENG FEED knob – NORM.
A NVP TFR FAIL PFL and a fly-up can occur when NORM is reselected while operating in TFR.

If leak is from the forward system:

3. FUEL QTY SEL knob – Out of NORM.
This action stops automatic forward fuel transfer.

If external tanks contain fuel:

4. TANK INERTING switch – TANK INERTING to reduce internal tank pressurization.

If external tanks are not installed or when they are empty:

5. AIR REFUEL switch – OPEN.
6. Land as soon as possible.
Consider stores jettison if range is critical.

If aft fuel imbalance exists (aft CG):

7. AOA – 15 degrees maximum.

WARNING

Aft fuel heavy (red portion of AL pointer showing) results in increased susceptibility to departure and deep stall conditions. Limit AOA and avoid maximum command rolling maneuvers.

CAUTION

If two-point aerodynamic braking is used with an aft CG, pitch overshoots may occur and the nozzle, speedbrakes, and ventral fins may contact the runway.

Fuel Low

A fuel low caution light may be caused by a fuel leak, trapped external fuel, a fuel imbalance between the forward and aft systems, prolonged AB operation, or a fuel sensing problem.

The FWD FUEL LOW and AFT FUEL LOW caution lights indicate either a reservoir fuel level sensing system malfunction or that reservoir tank quantities are less than:

[C]

FWD 400 pounds

[D]

FWD 250 pounds

AFT 250 pounds

AFT 400 pounds

If FWD FUEL LOW and/or AFT FUEL LOW caution light illuminates:

1. Fuel flow – Reduce to the minimum required to sustain flight below 6000 pph.

WARNING

Limit fuel flow to the minimum required to sustain flight while the cause of the fuel low light(s) is determined. Avoid negative g flight when either reservoir is not full.

2. ENG FEED knob – NORM.
A NVP TFR FAIL PFL and a fly-up can occur when NORM is reselected while operating in TFR.
3. FUEL QTY SEL knob – RSVR.
Leave FUEL QTY SEL knob out of NORM if FUEL quantity indicator displays erroneous information.

If either or both reservoir tanks are low:

NOTE

Fuel flow indications may fluctuate with either reservoir empty.

4. Land as soon as possible.
Consider an SFO. Refer to SIMULATED FLAMEOUT (SFO) LANDING, this section.

If a fuel leak is suspected (indicated by abnormally high fuel flow, by totalizer decreasing at abnormal rate, or by visual means):

5. Go to FUEL LEAK, this section.

If external fuel has not transferred:

6. Go to TRAPPED EXTERNAL FUEL, this section.

If forward and aft fuselage fuel is not properly balanced:

7. Go to FUEL IMBALANCE, this section.

If fuel is properly balanced:

NOTE

A fuel line between the reservoir and FFP may be ruptured, causing fuel to cycle between tanks in the same system.

8. Land as soon as possible.

If reservoir tanks indicate full:

4. FUEL QTY SEL knob – TEST.

If AL and/or FR pointers test bad, or FUEL quantity indicator is inoperative:

5. Land as soon as possible.
Consider an SFO. Refer to SIMULATED FLAMEOUT (SFO) LANDING, this section.

If AL and FR pointers test good:

6. Individual fuel quantities – Check and compare with totalizer.
Monitor reservoir tanks to insure they are maintained full.
7. Land as soon as practical.

Hot Fuel/Oil or Gravity Feed

Gravity feed from the reservoirs to the engine occurs after loss of the main and standby generators and failure of either hydraulic system A or the FFP. Failure of the FFP may be detected by improper fuel balance. Fuel continues to be transferred to both reservoirs by siphoning action. Fuel distribution cannot be manually or automatically controlled during gravity feed. Minimize aircraft maneuvering for duration of flight. Due to the ingestion of air into the engine fuel system, engine flameout may occur when either reservoir tank empties. If the standby generator is operating, one boost pump continues to transfer fuel from the **[C]** forward, **[D]** aft reservoir to the FFP.

Hot fuel, as indicated by the FUEL/OIL HOT caution light, may result from high speed flight or fuel system/heat exchanger malfunctions. Excess fuel temperatures may result in engine malfunctions. Engine flameout may occur at low flow rates associated with the landing pattern due to hot fuel. Fuel flow above 4000 pph minimizes fuel temperature rise.

Hot engine oil, as indicated by the FUEL/OIL HOT caution light, may also result from high speed flight or fuel/oil heat exchanger malfunctions. Sustained engine operation with excessive oil temperature may result in engine damage and/or failure.

If FUEL/OIL HOT caution light illuminates or gravity feed situation exists:

1. AIR REFUEL switch – Check CLOSE.
2. TANK INERTING switch – Check OFF.
3. Altitude – 10,000 feet maximum (if practical). Minimize aircraft maneuvering for duration of flight.
4. Fuel flow – 4000 pph minimum until landing is assured when in a hot fuel situation.

WARNING

Engine flameout may occur at low fuel flow rates or when either reservoir tank empties if a gravity feed condition exists.

If FUEL/OIL HOT caution light goes off:

5. Land as soon as practical.


If FUEL/OIL HOT caution light remains on or gravity feed situation exists:

5. Land as soon as possible.
Consider an SFO. Refer to SIMULATED FLAMEOUT (SFO) LANDING, this section.

Fuel Imbalance

Refer to figure 3-12. A fuel imbalance when not carrying an external fuel tank(s) indicates a system malfunction. A fuel imbalance when carrying an external fuel tank(s) may be the result of normal system operating tolerances.


Fuel Imbalance Indications

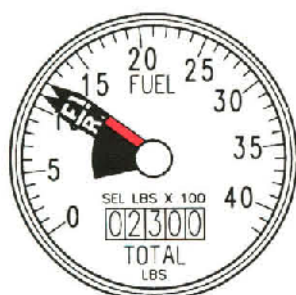

C

FUEL IMBALANCE WARNING (AFT CG)

Fuel imbalance warning (red portion of AL pointer) shows when forward fuselage fuel (FR) indication is less than aft fuselage fuel (AL) indication.

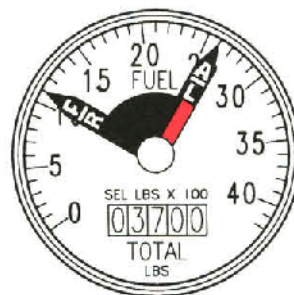

D

FUEL IMBALANCE WARNING (AFT CG)

Fuel imbalance warning (red portion of AL pointer) shows when forward fuselage fuel (FR) indication is more than 1350 pounds less than aft fuselage fuel (AL) indication.

Figure 3-12.

NOTE

- Any correction required per total fuel quantity usage with internal fuel only indicates a system malfunction.
- More than one correction per total fuel quantity usage with either a 300-gallon fuel tank or two 370-gallon fuel tanks indicates a system malfunction.
- More than two corrections per total fuel quantity usage with either a 300-gallon fuel tank and two 370-gallon fuel tanks or two 600-gallon fuel tanks indicate a system malfunction.
- More than three corrections per total fuel quantity usage with a 300-gallon fuel tank and two 600-gallon fuel tanks indicate a system malfunction.

A fuel imbalance is indicated by the red portion of the AL pointer. This may be caused by an FFP malfunction, fuel leak, uneven or partial refueling (either ground or AR), or a malfunction of the automatic forward fuel transfer system. A fuel imbalance may also occur as a result of a main generator failure and an inoperative FFP (FFP malfunction or system A hydraulic failure). In this case, boost pump No. 3 still transfers fuel from the ☐ forward, ☐ aft reservoir to the engine, creating the imbalance.

An unexpected FWD or AFT FUEL LOW caution light may also be an indication of fuel imbalance; however, verify that forward fuselage fuel and aft fuselage fuel (as indicated by AL and FR pointers with FUEL QTY SEL knob in NORM) are not properly balanced and that a leak does not exist before selecting FWD or AFT ENG FEED.

If fuel imbalance is indicated by AL and FR pointers with FUEL QTY SEL knob in NORM:

1. Fuel flow – Reduce to the minimum required to sustain flight below 6000 pph.

WARNING

Limit fuel flow to the minimum required to sustain flight while the cause is determined. Avoid negative g flight when either reservoir is not full.

If aft fuel imbalance exists (aft CG):

2. AOA – 15 degrees maximum.

WARNING

Aft fuel heavy (red portion of AL pointer showing) results in increased susceptibility to departure and deep stall conditions. Limit AOA and avoid maximum command rolling maneuvers.

If a fuel leak is suspected (indicated by abnormally high fuel flow, by totalizer decreasing at abnormal rate, or by visual means):

3. Go to FUEL LEAK, this section.

If a fuel leak is not suspected:

4. Fuel quantities – Check.
Use the FUEL QTY SEL knob to determine if a trapped fuel condition exists. Refer to TRAPPED EXTERNAL FUEL, this section, if required.
5. ENG FEED knob – FWD or AFT.
Use only to correct a forward and aft fuselage fuel imbalance and not to correct imbalances between reservoirs. Do not exceed 25,000 pph fuel flow while balancing fuel.

If imbalance is not corrected:

6. Land as soon as practical.

CAUTION

If two-point aerodynamic braking is used with an aft CG, pitch overshoots may occur and the nozzle, speedbrakes, and ventral fins may contact the runway.

If proper distribution is attained:

6. ENG FEED knob – NORM.
A NVP TFR FAIL PFL and a fly-up can occur when NORM is reselected while operating in TFR.
7. Fuel balance – Monitor.

Trapped External Fuel**WARNING**

A TRP FUEL indication in the HUD may be a symptom of an external fuel leak. If a fuel leak is suspected (indicated by abnormally high fuel flow, by totalizer decreasing at abnormal rate, or by visual means), refer to FUEL LEAK, this section.

WARNING

With trapped external fuel, the totalizer does not indicate total usable fuel. Usable fuel is the totalizer quantity less the external fuel quantity.

Certain malfunctions can cause fuel to be trapped in the external tank(s). The tank(s) in which fuel is trapped can be detected by a periodic check of external tank fuel quantities.

Accomplish steps 1 through 8 and 9 (if required) without delay:

NOTE

Repeating or undoing any steps may delay transfer.

1. Fuel flow – Minimize.
2. AIR REFUEL switch – Confirm in CLOSE.
3. AIR SOURCE knob – Confirm in NORM or DUMP.
4. TEMP knob – MAN and adjust for comfort.
This action usually increases ECS air pressure for external fuel transfer.
5. TANK INERTING switch – TANK INERTING to reduce internal tank pressurization.
6. EXT FUEL TRANS switch – WING FIRST.

NOTE

Selecting WING FIRST bypasses electrical components that, if malfunctioning, can prevent fuel transfer from external wing tanks, the centerline tank, or all three external tanks. With a three tank configuration, the first indication that the centerline tank is feeding is after the external wing tanks are emptied.

7. ENG FEED knob – NORM.
A NVP TFR FAIL PFL and a fly-up can occur when NORM is reselected while operating in TFR.
8. Stick – Pulse aircraft in pitch several times by applying differential g forces of approximately $\pm 2g$.

If the AIR REFUEL switch was initially found in CLOSE (step 2), perform step 9. If the AIR REFUEL switch was initially found in OPEN (step 2), omit step 9.

9. AIR REFUEL switch – OPEN (1 second), then CLOSE.

Open or close AR door at or below 400 knots/0.85 mach.

10. External tank fuel quantity – Monitor.
The time required to observe fuel transfer if the malfunction is corrected can vary from 1-3 minutes (for a full centerline tank) to 10-12 minutes (for three external tanks with 500 pounds fuel in each) if reservoir tanks are full (i.e., both air ejectors are off).

WARNING

If a trapped external fuel condition is not discovered until either reservoir tank is less than full or a fuel low light is on, sufficient fuel transfer from the external tank(s) may not occur even if the malfunction is corrected. Consider fuselage fuel to be the only usable fuel.

NOTE

If trapped external fuel occurs after air refueling and completion of checklist steps did not correct the malfunction, consider descending well below the freezing level to unfreeze the external pressurization and vent valve. Cycling the AR door at lower altitude may restore normal operation.

11. Stores – Jettison (if required).

HYDRAULIC MALFUNCTIONS

A hydraulic system failure is indicated by illumination of the HYD/OIL PRESS warning light, FLCS FAULT caution light, and ISA ALL FAIL PFL. The HYD/OIL PRESS warning light illuminates whenever either hydraulic system pressure drops below 1000 psi. The ISA ALL FAIL PFL may occur prior to the HYD/OIL PRESS warning light.

With system B hydraulic failure, perform alternate LG extension with the LG handle up. This action reduces the possibility of failing to unlock a LG door actuator or the NLG extend/retract actuator due to low or fluctuating system B hydraulic pressure.

Single Hydraulic Failure**WARNING**

If hydraulic failure is due to structural damage (e.g., battle damage, midair collision, bird strike, fire, or hard landing), the other system may be damaged and failure can occur with little warning. The HYD PRESS indicator may show normal pressure until system fluid is depleted.

SYSTEM A FAILURE

The FLCS ISA's are operating in the nonredundant mode and the speedbrakes and FFP are inoperative.

1. Land as soon as practical.
Make smooth control inputs and plan to fly a straight-in approach.
2. System B HYD PRESS indicator – Monitor.
3. Fuel balance – Monitor.
Fuel distribution must be controlled manually.

SYSTEM B FAILURE**NOTE**

EPU RUN light on may indicate a dual hydraulic or PTO shaft failure.

The FLCS ISA's are operating in the nonredundant mode and normal braking, NWS, AR door operation, gun operation, and normal LG extension are lost. Low hydraulic pressure may cause one or more LG actuators to remain locked in the LG up position. LG extension should be attempted in sufficient time to prepare for possible LG up landing. Drag chute operation is normal using drag chute accumulator pressure. Braking is available using brake/JFS accumulator pressure. The fully charged brake/JFS accumulators contain sufficient fluid for at least 75 seconds of continuous brake application. Use aerodynamic braking to the maximum extent possible. A single moderate and steady brake application without cycling the antiskid should then be applied. After stopping, engage the parking brake. If there is reason to believe that the brake/JFS accumulators are depleted or that directional control may be a problem, an approach-end arrestment should be considered.

1. Land as soon as practical.
Make smooth control inputs and plan to fly a straight-in approach.
2. ALT GEAR handle – Pull (190 knots maximum).

CAUTION

- NWS is not available following alternate LG extension.
- Do not depress the ALT GEAR reset button while pulling the ALT GEAR handle. This action may preclude successful LG extension.
- 3. LG handle – DN. (Use DN LOCK REL button if required.)

WARNING

If LG handle does not lower, select BRAKES CHAN 2 and position ALT FLAPS switch to EXTEND.

4. HOOK switch – DN (if required).
Braking is available using brake/JFS accumulators only. To avoid brake activation and loss of brake/JFS accumulator pressure, do not rest feet on brake pedals. If the brake/JFS accumulators are depleted or if directional control may be a problem, consider an approach-end arrestment. Refer to CABLE ARRESTMENT, this section.

After landing:

5. Stop straight ahead and engage parking brake.

CAUTION

- Brakes should be applied in a single, moderate, and steady application without cycling the antiskid.
- Brake pedal deflection of 1/16 inch activates the brakes and bleeds the brake/JFS accumulators. To avoid brake activation and loss of brake/JFS accumulator pressure, do not rest feet on brake pedals.
- Do not attempt to taxi clear of the runway. Loss of brake/JFS accumulator pressure results in the inability to stop or steer the aircraft.

Dual Hydraulic Failure

A dual hydraulic system failure can be detected by sluggishness or lack of response to flight control inputs, decreasing pressure readings on both HYD PRESS indicators, and associated warning and caution lights. The EPU automatically provides hydraulic pressure for system A when pressure of both hydraulic systems drops below 1000 psi. The systems affected by dual hydraulic system failure after the EPU is running are the same as those affected by system B failure. Refer to SYSTEM B FAILURE, this section.

1. EPU switch – ON (if EPU run light is off).
2. System A HYD PRESS indicator – Check pressure increasing.

If hydraulic pressure does not increase or control response is lost:

3. Eject.

If system A hydraulic pressure is restored:

3. EPU run light – Check light on at idle thrust.

NOTE

Before landing, confirm that the EPU operates (EPU run light is on) with the throttle in IDLE. If the EPU run light goes off, refer to ABNORMAL EPU OPERATION, this section.

4. Land as soon as possible.
Make smooth control inputs and plan to fly a straight-in approach.
5. ALT GEAR handle – Pull (190 knots maximum).

CAUTION

- NWS is not available following alternate LG extension.
 - Do not depress the ALT GEAR reset button while pulling the ALT GEAR handle. This action may preclude successful LG extension.
6. LG handle – DN. (Use DN LOCK REL button if required.)

WARNING

If LG handle does not lower, select BRAKES CHAN 2 and position ALT FLAPS switch to EXTEND.

7. HOOK switch – DN (if required).
Braking is available using brake/JFS accumulators only. To avoid brake activation and loss of brake/JFS accumulator pressure, do not rest feet on brake pedals. If the brake/JFS accumulators are depleted or if directional control may be a problem, consider an approach-end arrestment. Refer to CABLE ARRESTMENT, this section.

After landing:

8. Stop straight ahead and engage parking brake.

CAUTION

- Brakes should be applied in a single, moderate, and steady application without cycling the antiskid.
 - Brake pedal deflection of 1/16 inch activates the brakes and bleeds the brake/JFS accumulators. To avoid brake activation and loss of brake/JFS accumulator pressure, do not rest feet on brake pedals.
 - Do not attempt to taxi clear of the runway. Loss of brake/JFS accumulator pressure results in the inability to stop or steer the aircraft.
9. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

System B and Generator Failure (PTO Shaft)

A PTO shaft failure is indicated by failure of hydraulic system B, the main and standby generators, and the FLCS PMG. The EPU should start automatically to provide emergency hydraulic and electrical power. After accomplishing the appropriate emergency procedures, refer to EMERGENCY POWER DISTRIBUTION, this section, to determine inoperative equipment.

1. EPU switch – ON (if EPU run light is off).

If EPU run light is off and control response is lost:

2. Eject.

If EPU run light is on:

3. Throttle – As required.

CAUTION

Stall protection may be lost. Do not retard throttle below MIL until subsonic.

4. ADI – Check for presence of OFF and/or AUX warning flags.

If warning flag(s) is in view, refer to TOTAL INS FAILURE, this section.

WARNING

If only AUX flag is in view, pitch and roll attitude information is likely to be erroneous due to INS autorestart in the attitude mode when other than straight and level, unaccelerated flight conditions existed.

5. Fuel balance – Monitor.
6. EPU run light – Check light on at idle thrust.

NOTE

Before landing, confirm that the EPU operates (EPU run light is on) with the throttle in IDLE. If the EPU run light goes off, refer to ABNORMAL EPU OPERATION, this section.

7. Land as soon as possible.
Make smooth control inputs and plan to fly a straight-in approach.
8. ALT GEAR handle – Pull (190 knots maximum).

CAUTION

- NWS is not available following alternate LG extension.
 - Do not depress the ALT GEAR reset button while pulling the ALT GEAR handle. This action may preclude successful LG extension.
9. LG handle – DN. (Use DN LOCK REL button if required.)

WARNING

If LG handle does not lower, select BRAKES CHAN 2 and position ALT FLAPS switch to EXTEND.

10. HOOK switch – DN (if required).
Braking is available using brake/JFS accumulators only. To avoid brake activation and loss of brake/JFS accumulator pressure, do not rest feet on brake pedals. If the brake/JFS accumulators are depleted or if directional control may be a problem, consider an approach-end arrestment. Refer to CABLE ARRESTMENT, this section.

After landing:

11. Stop straight ahead and engage parking brake.

CAUTION

- Brakes should be applied in a single, moderate, and steady application without cycling the antiskid.
 - Brake pedal deflection of 1/16 inch activates the brake/JFS accumulators. To avoid brake activation and loss of accumulator fluid, do not rest feet on the brake pedals.
 - Do not attempt to taxi clear of the runway. Loss of brake/JFS accumulator pressure results in the inability to stop or steer the aircraft.
12. EPU switch – OFF.
 13. Refer to ACTIVATED EPU/HYDRAZINE LEAK, this section.

INS FAILURES

Most INS failures are apparent and affect flight operations significantly.

An FLCS A/P FAIL PFL occurs if the autopilot is engaged during an in-flight alignment. The PFL can be cleared after a full alignment is achieved by doing an FLCS reset.

Total INS Failure

A total INS failure is normally indicated by the INS BUS FAIL PFL. The ADI freezes with OFF and AUX warning flags in view; the HSI compass card and bearing pointer freeze; the HUD pitch ladder, heading scale, roll scale, and FPM also blank; magnetic heading is displayed only on the magnetic compass; the FLCC AOS feedback function is deactivated; and attitude reference is available only on the SAI. When the INSTR MODE knob is in TCN the HSI course deviation indicator, RANGE indicator, and TO-FROM indicator are operative, and the capability to fly an inbound (or outbound) radial to (or from) a TACAN station is available.

WARNING

It is possible for the displayed ADI and/or HUD attitude to be in error with no ADI OFF or AUX warning flags in view and without an INS or HUD PFL. Displayed HSI and/or HUD headings may also be in error with no HSI OFF or ADI AUX warning flags in view and without an INS or HUD PFL. Momentary warning flags may indicate impending failure. To detect these failures and maintain proper flight orientation, basic and backup instruments must be cross-checked. Refer to T.O. GR1F-16CJ-34-1-1 for more detailed in-flight alignment procedures.

1. INS knob – OFF for 10 seconds.
2. Attitude – Straight, level, and unaccelerated.
3. INS knob – IN FLT ALIGN.
4. Magnetic heading – Enter.
5. Attitude – Straight, level, and unaccelerated until ADI OFF warning flag goes out of view after approximately 10 seconds.

6. Auto or manual in-flight alignment – Accomplish.

Minimum performance is available with return of the HUD FPM; return of MAX G indicates full performance. INS knob can remain in IN FLT ALIGN to insure the highest performance by continuing the INS updating process.

NOTE

Limit vertical maneuvering until the FPM is displayed on the HUD. Failure to do so could delay or prevent completion of the in-flight alignment.

If ADI OFF and/or AUX warning flag remains in view, alignment is not possible and the attitude mode should be attempted:

7. INS knob – OFF for 15 seconds.
8. INS knob – ATT.
9. Attitude – Straight, level, and unaccelerated until ADI OFF warning flag goes out of view after approximately 10 seconds.
10. ADI – Verify attitude information correct.
11. ☒ ☐ INSTR HDG knob – Slew HSI to match best available magnetic heading.

OUT-OF-CONTROL RECOVERY

Refer to OUT-OF-CONTROL CHARACTERISTICS, Section VI, for a detailed discussion of flight characteristics and indications during departures, deep stalls, spins, and recoveries.

In order to prevent a departure, immediately initiate recovery after the low speed warning tone comes on. Prompt recovery is even more critical with heavyweight loadings or during hard maneuvering since the airspeed bleedoff is more rapid. Additionally, a yaw departure may be prevented if controls are promptly neutralized following an uncommanded nose slice or roll hesitation.

In order to minimize time and altitude loss following a departure, immediately release the stick and rudder controls. The aircraft should be allowed the opportunity to self-recover. Self-recoveries usually occur within the first two postdeparture pitch oscillations, and may take up to 10-20 seconds. Recovery is indicated by the nose dropping and the AOA remaining below 25 degrees. Fly the aircraft at a low AOA until airspeed reaches 200 knots or more (if altitude permits) and recover from the resulting dive. If the departure does not result in self-recovery, then the aircraft is in a deep stall or spin.

Departures at high altitude may result in an engine stall. Prolonged negative g flight at a high engine thrust level may result in an engine bearing failure. Retard the throttle to IDLE. Do not advance the throttle until beginning the dive recovery.

Upright deep stalls may be very stable with little or no pitch motions or may be very oscillatory with large pitch, roll, and yaw motions. Generally, a clean configuration results in a deep stall with a near wings-level pitching motion.

During upright deep stalls with a centerline store, particularly a 300-gallon fuel tank, the aircraft tends to roll and yaw right while pitching up, and roll and yaw left while pitching down. During deep stalls with 370-gallon fuel tanks, the aircraft nose motion appears triangular. This motion is characterized by a roll and yaw right while pitching up, followed by a pitch down, a hesitation, and yaw to the left.

In an upright deep stall or spin, the yaw rate limiter automatically provides antispin controls and the rudder authority limiter prevents pilot yaw commands. The yaw rate limiter is effective in preventing spins with almost all CAT I loadings. However, following a yaw departure above 25,000 feet, aircraft with CAT I loadings that have all the following characteristics may spin:

- Centerline store.
- Inlet mounted pod(s).
- Lateral asymmetry greater than 300 pounds at stations 1, 2, or 3.

Upright spins following a yaw departure can be disorienting. The initial portion of the spin is characterized by highly oscillatory motions and a high yaw rate (70 to 100 degrees per second). Initially, the aircraft spins roughly around the aircraft's flight path at departure. As the spin continues, the rotation axis eventually becomes vertical. Very noticeable forward g (eyeballs out) and sideforces are present.

In a spin, the yaw rate must be allowed to subside before the aircraft can be recovered. This may require 20 to 30 seconds. Pitch, roll, and yaw oscillations associated with a deep stall should not be confused with the continuous yaw rotation of a spin. When the yaw rotation subsides, the aircraft will either recover or will settle into an upright deep stall.

In an inverted deep stall or spin, the yaw rate limiter automatically provides rudder against the yaw rate. Roll and rudder commands should be avoided. Pilot roll and rudder commands are inhibited when MPO is engaged.

The aircraft must be rocked out of a deep stall with the MPO switch held in OVRD until recovery is complete. The MPO switch allows the pilot to use the horizontal tail surfaces to reinforce pitch oscillations until the pitch rates are sufficient for recovery. When sufficient nosedown pitch rate is generated to reduce the AOA below the deep stall AOA, the aircraft will recover.

The MPO switch must remain in the OVRD position during pitch rocking. If the MPO switch is released, the horizontal tails reposition to reduce AOA and may negate any pitch oscillations. Additionally, if the MPO switch is positioned to OVRD without any stick commands, the horizontal tails streamline and prevent recovery.

In an upright deep stall, begin pitch rocking in-phase with nose movement; i.e., if the nose is pitching up, pull back on the stick. Maintain aft stick until the maximum pitch attitude is reached, which is indicated by the nose stopping and reversing direction, and then push full forward on the stick to generate a nosedown pitch rate. If the nosedown pitch rate is high enough to break the deep stall, the aircraft will recover.

During some upright deep stalls, the aircraft may be stable with essentially no pitching motion. In these cases, pull full aft stick (away from the ground) and monitor nose movement. If nose movement occurs, continue stick cycling in-phase. If nose movement is not apparent after 3-4 seconds, then push full forward on the stick to generate a nosedown pitch rate. This nosedown pitch rate may be sufficient to reduce AOA below the deep stall AOA and recover the aircraft. If the nose does not continue down but reverses and starts up, pull back on the stick and continue to reinforce these pitch cycles. Proper pitch rocking is accomplished by allowing the nose to lead stick motion; i.e., when nose movement reverses, the stick should be reversed. When sufficient nosedown pitch rate is generated to reduce the AOA below the deep stall AOA, the aircraft will recover.

During upright deep stalls that are not stable, roll and yaw motions make it more difficult to determine proper recovery inputs; however, pitch attitude is still the best indication available. This pitch attitude is determined by the nose position with respect to the horizon. If unable to determine pitch motions with outside references, the ADI may be useful.

With proper stick cycling, the magnitude of the pitch oscillations progressively increases until large enough for recovery. Rapid fore and aft cycling of the stick or cycling out of phase with the pitching motion of the aircraft will not be effective and may prevent recovery. Pitch inputs must be abrupt and maximum command. Pitch inputs that are smooth or less than maximum command do not generate pitch rate as effectively, and may prevent recovery. Normally, only one or two correctly applied cycles are required to break a deep stall; however, the presence of stores, particularly a 300-gallon fuel tank or 370-gallon fuel tanks, may necessitate five or more properly executed stick cycles for recovery. Altitude loss is approximately 1000-1500 feet per pitch rock cycle.

If inverted, the same pitch rocking procedures apply except if no pitch motion is apparent, the first stick command should be full forward (away from the ground). Inverted deep stalls are generally stable, regardless of the stores configuration. Yaw oscillations may be noticed, but do not affect recovery.

If the pitch rate is still high as the aircraft recovers, there may be a tendency for the aircraft to continue pitching through to a deep stall in the other direction. Attempt to stop the nose in a near vertical dive by tracking a spot on the ground. If the aircraft does transition to an opposite AOA deep stall, it may be very disorienting; however, pitch oscillations are generally high and recovery should be rapid with a

few properly executed stick cycles. Recovery is confirmed by the nose remaining down and the AOA remaining in the normal range. As the airspeed increases above 200 knots, release the MPO switch, maintain neutral roll and yaw commands, and apply pitch commands as required to recover from the resulting dive using MIL/AB thrust.

WARNING

- Recovery from a deep stall condition will present a low airspeed situation in which the aircraft may require more than 6000 feet of altitude to attain level flight.
- If recovery (pitch rate stopped, AOA within -5 to +25 degrees, and airspeed 200 knots or greater) is not apparent by 6000 feet AGL, eject.

The engine may stall when out of control. Also, FLCS failure indications may occur. Ignore these indications and concentrate on recovery.

In the event of a departure from controlled flight, accomplish as much of the following as required to effect a recovery:

1. Controls – Release.
2. Throttle – IDLE.

If still out of control:

Positive g, AOA indicator pegged at 32 degrees (upright deep stall) or negative g, AOA indicator pegged at -5 degrees (inverted deep stall).

3. MPO switch – OVRD and hold.
Maintain firm pressure.

WARNING

- The MPO switch must be held in the OVRD position until the deep stall is positively broken as evidenced by the pitch rate stopping, AOA in the normal range (-5 to +25 degrees), and airspeed increasing above 200 knots. Early release of the MPO switch may delay recovery.
- Failure to adequately secure and tighten lapbelt may result in inability to reach and operate the MPO switch during out-of-control situations.

4. Stick – Cycle in-phase.

WARNING

Pitch rocking with a high sustained yaw rate may prevent recovery. Delay stick inputs until yaw rotation stops or is minimized. Pitch, roll, and yaw oscillations associated with a deep stall should not be confused with the continuous yaw rotation associated with a spin.

OXYGEN MALFUNCTION

The OXY LOW caution light indicates oxygen quantity below 0.5 liter or pressure below 42 psi.

If OXY LOW caution light illuminates:

1. Cockpit pressure altitude – 10,000 feet maximum.

If unable to descend immediately:

2. Emergency oxygen – Activate.
3. Oxygen hose – Disconnect.

PBG MALFUNCTION

A malfunction of the oxygen regulator while in PBG may cause excessive pressure or failure of pressure to decrease when g is reduced.

If excessive pressure is experienced or high pressure continues after g is reduced:

1. OXYGEN mode lever – ON.

If pressure is not relieved:

2. Oxygen hose – Disconnect.
3. Cockpit pressure altitude – 10,000 feet maximum.

If unable to descend immediately:

4. Emergency oxygen – Activate.
5. Land as soon as practical.

SMOKE OR FUMES

All unidentified odors will be considered toxic. Do not take off when unidentified odors are present. Do not confuse ECS condensation for smoke.

If smoke or fumes are detected:

1. OXYGEN REGULATOR – Check ON, 100%, and EMER.

NOTE

The emergency oxygen bottle is not recommended for use in the smoke and fumes environment unless aircraft oxygen supply contamination is suspected. Activation of the emergency oxygen bottle does not prevent cockpit smoke or fumes from entering the oxygen mask.

2. Altitude – 25,000 feet maximum.
3. Airspeed – 500 knots maximum.
4. AIR SOURCE knob – RAM.
External fuel cannot be transferred in OFF or RAM. Consider jettisoning tank(s) to decrease drag if range is critical and the ECS cannot be turned on for short periods of time to transfer fuel.
5. Nonessential electrical equipment – Off.

NOTE

If in VMC and the ADI and HSI are not required for flight, the INS should be considered nonessential.

6. Determine cause of smoke or fumes and correct (if possible).

NOTE

- Smoke in the cockpit may be indicative of an engine oil system malfunction. If possible, retard throttle to lowest setting possible to sustain flight and monitor the OIL pressure indicator. Refer to OIL SYSTEM MALFUNCTION, this section, if appropriate.
- Any odor that smells of burning flesh may be indicative of bird ingestion into the engine. Monitor engine instruments for signs of abnormal operation.

7. Land as soon as possible.

If cockpit visibility precludes safe operation:

8. Airspeed – 180 knots maximum.
9. Seat – Full down.
10. ALT FLAPS switch – EXTEND.
11. Canopy – Jettison.

LANDING EMERGENCIES 3c

Generally, the type of pattern flown in an emergency is either an SFO or straight-in approach and depends on several factors:

- Nature of the emergency.

- Weather conditions.
- Day or night.
- Proximity of a suitable landing runway.
- Fuel status.

STRAIGHT-IN LANDING

A straight-in landing is recommended for emergencies which dictate minimum maneuvering inputs such as hydraulic, flight control, or electrical problems or situations which result in a relatively high thrust level being maintained to touchdown such as a stuck or closed nozzle or when the engine is operating satisfactorily in SEC. A controllability check should be accomplished prior to commencing the approach if minimum flying airspeeds or control difficulties are experienced or are anticipated.

NOTE

When landing in SEC, an increased ground roll distance is required due to higher idle thrust.

SIMULATED FLAMEOUT (SFO) LANDING

Anytime engine failure is anticipated (abnormal engine response, oil system failures, low fuel, etc.), an SFO landing should be performed. At or just prior to high key, turn the EPU on, and if engine seizure is not anticipated, turn the JFS on and verify their operation (EPU run and JFS RUN lights on). If the engine is still running at touchdown, the JFS shuts down at WOW.

Fly the SFO pattern and landing in accordance with the procedures for FLAMEOUT LANDING, this section. If the engine fails, this action provides sufficient energy to safely land the aircraft or to zoom and eject if a safe landing cannot be made.

An SFO landing is not recommended when landing with the engine operating satisfactorily in SEC. The higher level of idle thrust may result in a long and fast landing and difficulty stopping the aircraft.

To simulate an engine out glide with the LG up, use idle thrust and 30 degrees speedbrakes. From the front cockpit, this equates to the intersection of the top of the speedbrakes and a line drawn from the tip of the horizontal tail to the top of the vertical tail root fairing. To simulate an engine out glide with the LG down, use idle thrust and 20 degrees speedbrakes.

From the front cockpit, this equates to the intersection of the top of speedbrakes and a line drawn from the tip of the horizontal tail to the base of the vertical tail root fairing. The additional drag produced during an engine-out condition is equivalent to retaining stores with a drag index of 170 with the LG up or 70 with the LG down. If stores are retained, adjust speedbrake deflection accordingly. If the engine fails, close speedbrakes and jettison stores.

When flying an SFO approach with the engine operating at a higher thrust level than normal idle, control descent rate and airspeed with the speedbrakes rather than adjust the ground track. If thrust is excessively high or if landing on a runway where stopping distance may be critical, the procedures for ABNORMAL ENGINE RESPONSE, this section, should be considered.

WARNING

On runways with less than 8000 feet and without arresting gear or drag chute, there may be insufficient distance to safely stop the aircraft.

After touchdown from an SFO landing, use a normal or short field stopping technique as required by the stopping distance available. Extend the hook if required. If the engine rpm is greater than normal with the throttle in IDLE or some other malfunction requires excessive braking action to maintain a safe taxi speed, the brakes may absorb a high amount of energy in a short period of time. If required, refer to HOT BRAKES, this section.

CONTROLLABILITY CHECK

When structural damage or any other failure that may adversely affect aircraft handling characteristics is known or suspected, a controllability check should be performed.

The following items should be accomplished:

1. Attain safe altitude.

NOTE

In the event that structural damage of unknown extent is encountered or if continued control of the aircraft is in doubt, consider accomplishing applicable steps of EJECTION (TIME PERMITTING), this section, prior to proceeding with CONTROLLABILITY CHECK.

2. GW – Reduce (as required).
3. LE FLAPS switch – LOCK (if required).
If LEF damage is observed, consider locking LEF's.
4. Determine optimum configuration available for landing.

WARNING

If a condition which might cause asymmetric TEF extension exists, consider alternate LG extension with the LG handle in UP to preclude TEF extension. If the LG handle remains up:

- Final approach airspeed is 20 knots higher than normal.
 - The TO/LDG CONFIG warning light may illuminate.
 - NWS is inoperative.
 - BRAKES CHAN 2 must be selected.
 - FLCS remains in cruise gains. Consider positioning AIR REFUEL switch to OPEN to obtain takeoff and landing gains.
 - The LG handle warning light remains on to indicate the position of the gear handle is not in agreement with the actual gear position.
5. Stores – Selectively jettison (if required). Refer to SELECTIVE JETTISON, this section.
 6. Slow only to that AOA/airspeed which allows acceptable handling qualities.

WARNING

If the aircraft is not controllable down to a reasonable landing speed (given consideration to weather, runway condition, facilities, pilot experience, pilot arm fatigue, etc.), an ejection is recommended.

CABLE ARRESTMENT

Refer to figure 5-5 for hook engagement limits. If there is any doubt about stopping on the remaining runway, lower the hook. Engage the cable as close to center as possible, nosewheel on the runway with brakes off and aircraft aligned with the runway. Place the HOOK switch to DN at least 1500 feet before reaching the desired arresting cable and reduce speed as much as possible; however, if brakes and NWS are inoperative, use flaperons and rudder as required to maintain directional control. As the aircraft slows to below 70 knots, directional control is reduced and the aircraft drifts right.

For most approach-end arrestments, touchdown should be at least 500 feet in front of the cable to allow sufficient time to lower the nosewheel to the runway prior to engagement. For an approach-end arrestment with one MLG up or damaged as described in LANDING WITH LG UNSAFE/UP, this section, maintain landing attitude after touchdown and prior to engagement. Immediately after touchdown, retard throttle to IDLE.

After engagement, rollback should be controlled by the throttle. For cable disengagement, place HOOK switch to UP and use approximately 10-15 percent increase in rpm to allow a rollback disengagement.

WARNING

- Cable arrestment at speeds greater than emergency arrestment speed, with offcenter distances greater than 35 feet, or with the nosewheel in the air could result in structural failure of the NLG, hook, and/or hook backup structure.
- The hook may miss the cable if the aircraft is not slow enough to compress the MLG struts sufficiently to make WOW or if forward stick pressure is held.
- To prevent hook bounce and possible missed engagement, avoid runway centerline lighting.

NOTE

- Under certain conditions, arrestment may produce a bouncing motion which is readily apparent.
- Offcenter engagement results in aircraft yaw motions during cable runout.
- Up to 5 seconds (after activation) are required to fully raise the BAK-14 cable.

1. GW – Reduce (as required).
2. HOOK switch – DN.
 - Approach-end arrestment: Touch down at least 500 feet in front of the cable.
 - Departure-end arrestment: HOOK switch to DN at least 1500 feet before reaching the cable.
3. SHOULDER HARNESS knob – LOCKED.
4. Consider options available if a missed engagement occurs.

Prior to cable engagement:

5. Throttle – IDLE.
6. NWS – Engage (if required).
7. Engage cable as close to center as possible; nosewheel on the runway (if required) and brakes off.

WARNING

Using forward stick pressure to keep an abnormally fast aircraft on the runway for cable engagement will probably result in a missed engagement or failure of the nose tire/NLG.

CAUTION

Do not use brakes while the cable is stretched or while being pulled backward. This action can result in aircraft tipping backward. Control rollback with the throttle.

NET ARRESTMENT

Refer to NET ARRESTMENT LIMITATIONS, section 5. Engaging a net barrier requires minimal pilot action as there is no hook to lower and little roll back after the aircraft's forward motion stops.

1. SHOULDER HARNESS knob - LOCKED.
2. Brakes - Release prior to engagement.
3. Throttle - Off prior to engagement.
4. Engage net perpendicular, preferably in the center portion of the runway.

WARNING

The canopy should be retained throughout the engagement to provide pilot protection. Barrier netting will not prevent subsequent canopy opening/jettison.

CAUTION

Engage net perpendicular to preclude aircraft rotating sideways during the arrestment. Avoid steering back toward the center of the runway just prior to engagement as this could result in a non-perpendicular engagement. Nosewheel steering is not required; however, if engaged, it may be left engaged. The throttle should be retarded to off prior to engagement to reduce the possibility of foreign object damage.

LANDING WITH A BLOWN TIRE

When landing with a blown MLG tire on a dry runway, directional control is normally not a problem. A normal approach and landing are preferred over an approach-end arrestment. Departure-end arrestment is recommended if stopping distance is critical. However, an approach-end arrestment should be considered only when directional control may be a problem (e.g., crosswind and/or hydraulic system B failure). Leave the antiskid system on to minimize the possibility of skidding the good tire during landing. Land on the side of runway away from the blown tire. If the wheel with the blown tire does not turn after landing, the antiskid system switches to the

pulsating antiskid mode. Use roll control to relieve pressure on the blown tire and NWS to maintain directional control.

CAUTION

With a blown tire, avoid centerline lights as they may cause wheel damage and subsequent loss of directional control.

Stop straight ahead and shut down the engine as soon as firefighting equipment is available. Do not attempt to taxi unless an emergency situation exists.

If the blown tire is on the NLG, directional control may be a problem due to a reverse castering effect. An approach-end arrestment with the nosewheel off the runway is recommended. Depending on GW and speed at the time of engagement, type of cable engaged, and height of nosewheel above the runway, it is possible for NLG strut failure and/or inlet structural damage to occur. To reduce the possibility of such damage, the lowest practical landing GW and airspeed should be attained. Jettison stores if possible. Retain empty external fuel tanks. Stores/suspension equipment at stations 3 and/or 7 may cause external fuel tanks at stations 4 and 6 to move inboard when jettisoned. Landing should be made with the remaining internal fuel in the aft system. After touchdown from a 13 degree AOA approach, pitch attitude should be reduced to approximately 5 degrees prior to cable engagement. The HUD gun borecross can be used to determine pitch attitude. During the arrestment, the aircraft is likely to turn slightly right before stopping.

If an approach-end arrestment is not available, refer to procedures for aborting with a blown nose tire in BLOWN TIRE ON TAKEOFF, this section, or consider an all LG up landing (refer to LANDING WITH LG UNSAFE/UP, this section.)

Landing With A Blown Main Gear Tire

Prior to landing:

NOTE

Land on side of runway away from blown tire.

1. GW - Reduce (if practical).
2. TANK INERTING switch - TANK INERTING even if Halon is not available.

CABLE ARRESTMENT

Refer to figure 5-5 for hook engagement limits. If there is any doubt about stopping on the remaining runway, lower the hook. Engage the cable as close to center as possible, nosewheel on the runway with brakes off and aircraft aligned with the runway. Place the HOOK switch to DN at least 1500 feet before reaching the desired arresting cable and reduce speed as much as possible; however, if brakes and NWS are inoperative, use flaperons and rudder as required to maintain directional control. As the aircraft slows to below 70 knots, directional control is reduced and the aircraft drifts right.

For most approach-end arrestments, touchdown should be at least 500 feet in front of the cable to allow sufficient time to lower the nosewheel to the runway prior to engagement. For an approach-end arrestment with one MLG up or damaged as described in LANDING WITH LG UNSAFE/UP, this section, maintain landing attitude after touchdown and prior to engagement. Immediately after touchdown, retard throttle to IDLE.

After engagement, rollback should be controlled by the throttle. For cable disengagement, place HOOK switch to UP and use approximately 10-15 percent increase in rpm to allow a rollback disengagement.

WARNING

- Cable arrestment at speeds greater than emergency arrestment speed, with offcenter distances greater than 35 feet, or with the nosewheel in the air could result in structural failure of the NLG, hook, and/or hook backup structure.
- The hook may miss the cable if the aircraft is not slow enough to compress the MLG struts sufficiently to make WOW or if forward stick pressure is held.
- To prevent hook bounce and possible missed engagement, avoid runway centerline lighting.

NOTE

- Under certain conditions, arrestment may produce a bouncing motion which is readily apparent.

- Offcenter engagement results in aircraft yaw motions during cable runout.

- Up to 5 seconds (after activation) are required to fully raise the BAK-14 cable.

1. GW – Reduce (as required).

2. HOOK switch – DN.

- Approach-end arrestment: Touch down at least 500 feet in front of the cable.

- Departure-end arrestment: HOOK switch to DN at least 1500 feet before reaching the cable.

3. SHOULDER HARNESS knob – LOCKED.

4. Consider options available if a missed engagement occurs.

Prior to cable engagement:

5. Throttle – IDLE.

6. NWS – Engage (if required).

7. Engage cable as close to center as possible; nosewheel on the runway (if required) and brakes off.

WARNING

Using forward stick pressure to keep an abnormally fast aircraft on the runway for cable engagement will probably result in a missed engagement or failure of the nose tire/NLG.

CAUTION

Do not use brakes while the cable is stretched or while being pulled backward. This action can result in aircraft tipping backward. Control rollback with the throttle.

NET ARRESTMENT

Refer to NET ARRESTMENT LIMITATIONS, section 5. Engaging a net barrier requires minimal pilot action as there is no hook to lower and little roll back after the aircraft's forward motion stops.

1. SHOULDER HARNESS knob - LOCKED.
2. Brakes - Release prior to engagement.
3. Throttle - Off prior to engagement.
4. Engage net perpendicular, preferably in the center portion of the runway.

WARNING

The canopy should be retained throughout the engagement to provide pilot protection. Barrier netting will not prevent subsequent canopy opening/jettison.

CAUTION

Engage net perpendicular to preclude aircraft rotating sideways during the arrestment. Avoid steering back toward the center of the runway just prior to engagement as this could result in a non-perpendicular engagement. Nosewheel steering is not required; however, if engaged, it may be left engaged. The throttle should be retarded to off prior to engagement to reduce the possibility of foreign object damage.

LANDING WITH A BLOWN TIRE

When landing with a blown MLG tire, the landing gear may collapse during landing roll if portions of the tire remain and cause a wheel imbalance condition. To avoid possible directional control problems associated with landing gear collapse, an approach-end arrestment is preferred over a normal approach and landing. To reduce the possibility of damage, the lowest practical landing GW and airspeed should be attained. Jettison stores if possible. Retain empty external fuel tanks. Stores/suspension equipment at stations 3 and/or 7 may cause external fuel tanks at stations 4 and 6 to move inboard when jettisoned. If an approach-end arrestment is not available and a normal approach and landing is flown, leave the anti-skid system on to minimize the possibility of skidding on the good

tire. If the wheel with the blown tire does not turn after landing, the antiskid system switches to the pulsating antiskid mode. Use roll control to relieve pressure on the blown tire and NWS to maintain directional control.

CAUTION

With a blown tire, avoid centerline lights as they may cause wheel damage and subsequent loss of directional control.

Stop straight ahead and shut down the engine as soon as firefighting equipment is available. Do not attempt to taxi unless an emergency situation exists.

If the blown tire is on the NLG, directional control may be a problem due to a reverse casting effect. An approach-end arrestment with the nosewheel off the runway is recommended. Depending on GW and speed at the time of engagement, type of cable engaged, and height of nosewheel above the runway, it is possible for NLG strut failure and/or inlet structural damage to occur. To reduce the possibility of such damage, the lowest practical landing GW and airspeed should be attained. Jettison stores if possible. Retain empty external fuel tanks. Stores/suspension equipment at stations 3 and/or 7 may cause external fuel tanks at stations 4 and 6 to move inboard when jettisoned. Landing should be made with the remaining internal fuel in the aft system. After touchdown from a 13 degree AOA approach, pitch attitude should be reduced to approximately 5 degrees prior to cable engagement. The HUD gun borecross can be used to determine pitch attitude. During the arrestment, the aircraft is likely to turn slightly right before stopping.

If an approach-end arrestment is not available, refer to procedures for aborting with a blown nose tire in BLOWN TIRE ON TAKEOFF, this section, or consider an all LG up landing (refer to LANDING WITH LG UNSAFE/UP, this section).

Landing With A Blown Main Gear Tire

Prior to landing:

1. Stores - Jettison. Refer to JETTISON, this section.
Retain empty external fuel tanks.
2. GW - Reduce (if practical).
3. TANK INERTING switch - TANK INERTING even if Halon is not available.

3. AIR REFUEL switch – OPEN, if external fuel tank(s) is installed.

WARNING

Failure to depressurize external fuel tank(s) significantly increases the probability of tank explosion and fire if the aircraft departs the runway.

NOTE

Delay placing the AIR REFUEL switch to OPEN until all external tanks are empty.

4. ANTI-SKID switch – ANTI-SKID.
Use of antiskid minimizes skidding on good tire during braking.
5. HOOK switch – As desired.
Departure-end arrestment is recommended if stopping distance is critical. An approach-end arrestment should be considered only when directional control may be a problem (e.g., crosswind and/or hydraulic system B failure).

After touchdown:

NOTE

Attempt to reduce weight on blown tire.

6. NWS – Engage (if required).
The NWS light does not illuminate when NWS is engaged if the AIR REFUEL switch is in OPEN.
7. Brake – As desired on good tire.

Landing With A Blown Nose Gear Tire

Prior to landing:

1. Stores – Jettison. Refer to JETTISON, this section.
Retain empty external fuel tanks.
2. GW – Reduce (if practical).
Plan to land with approximately 1500 pounds of fuel on board.

3. Fuel distribution – All fuel in aft tank system (if practical).

At 3000 pounds fuel remaining, place ENG FEED knob to FWD. When forward reservoir is empty, place ENG FEED knob to NORM. (Emptying forward tank system takes approximately ☐ 15 minutes, ☐ 9 minutes if fuel flow is 4000 pph. When forward tank system empties, the fuel in aft tank system is approximately ☐ 2000 pounds, ☐ 2400 pounds.)

4. TANK INERTING switch – TANK INERTING even if Halon is not available.
5. AIR REFUEL switch – OPEN, if external fuel tank(s) is installed.

WARNING

Failure to depressurize external fuel tank(s) significantly increases the probability of tank explosion and fire if the nose gear collapses during the arrestment.

6. HOOK switch – DN.
An approach-end cable arrestment with the nosewheel off the runway is recommended. Refer to CABLE ARRESTMENT, this section.
7. Final approach AOA – 13 degrees.

After touchdown:

8. Stick – Lower nose to approximately 5 degrees pitch attitude for arrestment.

After cable engagement:

9. Stick – Apply aft stick after nose starts down to reduce load on the NLG.

If a missed cable engagement occurs:

10. Maintain pitch attitude and go around.

4. AIR REFUEL switch – OPEN, if external fuel tank(s) is installed.

WARNING

Failure to depressurize external fuel tank(s) significantly increases the probability of tank explosion and fire if the aircraft departs the runway.

NOTE

Delay placing the AIR REFUEL switch to OPEN until all external tanks are empty.

5. ANTI-SKID switch – ANTI-SKID.
Use of antiskid minimizes skidding on good tire during braking.
6. HOOK switch – DN.
An approach-end arrestment is recommended. Refer to CABLE ARRESTMENT, this section.
7. Final approach AOA – 13 degrees.

If a missed approach-end cable arrestment occurs or no approach-end cable is available:

NOTE

If no approach-end cable is available, land on the side of runway away from the blown tire.

8. NWS – Engage (if required).
The NWS light does not illuminate when NWS is engaged if the AIR REFUEL switch is in OPEN.
9. Brake – As desired on good tire.

Landing With A Blown Nose Gear Tire

Prior to landing:

1. Stores – Jettison. Refer to JETTISON, this section.
Retain empty external fuel tanks.
2. GW – Reduce (if practical).
Plan to land with approximately 1500 pounds of fuel on board.

3. Fuel distribution – All fuel in aft tank system (if practical).

At 3000 pounds fuel remaining, place ENG FEED knob to FWD. When forward reservoir is empty, place ENG FEED knob to NORM. (Emptying forward tank system takes approximately ☐ 15 minutes, ☐ 9 minutes if fuel flow is 4000 pph. When forward tank system empties, the fuel in aft tank system is approximately ☐ 2000 pounds, ☐ 2400 pounds.)

4. TANK INERTING switch – TANK INERTING even if Halon is not available.
5. AIR REFUEL switch – OPEN, if external fuel tank(s) is installed.

WARNING

Failure to depressurize external fuel tank(s) significantly increases the probability of tank explosion and fire if the nose gear collapses during the arrestment.

6. HOOK switch – DN.
An approach-end cable arrestment with the nosewheel off the runway is recommended. Refer to CABLE ARRESTMENT, this section.
7. Final approach AOA – 13 degrees.

After touchdown:

8. Stick – Lower nose to approximately 5 degrees pitch attitude for arrestment.

After cable engagement:

9. Stick – Apply aft stick after nose starts down to reduce load on the NLG.

If a missed cable engagement occurs:

10. Maintain pitch attitude and go around.



WARNING

With a blown NLG tire and loss of NWS, it may not be possible to prevent departure from the runway. A reverse castering effect may occur in which the nosewheel moves opposite to the rudder or differential braking input.

NOTE

The maximum allowable fuel flow with one reservoir empty is 25,000 pph.

LG EXTENSION MALFUNCTIONS 31

Malfunctions in extending the LG are normally indicated by failure of the LG handle to lower or by failure of one or more LG's to extend accompanied by lack of the corresponding WHEELS down lights and continuous illumination of the LG handle warning light. Refer to LG FAILS TO EXTEND, this section.

Mechanical failures can have varying causes. Failure of an LG component usually affects only one LG and cannot be corrected in flight. Abnormally high moisture content in the hydraulic fluid can cause more than one LG to fail to extend after prolonged operation at low ambient temperatures. This situation can usually be corrected after several cycles of the LG handle at low altitude.

Abnormal indications after the LG handle is lowered can also be caused by electrically related malfunctions (i.e., electrical shorts, electrical component failures, or cannon plug problems). The malfunction may result in an indication problem or an actual failure of one or more LG to extend. A visual confirmation of the LG position should be obtained if possible before any action is taken. An electrically related failure can also affect speedbrake limiting.

An indication failure may be distinguished from an actual extension malfunction by the WHEELS down lights and the LG handle warning light. The WHEELS down lights and the LG handle warning light have separate power sources and circuitry. Thus, if either circuit operates correctly, the LG should be down and locked even though the other circuit may indicate a problem. If possible, cycle the LG to reattempt extension while watching the WHEELS down lights and the LG handle warning light.

Because of the number of possible malfunctions, specific procedures for every situation are not feasible. If time and conditions permit, ground supervisory and technical assistance should be requested. Evaluate available options prior to using the ALT GEAR handle. Other options may include an LG up landing, diverting to a more suitable landing field, landing where the hazards of departing the prepared surface are minimal, or using a cable arrestment.

LG Fails To Extend**NOTE**

If alternate LG extension was performed and one or more LG indicate unsafe, refer to ALTERNATE LG EXTENSION, this section.

If the LG handle cannot be moved to the DN position after depressing the LG handle down permission button, the electrical circuitry or solenoid has probably failed. **[C] [DF]** The DN LOCK REL button mechanically permits the LG handle to be moved to the DN position. If the LG handle cannot be moved to the DN position due to a mechanical failure, CHAN 1 brakes are inoperative and TEF's must be extended using the ALT FLAPS switch.

If one or more LG fail to extend, the LG handle may be cycled multiple times to attempt to extend the LG if no structural/battle damage exists and if normal hydraulic pressure exists. Multiple cycle attempts may release the locking pawls and result in normal gear extension if the failure to extend was caused by failure of the uplocks to release.

CAUTION

If the LG previously failed to retract, do not cycle the LG handle. Damage to the LG or LG doors may preclude successful extension.

If cycling of the LG handle fails to correct the situation, use of the alternate extension system must be considered.

If possible, get a visual confirmation of LG position. If only the NLG WHEELS down light is off, confirmation of the NLG position can be made by checking landing/taxi light operation. Illumination of either light confirms that the NLG is down and locked. With the NLG WHEELS down light off, NWS may be inoperative (without a NWS FAIL caution light).

If LG handle cannot be lowered normally:

1. DN LOCK REL button – Depress and lower LG handle.

If LG handle still cannot be lowered:

2. ALT FLAPS switch – EXTEND.
3. BRAKES channel switch – CHAN 2.
4. Go to ALTERNATE LG EXTENSION, this section.

NOTE

After a successful alternate gear extension with the landing gear handle still up, the LG handle warning light remains on to indicate the position of the gear handle is not in agreement with the actual gear position.

If LG handle lowers and one or more LG indicate unsafe:

WARNING

If at anytime, an LG intermittently indicates unsafe (i.e. WHEELS down light off and LG handle warning light on), the overcenter lock on the LG drag brace assembly may not be functioning properly. The LG may appear down and locked, but the LG may collapse during landing. Plan on using the LG unsafe/up procedures even if the LG eventually indicates normal. Refer to LANDING WITH LG UNSAFE/UP, this section.

CAUTION

If the LG previously failed to retract, do not cycle the LG handle. Damage to the LG or LG doors may preclude successful extension.

NOTE

If only the NLG WHEELS down light is off, confirmation of the NLG position can be made by checking landing/taxi

light operation. Illumination of either light confirms that the NLG is down and locked. With the NLG WHEELS down light off, NWS may be inoperative (without a NWS FAIL caution light).

1. LG handle – Cycle and monitor LG handle warning light and WHEELS down lights.

If LG handle warning light came on when the LG handle was lowered, then went off, and tests good or if WHEELS down lights operated normally:

2. Speedbrakes – Verify opening is less than 43 degrees.
From the front cockpit, the top of the speedbrakes should be slightly above a line drawn from the tip of the horizontal tail to the top of the vertical tail root fairing.

CAUTION

If RMLG WHEELS down light is off, speedbrakes may not be limited to 43 degrees.

3. Land normally.

If LG handle warning light did not illuminate or remained illuminated after LG handle was lowered and if one or more WHEELS down lights did not illuminate:

4. Go to ALTERNATE LG EXTENSION, this section.

Alternate LG Extension

Alternate LG extension should be accomplished at the lowest practical airspeed below 190 knots. The NLG may not indicate down and locked until airspeed is reduced below 190 knots. NWS is inoperative after alternate LG extension even if system B hydraulic pressure is available.

1. LG handle – DN. (Use DN LOCK REL, if required.)
2. Airspeed – 190 knots maximum (if practical). Alternate LG extension can be used up to 300 knots; however, the NLG may not fully extend until 190 knots. Time above 190 knots should be minimized in case there is a leak in the pneumatic lines.

WARNING

With a blown NLG tire and loss of NWS, it may not be possible to prevent departure from the runway. A reverse castering effect may occur in which the nosewheel moves opposite to the rudder or differential braking input.

NOTE

The maximum allowable fuel flow with one reservoir empty is 25,000 pph.

LG EXTENSION MALFUNCTIONS

Malfunctions in extending the LG are normally indicated by failure of the LG handle to lower or by failure of one or more LG's to extend accompanied by lack of the corresponding WHEELS down lights and continuous illumination of the LG handle warning light. Refer to LG FAILS TO EXTEND, this section.

Mechanical failures can have varying causes. Failure of an LG component usually affects only one LG and cannot be corrected in flight. Abnormally high moisture content in the hydraulic fluid can cause more than one LG to fail to extend after prolonged operation at low ambient temperatures. This situation can usually be corrected after several cycles of the LG handle at low altitude.

Abnormal indications after the LG handle is lowered can also be caused by electrically related malfunctions (i.e., electrical shorts, electrical component failures, or cannon plug problems). The malfunction may result in an indication problem or an actual failure of one or more LG to extend. A visual confirmation of the LG position should be obtained if possible before any action is taken. An electrical/downlock switch related failure can also affect speedbrake limiting, green WHEELS down light illumination, and the AOA bracket in the HUD. In this case, the gear will not retract and the red light in the LG handle may remain on.

An indication failure may be distinguished from an actual extension malfunction by the WHEELS down lights and the LG handle warning light. The WHEELS down lights and the LG handle warning light have separate power sources and circuitry. Thus, if either circuit operates correctly, the LG should be down and locked even though the other circuit may indicate a problem. If possible, cycle the LG to reattempt extension while watching the WHEELS down lights and the LG handle warning light.

Because of the number of possible malfunctions, specific procedures for every situation are not feasible. If time and conditions permit, ground supervisory and technical assistance should be requested. Evaluate available options prior to using the ALT GEAR handle. Other options may include an LG up landing, diverting to a more suitable landing field, landing where the hazards of departing the prepared surface are minimal, or using a cable arrestment.

LG Handle Will Not Lower

If the LG handle cannot be moved to the DN position after depressing the LG handle down permission button, the electrical circuitry or solenoid has probably failed. **[C] [DF]** The DN LOCK REL button mechanically permits the LG handle to be moved to the DN position. If the LG handle cannot be moved to the DN position due to a mechanical failure, CHAN 1 brakes are inoperative and TEF's must be extended using the ALT FLAPS switch.

If LG handle cannot be lowered normally:

1. DN LOCK REL button – Depress and lower LG handle.

If LG handle still cannot be lowered:

2. ALT FLAPS switch – EXTEND.
3. BRAKES channel switch – CHAN 2.
4. Go to ALTERNATE LG EXTENSION, this section.

NOTE

After a successful alternate gear extension with the landing gear handle still up, the LG handle warning light remains on to indicate the position of the gear handle is not in agreement with the actual gear position.

LG Fails To Extend**NOTE**

If alternate LG extension was performed and one or more LG indicate unsafe, refer to ALTERNATE LG EXTENSION, this section.

If one or more LG fail to extend, the LG handle may be cycled multiple times to attempt to extend the LG if no structural/battle damage exists and if normal hydraulic pressure exists. Multiple cycle attempts may release the locking pawls and result in normal gear extension if the failure to extend was caused by failure of the uplocks to release.

CAUTION

If the LG previously failed to retract, do not cycle the LG handle. Damage to the LG or LG doors may preclude successful extension.

If cycling of the LG handle fails to correct the situation, use of the alternate extension system must be considered.

If possible, get a visual confirmation of LG position. If only the NLG WHEELS down light is off, confirmation of the NLG position can be made by checking landing/taxi light operation. Illumination of either light confirms that the NLG is down and locked. With the NLG WHEELS down light off, NWS may be inoperative (without a NWS FAIL caution light).

If one or more LG indicate unsafe:

WARNING

If at anytime, an LG intermittently indicates unsafe (i.e. WHEELS down light off and LG handle warning light on), the overcenter lock on the LG drag brace assembly may not be functioning properly. The LG may appear down and locked, but the LG may collapse during landing. Plan on using the LG unsafe/up procedures even if the LG eventually indicates normal. Refer to LANDING WITH LG UNSAFE/UP, this section.

CAUTION

If the LG previously failed to retract, do not cycle the LG handle. Damage to the LG or LG doors may preclude successful extension.

NOTE

If only the NLG WHEELS down light is off, confirmation of the NLG position can be made by checking landing/taxi light operation. Illumination of either light confirms that the NLG is down and locked. With the NLG WHEELS down light off, NWS may be inoperative (without a NWS FAIL caution light).

1. LG handle – Cycle and monitor LG handle warning light and WHEELS down lights.

If LG handle warning light came on when the LG handle was lowered, then went off, and tests good or if WHEELS down lights operated normally:

2. Speedbrakes – Verify opening is less than 43 degrees.

From the front cockpit, the top of the speedbrakes should be slightly above a line drawn from the tip of the horizontal tail to the top of the vertical tail root fairing.

CAUTION

If RMLG WHEELS down light is off, speedbrakes may not be limited to 43 degrees.

3. Land normally.

If LG handle warning light did not illuminate or remained illuminated after LG handle was lowered and if one or more WHEELS down lights did not illuminate:

4. Go to ALTERNATE LG EXTENSION, this section.

Alternate LG Extension

Alternate LG extension should be accomplished at the lowest practical airspeed below 190 knots. The NLG may not indicate down and locked until airspeed is reduced below 190 knots. NWS is inoperative after alternate LG extension even if system B hydraulic pressure is available.

1. LG handle – DN. (Use DN LOCK REL, if required.)
2. Airspeed – 190 knots maximum (if practical). Alternate LG extension can be used up to 300 knots; however, the NLG may not fully extend until 190 knots. Time above 190 knots should be minimized in case there is a leak in the pneumatic lines.

3. ALT GEAR handle – Pull (if required).
If an unsafe MLG indication exists and both MLG are out of the wheel wells, pulling the ALT GEAR handle is not recommended.

CAUTION

- Do not depress the ALT GEAR reset button while pulling the ALT GEAR handle. This action may preclude successful LG extension.
- Pulling the ALT GEAR handle with normal system B hydraulic pressure, e.g., NLG fails to extend, may result in hydraulic system B failure within 15 minutes.

If LG indicates safe:

4. Land normally.
If possible, get visual confirmation of LG position. If all WHEELS down lights were initially off with the LG handle down and use of the hook may be required after touchdown, verify before landing that the hook extends.
5. Stop straight ahead on the runway.

CAUTION

- NWS is not available following alternate LG extension.
- If the LG was alternately extended due to failure of system B, only brake/JFS accumulator braking is available and after stopping, the parking brake should be engaged until chocks are installed.

If LG indicates unsafe:

4. Stick – Apply alternating g forces (–1.0 to +3.0 g) to free LG.
Up to 300 knots may be required to provide sufficient g force.

If LG indicates safe:

5. Land normally.
If possible, get visual confirmation of LG position.
6. Stop straight ahead on the runway.

CAUTION

- NWS is not available following alternate LG extension.
- If the LG was alternately extended due to failure of system B, only brake/JFS accumulator braking is available and after stopping the parking brake should be engaged until chocks are installed.

If LG still indicates unsafe:

5. Speedbrakes – Verify opening is less than 43 degrees.
From the front cockpit, the top of the speedbrakes should be slightly above a line drawn from the tip of the horizontal tail to the top of the vertical tail root fairing.

CAUTION

If RMLG WHEELS down light is off, speedbrakes may not be limited to 43 degrees.

6. Go to LANDING WITH LG UNSAFE/UP, this section.

Landing With LG Unsafe/Up

Prior to landing with any of the LG unsafe or up, consider the following:

- Airfield facilities.
- Hook engagement limits.
- Crosswind component.
- Runway and overrun conditions.

If conditions are not favorable:

1. Refer to EJECTION (TIME PERMITTING), this section.

To accomplish the landing:

1. Retain empty fuel tanks and racks.

WARNING

If time permits, delay landing until external fuel tanks are empty. If an immediate landing is required, jettison all external fuel tanks.

2. Armament – Jettison.
3. GW – Reduce.
4. TANK INERTING switch – TANK INERTING even if Halon is not available.
5. AIR REFUEL switch – OPEN.

WARNING

Failure to depressurize external fuel tanks significantly increases the probability of tank explosion and fire.

NOTE

Delay placing the AIR REFUEL switch to OPEN until all external fuel tanks are empty.

6. FCR – OFF.
7. SMS/HDPT/ECM power – Off.
8. SHOULDER HARNESS knob – LOCKED.
9. Refer to figure 3-13.

NOTE

If either MLG is not extended, EPU operation cannot be terminated with the EPU switch after engine shutdown.

ANTISKID MALFUNCTION (LANDING)

Illumination of the ANTI SKID caution light when the LG handle is lowered indicates one of the following:

- Loss of electrical power to the CHAN 1 brake and antiskid control circuits.

- Failure in the antiskid system (pulsating brake pressure mode activated).

Changing to CHAN 2 brakes may extinguish the ANTI SKID caution light and provide normal antiskid and braking functions. If the failure was in the antiskid system, cycling the ANTI-SKID switch may correct the problem. If the ANTI SKID caution light remains on, antiskid protection is not available and degraded (i.e. pulsating) or inoperative braking should be expected.

If the ANTI SKID caution light illuminates when the LG handle is lowered (with the ANTI-SKID switch in ANTI-SKID):

1. BRAKES channel switch – CHAN 2.

If the ANTI SKID caution light remains on:

2. ANTI-SKID switch – OFF, then back to ANTI-SKID.

If ANTI SKID caution light remains on, expect pulsating or inoperative braking and no antiskid protection during landing:

3. Refer to ANTISKID MALFUNCTION (GROUND), this section.

ASYMMETRIC STORES (LANDING)

Refer to figure 3-14 for computation of asymmetric moment. A modified approach is required if the net asymmetry exceeds 10,000 foot-pounds. Successful landings have been demonstrated with asymmetries as large as 25,020 foot-pounds. If the net asymmetry exceeds 25,020 foot-pounds, stores should be selectively jettisoned from the heavy wing to reduce the asymmetry. The decision to land with large asymmetries should consider such factors as weather conditions, runway length/width, surface conditions (RCR), arresting gear availability, crosswind component/gusts, and pilot experience. Avoid abrupt control inputs. Limit maximum bank angle changes to 90 degrees and do not exceed 10 degrees AOA until the net asymmetry can be determined. A controllability check should be performed with the LG down to determine handling

qualities and the feasibility of landing. During the controllability check, determine maximum maneuvering AOA by slowly increasing AOA until roll authority is insufficient to maintain wings level. Do not exceed 12 degrees AOA during this check. If loss of roll authority is experienced, the maximum maneuvering AOA is 2 degrees below that at which roll authority was lost or 10 degrees AOA, whichever is less. If landing is feasible, plan to fly a shallow, power-on, straight-in approach. Use roll trim and lateral stick as required. Full roll trim may not be enough to compensate for large asymmetries. Trim rudder into the heavy wing up to a maximum of two dots. This decreases bank angle and permits a low bank angle, low sideslip approach, minimizing pilot induced lateral oscillations. This action increases the roll trim necessary to hold up the heavy wing.

Fly a shallow, power-on, straight-in approach and reduce bank angle to wings level on short final. Do not exceed the maximum maneuvering AOA, as determined during the controllability check, on final approach or during the flare/touchdown. Two-point aerodynamic braking should be performed at 10-11 degrees AOA until approximately 120 knots. The nose should then be lowered to the

runway and maximum effort antiskid braking should be used. At no time should 11 degrees AOA be exceeded while on the runway. When the ARI switches out with wheel spin-up, large rudder changes can occur which cause yaw into the heavy wing. When landing with no crosswind, this yaw helps align the aircraft with the runway. With crosswind components greater than 10 knots (5 knots if the net asymmetry exceeds 20,000 foot-pounds), land with the heavy wing into the crosswind even if this results in landing downwind. Failure to do so may result in inadequate roll control.

1. Compare weights on mirror stations (4 and 6, 3 and 7, etc.). Include wingtip AIM-120's; exclude wingtip AIM-9's since their weight is offset by the lift they generate.
2. Determine asymmetric moment for each set of stations. Enter with weight difference at bottom of chart, proceed vertically to the appropriate line, and proceed horizontally left to read the asymmetric moment.
3. Add or subtract each asymmetric moment to determine net asymmetry.

LG Unsafe/Up Landing

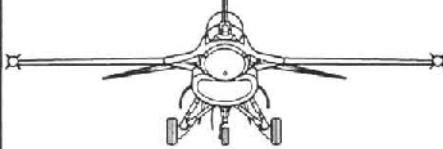
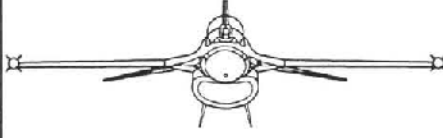
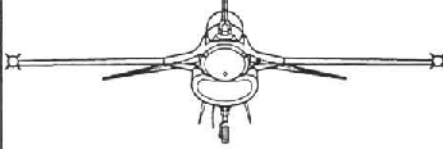
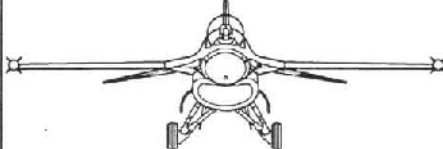
CONFIGURATION	APPROACH-END ARRESTMENT	
	AVAILABLE	UNAVAILABLE
ALL LG INDICATE UNSAFE BUT APPEAR NORMAL 	10. HOOK – DOWN. 11. APPROACH-END CABLE – ENGAGE.	10. LAND NORMALLY.
ALL LG UP 	ARRESTMENT NOT RECOMMENDED. USE APPROACH-END ARRESTMENT UNAVAILABLE PROCEDURE.	10. EPU – ON. 11. ALT FLAPS – EXTEND. 12. LOW ANGLE APPROACH AT 13° AOA. 13. THROTTLE – OFF IMMEDIATELY PRIOR TO TOUCHDOWN.
BOTH MLG UP OR UNSAFE 	10. ALT GEAR HANDLE – IN. 11. WAIT 5 SECONDS. 12. LG HANDLE – UP. 13. ALT GEAR RESET BUTTON – DEPRESS (2 SECONDS). 14. USE ALL LG UP PROCEDURE. 15. IF NLG DOES NOT RETRACT: a. HOOK – DOWN. b. LOW ANGLE APPROACH AT 11° AOA. c. ATTEMPT A FLY-IN ENGAGEMENT. d. THROTTLE – OFF AFTER ENGAGEMENT. WARNING IF THE ENGAGEMENT IS MISSED, MAINTAIN WINGS LEVEL AND GO AROUND. IF A GO-AROUND IS NOT ACCOMPLISHED, THE AIRCRAFT MAY GROUND LOOP.	10. ALT GEAR HANDLE – IN. 11. WAIT 5 SECONDS. 12. LG HANDLE – UP. 13. ALT GEAR RESET BUTTON – DEPRESS (2 SECONDS). 14. USE ALL LG UP PROCEDURE. 15. IF NLG DOES NOT RETRACT: a. CONSIDER LANDING FROM A LOW ANGLE APPROACH AT 13° AOA IF WING FUEL TANKS ARE CARRIED. b. RECOMMEND EJECTION IF WING FUEL TANKS ARE NOT CARRIED OR IF CONDITIONS ARE NOT CONSIDERED FAVORABLE FOR AN ATTEMPTED LANDING WITH WING FUEL TANKS.
NLG UP OR UNSAFE 	ARRESTMENT NOT RECOMMENDED. USE APPROACH-END ARRESTMENT UNAVAILABLE PROCEDURE.	10. EPU – ON. 11. LOW ANGLE APPROACH AT 13° AOA. 12. THROTTLE – OFF AFTER TOUCHDOWN. 13. LOWER NOSE TO RUNWAY BEFORE CONTROL EFFECTIVENESS BEGINS TO DECAY. 14. EPU – OFF AFTER STOP.

Figure 3-13. (Sheet 1)

LG Unsafe/Up Landing

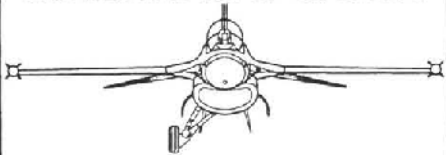
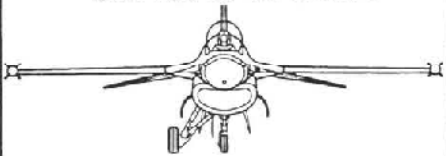
CONFIGURATION	APPROACH-END ARRESTMENT	
	AVAILABLE	UNAVAILABLE
ONE MLG AND NLG UP OR UNSAFE 	ARRESTMENT NOT RECOMMENDED. USE APPROACH-END ARRESTMENT UNAVAILABLE PROCEDURE.	10. ALT GEAR HANDLE – IN. 11. WAIT 5 SECONDS. 12. LG HANDLE – UP. 13. ALT GEAR RESET BUTTON – DEPRESS (2 SECONDS). 14. USE ALL LG UP PROCEDURE. 15. IF LG DOES NOT RETRACT: a. CONSIDER LANDING FROM A LOW ANGLE APPROACH AT 13° AOA IF EXTERNAL FUEL TANK(S) IS CARRIED.
ONE MLG UP OR UNSAFE 	10. HOOK – DOWN. 11. LOW ANGLE APPROACH AT 11° AOA. 12. AFTER TOUCHDOWN, USE ROLL CONTROL TO HOLD WING UP. MAIN- TAIN LANDING ATTITUDE FOR ENGAGEMENT IF MLG IS UP OR IS DAMAGED; LOWER NOSE FOR ARRESTMENT IF MLG IS DOWN AND APPEARS UNDAMAGED BUT INDICATES UNSAFE. 13. THROTTLE – OFF AFTER ENGAGE- MENT. WARNING IF THE ENGAGEMENT IS MISSED, MAINTAIN WINGS LEVEL AND GO AROUND. IF A GO-AROUND IS NOT AC- COMPLISHED, THE AIRCRAFT MAY GROUND LOOP.	NOTE LAND ON THE SIDE OF THE RUNWAY AWAY FROM THE UN- SAFE MLG. b. RECOMMEND EJECTION IF EXTERNAL FUEL TANK(S) IS NOT CARRIED OR IF CONDITIONS ARE NOT CONSIDERED FAVORABLE FOR AN ATTEMPTED LANDING WITH EXTERNAL FUEL TANK(S).

Figure 3-13. (Sheet 2)

LG Unsafe/Up Landing

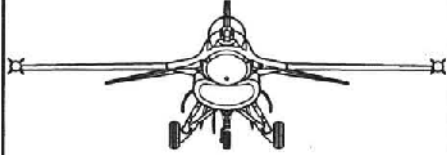
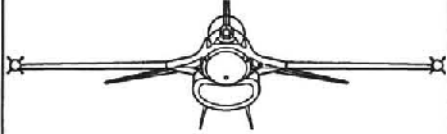
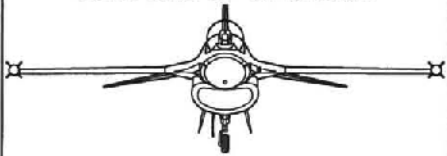
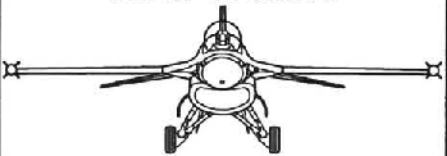
CONFIGURATION	APPROACH-END ARRESTMENT	
	AVAILABLE	UNAVAILABLE
ALL LG INDICATE UNSAFE BUT APPEAR NORMAL 	10. HOOK – DOWN. 11. APPROACH-END CABLE – ENGAGE.	10. LAND NORMALLY.
ALL LG UP 	ARRESTMENT NOT RECOMMENDED. USE APPROACH-END ARRESTMENT UNAVAILABLE PROCEDURE.	10. EPU – ON. 11. ALT FLAPS – EXTEND. 12. LOW ANGLE APPROACH AT 13° AOA. 13. THROTTLE – OFF IMMEDIATELY PRIOR TO TOUCHDOWN.
BOTH MLG UP OR UNSAFE 	10. ALT GEAR HANDLE – IN. 11. WAIT 5 SECONDS. 12. LG HANDLE – UP. 13. ALT GEAR RESET BUTTON – DEPRESS (2 SECONDS). 14. USE ALL LG UP PROCEDURE. 15. IF NLG DOES NOT RETRACT: a. HOOK – DOWN. b. LOW ANGLE APPROACH AT 11° AOA. c. ATTEMPT A FLY-IN ENGAGEMENT. d. THROTTLE – OFF AFTER ENGAGEMENT. WARNING IF THE ENGAGEMENT IS MISSED, MAINTAIN WINGS LEVEL AND GO AROUND. IF A GO-AROUND IS NOT ACCOMPLISHED, THE AIRCRAFT MAY GROUND LOOP.	10. ALT GEAR HANDLE – IN. 11. WAIT 5 SECONDS. 12. LG HANDLE – UP. 13. ALT GEAR RESET BUTTON – DEPRESS (2 SECONDS). 14. USE ALL LG UP PROCEDURE. 15. IF NLG DOES NOT RETRACT: a. CONSIDER LANDING FROM A LOW ANGLE APPROACH AT 13° AOA IF WING FUEL TANKS ARE CARRIED. b. RECOMMEND EJECTION IF WING FUEL TANKS ARE NOT CARRIED OR IF CONDITIONS ARE NOT CONSIDERED FAVORABLE FOR AN ATTEMPTED LANDING WITH WING FUEL TANKS.
NLG UP OR UNSAFE 	ARRESTMENT NOT RECOMMENDED. USE APPROACH-END ARRESTMENT UNAVAILABLE PROCEDURE.	10. EPU – ON. 11. LOW ANGLE APPROACH AT 13° AOA. 12. THROTTLE – OFF AFTER TOUCHDOWN. 13. LOWER NOSE TO RUNWAY BEFORE CONTROL EFFECTIVENESS BEGINS TO DECAY. 14. EPU – OFF AFTER STOP.

Figure 3-13. (Sheet 1)

LG Unsafe/Up Landing




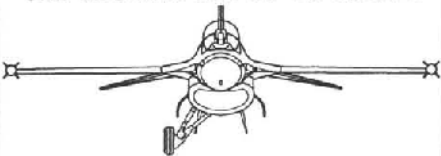
CONFIGURATION	APPROACH-END ARRESTMENT	
	AVAILABLE	UNAVAILABLE
ONE MLG AND NLG UP OR UNSAFE 	ARRESTMENT NOT RECOMMENDED. USE APPROACH-END ARRESTMENT UNAVAILABLE PROCEDURE.	10. ALT GEAR HANDLE – IN. 11. WAIT 5 SECONDS. 12. LG HANDLE – UP. 13. ALT GEAR RESET BUTTON – DEPRESS (2 SECONDS). 14. USE ALL LG UP PROCEDURE. 15. IF LG DOES NOT RETRACT: a. CONSIDER LANDING FROM A LOW ANGLE APPROACH AT 13° AOA IF EXTERNAL FUEL TANK(S) IS CARRIED.
ONE MLG INDICATES UNSAFE BUT APPEARS NORMAL 	10. HOOK – DOWN. 11. LOW ANGLE APPROACH AT 11° AOA. 12. AFTER TOUCHDOWN, USE ROLL CONTROL, IF NECESSARY, TO HOLD WING UP. IF ROLL CONTROL IS NEED- ED TO HOLD WING UP, MAINTAIN LANDING ATTITUDE FOR ENGAGE- MENT. IF ROLL CONTROL IS NOT NEEDED TO HOLD WING UP, LOWER NOSE FOR ARRESTMENT. 13. THROTTLE – OFF AFTER ENGE- GEMENT. WARNING IF THE ENGAGEMENT IS MISSED AND ROLL CONTROL WAS NEC- ESSARY TO HOLD WING UP, MAINTAIN WINGS LEVEL AND GO AROUND. IF A GO-AROUND IS NOT ACCOMPLISHED, THE AIRCRAFT MAY GROUND LOOP.	NOTE LAND ON THE SIDE OF THE RUNWAY AWAY FROM THE UN- SAFE MLG. b. RECOMMEND EJECTION IF EXTERNAL FUEL TANK(S) IS NOT CARRIED OR IF CONDITIONS ARE NOT CONSIDERED FAVORABLE FOR AN ATTEMPTED LANDING WITH EXTERNAL FUEL TANK(S).
ONE MLG UP 	10. ALT GEAR HANDLE – IN. 11. WAIT 5 SECONDS. 12. LG HANDLE – UP. 13. ALT GEAR RESET BUTTON – DEPRESS (2 SECONDS). 14. USE ALL LG UP PROCEDURE. 15. IF LG DOES NOT RETRACT: a. HOOK – DOWN. b. LOW ANGLE APPROACH AT 11° AOA. c. AFTER TOUCHDOWN, USE ROLL CONTROL TO HOLD WING UP AND MAINTAIN LANDING ATT- ITUDE FOR ENGAGEMENT. d. THROTTLE – OFF AFTER EN- GEMENT. WARNING IF THE ENGAGEMENT IS MISSED, MAINTAIN WINGS LEVEL AND GO AROUND. IF A GO-AROUND IS NOT ACCOMPLISHED, THE AIRCRAFT MAY GROUND LOOP.	

Figure 3-13. (Sheet 2)

Asymmetric Moment

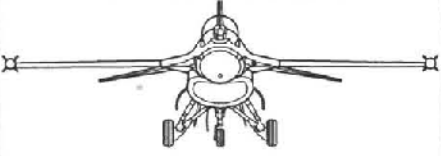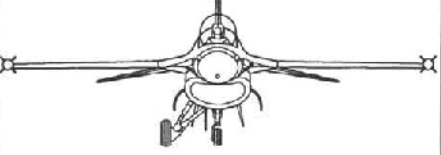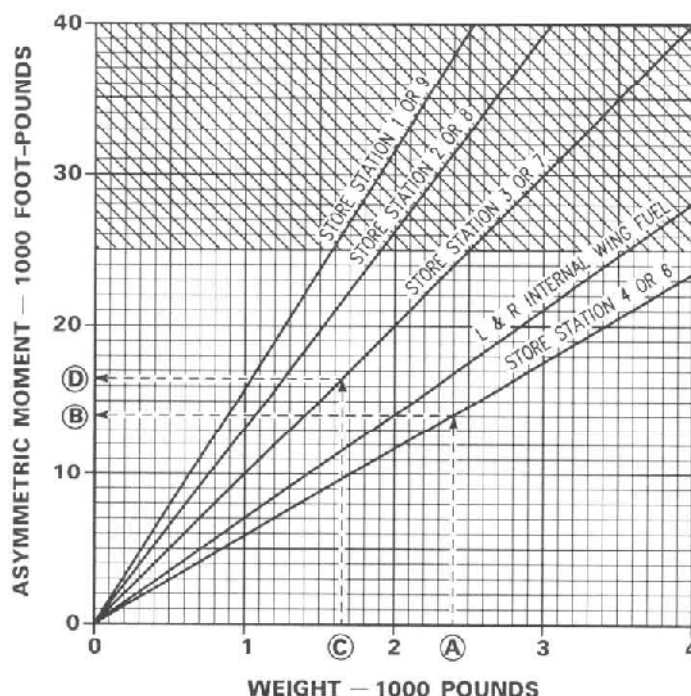

GR1F-16CJ-1 0128X379

Figure 3-14.

SAMPLE PROBLEM 1:

- Full 370-gallon fuel tank on station 4; empty fuel tank on station 6.
- Three MK 82 (SNAKEYE) bombs on station 3, station 7 empty.

- A. Station 4/6 weight difference = 2405 pounds
- B. Asymmetric moment = 14,000 foot-pounds
- C. Station 3/7 weight difference = 1650 pounds
- D. Asymmetric moment = 16,500 foot-pounds
- E. Net asymmetry (B+D) = 30,500 foot-pounds

SAMPLE PROBLEM 2:

- Full 370-gallon fuel tank on station 6; empty fuel tank on station 4.

- Three MK 82 (SNAKEYE) bombs on station 3; station 7 empty.

Follow same procedures (A through D) as above; however, since the asymmetric moments are on the opposite wing, the moments are subtracted rather than added.

- E. Net asymmetry (B-D) = 2500 foot-pounds

1. AOA - 10 degrees maximum.

WARNING

Large asymmetric loads severely limit lateral control when rolling away from the heavy wing. Until determining net asymmetry, limit maximum bank angle change to 90 degrees, avoid abrupt control inputs, and do not exceed 10 degrees AOA.

2. Determine net asymmetry. Refer to figure 3-14.

If asymmetry is greater than 25,020 foot-pounds:

3. Stores – Jettison (as required).
Selectively jettison stores from the heavy wing to obtain a net asymmetry less than 25,020 foot-pounds. Refer to SELECTIVE JETTISON, this section.

If asymmetry is greater than 10,000 foot-pounds:

4. Controllability – Check.
 - Lower LG at a safe altitude and check handling qualities until roll authority is insufficient or up to 12 degrees AOA maximum.
 - Maximum maneuvering AOA for approach and landing is 10 degrees AOA or 2 degrees less than the AOA at which roll authority is insufficient to maintain wings level, whichever is less.

If landing is feasible:

WARNING

The decision to land with a large asymmetry should consider such factors as weather conditions, runway length/width and surface conditions (RCR), arresting gear availability, crosswind component/gusts, and pilot experience.

5. Fly a shallow, power-on, straight-in approach.

WARNING

- With crosswind component greater than 10 knots (5 knots if the net asymmetry exceeds 20,000 foot-pounds), land with heavy wing into the crosswind even if this results in landing downwind. Failure to do so may result in inadequate roll control.
 - Do not exceed the maximum AOA, as determined during the controllability check, during final approach, flare, touchdown, or two-point aerodynamic braking.
6. Roll trim and lateral stick – As required.

7. Rudder trim – Trim into the heavy wing (if required).

If landing is not feasible:

5. Go to EJECTION (TIME PERMITTING), this section.

If asymmetry is less than 10,000 foot-pounds:

4. Land normally.

NLG WOW SWITCH FAILURE

If the NLG WOW switch fails to the ground position, the A/R DISC function on the stick is inoperative, the speedbrakes are not limited to 43 degrees with the right MLG down and locked, NWS can be engaged in flight, and AOA indications are approximately 0 degrees.

1. NWS – Engage.

If AR/NWS light comes on:

2. NWS – Disengage.
3. AR/NWS light – Off.

NOTE

Insure that AR/NWS light is off prior to landing so that the NWS does not follow rudder commands when the nosewheel is lowered to the runway.

4. Speedbrakes – Close to less than 43 degrees.
From the front cockpit, the top of the speedbrakes should be slightly above a line drawn from the tip of the horizontal tail to the top of the vertical tail root fairing.

CAUTION

Visually confirm speedbrake opening is limited to 43 degrees to prevent the lower surfaces from striking the runway during landing.

DRAG CHUTE FAILURE

If decision is made to go-around:

1. Drag chute – Release.
2. Throttle – MAX AB.

SECTION IV
CREW DUTIES

(Not Applicable)

SECTION V

OPERATING LIMITATIONS

TABLE OF CONTENTS

	Page
Introduction	5-1
Instrument Markings	5-1
Engine Limitations	5-1
Fuels	5-1
System Restrictions	5-2
Terrain Following Radar	5-2
Jet Fuel Starter Limits	5-2
Tire Speed Limit	5-2
Brake Energy Limits	5-2
Fuel System Limitations	5-2
One Reservoir Empty	5-2
Negative G Flight	5-2
Airspeed Limitations	5-2
System Airspeed Limitations	5-2
Maximum Airspeed Operating Limitations	5-2
Low Airspeed Operating Limitations	5-3
Prohibited Maneuvers	5-3
Gross Weight Limitations	5-3
Center-of-Gravity Limitations	5-3
Acceleration Limitations	5-3
AOA and Rolling Limitations	5-4
Stores Limitations	5-4
Asymmetric Stores Loading	5-4
Miscellaneous Limitations	5-4
Net Arrestment Limitations	5-4
Crosswind Limits	5-4

INTRODUCTION

The aircraft and system limitations that must be observed during normal operations are presented in this section and T.O. GR1F-16CJ-1-2. Those limitations that are characteristic of a special phase of operations such as emergency procedures, etc., are not covered in this section.

INSTRUMENT MARKINGS

Refer to figure 5-1 for location and range of the markings.

ENGINE LIMITATIONS

Refer to figure 5-2 for Engine Limitations and figure 5-3 for Engine - Operational Envelope.

FUELS

JP-4, JP-5, JP-8; NATO F-34, F-35, F-40, F-43, and F-44; and commercial JET A, JET A-1, and JET B are approved fuels. Except for freeze point and possible icing and corrosion inhibitor differences, JP-4, NATO F-40, and JET B are equivalent and the same operating limitations apply.

Operating and throttle movement limitations for fuels other than JP-4, NATO F-40, and JET B, are the same as for JP-4, NATO F-40, and JET B except: Ground starts with temperature below -4°F (-20°C) may produce more smoke and require a longer time for engine light-off. Ground starts should not be attempted with fuel temperature below -40°F (-40°C) except JET A which is -35°F (-37°C). Airstart light-off times also may be slightly longer.

Approved fuels may be intermixed in any proportion during ground or AR operations. No change in engine operating limitations is required.

Due to fuel freeze points, non JP-4 or NATO F-40 fuel in external tanks may not transfer after sustained operation (5 minutes or longer) below 275 knots from 25,000-30,000 feet or below 0.72 mach from 30,000-42,000 feet (all non JP-4 or NATO F-40 fuels except JET A) or below 300 knots from 25,000-30,000 feet or below 0.83 mach from 30,000-42,000 feet (JET A).

NATO F-34, NATO F-40, and NATO F-44 may not contain corrosion inhibitor and NATO F-35, NATO F-43, JET A, JET A-1, and JET B may not contain icing or corrosion inhibitors. Restrict operation without icing inhibitor to one flight. Restrict engine operation without corrosion inhibitor to 10 consecutive hours.

Certain fuels are heavier; refer to FUEL QUANTITY INDICATION AND TANK ARRANGEMENT, Section I.

SYSTEM RESTRICTIONS

TERRAIN FOLLOWING RADAR

Refer to TF DISPLAYS AND OPERATION, T.O. GR1F-16CJ-34-1-1.

JET FUEL STARTER LIMITS

Refer to figure 5-4.

TIRE SPEED LIMIT

The MLG tires are certified for use to 225 knots groundspeed. The NLG tire is certified for use to 217 knots groundspeed.

BRAKE ENERGY LIMITS

Refer to T.O. GR1F-16CJ-1-1, Part 2 for brake energy limits for maximum effort braking, taxi, aborted takeoff, landing, and the effect on turnaround capability. The actual energy per brake may differ considerably from the value found in Part 2. This is caused by unequal energy distribution between the brakes or residual heat from previous braking. Maximum brake application speed is the maximum speed from which the aircraft can be stopped using maximum braking. This speed is based on the capability of each brake to absorb a maximum of 23.5 million foot-pounds of energy. (Refer to T.O. GR1F-16CJ-1-1, Part 2 ABORTED TAKEOFF MAXIMUM BRAKE APPLICATION SPEED.)

CAUTION

- Initiating maximum effort braking above maximum brake application speed may result in loss of braking before the aircraft is stopped.
- Danger zone procedures should be followed for any event which requires excessive braking.
- If brake energy absorption is in the danger zone, wheel fusible plugs release tire pressure within 3-15 minutes after the stop.

FUEL SYSTEM LIMITATIONS

One Reservoir Empty

The maximum allowable fuel flow with one reservoir empty is 25,000 pph.

Negative G Flight

Negative g flight with both reservoir tanks full is limited to:

- AB thrust – 10 seconds.
- MIL thrust or below – 30 seconds.

NOTE

Negative g flight should be avoided when a low fuel condition exists (forward or aft reservoir not full) or ENG FEED knob out of NORM.

AIRSPEED LIMITATIONS

WARNING

Maximum airspeed operating limitations may be easily exceeded in level flight due to the improved performance engine excess thrust capabilities.

SYSTEM AIRSPEED LIMITATIONS

Refer to figures 5-3, 5-5, and 5-6.

MAXIMUM AIRSPEED OPERATING LIMITATIONS

Refer to figure 5-3. Maximum operating airspeed is 800 knots from sea level to 30,000 feet MSL. Above 30,000 feet MSL, the aircraft is limited to 2.05 mach.

Refer to figure 5-6 and T.O. GR1F-16CJ-1-2. Maximum operating airspeed/mach may be reduced as a result of system restrictions or stores limitations.

SECTION V

OPERATING LIMITATIONS

TABLE OF CONTENTS

	Page
Introduction	5-1
Instrument Markings	5-1
Engine Limitations	5-1
Fuels	5-1
System Restrictions	5-2
Terrain Following Radar	5-2
Jet Fuel Starter Limits	5-2
Tire Speed Limit	5-2
Brake Energy Limits	5-2
Fuel System Limitations	5-2
One Reservoir Empty	5-2
Negative G Flight	5-2
Airspeed Limitations	5-2
System Airspeed Limitations	5-2
Maximum Airspeed Operating Limitations	5-2
Low Airspeed Operating Limitations	5-3
Prohibited Maneuvers	5-3
Gross Weight Limitations	5-3
Center-of-Gravity Limitations	5-3
Acceleration Limitations	5-3
AOA and Rolling Limitations	5-4
Stores Limitations	5-4
Asymmetric Stores Loading	5-4
Miscellaneous Limitations	5-4.1
Net Arrestment Limitations	5-4.1
Crosswind Limits	5-4.1

INTRODUCTION

The aircraft and system limitations that must be observed during normal operations are presented in this section and T.O. GR1F-16CJ-1-2. Those limitations that are characteristic of a special phase of operations such as emergency procedures, etc., are not covered in this section.

INSTRUMENT MARKINGS

Refer to figure 5-1 for location and range of the markings.

ENGINE LIMITATIONS

Refer to figure 5-2 for Engine Limitations and figure 5-3 for Engine - Operational Envelope.

FUELS

JP-4, JP-5, JP-8; NATO F-34, F-35, F-40, F-43, and F-44; and commercial JET A, JET A-1, and JET B are approved fuels. Except for freeze point and possible icing and corrosion inhibitor differences, JP-4, NATO F-40, and JET B are equivalent and the same operating limitations apply.

Operating and throttle movement limitations for fuels other than JP-4, NATO F-40, and JET B, are the same as for JP-4, NATO F-40, and JET B except: Ground starts with temperature below -4°F (-20°C) may produce more smoke and require a longer time for engine light-off. Ground starts should not be attempted with fuel temperature below -40°F (-40°C) except JET A which is -35°F (-37°C). Airstart light-off times also may be slightly longer.

Approved fuels may be intermixed in any proportion during ground or AR operations. No change in engine operating limitations is required.

Due to fuel freeze points, non JP-4 or NATO F-40 fuel in external tanks may not transfer after sustained operation (5 minutes or longer) below 275 knots from 25,000-30,000 feet or below 0.72 mach from 30,000-42,000 feet (all non JP-4 or NATO F-40 fuels except JET A) or below 300 knots from 25,000-30,000 feet or below 0.83 mach from 30,000-42,000 feet (JET A).

NATO F-34, NATO F-40, and NATO F-44 may not contain corrosion inhibitor and NATO F-35, NATO F-43, JET A, JET A-1, and JET B may not contain icing or corrosion inhibitors. Restrict operation without icing inhibitor to one flight. Restrict engine operation without corrosion inhibitor to 10 consecutive hours.

Certain fuels are heavier; refer to FUEL QUANTITY INDICATION AND TANK ARRANGEMENT, Section I.

SYSTEM RESTRICTIONS

TERRAIN FOLLOWING RADAR

Refer to TF DISPLAYS AND OPERATION, T.O. GR1F-16CJ-34-1-1.

JET FUEL STARTER LIMITS

Refer to figure 5-4.

TIRE SPEED LIMIT

The MLG tires are certified for use to 225 knots groundspeed. The NLG tire is certified for use to 217 knots groundspeed.

BRAKE ENERGY LIMITS

Refer to T.O. GR1F-16CJ-1-1, Part 2 for brake energy limits for maximum effort braking, taxi, aborted takeoff, landing, and the effect on turnaround capability. The actual energy per brake may differ considerably from the value found in Part 2. This is caused by unequal energy distribution between the brakes or residual heat from previous braking. Maximum brake application speed is the maximum speed from which the aircraft can be stopped using maximum braking. This speed is based on the capability of each brake to absorb a maximum of 23.5 million foot-pounds of energy. (Refer to T.O. GR1F-16CJ-1-1, Part 2 ABORTED TAKEOFF MAXIMUM BRAKE APPLICATION SPEED.)

CAUTION

- Initiating maximum effort braking above maximum brake application speed may result in loss of braking before the aircraft is stopped.
- Danger zone procedures should be followed for any event which requires excessive braking.
- If brake energy absorption is in the danger zone, wheel fusible plugs release tire pressure within 3-15 minutes after the stop.

FUEL SYSTEM LIMITATIONS

One Reservoir Empty

The maximum allowable fuel flow with one reservoir empty is 25,000 pph.

Negative G Flight

Negative g flight with both reservoir tanks full is limited to:

- AB thrust – 10 seconds.
- MIL thrust or below – 30 seconds.

NOTE

Negative g flight should be avoided when a low fuel condition exists (forward or aft reservoir not full) or ENG FEED knob out of NORM.

AIRSPEED LIMITATIONS

WARNING

Maximum airspeed operating limitations may be easily exceeded in level flight due to the improved performance engine excess thrust capabilities.

SYSTEM AIRSPEED LIMITATIONS

Refer to figures 5-3, 5-5, and 5-6.

MAXIMUM AIRSPEED OPERATING LIMITATIONS

Refer to figure 5-3. Maximum operating airspeed is 800 knots from sea level to 30,000 feet MSL. Above 30,000 feet MSL, the aircraft is limited to 2.05 mach.

Refer to figure 5-6 and T.O. GR1F-16CJ-1-2. Maximum operating airspeed/mach may be reduced as a result of system restrictions or stores limitations.

LOW AIRSPEED OPERATING LIMITATIONS

Recovery should be initiated no later than activation of the low speed warning tone.

To avoid departures due to roll coupling, do not operate with category III loadings below 200 knots except for takeoff and landing.

WARNING

Departures from controlled flight with asymmetric category III loadings may result in fast, flat (possibly nonrecoverable) spins.

PROHIBITED MANEUVERS

The following maneuvers are prohibited:

1. Intentional departures and spins with any of the following:
 - Symmetric category I loading with suspension equipment or missiles at station 3, 4, 6, or 7.
 - Asymmetric category I loading.
 - Category III loading.
 - Altitude below 30,000 feet AGL.
 - CG aft of aft limit for the configuration being flown.
 - Lateral fuel (internal and external) imbalance greater than 200 pounds.
2. Repeated maximum rudder reversals.
3. Consecutive 360-degree maximum command rolls.
4. Maximum command rolling maneuvers above 1.8 mach and either above 3g or below 35,000 feet MSL.
5. Rudder rolls or rudder-assisted rolls of more than 90 degrees of bank angle change with any store on station 3, 4, 6, or 7.
6. With LG and/or TEF's down:
 - Flight above 15 degrees AOA with stores at station 3, 4, 6, or 7.
 - Maximum command rolls of more than 90 degrees of bank angle change.

7. Abrupt roll reversals above 550 knots and below 20,000 feet MSL with the STORES CONFIG switch in CAT I.
8. Rapid rudder release or reversal above 300 knots/0.6 mach.

GROSS WEIGHT LIMITATIONS

The maximum allowable GW for ground handling, taxi, takeoff, in-flight, and landing is 48,000 pounds. ■

CENTER-OF-GRAVITY LIMITATIONS

Refer to T.O. GR1F-16CJ-5-2.

Generally, the aircraft is within CG limits when the red portion of the AL pointer is not visible (FUEL QTY SEL knob in NORM).

ACCELERATION LIMITATIONS

Acceleration limitations are contained in figure 5-7 this section, and T.O. GR1F-16CJ-1-2, figures 5-9 and 5-10.

Load factor limits should not be intentionally exceeded. Notify maintenance of a possible over-g if symmetric maneuvering on the g limiter results in a load factor greater than or equal to 9.5g/-3.2g or if symmetric non-g limiter maneuvering or asymmetric maneuvering exceeds a positive or negative g limit specified in this section. Provide details of the occurrence (maximum g indication, airspeed, altitude, description of maneuver, fuel weight and distribution, etc.) and HUD videotape if it is available.

NOTE

- SYM G limits apply to maneuvers resulting from less than abrupt roll stick inputs and in which roll rate does not exceed 20 degrees/second. ROLL G limits apply to maneuvers resulting from abrupt roll stick inputs or maneuvers in which roll rate exceeds 20 degrees/second.
- A false maximum g indication may be displayed in the HUD due to INU vibration while the aircraft is at maximum g. G indications above 10 (e.g., 0.2 for 10.2g) have been observed.
- **DR** Due to the location of the accelerometer, it should not be used to determine maximum g force.

NOTE

- For evaluating a possible over-g, determine the allowable CARRIAGE MAX ACCEL G for the actual store configuration at the time of the occurrence. Use of T.O. GR1F-16CJ-1-2, figure 5-9, N₂W curves (if applicable) is permitted.
- G's experienced during a wingtip vortex/wake turbulence encounter should be considered as asymmetrical when determining if a g limit has been exceeded.

AOA AND ROLLING LIMITATIONS

Refer to figure 5-8. With heavy wing loadings, it may be necessary to cancel the roll command up to 90 degrees early to avoid exceeding the maximum bank angle limit. Except for emergency conditions, do not fly category III loadings with the STORES CONFIG switch in CAT I.

WARNING

- Category III loadings are not protected from AOA or roll-induced departures with the STORES CONFIG switch in CAT I.
- Damage to or failure of wing internal structure can occur if rolling maneuvers are performed with the STORES CONFIG switch in CAT I while carrying a category III loading.

An asymmetric loading is any asymmetry that requires roll and/or yaw trim. Refer to ASYMMETRIC LOADINGS, Section VI.

Nose slice and yaw departure may occur during maximum command rolls on the CAT I AOA limiter at high altitude when carrying a centerline tank. Refer to YAW DEPARTURE, Section VI.

WARNING

- If the aircraft CG is near the aft limit, departure may occur while performing low airspeed, high AOA, maximum command rolling maneuvers with either of the following:
- Asymmetric category I missile loadings (station 2, 3, 7, or 8).

- Speedbrakes opened.

- The indicated bank angle change limit is particularly critical for category I loadings with 370-gallon fuel tanks plus suspension equipment on stations 3 and 7. Care is required with these loadings to check the roll so as not to exceed the indicated bank angle change limit.

STORES LIMITATIONS

Refer to T.O. GR1F-16CJ-1-2, figure 5-10 for authorized stores loading configurations and related limitations.

ASYMMETRIC STORES LOADING

Refer to figure 3-14 for computation of asymmetric moment. The maximum allowable asymmetric (rolling) moment for ground handling, taxi, takeoff, inflight, and landing is 25,020 foot-pounds.

Takeoff is prohibited when the roll trim necessary to compensate for an asymmetric loading exceeds the maximum roll trim available. Refer to T.O. GR1F-16CJ-1-1, PART 2.

MISCELLANEOUS LIMITATIONS**NET ARRESTMENT LIMITATIONS**

61QSII/BAK-15 multi-element net barrier systems have the following designations: 24A, 30F, 40A, HP, and MEN. Any net barrier system with these designations, e.g., 61QSII/HP30 or MK-6/MEN, is compatible with the aircraft.

The 61QSII/BAK-15 arresting system consists of two major components - an energy absorber and an engagement device. The engagement device is the net which is attached to the energy absorber. These absorbers include heavy chains as used with the MA-1A system, friction brake systems such as the BAK-9 and -12, and water twisters as used in BAK-13 systems. Because of the variety of energy absorbers in use, it is not possible to establish one maximum engagement speed for the aircraft. In each case, the maximum engagement speed is determined by the capabilities of the energy absorption system attached to the net. For example, the HP30 is an all nylon, three element net. It incorporates all the latest technology and, coupled with a 1200-foot runout BAK -12, should provide a 35,000-pound F-16 with 190-knot arrestment capability.

CROSSWIND LIMITS

Refer to T.O. GR1F-16CJ-1-1, Part 2 for crosswind limits for takeoff and landing.

LOW AIRSPEED OPERATING LIMITATIONS

Recovery should be initiated no later than activation of the low speed warning tone.

WARNING

For CAT I configurations with drag indices greater than 120, delaying recovery until activation of the low speed warning tone may result in departure regardless of recovery technique. Rapid airspeed decay may reduce control authority to the point that recovery inputs have no effect. Low thrust settings, external fuel tanks, or inlet pods increase the possibility of a departure.

To avoid departures due to roll coupling, do not operate with category III loadings below 200 knots except for takeoff and landing.

WARNING

Departures from controlled flight with asymmetric category III loadings may result in fast, flat (possibly nonrecoverable) spins.

PROHIBITED MANEUVERS

The following maneuvers are prohibited:

1. Intentional departures and spins with any of the following:
 - Symmetric category I loading with suspension equipment or missiles at station 3, 4, 6, or 7.
 - Asymmetric category I loading.
 - Category III loading.
 - Altitude below 30,000 feet AGL.
 - CG aft of aft limit for the configuration being flown.
 - Lateral fuel (internal and external) imbalance greater than 200 pounds.
2. Repeated maximum rudder reversals.

3. Consecutive 360-degree maximum command rolls.
4. Maximum command rolling maneuvers above 1.8 mach and either above 3g or below 35,000 feet MSL.
5. Rudder rolls or rudder-assisted rolls of more than 90 degrees of bank angle change with any store on station 3, 4, 6, or 7.
6. With LG and/or TEF's down:
 - Flight above 15 degrees AOA with stores at station 3, 4, 6, or 7.
 - Maximum command rolls of more than 90 degrees of bank angle change.
7. Abrupt roll reversals above 550 knots and below 20,000 feet MSL with the STORES CONFIG switch in CAT I.
8. Rapid rudder release or reversal above 300 knots/0.6 mach.

GROSS WEIGHT LIMITATIONS

The maximum allowable GW for ground handling, taxi, takeoff, in-flight, and landing is 48,000 pounds.

CENTER-OF-GRAVITY LIMITATIONS

Refer to T.O. GR1F-16CJ-5-2.

Generally, the aircraft is within CG limits when the red portion of the AL pointer is not visible (FUEL QTY SEL knob in NORM).

ACCELERATION LIMITATIONS

Acceleration limitations are contained in figure 5-7 this section, and T.O. GR1F-16CJ-1-2, figures 5-9 and 5-10.

Load factor limits should not be intentionally exceeded. Notify maintenance of a possible over-g if symmetric maneuvering on the g limiter results in a load factor greater than or equal to 9.5g/-3.2g or if symmetric non-g limiter maneuvering or asymmetric maneuvering exceeds a positive or negative g limit specified in this section. Provide details of the occurrence (maximum g indication, airspeed, altitude, description of maneuver, fuel weight and distribution, etc.) and HUD videotape if it is available.

NOTE

- SYM G limits apply to maneuvers resulting from less than abrupt roll stick inputs and in which roll rate does not exceed 20 degrees/second. ROLL G limits apply to maneuvers resulting from abrupt roll stick inputs or maneuvers in which roll rate exceeds 20 degrees/second.
- A false maximum g indication may be displayed in the HUD due to INU vibration while the aircraft is at maximum g. G indications above 10 (e.g., 0.2 for 10.2g) have been observed.
- **DR** Due to the location of the accelerometer, it should not be used to determine maximum g force.
- For evaluating a possible over-g, determine the allowable CARRIAGE MAX ACCEL G for the actual store configuration at the time of the occurrence. Use of T.O. GR1F-16CJ-1-2, figure 5-9, N₂W curves (if applicable) is permitted.
- G's experienced during a wingtip vortex/wake turbulence encounter should be considered as asymmetrical when determining if a g limit has been exceeded.

AOA AND ROLLING LIMITATIONS

Refer to figure 5-8. With heavy wing loadings, it may be necessary to cancel the roll command up to 90 degrees early to avoid exceeding the maximum bank angle limit. Except for emergency conditions, do not fly category III loadings with the STORES CONFIG switch in CAT I.

WARNING

- Category III loadings are not protected from AOA or roll-induced departures with the STORES CONFIG switch in CAT I.

- Damage to or failure of wing internal structure can occur if rolling maneuvers are performed with the STORES CONFIG switch in CAT I while carrying a category III loading.

An asymmetric loading is any asymmetry that requires roll and/or yaw trim. Refer to ASYMMETRIC LOADINGS, Section VI.

Nose slice and yaw departure may occur during maximum command rolls on the CAT I AOA limiter at high altitude when carrying a centerline tank. Refer to YAW DEPARTURE, Section VI.

WARNING

- If the aircraft CG is near the aft limit, departure may occur while performing low airspeed, high AOA, maximum command rolling maneuvers with either of the following:
 - Asymmetric category I missile loadings (station 2, 3, 7, or 8).
 - Speedbrakes opened.
- The indicated bank angle change limit is particularly critical for category I loadings with 370-gallon fuel tanks plus suspension equipment on stations 3 and 7. Care is required with these loadings to check the roll so as not to exceed the indicated bank angle change limit.

STORES LIMITATIONS

Refer to T.O. GR1F-16CJ-1-2, figure 5-10 for authorized stores loading configurations and related limitations.

ASYMMETRIC STORES LOADING

Refer to figure 3-14 for computation of asymmetric moment. The maximum allowable asymmetric (rolling) moment for ground handling, taxi, takeoff, inflight, and landing is 25,020 foot-pounds.

Takeoff is prohibited when the roll trim necessary to compensate for an asymmetric loading exceeds the maximum roll trim available. Refer to T.O. GR1F-16CJ-1-1, PART 2.

MISCELLANEOUS LIMITATIONS

NET ARRESTMENT LIMITATIONS

Refer to figure 5-5 for cable/net arrestment limits. 61QSII/BAK-15 multi-element net barrier systems have the following designations: 24A, 30F, 40A, HP, and MEN. Any net barrier system with these designations, e.g., 61QSII/HP30 or MK-6/MEN, is compatible with the aircraft.

The 61QSII/BAK-15 arresting system consists of two major components - an energy absorber and an engagement device. The engagement device is the net which is attached to the energy absorber. These absorbers include heavy chains as used with the

MA-1A system, friction brake systems such as the BAK-9 and -12, and water twisters as used in BAK-13 systems. Because of the variety of energy absorbers in use, it is not possible to establish one maximum engagement speed for the aircraft. In each case, the maximum engagement speed is determined by the capabilities of the energy absorption system attached to the net. For example, the HP30 is an all nylon, three element net. It incorporates all the latest technology and, coupled with a 1200-foot runout BAK-12, should provide a 35,000-pound F-16 with 190-knot arrestment capability.

CROSSWIND LIMITS

Refer to T.O. GR1F-16CJ-1-1, Part 2 for crosswind limits for takeoff and landing.




Instrument Markings

ENGINE F110-GE-129




935°C ENGINE START
980°C MAXIMUM

FTIT

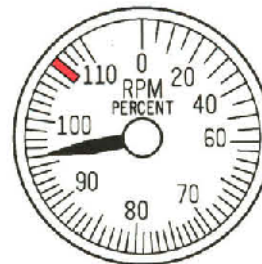


108% MAXIMUM

RPM

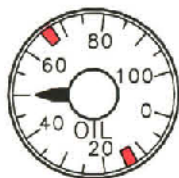

15 PSI MINIMUM
65 PSI MAXIMUM

OIL PRESSURE

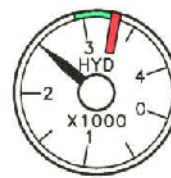

2850-3250 PSI NORMAL
3250 PSI MAXIMUM

HYDRAULIC PRESSURE

GR1F-16CJ-1-0129X37®

Figure 5-1.

Engine Limitations

ENGINE F110-GE-129

GROUND

CONDITION	FTIT °C	RPM %	OIL PSI	REMARKS
START	935	—	—	During cold start, oil pressure may be 100 psi for up to 2 minutes
IDLE	650	—	15 (min)	—
MIL/AB	980	108	25-65	At MIL and above, oil pressure must increase 10 PSI minimum above IDLE oil pressure
TRANSIENT	980	109	25-65	—
FLUCTUATION	± 10	± 1	± 5	Must remain within steady-state limits. Nozzle fluctuations limited to ± 2

IN FLIGHT

CONDITION	FTIT °C	RPM %	OIL PSI	REMARKS
AIRSTART	935	—	—	—
IDLE	—	—	15 (min)	—
MIL/AB	980	108	25-65	Oil pressure must increase as rpm increases
TRANSIENT	980	109	25-65	—
FLUCTUATION	± 10	± 1	± 5	Must remain within steady-state limits. Zero oil pressure is allowable for periods up to 1 minute during flight at less than +1g

Figure 5-2.

Engine — Operational Envelope

ENGINE F110-GE-129

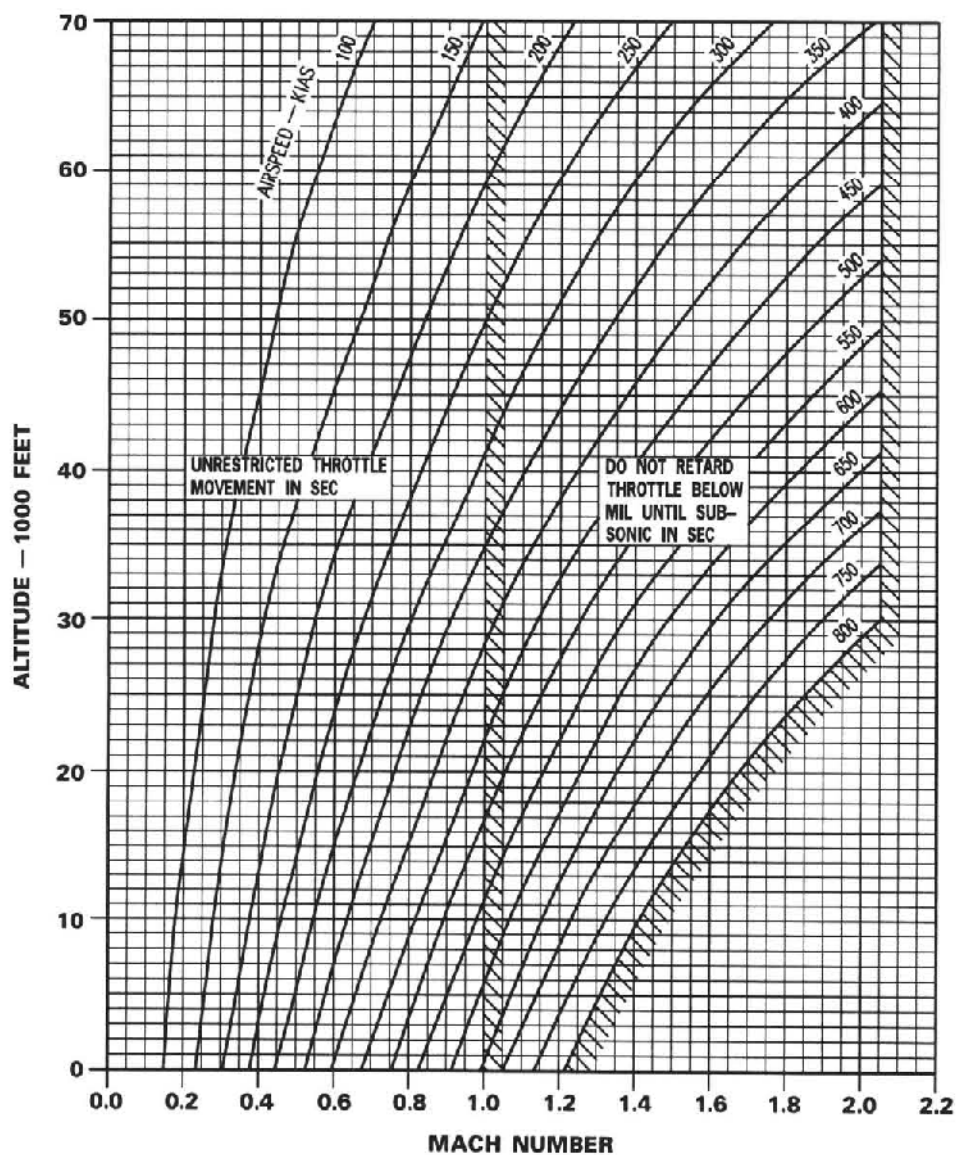


Figure 5-3.

1F-16X-1-4019X®

Jet Fuel Starter Limits

CONDITION	LIMITS
Normal Ground Operation	* Continuous motoring of the engine shall not exceed 4 minutes. After 4 minutes of continuous motoring, a normal engine start may be initiated after 5 minutes of cooling
	A minimum wait of 1 minute is required after each JFS start attempt to allow fuel drainage from the JFS
Hot Start of Engine	Motor until FTIT is below 200°C
Airstart/In Flight	Below 20,000 feet MSL and 400 knots. 3-minute maximum run time when the engine is operating satisfactorily above 60 percent rpm; otherwise, unlimited
* Motoring is defined as JFS rotating the engine 25 percent rpm minimum with the throttle in OFF. NOTES: • OAT between 20°F (-6°C) and 100°F (38°C). A minimum brake/JFS accumulator pressure of 3000 psi is required for START 1 and 2800 psi is required for START 2. • OAT between -25°F (-32°C) and 20°F (-6°C) or OAT above 100°F (38°C). START 2 and a minimum brake/JFS accumulator pressure of 2800 psi are required. • OAT below -25°F (-32°C). START 2 and a minimum brake/JFS accumulator pressure of 3200 psi are required. • If one brake JFS accumulator is depleted, verify a minimum pressure of 3000 psi in the remaining brake/JFS accumulator before attempting START 2.	

Figure 5-4.

Hook Engagement Limits

ARRESTMENT LIMITATIONS FOR BAK-6/-9/-12/-13/-14 AND MAAS		NOTE
ROUTINE ARRESTMENT	150 KNOTS	Attempting to engage an unmodified (non-hook capable) MA-1A will most likely be unsuccessful.
EMERGENCY ARRESTMENT	160 KNOTS	

Figure 5-5.

Engine — Operational Envelope

ENGINE F110-GE-129

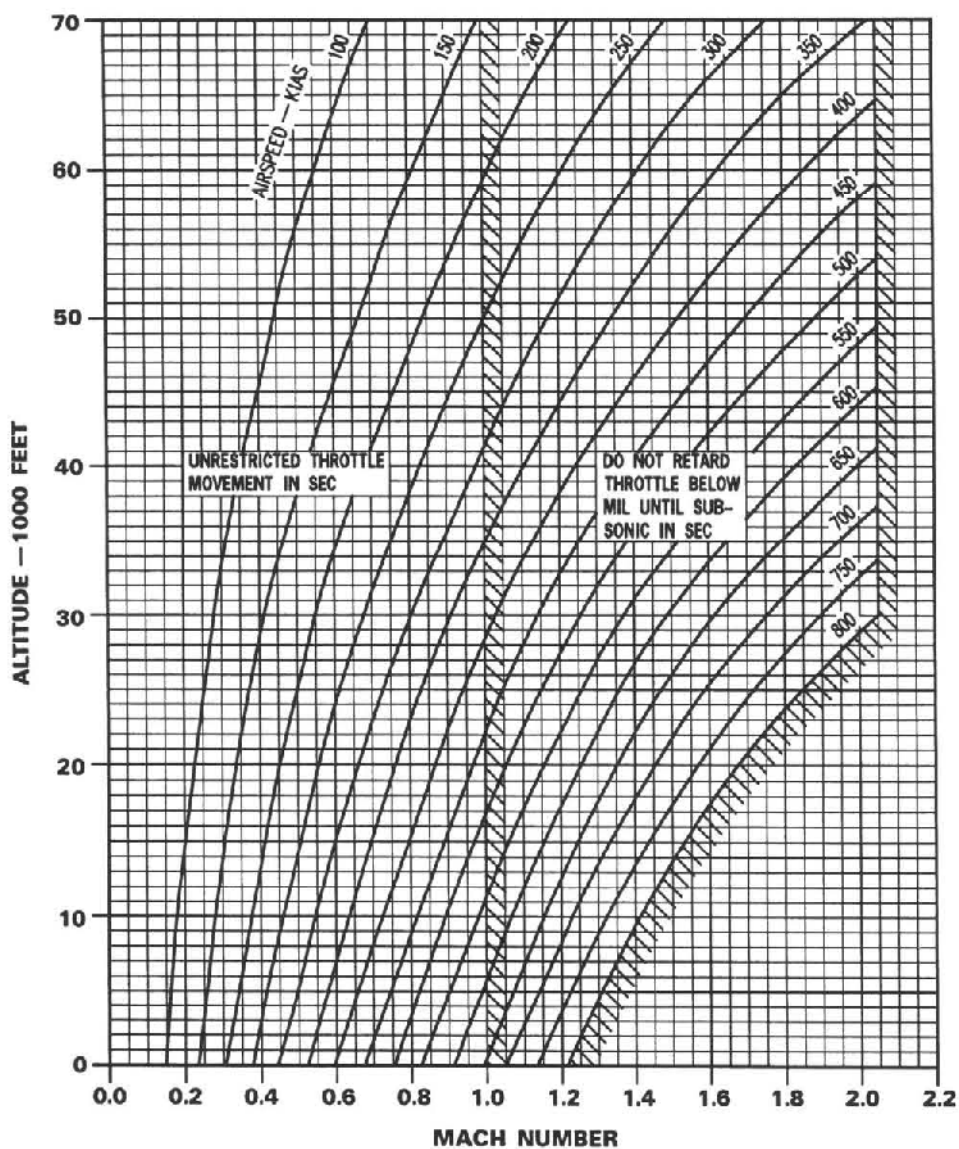


Figure 5-3.

1F-16X-1-4019X©

Jet Fuel Starter Limits

CONDITION	LIMITS
Normal Ground Operation	* Continuous motoring of the engine shall not exceed 4 minutes. After 4 minutes of continuous motoring, a normal engine start may be initiated after 5 minutes of cooling
	A minimum wait of 1 minute is required after each JFS start attempt to allow fuel drainage from the JFS
Hot Start of Engine	Motor until FTIT is below 200°C
Airstart/In Flight	Below 20,000 feet MSL and 400 knots. 3-minute maximum run time when the engine is operating satisfactorily above 60 percent rpm; otherwise, unlimited
* Motoring is defined as JFS rotating the engine 25 percent rpm minimum with the throttle in OFF. NOTES: • OAT between 20°F (-6°C) and 100°F (38°C). A minimum brake/JFS accumulator pressure of 3000 psi is required for START 1 and 2800 psi is required for START 2. • OAT between -25°F (-32°C) and 20°F (-6°C) or OAT above 100°F (38°C). START 2 and a minimum brake/JFS accumulator pressure of 2800 psi are required. • OAT below -25°F (-32°C). START 2 and a minimum brake/JFS accumulator pressure of 3200 psi are required. • If one brake JFS accumulator is depleted, verify a minimum pressure of 3000 psi in the remaining brake/JFS accumulator before attempting START 2.	

Figure 5-4.

Cable/Net Arrestment Limits

Compatible Cable Systems With Established Aircraft Limits

BAK-6
 BAK-9
 BAK-12 (Standard, Extended, and Dual)
 BAK-13 (Navy designation is E-28)
 BAK-14
 BAK-15 (NI) (Net barrier with cable for hook)
 MAAS
 *44B-2L

ROUTINE ARRESTMENT LIMIT – 150 KNOTS (*156 KNOTS).

A planned event. Operational conditions are such that each landing requires arrestment. Such operational conditions include operating from highways or from runways that are too short for normal landings. The standard factor of safety is used to determine the maximum engagement speed.

EMERGENCY ARRESTMENT LIMIT – 160 KNOTS (*171 KNOTS).

An unplanned event. A reduced factor of safety is accepted and the corresponding maximum engagement speed is slightly higher than for a routine arrestment. With a ground level ejection capability, a reduced factor of safety for the arrestment is possible since the pilot can still eject if the arrestment fails.

Compatible Cable Systems Without Established Aircraft Limits

CAUTION

Use of arresting systems without established aircraft limits may result in failure of the hook, hook backup structure, or nose landing gear.

BLISS 500S-6
 TAGS BLISS 500S-6B Transportable
 44B-3H/SP/WR
 MAGS 44B-3H/SP/WR Mobile
 RHAG MK-1
 RHAG MK-2
 PUAG
 PAAG
 P-IV/BAK-12 Portable

Figure 5-5. (Sheet 1)

Cable/Net Arrestment Limits

Compatible Strut Engagement/Cable Systems Without Established Aircraft Limits

CAUTION

Use of arresting systems without established aircraft limits may result in failure of the hook, hook backup structure, or nose landing gear.

MA-1A Modified
MA-1A/E-5
MA-1A/BAK-9
MA-1A/BAK-12

NOTE

Attempting to engage an unmodified (non-hook capable) MA-1A will most likely be unsuccessful.

Compatible Net Barrier Systems

BAK-15
SAFE-BAR (Safeland Barrier)

Stanchions

61QSII
61QSIIM
MK-6

NOTE

The above stanchions can be rigged with the following nets: HP30, HP40, MEN241, MEN301, 24, 30, or 40. In addition, they will be associated with the following energy absorbers: Chain (E-5), BAK-9, BAK-12, BAK-13, 34B, 44B, 500S, BEFAB 6:3, BEFAB 21:2, and BEFAB 24:4.

Other Net Systems

ARZ-30/-40
BEFAB 21:2/MK VI-1 stanchion
BEFAB 6:3/MK VI-1 stanchion
MK-12A
RAF TYPE A
RAF TYPE B

Figure 5-5. (Sheet 2)

Airspeed Limitations (Systems)

SYSTEM OR CONDITION	KLAS/MACH
Canopy Open or in Transit	70 (includes ground wind velocity)
LG Extended or in Transit	300/0.65, whichever is less
AR Door Opening/Closing	400/0.85, whichever is less
AR Door Open	400/0.95, whichever is less
Flight in Severe Turbulence (+3g)	500
Drag Chute Deployment	170

Figure 5-6.

Acceleration Limitations

CONFIGURATION	LOAD FACTOR (g)	
	SYMMETRIC	ASYMMETRIC
TAKEOFF	+4.0, 0.0	+2.0, 0.0
LANDING		
LG RETRACTION	+2.0, 0.0	+2.0, 0.0
LG EXTENSION		

Figure 5-7.

AOA and Rolling Limitations

LOADING CATEGORY	STORES CONFIG SWITCH	MAX AOA	MAX BANK ANGLE CHANGE FOR MAX ROLL MANEUVER
I	I	LIMITER	360°
III	III	LIMITER	360°
NOTES: - Determine loading category from the appropriate line in T.O. GR1F-16CJ-1-2, figure 5-10, Stores Limitations. - The roll command should be released in sufficient time to avoid overshooting the indicated bank angle change limits.			

Figure 5-8.

)

)

)

)

)

)

)

)

)

)

)

SECTION VI

FLIGHT CHARACTERISTICS

TABLE OF CONTENTS

Introduction	6-1
Flight Control System	6-1
FLCS Limiters	6-1
Leading Edge Flaps	6-1
Speedbrakes	6-2
Autopilot	6-2
Trim	6-2
Normal Flight Characteristics	6-3
Category I Loadings	6-3
Category III Loadings	6-3
Flight With LG Down	6-3
Landing Configuration	6-4
Factors Affecting Flying Characteristics	6-4
Center-of-Gravity Considerations	6-5
Effect of Thrust	6-5
Effect of Low Airspeed Maneuvering	6-5
High Pitch, Low Airspeed	6-5
Flight With Stores	6-6
Limit Cycle Oscillation and Aeroservoelastic Oscillation	6-6
Asymmetric Loadings	6-7
Store Separation	6-7
Out-of-Control Characteristics	6-8
Yaw Departure	6-8
Pitch Departure	6-9
Deep Stall	6-10
Spin	6-10
Recoveries	6-11
Self-Recovery	6-11
Deep Stall Recovery	6-11
Spin Recovery	6-12
Engine Operation During Departures/ Out-of-Control	6-13
Degraded Flight Controls	6-13
FLCS DBU	6-13
Leading Edge Flaps Locked (Symmetric)	6-13
Standby Gains	6-13
One Hydraulic System	6-13
Speedbrakes	6-13
Dive Recovery	6-14

INTRODUCTION

Information presented in this section reflects the flight characteristics with category I and III loadings. Refer to AOA AND ROLLING LIMITATIONS, Section V, for information regarding specific categories.

FLIGHT CONTROL SYSTEM

The FLCS is a four-channel fly-by-wire system. The FLCC combines pilot commands along with aircraft motion and flight conditions to command position of the flight control surfaces. Artificial stability provided by the FLCS allows for relaxed static stability which increases performance and maneuverability by reducing trim drag and increasing maximum lift. Refer to FLIGHT CONTROL SYSTEM, Section I.

FLCS LIMITERS

FLCS limiters may be defeated if maneuvering limits are not strictly observed. Departure may result from maximum maneuvering combined with maximum permissible aft CG. The most critical maneuvers are maximum command rolls coupled with either maximum aft stick or exceeding the maximum bank angle change limits.

The AOA/g limiter depends on the horizontal tails to control g and AOA. If the airspeed decreases until there is not enough airflow over the tails to provide this control, the limiter is defeated and a departure or deep stall may result. This condition may occur in a nose-high, decreasing speed maneuver. Refer to LOW AIRSPEED OPERATING LIMITATIONS, Section V.

LEADING EDGE FLAPS

The LEF system is designed to optimize wing airflow. It also provides special functions in the takeoff and landing configurations.

At subsonic speeds, the LEF's move from 2 degrees up to 25 degrees down as a function of mach number, AOA, and altitude. This automatic operation significantly reduces buffet and drag and improves high AOA directional stability. If the LEF's fail to schedule properly during maneuvering flight, higher than normal buffet levels occur and, in the high AOA region, reduced directional and longitudinal stability may also be noted. At supersonic speeds, the LEF's are scheduled to minimize drag.

SPEEDBRAKES

The speedbrakes provide deceleration over the entire flight envelope. There are no trim changes associated with speedbrake operation and induced buffet is negligible. A yaw oscillation may occur at approximately 1.4 mach with speedbrakes opened. The oscillation is neutrally damped and no action is required. The oscillation may be eliminated by either closing the speedbrakes, reducing mach, or increasing the g level.

AUTOPILOT

With the HDG SEL and ALT HOLD modes engaged, the aircraft turns, climbs, or dives within the limits of the autopilot to capture the heading reference and the altitude reference regardless of aircraft attitude. This autopilot-commanded flight may eventually return the aircraft to a preselected heading and altitude if airspeed and altitude permit.

If the ALT HOLD remains engaged as airspeed transits 1.0 mach, a mild pitch transient may occur and can be eliminated by depressing the paddle switch until the altimeter has stabilized.

Use of pitch altitude or attitude hold during decelerating flight can produce either autopilot disengagement and the FLCS A/P FAIL PFL or descent from the referenced altitude if AOA increases above certain values. In CAT I, the autopilot disengages and the FLCS A/P FAIL PFL occurs when 15 degrees AOA is exceeded. In CAT III, the aircraft starts descending from the referenced altitude at approximately 8-10 degrees AOA. If the descent is not corrected within 5 seconds, the FLCS A/P DEGR PFL occurs.

CAUTION

Since the autopilot command is additive to stick commands, use of ALT HOLD in conjunction with high g maneuvering may result in aircraft over-g.

TRIM

The aircraft can be trimmed about all three axes. With pitch trim centered in cruise gains and no input to the stick, the aircraft attempts to maintain 1g flight regardless of flight condition unless AOA exceeds 15 degrees. Full noseup/full nosedown trim corresponds to +3.4g or -1.4g in cruise gains.

NOTE

Airspeed must be closely monitored because there is little aerodynamic indication of large changes in airspeed. Cues which normally indicate airspeed changes, such as stick movement or trim changes, are absent.

Above 15 degrees, the FLCS commands an increasing nosedown pitch attitude as a warning of decreasing airspeed. A specific force applied to the stick commands a specific g increment from the trim condition. Moving the PITCH TRIM wheel changes the hands-off trim condition.

In takeoff and landing gains, zero pitch trim commands zero pitch rate until 10 degrees AOA. A slight amount of noseup trim is required to zero stick forces during an 11-13 degree AOA approach.

When properly trimmed and no input is applied to the stick, the aircraft attempts to maintain zero roll rate. Moving the ROLL TRIM wheel changes the hands-off trim condition. Maximum roll trim authority is approximately one-fifth of maximum stick command of cruise gains. However, precise trimming is difficult using the stick TRIM button. Roll trim requirements may change with stores, particularly at supersonic speeds. For asymmetric configurations (asymmetrical stores or rudder mistrim), roll retrimming may be required as flight

SECTION VI

FLIGHT CHARACTERISTICS

TABLE OF CONTENTS

Introduction	6-1
Flight Control System	6-1
FLCS Limiters	6-1
Leading Edge Flaps	6-1
Speedbrakes	6-2
Autopilot	6-2
Trim	6-2
Normal Flight Characteristics	6-3
Category I Loadings	6-3
Category III Loadings	6-3
Flight With LG Down	6-3
Landing Configuration	6-4
Factors Affecting Flying Characteristics	6-4
Center-of-Gravity Considerations	6-5
Effect of Thrust	6-5
Effect of Low Airspeed Maneuvering	6-5
High Pitch, Low Airspeed	6-5
Flight With Stores	6-6
Limit Cycle Oscillation and Aeroservoelastic Oscillation	6-6
Asymmetric Loadings	6-7
Store Separation	6-7
Out-of-Control Characteristics	6-8
Yaw Departure	6-8
Pitch Departure	6-9
Deep Stall	6-10
Spin	6-10
Recoveries	6-11
Self-Recovery	6-11
Deep Stall Recovery	6-11
Spin Recovery	6-12
Engine Operation During Departures/ Out-of-Control	6-13
Degraded Flight Controls	6-13
FLCS DBU	6-13
Leading Edge Flaps Locked (Symmetric)	6-13
Standby Gains	6-13
One Hydraulic System	6-13
Speedbrakes	6-13
Aircraft Damage	6-14
Horizontal Tail	6-14
Flaperon	6-14
Rudder and Ventral Fins	6-14
Leading Edge Flaps	6-14

Wing	6-14
Radome	6-14
Dive Recovery	6-15

INTRODUCTION

Information presented in this section reflects the flight characteristics with category I and III loadings. Refer to AOA AND ROLLING LIMITATIONS, Section V, for information regarding specific categories.

FLIGHT CONTROL SYSTEM

The FLCS is a four-channel fly-by-wire system. The FLCC combines pilot commands along with aircraft motion and flight conditions to command position of the flight control surfaces. Artificial stability provided by the FLCS allows for relaxed static stability which increases performance and maneuverability by reducing trim drag and increasing maximum lift. Refer to FLIGHT CONTROL SYSTEM, Section I.

FLCS LIMITERS

FLCS limiters may be defeated if maneuvering limits are not strictly observed. Departure may result from maximum maneuvering combined with maximum permissible aft CG. The most critical maneuvers are maximum command rolls coupled with either maximum aft stick or exceeding the maximum bank angle change limits.

The AOA/g limiter depends on the horizontal tails to control g and AOA. If the airspeed decreases until there is not enough airflow over the tails to provide this control, the limiter is defeated and a departure or deep stall may result. This condition may occur in a nose-high, decreasing speed maneuver. Refer to LOW AIRSPEED OPERATING LIMITATIONS, Section V.

LEADING EDGE FLAPS

The LEF system is designed to optimize wing airflow. It also provides special functions in the takeoff and landing configurations.

At subsonic speeds, the LEF's move from 2 degrees up to 25 degrees down as a function of mach number, AOA, and altitude. This automatic operation significantly reduces buffet and drag and improves high AOA directional stability. If the LEF's fail to schedule properly during maneuvering flight, higher than normal buffet levels occur and, in the high AOA region, reduced directional and longitudinal stability may also be noted. At supersonic speeds, the LEF's are scheduled to minimize drag.

SPEEDBRAKES

The speedbrakes provide deceleration over the entire flight envelope. There are no trim changes associated with speedbrake operation and induced buffet is negligible. A yaw oscillation may occur at approximately 1.4 mach with speedbrakes opened. The oscillation is neutrally damped and no action is required. The oscillation may be eliminated by either closing the speedbrakes, reducing mach, or increasing the g level.

AUTOPILOT

With the HDG SEL and ALT HOLD modes engaged, the aircraft turns, climbs, or dives within the limits of the autopilot to capture the heading reference and the altitude reference regardless of aircraft attitude. This autopilot-commanded flight may eventually return the aircraft to a preselected heading and altitude if airspeed and altitude permit.

If the ALT HOLD remains engaged as airspeed transits 1.0 mach, a mild pitch transient may occur and can be eliminated by depressing the paddle switch until the altimeter has stabilized.

Use of pitch altitude or attitude hold during decelerating flight can produce either autopilot disengagement and the FLCS A/P FAIL PFL or descent from the referenced altitude if AOA increases above certain values. In CAT I, the autopilot disengages and the FLCS A/P FAIL PFL occurs when 15 degrees AOA is exceeded. In CAT III, the aircraft starts descending from the referenced altitude at approximately 8-10 degrees AOA. If the descent is not corrected within 5 seconds, the FLCS A/P DEGR PFL occurs.

CAUTION

Since the autopilot command is additive to stick commands, use of ALT HOLD in conjunction with high g maneuvering may result in aircraft over-g.

TRIM

The aircraft can be trimmed about all three axes. With pitch trim centered in cruise gains and no input to the stick, the aircraft attempts to maintain 1g flight regardless of flight condition unless AOA exceeds 15 degrees. Full noseup/full nosedown trim corresponds to +3.4g or -1.4g in cruise gains.

NOTE

Airspeed must be closely monitored because there is little aerodynamic indication of large changes in airspeed. Cues which normally indicate airspeed changes, such as stick movement or trim changes, are absent.

Above 15 degrees, the FLCS commands an increasing nosedown pitch attitude as a warning of decreasing airspeed. A specific force applied to the stick commands a specific g increment from the trim condition. Moving the PITCH TRIM wheel changes the hands-off trim condition.

In takeoff and landing gains, zero pitch trim commands zero pitch rate until 10 degrees AOA. A slight amount of noseup trim is required to zero stick forces during an 11-13 degree AOA approach.

When properly trimmed and no input is applied to the stick, the aircraft attempts to maintain zero roll rate. Moving the ROLL TRIM wheel changes the hands-off trim condition. Maximum roll trim authority is approximately one-fifth of maximum stick command of cruise gains. However, precise trimming is difficult using the stick TRIM button. Roll trim requirements may change with stores, particularly at supersonic speeds. For asymmetric configurations (asymmetrical stores or rudder mistrim), roll retrimming may be required as flight

conditions change. Roll trim inputs also command rudder deflection through the ARI. The ARI switches out with wheel spinup upon landing. Likewise, the ARI switches in following takeoff as the wheels spin down. This switching may cause abrupt rudder inputs to occur if roll (due to asymmetries or crosswind) is being input via the stick or trim.

Rudder trim inputs command rudder deflection. Rudder trim is required with asymmetrical configurations and frequently during supersonic flight, especially with stores. Maximum trim authority is 12 degrees.

NORMAL FLIGHT CHARACTERISTICS

WARNING

The capability of the aircraft to rapidly attain and sustain high g levels, which may cause g-induced loss of consciousness, should be considered during heavy maneuvering.

The FLCS provides constant response for specific inputs regardless of flight conditions. Commanded pitch responses are in g increments per stick force for AOA below 15 degrees. Above 15 degrees AOA, stick force increases as a cue of increasing AOA.

Conventional cues such as aircraft buffeting forces are not always present as AOA and g limits are approached. The commanded lateral response is roll rate per stick force. Rudder position is commanded by rudder pedal force.

The ARI provides coordinated rudder commands and reduces sideslip during rolling maneuvers. Additional pilot rudder commands do not improve roll performance but do increase departure susceptibility. When ARI is not available during takeoff and landing (MLG wheel speed above 60 knots), pilot rudder commands may be required to provide coordinated flight and to control yaw.

WARNING

Rolling g limits are not protected by the FLCS and must be observed.

CATEGORY I LOADINGS

The FLCS minimizes the possibility of departures or spins. Roll rate inputs command flaperons and horizontal tails for roll power to provide a relatively constant roll response.

Maximum command 360-degree rolls at subsonic speeds may cause a slight g reduction on termination. At supersonic speeds, maximum roll rates may cause a slight increase in g. At high AOA and low airspeed conditions, roll performance is reduced by the FLCS to minimize pitch/roll coupling. Aft CG's, open speedbrakes, asymmetric missiles, or centerline stores decrease departure resistance.

CATEGORY III LOADINGS

Aircraft response with most category III loadings remains similar to that of the clean aircraft; however, large stores significantly increase total aircraft drag and reduce performance. Light buffeting may occur during level flight at approximately 0.92 mach. In addition, surging may occur near the store limit airspeed, especially at low altitude. Neither condition requires specific action.

With STORES CONFIG switch in CAT III, the AOA/g limiter provides departure resistance for all category loadings. Except for the requirement to avoid structural overstress, pilot workload is reduced to a level comparable to that with category I loadings.

FLIGHT WITH LG DOWN

With the LG handle down, LG and TEF's are extended and the FLCS operates in takeoff and landing gains. Normally, this mode of flight is limited to takeoff, approach, and landing; however, circumstances can arise which require flight for an extended distance with the LG down. If so, the LG should be left pinned but the streamers should be removed to prevent damage.

With the LG pins installed, it is preferable to raise the LG handle once airborne. This action retracts the TEF's and significantly reduces drag and the FLCS switches to cruise gains. For cruise with only the LG down, the best airspeed is 230-250 knots. A clean aircraft can be flown at 25,000-30,000 feet with the LG down and TEF's up and fuel flow is 3000-3400 pph. If the LG handle is left down, the TEF's remain down and the best cruise altitude is less than 20,000 feet with significantly higher fuel flows.

LANDING CONFIGURATION

Two distinct techniques may be used when landing. One technique is to trim for approximately 11 degrees AOA and to fly that airspeed throughout the final approach. Attitude/glidepath is controlled by the stick, and airspeed/AOA is controlled by the throttle. This technique allows better pitch control, better over-the-nose visibility, and a more stable HUD presentation. In gusty wind conditions, the aircraft wallows less, and during the flare, the sink rate is easier to control. The aircraft floats approximately 800-1200 feet from flare initiation to touchdown. Another technique is to trim for 13 degrees AOA and to fly that airspeed throughout the final approach. The throttle is used primarily to control glidepath, and the stick controls airspeed through control of AOA and direction through bank angle. This type of approach primarily allows better control of touchdown point and more efficient energy dissipation; however, since the aircraft is already at 13 degrees AOA, the flare is more difficult, and care must be exercised to avoid scraping the speedbrakes or landing firm. The aircraft floats approximately 500-700 feet from flare initiation to touchdown.

Regardless of the technique used, establish computed final approach airspeed for the desired AOA early on final and trim the aircraft. Airspeed changes result in pitch changes, which may require retrimming and make glidepath control more difficult.

On short final, avoid premature or large thrust reductions which may cause increased sink rates and a hard landing. Use thrust rather than back stick to control undesirable sink rates. Increased back stick may result in a tail strike in this situation. AOA decreases slightly as the aircraft enters ground effect. All normal landings should be made with speedbrakes opened to the 43-degree position to avoid a floating tendency when entering ground effect. A touchdown at the desired point at 13 degrees AOA can be achieved when flying final at either 11 or 13 degrees AOA by adjusting the initial aimpoint.

Increased control inputs to achieve normal aircraft response as airspeed decreases are unnecessary. Control inputs should be kept small to avoid overcontrol.

Due to the aircraft light wing loading and the floating tendency associated with ground effect, wake turbulence on final approach and during touchdown presents a significant hazard.

Increased spacing between landing aircraft should be used when there is little or no effective crosswind. Exercise caution and be ready to initiate a go-around when wake turbulence is encountered. An early go-around decision may help avoid the need for a large roll control input. Such an input retracts a flaperon, causing decreased lift and possibly a sink rate as well as a roll. A large roll input at slow airspeed also causes a large horizontal tail split. A horizontal tail surface could contact the runway while trying to counter wake turbulence effects during touchdown.

If pitch trim is used during the turn to final, forward stick/trim will be required upon rollout on final approach to counter noseup motion. Floating tendencies following a high flare or aircraft bounce may be increased. Slight forward stick force may be required to prevent a long or slow landing. Stick force per degree AOA change is reduced and should not be relied upon as a slow speed cue.

FACTORS AFFECTING FLYING CHARACTERISTICS

NOTE

- Pitch sensitivity and pilot induced oscillations (a maximum of $\pm 0.5g$) may occur above 0.80 mach when flying with 600-gallon fuel tanks. This behavior can be minimized by avoiding large pitch-stick inputs and rapid pitch-stick reversal. If this behavior becomes objectionable, reduce airspeed and pitch-stick inputs.
- Momentary uncommanded pitch changes (a maximum increase of 1g) and/or bank angle changes (a maximum increase of 15 degrees) may occur above 0.85 mach when flying with 600-gallon fuel tanks. This behavior is known to occur with loaded TER racks but may occur with other store loadings. Avoid overresponding to the changes and use smooth stick input to minimize pilot induced oscillations. Airspeed should be reduced if this behavior becomes objectionable. If flying within normal load factor carriage (MAX ACCEL G) limits defined in T.O. GR1F-16CJ-1-2, STORES LIMITATIONS, an incremental 1g uncommanded pitch change will not exceed structural limits.

NOTE

- A mild pitch oscillation (a maximum of $\pm 0.15g$ at 3 cycles per second) may occur at 0.75-0.90 mach while in cruise gains or at 330-400 knots while in takeoff and landing gains. The oscillation is caused by the normal response of the aircraft and FLCS and does not cause a significant tracking problem.
- Momentary roll hesitations may occur when commanding low to moderate roll rates (generally less

than 100 degrees per second) when airspeed is above 350 knots, and altitude is 20,000 feet or less. This behavior is most noticeable when flying without stores.

- A short duration (less than 3 seconds) series of rapid wing rocks (less than 10 degrees of bank angle change) may occur when terminating a high roll rate maneuver at airspeeds above 400 knots. This behavior is most noticeable when flying without stores.

NOTE

- Minor AOA oscillations (less than ± 2 degrees) may be noticed during elevated-g maneuvering on or near the AOA/g limiter with certain loadings. This behavior is most noticeable between 250 and 350 knots when flying above 25,000 feet MSL.
- Momentary roll hesitations may occur during elevated-g maneuvering on or near the AOA/g limiter with certain loadings. This behavior is most noticeable between 250 and 350 knots when flying above 25,000 feet MSL.

CENTER-OF-GRAVITY CONSIDERATIONS

Monitoring the forward and aft fuel distribution provides an indication of the aircraft CG.

As CG moves aft, higher pitch rates are obtainable and susceptibility to departure and deep stall increases.

NOTE

- **C** The most aft CG occurs with approximately 2000 pounds of internal fuel remaining.
- **D** With external fuel tanks, the most aft CG occurs when the external fuel tanks have just emptied.

EFFECT OF THRUST

Thrust changes result in little or no change in aircraft trim or stability at all operational load factors and for all store loadings.

EFFECT OF LOW AIRSPEED MANEUVERING

Departures are possible at low airspeeds and low pitch angles if large, simultaneous pitch and roll inputs are made.

The FLCS requires adequate airflow over the control surfaces to be effective, which means that airspeed is a critical factor in departure susceptibility during maneuvering. Low airspeeds should, therefore, be avoided during maximum performance maneuvering.

WARNING

- FLCS limiters can be defeated at low airspeeds (below 200 knots in a CAT I configuration) during maximum pitch and roll commands initiated from below limiter AOA's.
- The aircraft can be departed (from parameters outside the tone on area of figure 1-42) with no low airspeed warning tone present, if abrupt or uncoordinated FLCS commands are made.

HIGH PITCH, LOW AIRSPEED

The low airspeed warning tone sounds to aid in recognizing that critical high pitch, low airspeed flight conditions are reached.

WARNING

Proper assessment of flight path angle (not pitch angle) is key to determining the nearest horizon and performing a proper recovery. Differences between flight path and pitch angle of up to 25 degrees, combined with the visual illusion caused by a reclined seat can lead to an incorrect decision to continue the maneuver through the vertical. The risk of a departure/deep stall in this instance is very high.

Avoiding a departure under these conditions requires specific control techniques. To recover, first release aft stick pressure. This action unloads the aircraft and reduces AOA so that the flightpath more closely coincides with the longitudinal axis of the aircraft. Smoothly roll inverted to the nearest horizon. After the roll, smoothly apply the aft stick pressure required to keep the nose moving toward the horizon. As airspeed continues to decrease during the recovery, more aft stick pressure may be required to keep the nose moving. Continue to smoothly increase aft stick pressure up to the AOA/g limiter. If full aft stick is inadvertently released, do not reapply it unless required to keep the nose moving.

WARNING

Avoid large, simultaneous pitch and roll commands to preclude a roll-coupled departure. Small lateral commands can be made as required to maintain wings level, inverted flight. Do not abruptly apply aft stick pressure at anytime during the recovery. Rapid aft stick pressure will generate excessive AOA, overshooting the AOA limiter and causing departure.

During a recovery where full aft stick is required, nose movement toward the horizon may slow down markedly as the AOA/g limiter tries to limit AOA. As long as the nose continues to move, no further action is required. If the nose of the aircraft does not continue to move toward the horizon, the aircraft has departed, and out-of-control recovery procedures should be initiated.

After attaining a nosedown attitude with airspeed increasing, continue to avoid abrupt commands. The aircraft may either be unloaded and rolled upright or a split-s recovery can be made at airspeed above 200 knots, altitude permitting, before continuing to maneuver. The split-s recovery is the simplest way to recover the aircraft. However, if altitude is a factor, allow airspeed to increase to a minimum of 150 knots, unload the aircraft to less than 1g, smoothly roll upright, and recover to level flight.

FLIGHT WITH STORES

The major effects of stores are increased weight and inertia. A reduction in aircraft response and damping should be expected as GW increases, particularly when stores are carried. Stores generally reduce longitudinal and directional stability and increase inertial effects so that the pilot must anticipate initiation and termination of maneuvers based on the loadings. High roll and pitch rates are attainable with full force application of the stick. Avoid abrupt control commands which may cause AOA overshoots in excess of the limitations specified in Section V and T.O. GR1F-16CJ-1-2.

Bank angle change limits must not be exceeded. During rolling maneuvers with category III

loadings, the roll rate must be stopped prior to 360-degree bank angle change. Removing the roll input is not always sufficient (opposite stick may be required). Refer to STORES LIMITATIONS, T.O. GR1F-16CJ-1-2, for carriage limits.

Certain store loadings may exhibit decreased yaw/roll damping in supersonic flight and result in mild yawing oscillations. Neutral and divergent yaw and roll oscillations may occur during sideslip maneuvers at supersonic airspeed. These oscillations are aggravated when large stores are carried. Excessive vertical tail loads may be generated if oscillations become sufficiently large. If oscillations are encountered during rudder commands, release the rudder input. Additionally, buffeting may occur in transonic flight with certain store loadings.

NOTE

A mild airframe vibration may be experienced while supersonic when carrying a centerline store.

LIMIT CYCLE OSCILLATION AND AEROSERVO-ELASTIC OSCILLATION

A limited amplitude constant frequency oscillation (commonly referred to as limit cycle oscillation or LCO) may occur with certain stores loadings. The LCO (typically 5-10 cycles per second) may occur in level flight or during elevated g maneuvers. The LCO may appear as buffeting or turbulence similar to that experienced during normal transonic buffet, but the buffeting is a constant frequency, lateral acceleration from side-to-side or, in some cases, vertical accelerations up and down. The magnitude generally increases with increasing airspeed and/or load factor. Other cues of LCO include significant vertical movement of the forward area of wing stores, especially wingtip launchers and missiles; this motion is typically up and down, but may also follow a circular pattern. In addition, cockpit instruments may become difficult to read as the LCO amplitude increases from moderate to severe. Within published carriage limits, LCO is not detrimental to the aircraft. LCO susceptible loadings include air-to-surface and air-to-air loadings and associated downloadings. If LCO is encountered and is uncomfortable or distracting, reduce airspeed and/or load factor. Refer to STORES LIMITATIONS, T.O. GR1F-16CJ-1-2, for carriage limits.

An aeroservoelastic (ASE) oscillation is similar to LCO. Wing and store oscillation and cockpit vibration may be indistinguishable from those caused by LCO. However, ASE oscillation is driven by the FLCs, resulting in key differences. ASE oscillation (typically at 4-5 cycles per second) is most likely to occur within a narrow range between 0.9 and 0.95 mach. The magnitude is strongly dependent on mach, but not strongly dependent on load factor, and increases in severity as altitude decreases. ASE oscillation will probably occur when carrying wingtip AIM-120 missiles. The presence of stores at stations 3 and/or 7 may dampen the oscillation. Within published carriage limits, ASE oscillation is not detrimental to the aircraft. If ASE oscillation is encountered and is uncomfortable or distracting, change airspeed by at least 0.05 mach.

NOTE

LCO and ASE oscillation may be indistinguishable to the pilot. Either may produce severe oscillation at the most critical flight condition. While not detrimental to the aircraft within published carriage limits, the motions may be extremely uncomfortable or impact mission accomplishment. The most effective way to reduce LCO or ASE is to reduce airspeed.

ASYMMETRIC LOADINGS

If roll trim is used to hold up a heavy wing, the ARI adds rudder in the direction of the roll trim, causing a yaw away from the heavy wing. If roll trim is used for takeoff, yaw occurs when the wheel speed drops below 60 knots groundspeed after takeoff, activating the ARI. This yaw is easily controllable by rudder commands. Yaw and roll trim requirements change for different flight conditions.

Asymmetric loads increase departure and spin susceptibility. Roll commands/trim away from the heavy wing is required to maintain the desired roll attitude. Increasing g requires additional roll commands/trim. Therefore, aft stick commands result in increased roll requirements which, in turn, produce yaw away from the heavy wing due to ARI action.

WARNING

- With certain asymmetric category III loadings (2000 pounds or greater on station 3 or 7 with stores on stations 4, 6, and/or 5), rapid or abrupt aft stick commands may result in sudden nose slicing departures.
- Departure with an asymmetric category III loading may result in a fast, flat (possibly nonrecoverable) spin.

NOTE

Left-wing heavy asymmetries are more susceptible to departure.

During TF, commanded fly-ups with asymmetric loads result in a slower roll to wings level away from the heavy wing. Stick inputs to assist the roll to wings level may be required as described in T.O. GR1F-16CJ-34-1-1

At high airspeeds, asymmetric loads exhibit some unusual flight characteristics. Frequent trim reversals may occur during supersonic acceleration. At airspeeds greater than 700 knots, yaw oscillation may occur with significant lateral accelerations.

Over 750 knots, a high frequency directional shaking may occur with loadings such as the ECM pod.

STORE SEPARATION

Symmetrical store releases and wingtip AIM-9 missile launches can be accomplished with no unusual aircraft responses. Separation of the 300-gallon fuel tank produces negative g on the aircraft. The magnitude of this response depends on the amount of fuel remaining in the tank and the mach number at release. Separating a full centerline fuel tank at supersonic speeds produces the worst response (up to -1.5g).

Separation of 370-gallon fuel tanks produces a minimal aircraft response. Separation of a single 370-gallon fuel tank will initially produce aircraft positive g response and roll away from the separated tank (up to +1g and 15 degrees of bank).

OUT-OF-CONTROL CHARACTERISTICS

A departure is a loss of aircraft control that is characterized primarily by uncommanded aircraft motions or failure of the aircraft to respond to control commands. In a pitch departure, the AOA increases beyond the normal controllable range. In a yaw departure, the sideslip angle increases beyond the normal controllable range first, although a pitch departure may immediately follow. The automatic features of the FLCS normally prevent departures. However, departures may occur when Section V limits are exceeded or in certain circumstances when the FLCS provides only marginal protection.

With a lateral asymmetry in excess of 300 pounds (including wing tip missile and internal/external fuel), abrupt maneuvering on or near the CAT I AOA limiter can result in a departure if the aircraft is configured with any of the following:

- 300-gallon fuel tank.
- 370-gallon fuel tanks.
- Inlet mounted pod(s).
- Combination of a centerline store plus stores (or suspension equipment) at stations 3 and/or 7.

With these loadings, maneuvering at high altitude (above 25,000 feet) increases the probability of a yaw departure. Even moderate control commands may cause aircraft with some CAT I loadings to depart above 25,000 feet.

Abrupt maneuvering on or near the CAT I AOA limiter at slow airspeeds (less than 200 knots) may result in a departure.

YAW DEPARTURE

A yaw departure occurs when sideslip increases beyond the normal controllable range (i.e., beyond about 15 degrees). The primary indication of most yaw departures is an abrupt nose slice. The aircraft then fails to respond properly to pilot commands and exhibits uncommanded motions. AOA is in the normal range (-5 to +25 degrees) during the initial phase of the nose slice. Immediately following a yaw departure, a pitch departure usually occurs resulting in AOA indication of -5 or +32.

It is possible for the sideslip to briefly exceed the normal controllable range without the aircraft experiencing uncommanded motions. In this situa-

tion, the pilot's only indication of a departure may be noticeable sideforces. These brief departures typically self-recover within 5 seconds.

A yaw departure may occur while maneuvering on or near the CAT I AOA limiter in the 0.80 to 0.95 mach range, especially at high altitude (above 25,000 feet). Maneuvering at high altitude is more critical than low altitude because mach effects reduce directional stability. These yaw departures usually result from maximum command left rolls; but they may also occur during symmetric maneuvering.

The possibility of a yaw departure is increased whenever the aircraft is configured with stores or suspension equipment, especially a centerline store. In general, the possibility of departure increases as the number, weight, and size of such equipment or stores increases. Susceptibility to a yaw departure increases significantly with lateral asymmetry, with left-wing-heavy loadings being more likely to depart than right-wing-heavy loadings. In addition, a heavier GW aircraft is generally more likely to experience yaw departures. CAT I loadings most susceptible to yaw departures have one or more of the following characteristics:

- Centerline store.
- Inlet mounted pod(s).
- Lateral asymmetry greater than 300 pounds at stations 1, 2, or 3.

Yaw departures can be minimized by avoiding abrupt maneuvers in the 0.80 to 0.95 mach range with a centerline store, especially above 25,000 feet. Either unload the aircraft prior to making roll commands or command only minimum required roll rate when operating near the CAT I AOA limiter. With centerline store loadings having lateral asymmetries greater than 300 pounds and inlet mounted pod(s), avoid abrupt aft stick commands above 25,000 feet.

WARNING

The probability of a yaw departure significantly increases above 25,000 feet for CAT I loadings having a centerline store, a lateral asymmetry greater than 300 pounds, and inlet mounted pod(s). With these loadings, moderate, full-aft-stick inputs at 35,000 feet and 300 knots have caused yaw departures and spins.

A yaw departure may also occur with large air-to-surface lateral asymmetries with the STORES CONFIG switch in the CAT III position. These departures can be avoided if abrupt control commands are not used with lateral asymmetries in excess of 1500 pounds at station 3 (or equivalent).

A yaw departure results in one of the following:

- A self-recovery. The self-recovery may occur quickly (within approximately 5 seconds). If a pitch departure follows the yaw departure, the self-recovery may require 10-20 seconds. Random and possibly abrupt pitch, roll, and yaw rates may occur.
- A deep stall.
- An upright spin.

PITCH DEPARTURE

A pitch departure occurs when the AOA exceeds the AOA/g limiter. A pitch departure is classified either as upright if the AOA is positive or as inverted if the AOA is negative. Although the AOA indicator displays a maximum of 32 degrees and a minimum of -5 degrees, the actual AOA during a departure will exceed these values. In highly oscillatory departures, the AOA indicator may momentarily indicate an AOA below 32 degrees. Airspeed indications are erroneous and generally oscillate between the minimum value and approximately 150 knots.

An upright pitch departure occurs when the AOA exceeds the positive AOA/g limiter. Above 25 degrees AOA, both horizontal tails are commanded to full trailing edge down by the pitch axis of the FLCS to try to reduce the AOA. If AOA exceeds 35 degrees, the yaw rate limiter provides antispin commands to the rudder, flaperons, and horizontal tails. Pilot roll and rudder commands are inhibited and pitch stick commands are ineffective without use of the MPO switch.

An inverted pitch departure occurs at negative AOAs when the AOA significantly exceeds the negative g limiter. During the departure, the pitch axis of the FLCS commands the horizontal tails to full trailing edge up to try to return AOA to the normal range. Pitch stick commands are ineffective without use of the MPO switch.

If AOA is below -5 degrees and airspeed is less than 170 knots, the yaw rate limiter provides antispin commands to the rudder. During an inverted

departure, roll and rudder commands should be avoided. Pilot roll and rudder commands are inhibited when the MPO switch is engaged.

An upright or inverted pitch departure can occur when the aircraft is flown to airspeeds below that indicated by the low speed warning tone. Inverted pitch departures usually result from inverted flight at high pitch attitudes and low airspeeds, such as those often encountered by going over the top at too slow an airspeed. An upright or inverted pitch departure may also occur at any pitch attitude if abrupt stick commands are made at airspeeds below 200 knots. Simultaneous abrupt roll and aft stick commands are especially likely to cause an upright pitch departure. However, the aircraft can be safely flown to the AOA/g and roll limiters below 200 knots with smooth commands.

An upright pitch departure may also result from a yaw departure. In addition, recovery from an inverted pitch departure may cause the aircraft to pendulum into an upright departure and vice versa.

The likelihood of a pitch departure increases if the aircraft is configured with stores (especially 370-gallon fuel tanks), if the speedbrakes are opened, or if the CG is near the aft limit.

Pitch departure characteristics are strongly influenced by the airspeed and aircraft rates present at departure. A low airspeed departure (below 200 knots) may have relatively benign uncommanded pitch, roll, and yaw motions. Higher airspeed departures are usually very dramatic with large uncommanded pitch, roll, and yaw motions which may persist for 10 seconds or more.

It is possible for the AOA to briefly exceed the AOA/g limiter without the aircraft experiencing uncommanded motions. In this situation, the pilot's only indication of a departure may be a failure of the aircraft to respond to control commands. These brief departures typically self-recover within 5 seconds.

A pitch departure results in one of the following:

- A self-recovery which occurs within 5-20 seconds. Random and possibly abrupt pitch, roll, and yaw rates may occur.
- A deep stall.
- A spin.

DEEP STALL

If the aircraft does not self-recover following a departure, a deep stall may have developed. A deep stall is an out-of-control flight condition in which the aircraft stabilizes at an AOA of approximately 60 degrees (upright) or -60 degrees (inverted) with low yaw rates. The FLCS attempts to return AOA to the normal range by commanding full horizontal tail deflection. However, the full horizontal tail deflection is insufficient to return AOA to the controllable range. The aircraft has entered a deep stall if the AOA remains outside the controllable range. In a deep stall the AOA indicator will be pegged at 32 or -5 degrees. Recovery to controlled flight requires that the pilot pitch rock the aircraft with the MPO switch in OVRD. The MPO switch allows the pilot to override the FLCS and to manually control the horizontal tails.

Airspeed indications are erroneous in a deep stall and fluctuate between 0-150 knots. Altimeter indications should be considered reliable; however, aircraft oscillations may cause momentary stabilized or even slightly increased altitude indications. Sink rate in a deep stall is usually between 10,000 and 15,000 feet per minute. The normal load factor is approximately 1g or -1g for upright and inverted deep stalls, respectively.

Upright deep stalls may be very stable with little or no pitch, roll, and yaw motions or may be very oscillatory with large pitch, roll, and yaw motions. Generally, a clean configuration results in a deep stall with a near wings-level pitching motion. If stores are being carried, especially a 300-gallon fuel tank or 370-gallon fuel tanks, the deep stall may be very oscillatory, masking the pitch motions.

In an upright deep stall, the nose of the aircraft usually oscillates ± 15 degrees about a slightly nose-low pitch attitude. Pitch oscillations may be as high as ± 40 degrees and normally reverse direction approximately every 3 seconds. Roll reversals up to ± 90 degrees from wings level may occur and the yaw rate tends to cyclically reverse back and forth and may be as high as 40 degrees per second. A slow net heading change, usually to the left, may occur.

Inverted deep stalls may be either stable or highly oscillatory in pitch, depending upon the CG. If there is little or no pitch motion, the nose is slightly above the horizon and the wings are generally level. If the deep stall is oscillatory in pitch, the nose may oscillate above and below the horizon by as much as ± 20 degrees. Yaw and roll oscillations in an inverted deep stall are normally smaller than those during an upright deep stall.

The aircraft is most likely to stabilize in a deep stall if it does not self-recover within two postdeparture pitch oscillations. The likelihood of a deep stall occurring after a departure is also dependent upon the aircraft CG and configuration. An inverted deep stall can occur at a more forward CG than an upright one. The likelihood of a deep stall developing after a departure increases as the CG moves farther aft and if stores (especially 370-gallon fuel tanks) are loaded.

SPIN

A spin is a deep stall with a significant sustained yaw rate in one direction (greater than 30 degrees per second). The pitch, roll, and yaw oscillations associated with a deep stall should not be confused with the continuous yaw rotation associated with a spin. AOA, airspeed indications, and altitude loss are similar to those during deep stalls. Spins can be either upright or inverted, although inverted spins are much less likely to occur than upright spins.

The yaw rate limiter is effective in preventing an upright spin with most CAT I loadings. However, following a yaw departure above 25,000 feet, aircraft with CAT I loadings that have all the following characteristics may spin:

- Centerline store.
- Inlet mounted pod(s).
- Lateral asymmetry greater than 300 pounds at stations 1, 2, or 3.

Upright spins following a yaw departure can be disorienting. The initial portion of the spin is characterized by highly oscillatory pitch and roll motions and a high yaw rate (70 to 100 degrees per second). Initially, the aircraft spins roughly around the aircraft's flight path at departure. As the spin continues, the rotation axis eventually becomes vertical. Very noticeable forward g (eyeballs out) and sideforces are present.

Yaw rate usually decreases to near zero within 10 to 25 seconds. The g forces decrease noticeably as yaw rate decreases, which may give the sensation that yaw rate is lower than it actually is. Use outside references to determine when the yaw rate has stopped. A recovery may occur after yaw rate has decreased to near zero. If recovery does not occur, the aircraft has settled into a deep stall and pitch rocking must be used to recover the aircraft to controlled flight. However, because pitch rocking is less effective when a yaw rate is present, pitch rocking should not begin until yaw rotation stops or is minimized (if altitude permits).

A spin may also occur following any departure with a CAT III loading that has a large lateral asymmetry from air-to-surface stores. These spins may be fast, flat, and possibly unrecoverable.

An inverted spin can be caused by pilot rudder and roll commands if they are not released following an inverted departure.

The yaw rate limiter is effective in preventing an inverted spin with all CAT I loadings. However, large lateral asymmetries from air-to-surface stores on CAT III loadings may overpower the yaw rate limiter and cause unrecoverable inverted spins.

RECOVERIES

Self-Recovery

Recovery from most departures is automatic, requiring only release of the controls. Once the controls are released, self-recoveries usually occur within the first two postdeparture pitch oscillations (10-20 seconds). Recovery is characterized by the nose pitching down to a steep dive angle, increasing airspeed, and AOA and sideslip returning to the normal range. Some postdeparture yaw and roll oscillations may be evident, particularly if the departure was in yaw. To prevent departure reentry, the airspeed should be allowed to increase to 200 knots prior to dive recovery. Flight control failure indications may be present after recovery from any departure.

Deep Stall Recovery

The aircraft should be allowed the opportunity to self-recover if altitude permits. Initiating pitch rocking too soon should be avoided because it can aggravate postdeparture roll and yaw motions, which can significantly lengthen recovery time.

If recovery is not apparent after two postdeparture pitch oscillations (10-20 seconds) or if altitude is a factor, the aircraft must be rocked out of a deep stall. To pitch rock the aircraft, the MPO switch must be firmly held in OVRD until recovery is complete. Recognize any pitching motions and begin stick cycling in-phase with these motions. If no pitch motions are apparent, an abrupt maximum command stick input to pitch the nose away from the ground (full aft stick for an upright deep stall, full forward for an inverted deep stall) will reverse the horizontal tail deflection and should generate a noticeable pitch rate. The best indicator for timing stick cycles is the nose position relative to the horizon, or if no outside references are available, the ADI may be useful. In an upright deep stall, an aft stick command increases

the AOA and pitch angle. When the nose reaches its highest point and reverses direction, a full forward stick command reinforces the nosedown pitch rate. One complete pitch rocking cycle takes approximately 6 seconds, during which time the aircraft descends 1000 to 1500 feet.

If the nosedown pitch rate is large enough, the upright deep stall is broken and AOA returns to the normal range (below +25 degrees). If the nosedown pitch rate is insufficient, the nose stops its downward motion and either begins to rise or stabilizes. Promptly reapply the full aft stick command when the nose reverses or after 2-3 seconds if reversal is not apparent. Holding full forward stick more than 2-3 seconds with the nose stabilized can generate a rapid yaw rate and delay recovery. If the aircraft has not recovered after 2-3 seconds or if a yaw rate develops, reapply full aft stick and complete another in-phase pitch rocking cycle.

Just prior to breaking the deep stall, the nosedown pitch rate may decrease or even stop. Unless the nose either definitely starts back up or stabilizes for longer than 2-3 seconds, another pitchup cycle should not be started. On the pitchdown cycle, the stick should be held full forward (upright) or aft (inverted) while the nose hesitates as the stall breaks. Following a short hesitation (less than 2-3 seconds), the nose continues down to near vertical. There is frequently a distinct, low magnitude airframe shudder which occurs as the stall is breaking. This shudder is a favorable indication that recovery is occurring.

Once the deep stall is broken, aggressive pilot commands are usually required to stop the pitch rate in a steep dive. If possible, find and track a feature on the ground. Maintain firm pressure on the MPO switch until airspeed reaches 200 knots. If a transition to an opposite AOA deep stall does occur, reinforce the already present pitch motion with the MPO still engaged and recovery should be rapid. Transitions during upright deep stall recoveries are most likely to occur with 370-gallon fuel tank configurations.

Recovery to controlled flight is recognized by a steep pitch attitude (usually within 30 degrees of vertical), pitch rate stopping, and AOA in the normal range (-5 to +25 degrees). As airspeed increases above 200 knots, release the MPO switch, maintain neutral roll and yaw commands, and recover from the resulting dive.

Stick commands during pitch rocking should be abrupt and full command, and should reverse after pitch motion reverses. Stick commands that are not abrupt and full command may not be effective. Rapid fore and aft cycling of the stick out of phase with the aircraft motion is also not effective.

The number of pitch rocking cycles required for recovery from an upright deep stall is dependent on aircraft configuration. Generally, recovery occurs in one or two pitch rocking cycles. However, configurations with a centerline store (particularly a 300-gallon fuel tank) or with 370-gallon fuel tanks may require more pitch rocking cycles for recovery. These loadings usually have more oscillatory deep stalls, and the roll and yaw motions make it more difficult to determine proper stick cycling. Pitch attitude is still the best indication for proper stick cycling.

During upright deep stalls with a centerline store, particularly a 300-gallon fuel tank, the aircraft tends to roll and yaw right while pitching up, and roll and yaw left while pitching down. During deep stalls with 370-gallon fuel tanks, the aircraft nose motion appears triangular. This motion is characterized by a roll and yaw right while pitching up, followed by a pitch down, a hesitation, and a yaw to the left. These alternating yaw oscillations should not be confused with a sustained yaw rotation in one direction indicating the aircraft is in a spin.

An inverted deep stall recovery is similar to an upright recovery. In an inverted deep stall, the yaw rate limiter automatically provides rudder against the yaw rate. Pilot roll and rudder commands should be avoided. Pilot roll and rudder commands are inhibited when the MPO switch is in OVRD. Yaw oscillations may be noticed but do not affect recovery.

To recover from an inverted deep stall, position the MPO switch to OVRD and begin stick cycling in-phase with pitch motions. If no pitch motions are apparent, make the first pitch input away from the ground by pushing full forward and monitor pitch motion. One or two pitch rocking cycles are usually sufficient to recover from an inverted deep stall.

During recovery from an inverted deep stall, a transition to an upright deep stall is likely to occur if large pitch motions are present during inverted pitch rocking and the MPO switch is released too early. Early release of the MPO switch reduces the horizontal tail authority available and delays recovery. The MPO switch must be held in the OVRD position until the deep stall is positively broken as evidenced by the pitch rate stopping, AOA in normal range (-5 to +25 degrees), and a steep pitch attitude (usually within 30 degrees of the vertical). As airspeed increases above 200 knots, release the MPO switch, maintain neutral roll and yaw commands, and recover from the resulting dive.

NOTE

The aircraft has demonstrated a strong tendency to transition to an upright deep stall during recovery from an inverted deep stall. Aggressive pilot commands (full forward stick) are required as the nose pitches down to the vertical during recovery to preclude a transition.

Spin Recovery

To recover from a spin, yaw rate must be stopped or minimized before the aircraft can be recovered. Due to large noseup moments caused by the inertial properties of the aircraft and decreased horizontal tail pitch effectiveness with sideslip, attempts to pitch rock out of a spin are usually not effective. Pitch rocking during a spin is also likely to aggravate roll and yaw oscillations, which make recovery more difficult.

The large forward g (eyeballs out) and sideforces present during the initial portion of an upright spin decrease noticeably as yaw rate decreases, which may give the sensation that yaw rate is lower than it actually is. Use outside references to determine when the yaw rotation has stopped. Pitch rocking should not begin until the yaw rotation stops or is minimized. Pitch rocking with a steady yaw rate greater than 30 degrees per second may prevent recovery.

Waiting for yaw rotation to stop or minimize may require from 20 to 30 seconds. When the yaw rotation stops or is minimized, the aircraft will either self-recover or will settle into an upright deep stall. If recovery is not apparent after yaw rate has stopped or is minimized, perform the appropriate recovery procedures described in the Deep Stall Recovery section.

Pitch, roll, and yaw oscillations associated with a deep stall should not be confused with the continuous yaw rotation associated with a spin. Once the continuous yaw rotation of a spin has been arrested and pitch rocking has begun, pitch rocking should continue until a recovery is achieved.

Upright spins with CAT III loadings that have large lateral asymmetries from air-to-surface stores may be fast, flat, and possibly unrecoverable. There is an option to jettison an asymmetric store as a last ditch effort in case of a fast, flat spin. However, aircraft-store collision may occur.

Inverted spins with CAT I loadings are effectively prevented by the yaw rate limiter. The yaw rate limiter automatically provides rudder against the yaw rate. Pilot roll and rudder commands should be avoided.

If recovery is not apparent after yaw rate has stopped or is minimized in an inverted spin, the aircraft has settled into an inverted deep stall. Perform the inverted deep stall recovery procedures.

ENGINE OPERATION DURING DEPARTURES/OUT-OF-CONTROL

Departures at high altitude may result in an engine stall. Prolonged negative g flight at a high engine thrust level may result in an engine bearing failure. Retard the throttle to IDLE after a departure. Do not advance the throttle until beginning the dive recovery.

If the engine stalls during a departure or out-of-control situation, refer to ENGINE STALLS, Section III, after recovery is complete. The engine should be left running during an out-of-control situation to insure adequate hydraulic pressure to flight control surfaces for recovery. Recover from the out-of-control condition; then concentrate on the engine. If the engine does not recover, it must be shut down and restarted.

DEGRADED FLIGHT CONTROLS

FLCS DBU

Flight characteristics for cruise and landing are not significantly affected by operation in DBU. Although airspeed should be maintained below 500 knots/0.9 mach while in DBU, transitions to DBU at higher airspeeds do not produce adverse handling characteristics. Minimal pitch transients occur if transition to DBU occurs at 1g. At higher g levels, transition to DBU is accompanied by an initial reduction in g. If the aft stick input is continued, g level again increases, but may be less than that which was available prior to the transition. The STORES CONFIG switch is inoperative in DBU and AOA/g force available is similar to that in CAT III.

If LG are lowered below 200 knots, a mild noseup transient of approximately 2 degrees occurs. A similar nosedown movement occurs if LG is raised below 200 knots.

If an automatic transition to DBU occurs when in auto TF, the FLCS initiates a 3g incremental no roll to wings level fly up. This fly up can be interrupted using the paddle switch. All ATF indications are turned off (active light, TF FAIL warning light, ATF NOT ENGAGED caution light, and autopilot PITCH switch). HUD TF symbology is also removed.

LEADING EDGE FLAPS LOCKED (SYMMETRIC)

Flight characteristics for landing and low AOA maneuvering are not significantly affected by locked LEF's. At high airspeeds, LEF's locked down cause increased buffet. At high AOA, LEF's locked up reduce stability, increase departure susceptibility significantly, and cause increased buffet. Above 16-18 degrees AOA, an abrupt yaw departure may occur, producing an uncommanded roll with little or no forewarning. Do not exceed 12 degrees AOA with the LEF's inoperative. Locked down LEF's significantly reduce cruise range. During landing, floating may also be noticeable if LEF's are locked at or near full down. The aircraft may float, sink rate may decrease, and a slight forward stick pressure may be needed to fly through the ground effect.

STANDBY GAINS

When operating on standby gains, aircraft response is normal at low AOA. Because the LEF's are at zero degrees (LG handle in UP and ALT FLAPS switch in NORM) with a dual air data failure, buffet and departure susceptibility will be increased at higher AOA (above 18 degrees). At flight conditions higher/slower than the fixed gain conditions, aircraft response is more sluggish requiring larger control commands for a given response. Landing the aircraft should present no special problems.

ONE HYDRAULIC SYSTEM

Flight characteristics with one hydraulic system should be normal unless extremely large, rapid control surface deflections are commanded. Under these conditions, the hydraulic flow rate from the one system may be inadequate which slows down control surface movement rates and possibly causes sluggish aircraft response.

SPEEDBRAKES

Speedbrakes may stick fully open or open asymmetrically. If a yawing moment is noted when the speedbrakes are opened, close the speedbrakes. If the speedbrakes fail to close, a significant increase in drag results. Fully opened speedbrakes significantly reduce cruise range.

AIRCRAFT DAMAGE

Procedures for recovery of an aircraft with damage will depend on the type and extent of the damage. The following paragraphs provide general information based on analysis of past mishaps.

HORIZONTAL TAIL

Loss or partial loss of one horizontal tail surface will not result in an uncontrollable aircraft except for certain combinations of flight conditions (mach greater than 0.80 and altitude less than 15,000 feet), aircraft loading (heavy CAT III), and CG at or near the aft limit. Avoid abrupt maneuvering and maintain airspeed between 200 and 300 knots until landing approach. Place the STORES CONFIG switch to CAT III if in CAT I. Some roll stick or roll trim may be required to maintain wings level. Use a maximum of 11 degrees AOA during final approach. After touchdown, lower nose to runway as soon as practical.

FLAPERON

Separation of a flaperon from the wing (flaperon still attached to the ISA in the fuselage) causes the outboard end of the flaperon surface to rotate upwards, towards the fuselage. This may be accompanied by a roll transient. Adequate roll stick authority should be available to counter the effect and maintain control. With a flaperon surface separated from one wing, landing should be made without extending the TEF on the other wing (use alternate landing gear extension, leave LG handle UP, and select brakes CHAN 2). Hydraulic system pressures should also be monitored. Upward rotation of a separated-from-the-wing flaperon surface has caused ISA movement that resulted in a leakage failure of hydraulic system A.

RUDDER AND VENTRAL FINS

Loss or partial loss of the rudder or a ventral fin will not result in controllability problems unless the aircraft is above 1.5 mach. If loss or partial loss of the rudder or a ventral fin occurs, avoid abrupt maneuvering and reduce speed to subsonic, if supersonic. Place the STORES CONFIG switch to CAT III if in CAT I. During landing with loss or partial loss of the rudder, lower the nose to the runway as soon as practical so that NWS can be used as required for directional control.

LEADING EDGE FLAPS

Damage to the LEF's may result in locked LEF's. If the LEF's have not automatically locked, they should be manually locked. Refer to Leading Edge Flaps Locked (Symmetric), this section for a discussion of flight characteristics.

WING

Loss of a portion of the wing produces a rolling motion towards the damaged wing. The capability to stop this roll depends on airspeed, g, and the amount of wing surface lost. Higher airspeeds (above 250 knots) and low g (less than 2) are essential for maximizing the amount of roll control authority available. If the aircraft is in a dive when a portion of the wing surface is lost, apply roll stick force to stabilize the aircraft in roll before applying g to recover from the dive (altitude permitting). Use the lowest g level practical to recover from the dive. As g is increased, additional roll stick force is required to maintain wings level. Depending on the amount of wing surface lost, the minimum speed to maintain adequate roll control could be well above 200 knots.

RADOME

Loss of the radome results in loss of two air data sources (pitot probe) and two AOA sources (AOA transmitters); however, loss of the radome does not necessarily cause the aircraft to be uncontrollable. FOD to the engine and other damage to the aircraft may also occur as the radome departs.

Loss of two air data sources will affect handling qualities. If the two airspeed sources from the pitot probe go to erroneously low values at the same time, the remaining good source from the fuselage air data probe will be considered failed (i.e. a single failure). In this case the FLCS will not switch to standby gains. Gain scheduling will be based on the erroneously low airspeed; thus, the aircraft will become increasingly pitch sensitive as airspeed is increased. If the two airspeed sources are lost in a manner that the FLCS recognizes as two failures, then the FLCS reverts to standby gains. In standby gains, the opposite problem occurs. With the landing gear up at slow speeds, the aircraft will be sluggish compared to handling qualities prior to the radome loss. It may seem as though the aircraft isn't responding to stick inputs if sufficient response time is not allowed.

Dive Recovery


DATA BASIS ESTIMATED

CONDITIONS:

- IDLE THRUST
- NO DELAY BEFORE PULLUP INITIATION
- WINGS LEVEL
- MAXIMUM G ONSET RATE
- FULL SPEEDBRAKES

NOTES:

1. Applicable for CAT I or CAT III limiter.
2. Increase altitude lost during limiter pullout by 4 percent for each 1000 pounds in excess of 25,000 pounds GW if initial dive angle is ≥ 45 degrees and initial KIAS is less than 500.

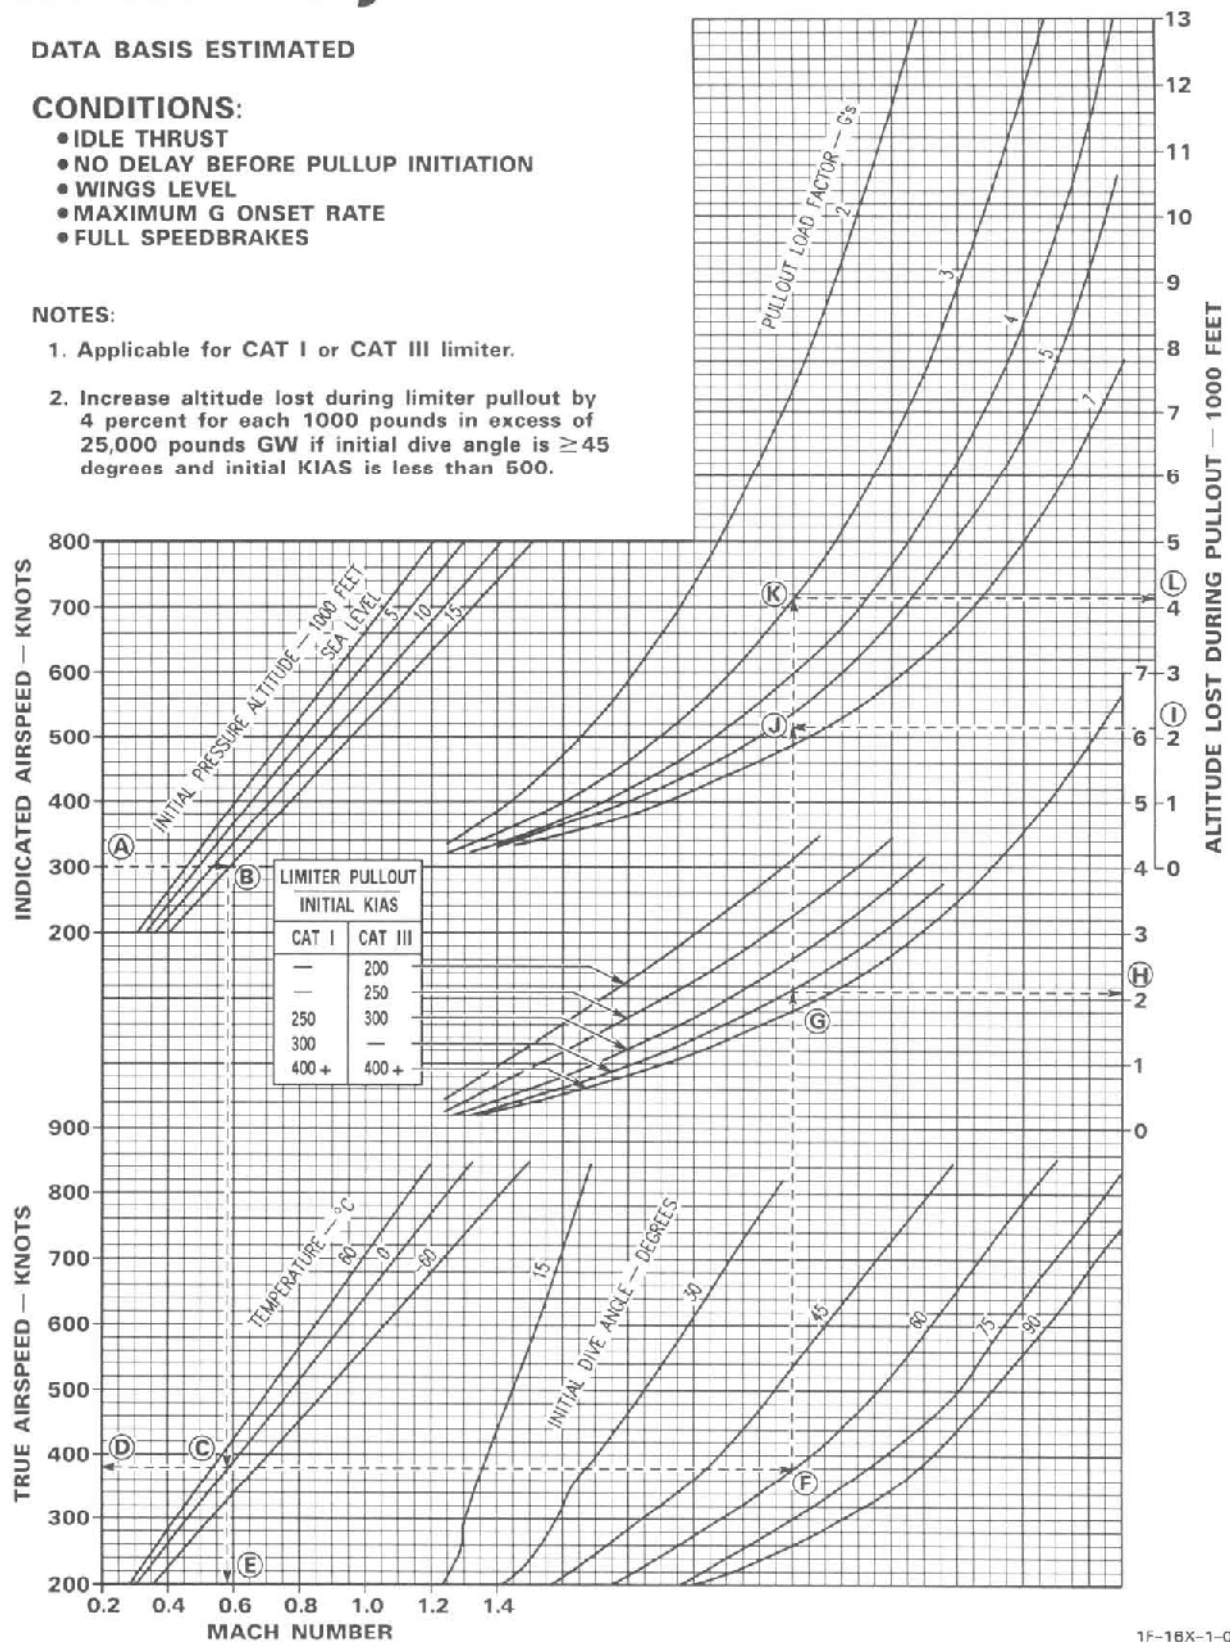

1F-18X-1-0021X

Figure 6-1.

Loss of two AOA sources may not be detected as a dual failure. The end result to the FLCS is an AOA in the range of 11 – 13.6 degrees (i.e. no AOA limiter).

If the radome is lost, attempt to attain 1 g level flight at 275 – 300 knots and place the landing gear handle down. Airspeed and AOA indications won't be accurate. Use a chase aircraft to help establish speed and keep AOA below 12 degrees. Assess the situation by determining what failures are being annunciated and perform a controllability check.

DIVE RECOVERY

Refer to figure 6-1. Dive recovery capability is given as altitude lost during pullout and is a function of pullout load factor, dive angle, true airspeed, and FLCS limiting. Plots to convert indicated airspeed or mach number into true airspeed are provided on the chart. Dive recovery during constant load factor pullout may be on the AOA limiter prior to recovery, under certain initial conditions, as airspeed is reduced. Dive recovery capability at constant load factor is nearly independent of store drag. The dive recovery chart is applicable to GW's between 20,000- 30,000 pounds. The dive recovery chart becomes increasingly conservative for GW's less than 25,000 pounds and decreasingly conservative for GW's greater than 25,000 pounds. Increase altitude lost during full aft stick pullout by 4 percent for each 1000 pounds in excess of 25,000 pounds GW if initial dive angle is ≥ 45 degrees and initial airspeed is less than 500 knots.

For a constant g pullout, use the greater of constant g or limiter pullout altitude lost.

NOTE

The dive recovery chart is based on an idle thrust, wings level, speedbrakes

fully open recovery. However, if airspeed is below 350 knots, altitude loss is minimized by selecting/maintaining MIL/AB thrust and closing speedbrakes. If airspeed is 350 knots or above, selecting/maintaining idle thrust and opening speedbrakes minimize altitude loss. In either case, best dive recovery performance is obtained by making an ADI referenced wings level pull.

SAMPLE PROBLEM:

• GW	= 25,000 pounds
A. KIAS	= 300
B. Initial altitude	= 15,000 feet
C. Temperature	= 0°C
D. KTAS	= 381
E. Mach number	= 0.59
F. Dive angle	= 60 degrees
G. Category/KIAS	= CAT I/300
H. Altitude lost during limiter pullout	= 2130 feet
I. Altitude lost during limiter pullout	= 2130 feet
J. Maximum pullout load factor available	= 5.8g
K. Pullout load factor	= 3g
L. Altitude lost during 3g pullout	= 4150 feet

Dive Recovery


DATA BASIS ESTIMATED

CONDITIONS:

- IDLE THRUST
- NO DELAY BEFORE PULLUP INITIATION
- WINGS LEVEL
- MAXIMUM G ONSET RATE
- FULL SPEEDBRAKES

NOTES:

1. Applicable for CAT I or CAT III limiter.
2. Increase altitude lost during limiter pullout by 4 percent for each 1000 pounds in excess of 25,000 pounds GW if initial dive angle is ≥ 45 degrees and initial KIAS is less than 500.

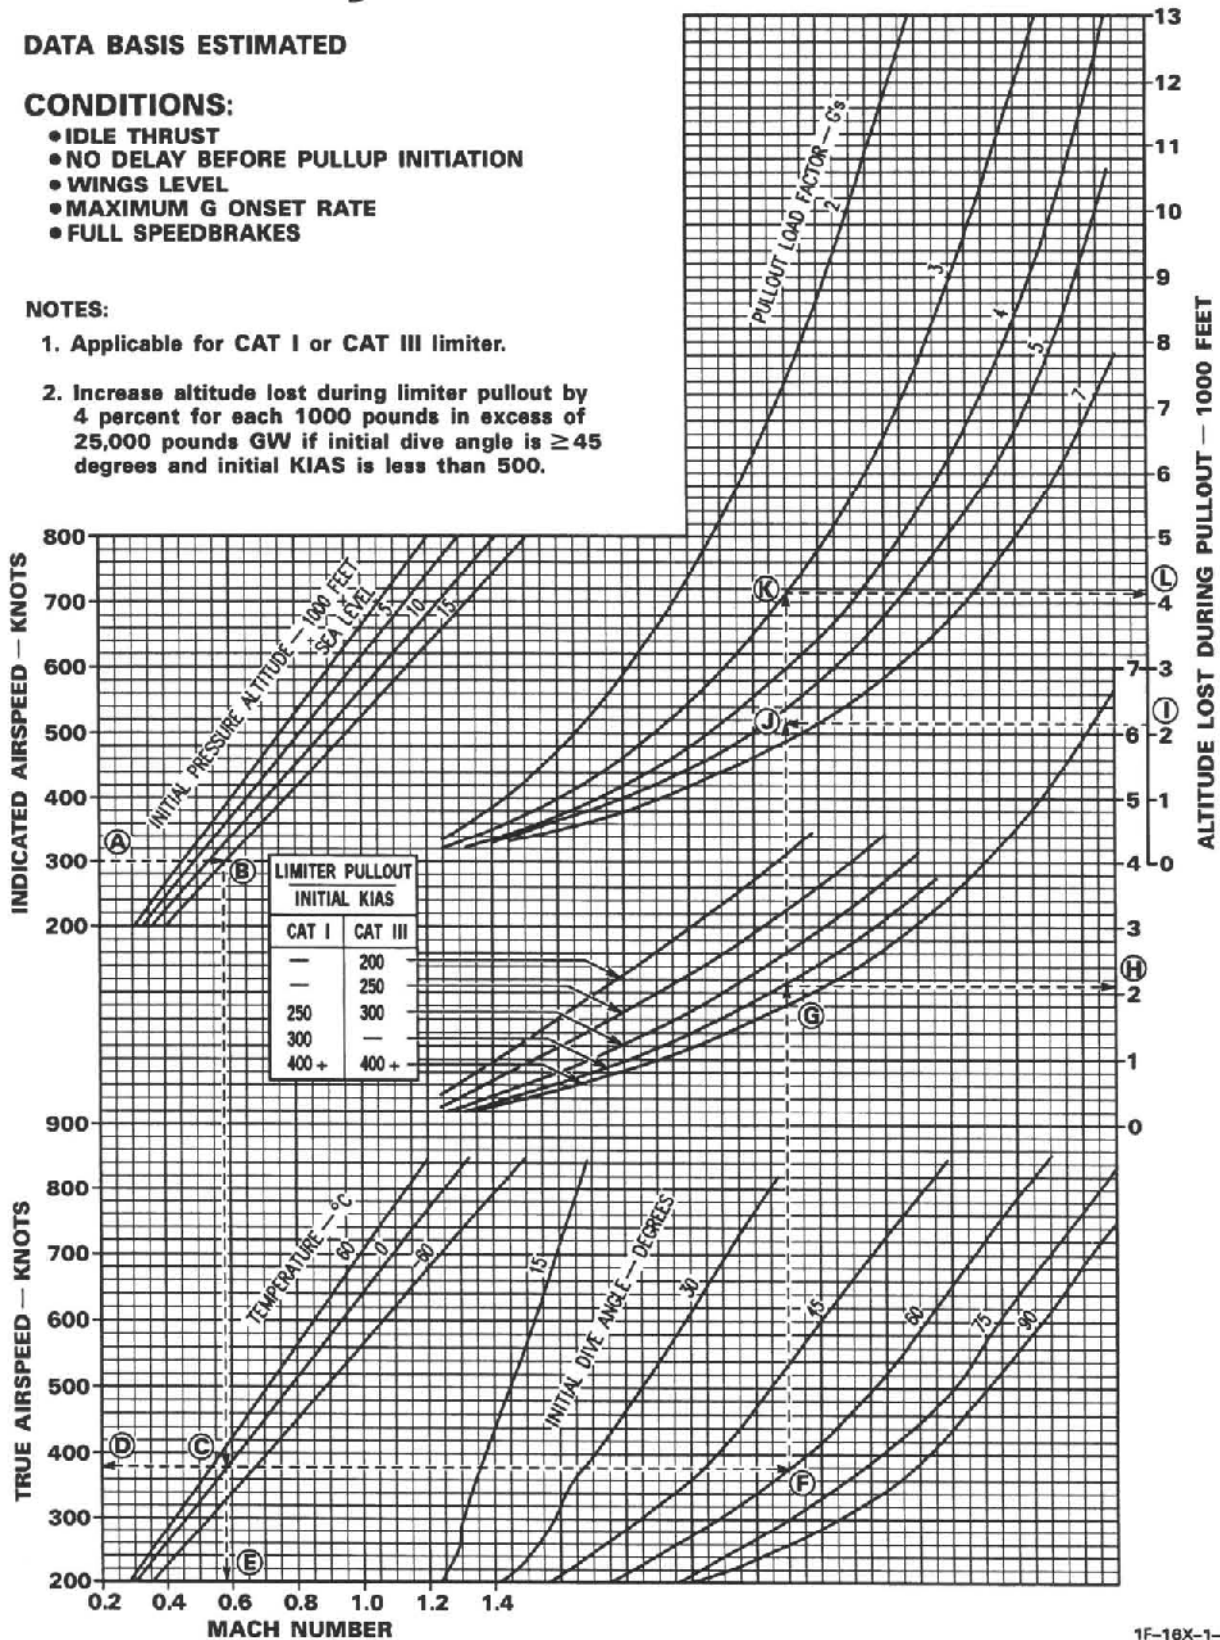

1F-16X-1-0021X®

Figure 6-1.

SECTION VII

ADVERSE WEATHER OPERATION

TABLE OF CONTENTS

Introduction	7-1
Instrument Flight Procedures	7-1
Holding	7-2
Penetration	7-2
Instrument Pattern/Approaches	7-2
Missed Approach	7-2
Turbulence and Thunderstorms	7-2
Cold Weather Operation	7-5
Before Entering Cockpit	7-5
Before Starting Engine	7-5
Starting Engine	7-5
After Engine Start	7-5
Taxi	7-6
Takeoff	7-6
In Flight	7-6
Landing in Icy or Wet Conditions	7-6
Hot Weather and Desert Ground Operation	7-7
Volcanic Ash Operation	7-7
Ground Operations	7-7
In-Flight Operations	7-8

INTRODUCTION

This section contains information and procedures that affect operation of the aircraft in adverse weather and climatic conditions and which differ from the normal procedures in Section II.

INSTRUMENT FLIGHT PROCEDURES

The HUD may be used as a reference for instrument flight. Frequent cross-checks with other instruments will be performed to maintain proper flight orientation and detect failures that are not directly communicated to the pilot.

WARNING

- The HUD should not be used as the sole reference for instrument flight due to the lack of adequate failure warning but should be cross-checked with the primary/basic instruments.
- It is possible for the displayed ADI and/or HUD attitude to be in error with no ADI OFF or AUX warning flags in view and without an INS or HUD PFL. Displayed HSI and/or HUD headings may also be in error with no HSI OFF or ADI AUX warning flags in view and without an INS or HUD PFL. Momentary warning flags may indicate impending failure. To detect these failures and maintain proper flight orientation, basic and backup instruments shall be cross-checked.
- With certain failures of the INS with ILS selected, a fixed aircraft reference symbol is displayed at zero degrees azimuth, 11 degrees below the boresight symbol. This symbol is for ILS deviation reference in conjunction with the horizontal and vertical deviation bars. The aircraft reference symbol should not be used for attitude reference.
- Avoid touching the canopy transparency, canopy frame or placing arms on the canopy body positioning handles during IMC. Contact may produce severe shock as a result of static discharge.

NOTE

When rotating the HSI course setting from an eight-unit digit to a nine-unit digit (e.g., 018 to 019), the tens digit may rotate prematurely causing a 10-degree reading error (e.g., 029). Cross-check counter setting with course arrow reading to insure proper course setting.

NOTE

Electrical transients (particularly during the EPU check) may cause the INS to revert to use of the last manually entered magnetic variation. Under these conditions, the accuracy of heading information displayed on the HSI and HUD depends upon the manual magnetic variation value entered. If magnetic heading error is suspected, confirm that automagnetic variation is in use or that the correct local magnetic variation is entered.

HOLDING

Holding airspeed is 200-250 knots (maximum endurance airspeed recommended).

PENETRATION

Penetrations are normally flown at 300 knots, speedbrakes as required, and throttle at IDLE.

INSTRUMENT PATTERN/APPROACHES

Refer to figure 7-1 for a typical TACAN holding, penetration, and approach. Refer to figure 7-2 for a typical GCA. Instrument patterns are normally flown at 200-250 knots clean. Approaching final, lower the LG, slow the aircraft, and fly final approach at 13 degrees AOA maximum.

MISSED APPROACH

Advance throttle as required, close speedbrakes, and retract LG after a positive climb is established. Adjust throttle to maintain between 200-250 knots. Pitch transients resulting from LG and TEF changes are mild and require minimum control compensation.

TURBULENCE AND THUNDERSTORMS

Avoid flight in turbulent air, hailstorms, and thunderstorms. There is a high probability of damage to airframe and components from impact ice, hail, and lightning. Thunderstorm penetration

airspeed is 300 knots or optimum cruise airspeed, whichever is lower. At high airspeeds, personal discomfort and structural stress are greater. At slower airspeeds, controllability is reduced and inlet airflow distortion due to turbulence may cause compressor stall and/or engine stagnation.

The GM mode of the radar can be used as an aid in navigation between or around storm cells. Refer to T.O. GR1F-16CJ-34-1-1 for expanded information. If entry into adverse weather cannot be avoided, the following procedures should be used:

1. PROBE HEAT switch – Check PROBE HEAT.
2. FLOOD CONSOLES knob – HIGH INT.
3. ANTI ICE switch – ON.
4. Airspeed – 300 knots or optimum cruise, whichever is lower.

NOTE

- Severe turbulence causes variations in airspeed and altitude. Do not change throttle setting except for extreme airspeed variations.
- An extremely loud screeching noise may be heard in the headset while flying in cirrus clouds or in the vicinity of thunderstorms. The noise may be eliminated by turning the UHF or VHF radio off, by turning the volume(s) down, or by changing UHF antenna positions.
- When flying in heavy rain, water tends to be aerodynamically held on the forward portion of the canopy. At higher airspeeds, this condition may obscure visibility as much as 30 degrees back on each side of the canopy. On final approach, the water is generally confined to the position of the canopy immediately in front of the HUD. It may be necessary to look out the sides of the canopy to acquire the runway and to flare and land the aircraft.

SECTION VII

ADVERSE WEATHER OPERATION

TABLE OF CONTENTS

Introduction	7-1
Instrument Flight Procedures	7-1
Holding	7-2
Penetration	7-2
Instrument Pattern/Approaches	7-2
Missed Approach	7-2
Turbulence and Thunderstorms	7-2
Cold Weather Operation	7-5
Before Entering Cockpit	7-5
Before Starting Engine	7-5
Starting Engine	7-5
After Engine Start	7-5
Taxi	7-6
Takeoff	7-6
In Flight	7-6
Landing in Icy or Wet Conditions	7-6
Hot Weather and Desert Ground	
Operation	7-7
Volcanic Ash Operation	7-7
Ground Operations	7-7
In-Flight Operations	7-8

INTRODUCTION

This section contains information and procedures that affect operation of the aircraft in adverse weather and climatic conditions and which differ from the normal procedures in Section II.

INSTRUMENT FLIGHT PROCEDURES

The HUD may be used as a reference for instrument flight. Frequent cross-checks with other instruments will be performed to maintain proper flight orientation and detect failures that are not directly communicated to the pilot.

WARNING

- The HUD should not be used as the sole reference for instrument flight due to the lack of adequate failure warning but should be cross-checked with the primary/basic instruments.

- A delayed selection of ILS/TCN or ILS/NAV until the aircraft is nearly on the ILS glide slope may cause the flight director circle to be positioned incorrectly (full up or full down) for up to 90 seconds. If the flight director circle is positioned incorrectly when an ILS mode is selected, move the INSTR MODE knob to TCN or NAV, then back to the desired ILS mode. This action enables the flight director to operate properly.
- It is possible for the displayed ADI and/or HUD attitude to be in error with no ADI OFF or AUX warning flags in view and without an INS or HUD PFL. Displayed HSI and/or HUD headings may also be in error with no HSI OFF or ADI AUX warning flags in view and without an INS or HUD PFL. Momentary warning flags may indicate impending failure. To detect these failures and maintain proper flight orientation, basic and backup instruments shall be cross-checked.
- With certain failures of the INS with ILS selected, a fixed aircraft reference symbol is displayed at zero degrees azimuth, 11 degrees below the boresight symbol. This symbol is for ILS deviation reference in conjunction with the horizontal and vertical deviation bars. The aircraft reference symbol should not be used for attitude reference.
- Avoid touching the canopy transparency, canopy frame or placing arms on the canopy body positioning handles during IMC. Contact may produce severe shock as a result of static discharge.

NOTE

When rotating the HSI course setting from an eight-unit digit to a nine-unit digit (e.g., 018 to 019), the tens digit may rotate prematurely causing a 10-degree reading error (e.g., 029). Cross-check counter setting with course arrow reading to insure proper course setting.

NOTE

Electrical transients (particularly during the EPU check) may cause the INS to revert to use of the last manually entered magnetic variation. Under these conditions, the accuracy of heading information displayed on the HSI and HUD depends upon the manual magnetic variation value entered. If magnetic heading error is suspected, confirm that automagnetic variation is in use or that the correct local magnetic variation is entered.

HOLDING

Holding airspeed is 200-250 knots (maximum endurance airspeed recommended).

PENETRATION

Penetrations are normally flown at 300 knots, speedbrakes as required, and throttle at IDLE.

INSTRUMENT PATTERN/APPROACHES

Refer to figure 7-1 for a typical TACAN holding, penetration, and approach. Refer to figure 7-2 for a typical GCA. Instrument patterns are normally flown at 200-250 knots clean. Approaching final, lower the LG, slow the aircraft, and fly final approach at 13 degrees AOA maximum.

MISSED APPROACH

Advance throttle as required, close speedbrakes, and retract LG after a positive climb is established. Adjust throttle to maintain between 200-250 knots. Pitch transients resulting from LG and TEF changes are mild and require minimum control compensation.

TURBULENCE AND THUNDERSTORMS

Avoid flight in turbulent air, hailstorms, and thunderstorms. There is a high probability of damage to airframe and components from impact ice, hail, and lightning. Thunderstorm penetration

airspeed is 300 knots or optimum cruise airspeed, whichever is lower. At high airspeeds, personal discomfort and structural stress are greater. At slower airspeeds, controllability is reduced and inlet airflow distortion due to turbulence may cause compressor stall and/or engine stagnation.


The GM mode of the radar can be used as an aid in navigation between or around storm cells. Refer to T.O. GR1F-16CJ-34-1-1 for expanded information. If entry into adverse weather cannot be avoided, the following procedures should be used:

1. PROBE HEAT switch – Check PROBE HEAT.
2. FLOOD CONSOLES knob – HIGH INT.
3. ANTI ICE switch – ON.
4. Airspeed – 300 knots or optimum cruise, whichever is lower.

NOTE

- Severe turbulence causes variations in airspeed and altitude. Do not change throttle setting except for extreme airspeed variations.
- An extremely loud screeching noise may be heard in the headset while flying in cirrus clouds or in the vicinity of thunderstorms. The noise may be eliminated by turning the UHF or VHF radio off, by turning the volume(s) down, or by changing UHF antenna positions.
- When flying in heavy rain, water tends to be aerodynamically held on the forward portion of the canopy. At higher airspeeds, this condition may obscure visibility as much as 30 degrees back on each side of the canopy. On final approach, the water is generally confined to the position of the canopy immediately in front of the HUD. It may be necessary to look out the sides of the canopy to acquire the runway and to flare and land the aircraft.

TACAN Holding, Penetration, and Approach (Typical)

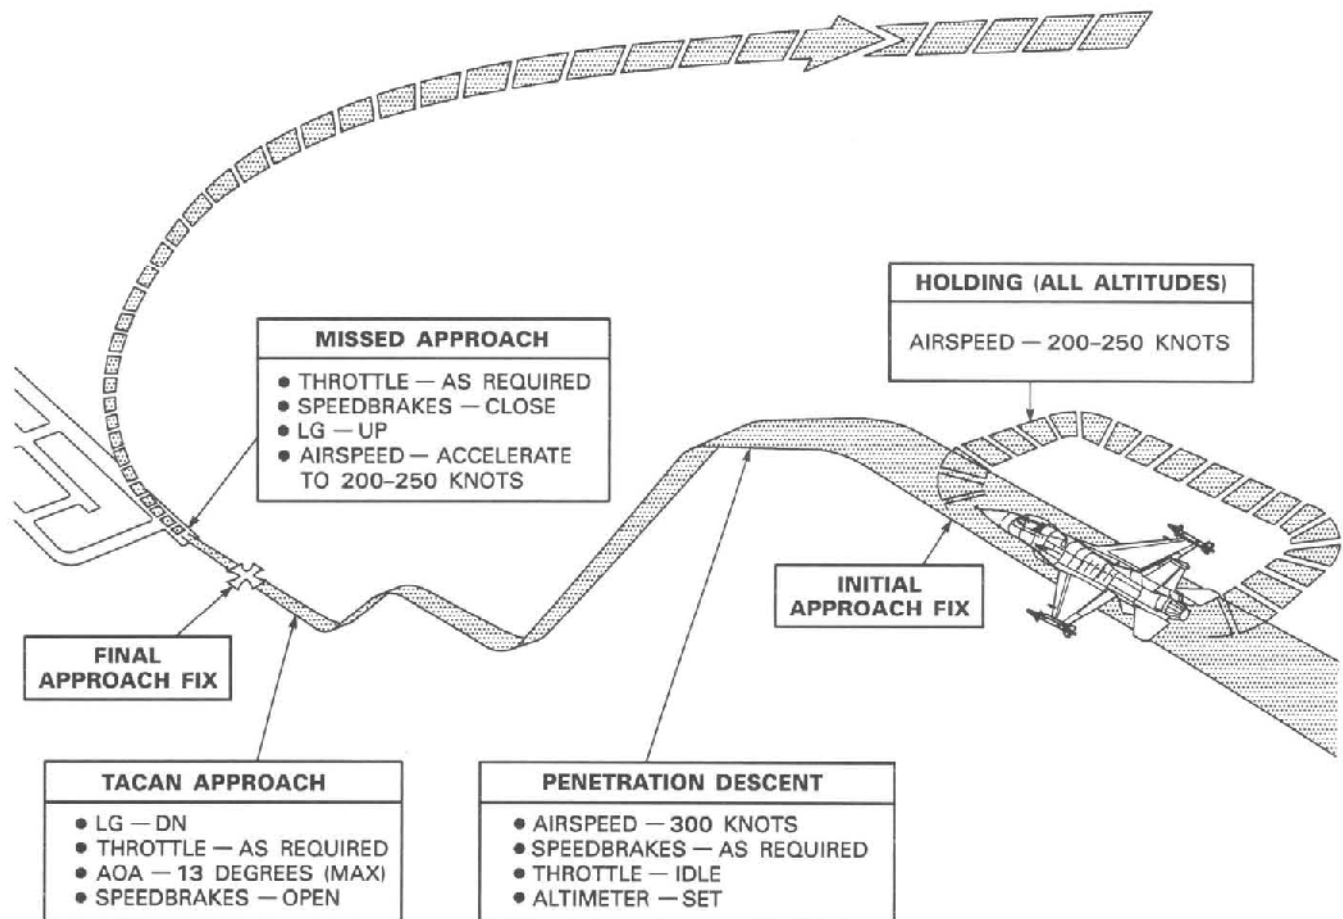


NOTE:

A typical straight-in penetration and approach require approximately 400 pounds of fuel for a drag index of 0 and 600 pounds of fuel for a drag index of 200.

Figure 7-1.

GCA (Typical)

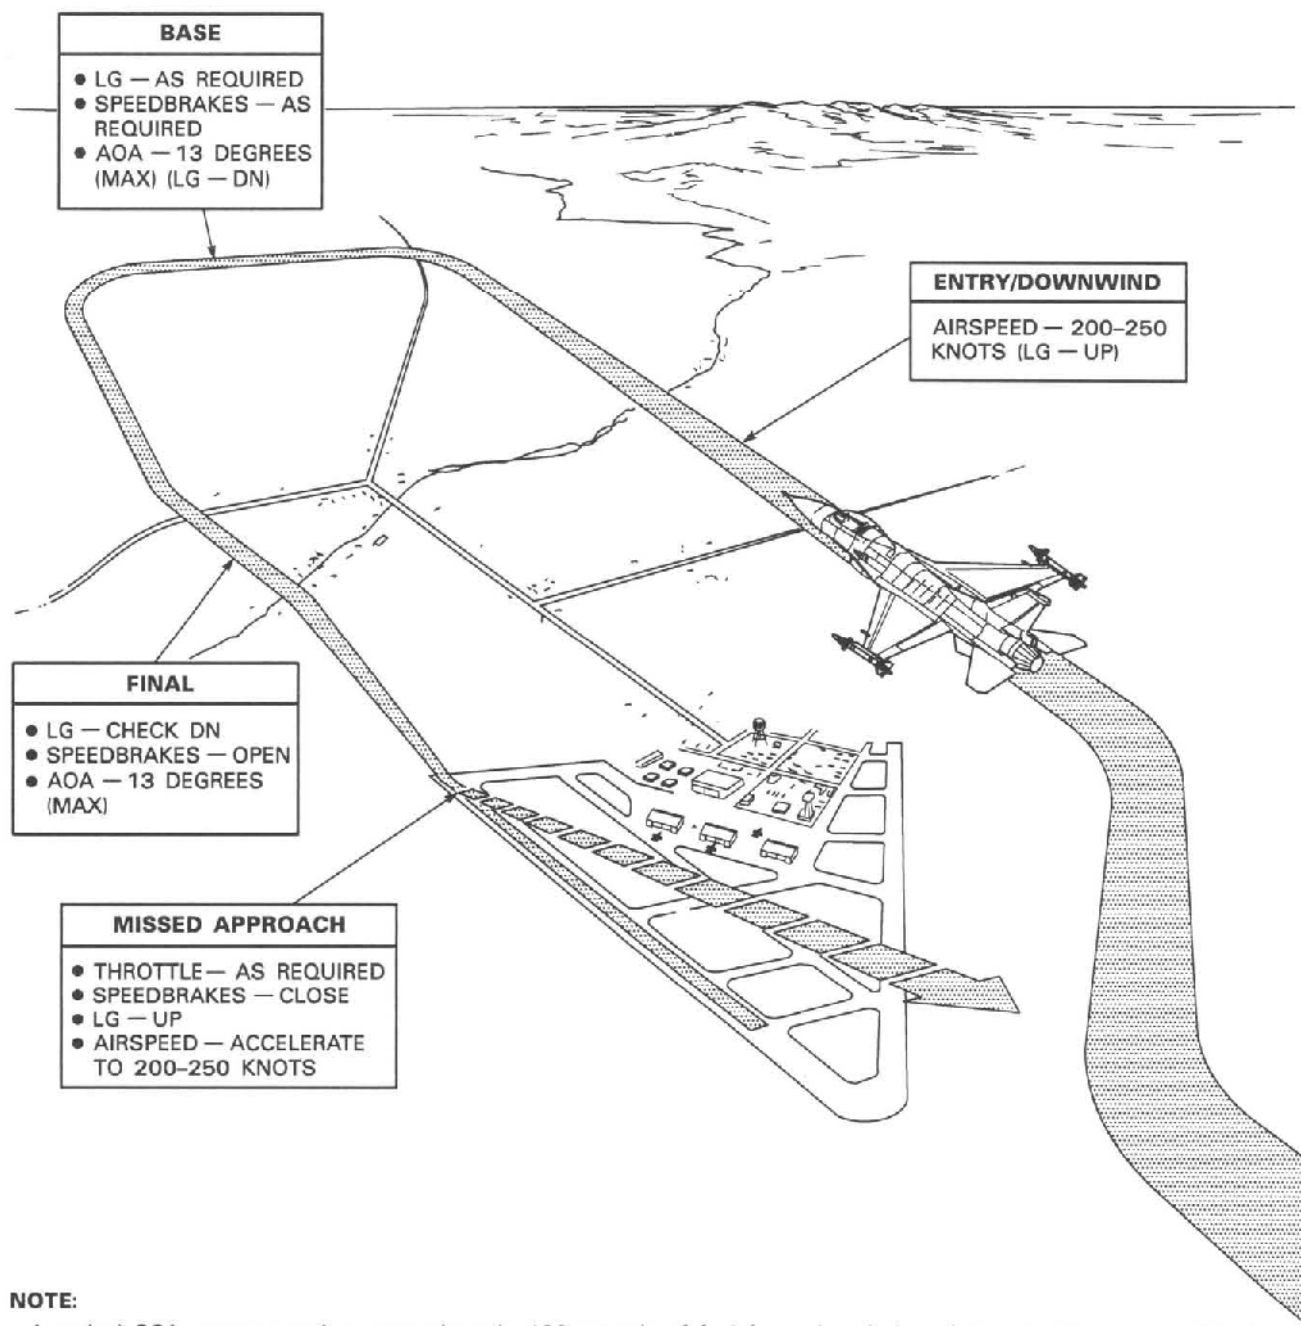

NOTE:

A typical GCA pattern requires approximately 400 pounds of fuel for a drag index of 0 and 700 pounds of fuel for a drag index of 200.

GR1F-16CJ-1-0133X37 ©

Figure 7-2.

COLD WEATHER OPERATION

CAUTION

Engine operation under the following conditions may result in engine damage due to icing:

- Ambient temperatures between 20°F (-7°C) and 45°F (7°C) with precipitation (rain, fog, sleet, or snow).
- Dewpoint within 9°F (5°C) of ambient temperatures between 25°F (-4°C) and 45°F (7°C).
- Ambient temperature below 45°F (7°C) with standing water or a mixture of water with ice or snow within the immediate proximity of the engine inlet.

BEFORE ENTERING COCKPIT

All accumulated ice and snow must be removed from the aircraft before flight is attempted. Insure that water does not accumulate on control surfaces or other critical areas where refreezing may cause damage or binding.

CAUTION

Do not permit ice to be chipped or scraped away.

BEFORE STARTING ENGINE

Extreme cold temperature may require cockpit preheating to ease operation of rotary-type switches. ☒ The canopy may not latch on battery power alone. Start the engine with the canopy closed as much as possible.

If there is visible moisture and ambient temperature is 45°F (7°C) or less, place the ANTI ICE switch to ON. This reduces ice buildup on the engine front face, eliminates ice on the heated inlet strut, and reduces the possibility of ice ingestion.

STARTING ENGINE

If the aircraft is serviced with MIL-H-5606 hydraulic fluid and the aircraft has cold soaked for more than 1 hour at temperatures below -40°F (-40°C), do not start the JFS until ambient temperature increases to above -40°F (-40°C) for at least 2 hours or until the engine bay is preheated. For temperatures above -40°F (-40°C), refer to JET FUEL STARTER LIMITS, Section V.

If the aircraft is serviced with MIL-H-83282 hydraulic fluid and the aircraft has cold soaked for more than 1 hour at temperatures below -20°F (-29°C), do not start the JFS until ambient temperature increases above -20°F (-29°C) for at least 2 hours or until the engine bay is preheated. For temperatures above -20°F (-29°C), refer to JET FUEL STARTER LIMITS, Section V.

During cold start, oil pressure may be 100 psi for up to 2 minutes.

AFTER ENGINE START

EPU fuel quantity can indicate as low as 90 percent at temperatures below 40°F (4°C).

For rapid cockpit warming, position the TEMP knob to the desired MAN WARM range. Position the RADAR to off and the DEFOG lever as required to clear fogging. After the cockpit reaches a comfortable temperature, select a setting within the AUTO range. If the engine was started with the canopy unlatched, wait approximately 10 minutes to warm the canopy before fully closing it.

If probe icing is evident or suspected, turn the PROBE HEAT switch to PROBE HEAT at least 2 minutes prior to accomplishing the FLCS BIT.

WARNING

If probe heat is on or has been on, heat in probes may be sufficient to cause injury if touched.

CAUTION

If the aircraft has cold soaked at temperatures below -20°F (-29°C), repeated brake applications (25-30) may be required before the brakes work effectively.

TAXI

To avoid brake icing, do not taxi in deep water, slush, or deep snow. When taxiing on ice or hard packed snow, NWS may not be completely effective. Use a combination of NWS and differential braking to maintain directional control. Taxi at a safe speed considering surface condition, GW, slope, and thrust. If the aircraft has cold soaked at temperatures below -20°F (-29°C), the NWS may initially be sluggish, but controllable.

WARNING

Probe internal icing must be suspected anytime the aircraft has been exposed to near or below freezing conditions on the ground. Internal icing may be difficult to see and may remain present even when current conditions do not appear conducive to ice formation. Turn probe heat on at least 2 minutes prior to takeoff anytime icing of probes is possible.

CAUTION

If unable to control taxi speed or direction, immediately shut down the engine.

NOTE

After cold soaking at temperatures below 0°F (-18°C), be alert for flat MLG struts.

TAKEOFF

If the aircraft has cold soaked at temperatures below -20°F (-29°C), LG retraction times may be significantly increased. In addition, the nose gear door may fail to close. If the nose gear door can be visually confirmed as the only LG component that has failed to retract/close, then up to two extend/retract cycles can be made in an attempt to achieve a normal LG up condition. Observe LG extended or in transit limitations, Section V.

IN FLIGHT

Flight in areas of icing should be avoided whenever possible. If icing conditions are anticipated or cannot

be avoided, turn ANTI ICE switch to ON and PROBE HEAT switch to PROBE HEAT. Frequently check the aircraft leading edges for indication of ice buildup. Make all throttle movements slower than normal when in potential icing conditions to reduce possibility of engine stalls and/or stagnation. Consider diverting to an alternate field if required to avoid icing conditions.

LANDING IN ICY OR WET CONDITIONS

Icy or wet runway conditions may pose severe problems in directional control and braking effectiveness due to hydroplaning. Although possible, total hydroplaning is not expected below 130 knots groundspeed. Partial hydroplaning can occur to varying degrees below 130 knots. Once hydroplaning occurs, it can continue to speeds well below the onset speed. Wheel spinup must occur to permit normal antiskid braking. Hydroplaning can prevent wheel spinup and can occur on runways which only appear damp if heavy braking is applied at high speeds. Hydroplaning tendency increases with water depth and with smooth runway surfaces such as rubber deposits or paint stripes.

Approach and touchdown are the same as for a short field landing on a dry runway. Immediately after touchdown, make a deliberate effort to be sure brakes are not applied while using the rudder. Deploy the drag chute (if required) immediately after touchdown. Use two-point aerodynamic braking until approximately 100 knots; then fly the nosewheel to the runway. Maximum effective two-point aerodynamic braking is achieved at 18 degrees AOA. After the nosewheel is on the runway, open the speedbrakes fully and maintain full aft stick for maximum three-point aerodynamic braking and wheel braking effectiveness. Test for braking effectiveness before using full continuous braking by momentarily depressing pedals, fully releasing pedals for at least one-half second, and then depressing pedals again. This technique gives the wheels a better opportunity to spin up if hydroplaning conditions exist. If braking effectiveness is not felt, continue to pump brakes as speed decreases, making sure pedals are momentarily fully released between applications. Use continuous braking after braking effectiveness is felt. As speed decreases, the antiskid system will increase deceleration accordingly.

When stopping distance is critical, wheel braking should be initiated in the two-point attitude when below 100 knots. Wheel braking effectiveness at high speeds is very low compared to two-point aerodynamic braking effectiveness. Low deceleration at high speed may be mistakenly interpreted as a brake or antiskid failure. If braking effectiveness or anti-skid cycling is not perceived, release brakes momentarily and then reapply brakes. When the wheel brakes become effective, the nose will automatically lower. After the nosewheel is on the runway, maintain full aft stick, open the speed-brakes fully, and use continuous maximum braking. Do not hesitate to lower the hook, if required.

If crosswinds preclude maintaining two-point aerodynamic braking, test for braking effectiveness as previously discussed before using full continuous braking. Continue to pump the brakes until braking effectiveness is felt and speed is below 100 knots.

CAUTION

- Continuous wheel braking above 100 knots is not recommended. Hydroplaning may prevent spinup of both MLG wheels and wheel brakes may become operative without antiskid protection. Locked wheels and subsequent blown tires can occur.
- Rubber deposits on the last 2000 feet of a wet runway make directional control a difficult problem even at very low speeds. Braking should be started in sufficient time to avoid excessive braking on the last portion of the runway.

HOT WEATHER AND DESERT GROUND OPERATION

Hot weather and desert ground operation requires that added precautions be taken against damage from dust, sand, and high temperatures. Particular attention should be given to those components and systems (engine, fuel, oil, hydraulic, pitot-static, etc.) which are susceptible to contamination, malfunction, or damage from sand and dust. Inspect

the pistons on the LG and have them cleaned as required. Check the engine inlet duct for sand accumulation. During conditions of blowing sand and dust, the canopy should be closed and sealed and all protective covers installed when the aircraft is not in use.

In hot, humid conditions, fogging of the exterior canopy surface after flight may reduce visibility to the point where the canopy must be opened prior to taxiing. Stow all equipment prior to opening the canopy.

VOLCANIC ASH OPERATION

GROUND OPERATIONS

Modified ground operations on an airfield which has experienced volcanic ash fallout are required even after cleanup is complete.

For preflight, carefully inspect the following areas for volcanic dust:

- ECS ram inlet ducts.
- Engine inlet.
- LG strut chrome surface.
- Pitot tube, air data probes, and AOA probes.
- Static ports.

After engine start, keep ground operation time and thrust to a minimum and run air-conditioning at full cold setting, if practical. Do not use anti-ice unless required.

Taxi at a safe speed considering surface conditions, GW, slope, and thrust. As volcanic ash, especially when wet, reduces RCR, perform a rolling takeoff, if possible.

Consider increasing the interval between takeoffs to allow clouds of suspended volcanic ash to clear.

After landing, consider shutting down the engine and have aircraft towed to the parking area.

Use RCR of 18 for dry volcanic ash and 10 for wet volcanic ash if actual RCR value is unknown.

IN-FLIGHT OPERATIONS

Flight in a volcanic ash environment is extremely hazardous. Airborne radar does not detect ash clouds which visually are easily mistaken for normal clouds.

Some indications of volcanic ash cloud penetration are:

- Acrid odor.
- Canopy opaquing.
- Engine exhaust torching.

- Engine surges/malfunctions.
- Erroneous airspeed indications/fluctuations.
- FTIT rise.
- Saint Elmo's fire.
- Volcanic ash entering cockpit.

Upon detecting volcanic ash cloud penetration, reduce thrust and maintain minimum thrust required to sustain flight, exit the volcanic ash environment, and land as soon as practical. Do not use anti-ice unless required.

GLOSSARY

STANDARD AND NONSTANDARD ABBREVIATIONS

A

AA	Advance Attack
A/A, A-A	Air to Air
AAM	Air-to-Air Missile
AB	Afterburner
ac, AC	Alternating Current
A/C GW	Aircraft Gross Weight
ACM	Air Combat Maneuvering
ACMI	Air Combat Maneuvering Instrumentation
ADG	Accessory Drive Gearbox
ADI	Attitude Director Indicator
AFC	Afterburner Fuel Control
AGL	Above Ground Level
AGM	Air-to-Ground Missile
AIM	Air Intercept Missile
AIS	Aircraft Instrumentation System
AJ	Antijamming
AL	Aft/Left
ALOW	Automatic Low Altitude Warning
ALT	Altitude or Altimeter or Alternate
AM	Amplitude Modulation
AMMO	Ammunition
AMRAAM	Advanced Medium Range Air-to-Air Missile
ANT	Antenna
AOA	Angle of Attack
AOS	Angle of Sideslip
AP	Autopilot
AR, A/R	Air Refueling
ARI	Aileron-Rudder Interconnect
ARMT	Armament
ASE	Aeroservoelastic
ASPLS	Airborne Self Protection Integrated System
ATT, ATTD	Attitude
AUX	Auxiliary
AVTR	Airborne Videotape Recorder

B

BAK-	Arresting Cable Prefix (e.g., BAK-9)
BARO	Barometric
BATT	Battery
BDU	Bomb Dummy Unit
BIT	Built-In Test or Binary Digit
BL	Buttock Line
BLU	Bomb Live Unit
BSU	Bomb Stabilizing Unit

C

CADC	Central Air Data Computer
CARA	Combined Altitude Radar Altimeter
CBU	Cluster Bomb unit
CCIP	Continuously Computed Impact Point
CCM	Coil Current Monitor
CCRP	Continuously Computed Release Point
CCW	Counterclockwise
CDI	Course Deviation Indicator
CENC	Convergent Exhaust Nozzle Control
CG	Center of Gravity
CHAN	Channel
CIU	Central Interface Unit
CIVV's	Compressor Inlet Variable Vanes
CNI	Communications, Navigation, and IFF
CONFIG	Configuration
CONT	Control
CO2	Carbon Dioxide
CRS	Course
CRV	Canadian Rocket Vehicle
CSD	Constant-Speed Drive
CSFDR	Crash Survivable Flight Data Recorder
CTVS	Cockpit Television Sensor
CW	Clockwise

D

dBA	Adjusted (Human Ear Response) Decibels
DBU	Digital Backup
dc, DC	Direct Current
DEEC	Digital Electronic Engine Control
DED	Data Entry Display
DEEU	Data Entry Electronic Unit
DEGR	Degraded
DI	Drag Index
DIA	Diameter
DIFF	Differential
DIS	Disable
DISC	Disconnect
DME	Distance Measuring Equipment
DN	Down
DOI	Display of Interest

DSG RS Designate/Return to Search
 DTC Data Transfer Cartridge
 DTOS Dive Toss
 DTU Data Transfer Unit
 DVAL D-Value
 DWAT Descent Warning After Takeoff

E

EAS Equivalent Airspeed
 ECM Electronic Countermeasures
 ECP Engineering Change Proposal
 ECS Environmental Control System
 EDU Engine Diagnostic Unit
 EED Electroexplosive Device
 EGT Exhaust Gas Temperature
 ELECT Electronic (primary altimeter operating mode)
 ELEV Elevation
 EMER Emergency
 EMS Engine Monitoring System
 EMSC Engine Monitoring System Computer
 ENDUR Endurance
 ENG Engine
 EPU Emergency Power Unit
 EQUIP Equipment
 EST Estimate
 EXT External

F

F-ACK Fault Acknowledge
 FAULT ACK Fault Acknowledge
 FC Flight Control
 FCC Fire Control Computer
 FCR Fire Control Radar
 FFAR Folding Fin Aircraft Rocket
 FFP Fuel Flow Proportioner
 FLCC Flight Control Computer
 FLCP Flight Control Panel
 FLCS Flight Control System
 FLIR Forward Looking Infrared Radar
 FM Frequency Modulation
 FO Foldout
 FOD Foreign Object Damage
 FORM Formation
 FOV Field of View
 fpm, FPM Feet per Minute/Flightpath Marker
 FR Forward/Right
 FT, ft Feet
 FTIT Fan Turbine Inlet Temperature
 FWD Forward

G

g, G Force of Gravity
 GAAF Ground Avoidance Advisory Function
 gal, GAL Gallon
 GBU Guided Bomb Unit
 GCA Ground Controlled Approach
 GCU Generator Control Unit
 GD Guard
 GEN Generator
 GM Ground Map
 GND Ground
 GP Group
 GPS Global Positioning System
 GRDCUS Gulf Range Drone Control Upgrade System
 GS Glide Slope
 GW Gross Weight

H

HDG Heading
 HDG SEL Heading Select
 HF High Frequency
 HQ HAVE QUICK
 HSI Horizontal Situation Indicator
 HUD Head-Up Display
 HYB VSV Hybrid Variable Stator Vanes
 HYB Hybrid
 HYDRAZN Hydrazine
 Hz Hertz

I

IAS Indicated Airspeed
 IAW In Accordance With
 ICP Integrated Control Panel
 ID Identification
 IFF Identification, Friend or Foe
 IGV Inlet Guide Vanes
 IKP Integrated Keyboard Panel
 ILS Instrument Landing System
 IMC Instrument Meteorological Conditions
 IMSP Instrument Mode Select Panel
 In., IN. Inches
 INC Increase
 IND Indicator
 INOP Inoperative
 INS Inertial Navigation Set (or System)
 INT Intensity or Internal or Interval
 INSTR Instrument
 INU Inertial Navigation Unit
 I/P Identification of Position
 ISA Integrated Servoactuator

J
JETT, JTSN Jettison
JFS Jet Fuel Starter
JOAP Joint Oil Analysis Program

K
K Thousands (e.g., 40K = 40,000)
KCAS Knots Calibrated Airspeed
KEAS Knots Equivalent Airspeed
KIAS Knots Indicated Airspeed
KT(S) Knot(s)
KTAS Knots True Airspeed
KVA Kilovolt Ampere

L
L Left
LADD Low Angle Drogue Delivery
LAU Launcher Armament Unit
lb, LB Pound(s)
LB/HR Pounds per Hour
LB/MIN Pounds per Minute
LCO Limit Cycle Oscillation
LCOS Lead Computing Optical Sight
LD Load or Low Drag
LE Leading Edge
LEF's Leading Edge Flaps
LG Landing Gear
LMLG Left Main Landing Gear
LOD Light-Off Detector
LOX Liquid Oxygen
LPU Life Preserver Unit
LRU Line Replaceable Unit
LTS Lights
LWD Left Wing Down

M
M Mach
MAAS Mobile Aircraft Arrestment System
MAC Mean Aerodynamic Chord
MAL Malfunction
MAL & IND Malfunction and Indicator
MAN. Manual
MAU Miscellaneous Armament Unit
MAX Maximum
MAX AB Maximum Afterburner
mb Millibar
MEC Main Engine Control
MECH Mechanical
MEM Memory
MFC Main Fuel Control
MFD Multifunction Display
MFDS Multifunction Display Set
MFL Maintenance Fault List

MFP Main Fuel Pump
MHz Megahertz
MIC Microphone
MIL Military
MIN Minute or Minimum
MK Mark (equivalent of model)
MLG Main Landing Gear
mm Millimeter
MPO Manual Pitch Override
MRK BCN Marker Beacon
ms Milliseconds
MSL Missile or Mean Sea Level
MUX BUS Multiplex Bus

N
NA Not Applicable
NAM Nautical Air Miles
NFOV Narrow Field of View
NLG Nose Landing Gear
nm, NM Nautical Miles
No., NO. Number
NORM Normal
NOZ POS Nozzle Position
NVG Night Vision Goggles
NWS Nosewheel Steering

O
OAT Outside Air Temperature
OCSC Overcurrent Sensing Contactor
OHEAT Overheat
OP Operational or Optimum
OPT Optional
OSB Option Select Button
OVRD Override
OXY Oxygen

P
PBG Pressure Breathing for g
PDG Programmable Display Generator
PFL Pilot Fault List
PFLD Pilot Fault List Display
PMG Permanent Magnet Generator
PNEU Pneumatic (secondary altimeter operating mode)
PNL Panel
pph, PPH Pounds per Hour
PRE Preset
PRESS. Pressure, Pressurization
PRI Primary
PSA Pneumatic Sensor Assembly
psi, PSI Pounds per Square Inch
PTO Power Takeoff (shaft from engine gearbox to ADG)
PWR Power

Q		T			
QTY	Quantity	TACAN	Tactical Air Navigation		
R		TAS	True Airspeed		
		TBRF	Tunable Band Reject Filter		
		TCN	TACAN		
		TCTO	Time Compliance Technical Order		
		TEF's	Trailing Edge Flaps		
		TEMP	Temperature		
		TER	Triple Ejector Rack		
		TEU	Trailing Edge Up		
		TGM	Training Guided Missile		
		TGT	Target		
RAD	Radio (e.g., RAD 1 or RAD 2)	THEO	Theory		
RCR	Runway Condition Reading	T.O.	Takeoff		
RCVV	Rear Compressor Variable Vanes	TOD	Time of Day		
RDR	Radar	TR, T/R	Transmit/Receive		
RDY	Ready	TRV	Travel		
REL	Release	TT	Total Temperature		
RER	Radial Error Rate	TV	Television		
RIU	Remote Interface Unit	TVS	Television Sensor		
RMLG	Right Main Landing Gear	TWS	Threat Warning System		
RNDS	Rounds (Gun)	U			
RNG	Ranging				
rpm, RPM	Revolutions per Minute				
RS	Return to Search				
RSE	Reduced Speed Excursion				
RSVR	Reservoir				
RSVRS	Reservoirs				
RT	Retarded				
RV	Receive Variable				
RWD	Right Wing Down				
RWR	Radar Warning Receiver	UFC	Upfront Control		
S		UHF	Ultra High Frequency		
		UNK	Unknown		
		V			
				VAC	Volts ac
				VDC	Volts dc
				VHF	Very High Frequency
				VIP	Visual Initial Point
				VMC	Visual Meteorological Conditions
				VMS	Voice Message System
				VOL	Volume
VSV	Variable Stator Vanes				
VVI	Vertical Velocity Indicator				
		W			
SAI	Standby Attitude Indicator	W/	With		
SEC	Secondary Engine Control	WB	Wideband		
SEL	Select	W/O	Without		
SEAWARS	Seawater Activated Release System	WOD	Word of Day		
SFO	Simulated Flameout Landing	WOW	Weight on Wheels		
SIF	Selective Identification Feature	WPN	Weapon		
SL	Sea Level	WPN REL	Weapon(s) Release		
SMS	Stores Management System	wt, WT	Weight		
SNSR	Sensor	Y			
SPD BRK	Speedbrake				
SPL	Sound Pressure Level				
SQ	Square				
SQL	Squelch				
STA	Station				
STAPAC	Stabilization Package				
STBY	Standby				
STD	Standard				
SUU	Suspension Utility Unit				
SW	Switch	Y	Yaw		
SYM	Symmetrical				
SYS	System				

TERMS/SYMBOLS

A_n	Normal Acceleration (G's)	σ	Density Ratio
a_0	Speed of Sound at Sea Level, Standard Day	β	Angle of Sideslip
&	And	F_e	Elevator Stick Force (lb)
ϕ	Roll Rate (Deg/Sec)	F_a	Aileron Stick Force (lb)
ψ	Yaw Rate (Deg/Sec)	F_p	Rudder Pedal Force (lb)
A_y	Lateral Acceleration (Ft/Sec ²)	N_2	Engine Compressor RPM or Nitrogen
θ	Pitch Rate (Deg/Sec)	P	Pressure
α	Angle of Attack (Deg)	T	Absolute Air Temperature
P_0	Pressure at Sea Level, Standard Day	W	Specific Weight (Lb/Ft ³)
P_t	Total Pressure	V_c	Calibrated Airspeed
P_s	Static Pressure or Specific Energy Rate	V_t	True Airspeed
q_c	Impact Pressure ($P_t - P_s$)	ΔH	Delta Change Altitude (Ft)
ρ_0	Density at Sea Level, Standard Day	$\dot{H}$	Altitude Rate (FPS)

